

## MF 165, 168, 185 AND 188 TRACTORS'

Publication Numbers 1856 028 M1, 1856 000 M1,  
879 450 M1, 1856 001 M1

### ADDENDUM

The following amendment should be applied by hand to page 7B-06, operation number 7B-13-26.

Amend the torque figures in item five to read "3,5 kg m (25 lb ft)".

The following additional information should be attached to page 4B-10.

#### MULTI-POWER REGULATOR VALVE

From Serial Numbers — MF 165 - 104387  
MF 168 - 250123  
MF 185 - 303364  
MF 188 - 350038

#### Servicing

Special Tools Required: See operation 4B-03-05

#### Disassembly

1. Remove the p.t.o. input housing as stated in operation 4B-03-05.
2. After removing the regulator from the input housing, remove the plug, adjacent to the feed pipe adapter, spring and ball.
3. Withdraw the large spool.
4. Remove the other plug, washer, spring and spool.

#### Reassembly

1. Fit a new 'O' ring to the large spool.
2. Slide the spool into the spool block, then refit the ball, spring and plug.
3. Refit the small spool spring, new washer and plug.
4. Tighten the plug to 2,75 kg m (20 lb ft).
5. Refit the p.t.o. input housing and p.t.o. input shaft as stated in operation 4B-03-05.

# **MF 188 Tractor Workshop Service Manual 1856 001 M1.**

---

|   | <i>Section</i> |
|---|----------------|
| Introduction, General Instructions, Conversion Table, Special Tools |                |
| <b>Part 1</b> General Specification                                 | <b>A</b>       |
| Regular Maintenance   | <b>B</b>       |
| Pre-Delivery and Installations                                      | <b>C</b>       |
| <b>Part 2</b> Seats   | <b>A</b>       |
| Sheet Metal and Fenders   | <b>B</b>       |
| Safety Frame and Cabs   | <b>C</b>       |
| <b>Part 3</b> Engine Removal  | <b>A</b>       |
| Engine Cooling  | <b>B</b>       |
| Engine Fuel System  | <b>C</b>       |
| <b>Part 4</b> Clutch  | <b>A</b>       |
| Transmission (Multi-Power)  | <b>B</b>       |
| Transmission (8 Speed)  | <b>C</b>       |
| <b>Part 5</b> Rear Axle and Brakes                                  | <b>A</b>       |
| Power Take-Off and Independent Power Take-Off                       | <b>B</b>       |
| <b>Part 6</b> Front Axle  | <b>A</b>       |
| Wheels and Tyres  | <b>B</b>       |
| Steering  | <b>C</b>       |
| <b>Part 7</b> Hydraulic System                                      | <b>A</b>       |
| Auxiliary Hydraulics  | <b>B</b>       |
| Drawbar and Linkage   | <b>C</b>       |
| <b>Part 8</b> Electrical System and Equipment                       | <b>A</b>       |
| Instrument Panel  | <b>B</b>       |
| <b>Part 9</b> Tractor Assembly P.K.D.                               | <b>A</b>       |

The Manufacturers reserve the right to vary their specifications with or without notice, and at such times and in such manner as they think fit. Major as well as minor changes may be involved in accordance with the Manufacturer's policy of constant product improvement.

Whilst every effort is made to ensure the accuracy of the particulars contained in this Manual, neither the Manufacturer nor the Distributor or Dealer, by whom this Manual is supplied, shall in any circumstances be held liable for any inaccuracy or the consequences thereof.

---

## INTRODUCTION

|                      | Page<br>No. |
|----------------------|-------------|
| INTRODUCTION         | 01          |
| AMENDMENTS           | 02          |
| GENERAL INSTRUCTIONS | 04          |
| CONVERSION TABLES    | 06          |
| SPECIAL TOOLS        | 13          |

## INTRODUCTION

This Workshop Manual which is in loose leaf form for easy amendment, has been compiled to assist Massey-Ferguson Distributor and Dealer personnel to undertake routine maintenance and servicing, minor and major repairs, replacements, adjustments and out of season storage efficiently by the most straight forward method.

With this aim in mind, the Manual is divided into parts and sections, and each page bears the part and section number. This will make the required subject easier to find and the numbered operations will simplify cross reference.

## REPAIRS AND REPLACEMENTS

When service parts are required it is essential that only genuine Massey-Ferguson replacements are used.

Attention is particularly drawn to the following points concerning repairs and the fitting of replacement parts and accessories.

Safety features embodied in the tractor may be impaired if other than genuine parts are fitted.

In certain territories, legislation prohibits the fitting of parts not to the tractor manufacturers specification.

Torque wrench setting figures given in the Workshop Manual must be strictly adhered to. Locking devices, where specified must be fitted. If the efficiency of a locking device is impaired during removal it must be renewed.

The tractor warranty may be invalidated by the fitting of other than genuine Massey-Ferguson parts.

All Massey-Ferguson replacements have the full backing of the factory warranty.

Massey-Ferguson Distributors and Dealers are obliged to supply only genuine service parts.

**Special Tools**

The use of special tools mentioned in the text contributes to an efficient and profitable repair. Some operations are, in fact, impracticable without their use, particularly those, for example, which deal with the assembly of the differential unit. Distributors are therefore urged to check their tools against the list provided and order those necessary from: V. L. Churchill & Co. Ltd., London Road, Daventry, England.

**Schedule of Repair Operations**

The operations listed in the Repair Time Schedule refer to those described in this manual. The time set against each operation in the schedule is evolved by performing the actual operations on a standard tractor using special tools where stated. The Repair Time Schedule for use with this manual, is issued as a separate publication.

**NOTE — SERVICE INFORMATION SHEETS AMENDMENT SHEETS AND REPAIR TIME SCHEDULES ARE ISSUED TO THE MASSEY-FERGUSON DISTRIBUTORS AND DEALERS ONLY AND ARE NOT FOR GENERAL PUBLICATION**

**Service Tools and Equipment**

Where the use of a Service Tool is specified in an operation the tool number will be shown under the operation heading and also following the instruction requiring its use.

**AMENDMENTS****AMENDMENTS**

To assist in identifying amendments on revised pages, two asterisks (\*\*) or stars will be inserted at the beginning and the end of the amended paragraph, section, instruction or illustration.

To ensure that a record of amendments to this manual is available, this page will be re-issued with each set of revised pages. The amendment number, date of issue, appropriate instructions and revised page numbers will be quoted.

Revised pages must be inserted in place of existing pages carrying the same number and the old page discarded.

Additional pages or complete major assembly groups may be issued. In such cases the new pages must be inserted immediately following the existing pages carrying the next lowest number. Where the new pages are to be inter-leaved with existing pages, the new page numbers will carry a suffix letter, and these pages must be inserted as indicated by their numbers and suffixes.

| Amendment No. | Date | Pages Issued |
|---------------|------|--------------|
|               |      |              |

AMENDMENTS

| Amendment No. | Date | Pages Issued |
|---------------|------|--------------|
|               |      |              |

## GENERAL INSTRUCTION

### GENERAL INSTRUCTIONS

These instructions will be helpful in following the information in the Service Manual. In analysing a system malfunction, use this systematic procedure to locate and correct the problem.

1. Determine problem.
2. List possible causes.
3. Devise checks.
4. Conduct checks in logical order to determine cause.
5. Consider remaining service life against cost of parts and labour.
6. Make necessary repair.
7. Recheck.

### SAFETY

Your safety and that of others is always the first consideration when working around machines. Safety is a matter of thoroughly understanding the job to be done and the application of good common sense. It is not just a matter of "do's" and don'ts".

### CLEANLINESS

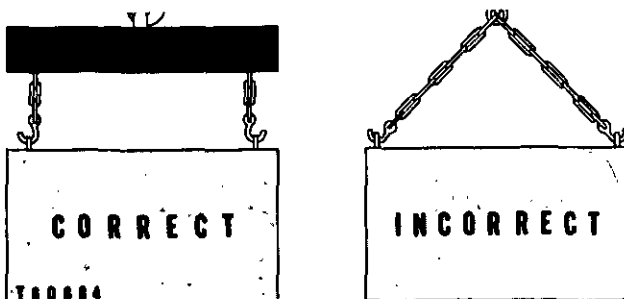
The most important single item in preserving the long life of the machine is to keep dirt out of vital working parts. Precautions have been taken to safeguard against this. Enclosed compartments, seals and filters have been provided to keep the supply of air, fuel and lubricants clean. These safeguards must be maintained.

Whenever hydraulic, fuel, lubricating oil or air lines are disconnected, clean the point of disconnection as well as the adjacent area. As soon as the disconnection is made, cap, plug or tape the line or opening to prevent entry of foreign material. The same recommendations for cleaning and covering apply when access covers or inspection plates are removed.

Clean and inspect all parts. Be sure all passages and holes are open. Cover all parts to keep them clean. Be sure parts are clean when they are installed. Leave new parts in their containers until ready for assembly.


### REMOVAL AND INSTALLATION

Unless otherwise specified, all removals should be accomplished using an adjustable lifting beam. All supporting members (chains and cables) should be parallel to each other and as near perpendicular as possible to the top of the object being lifted.



Correct and incorrect method of lifting a component

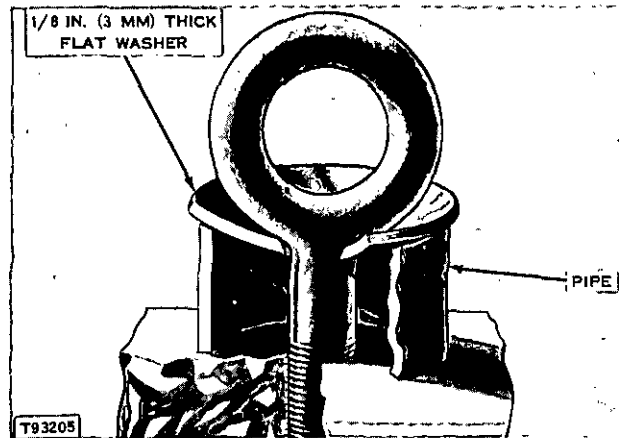When removing a component on an angle, remember that the capacity of an eyebolt diminishes as the angle between the supporting members and the object becomes less than 90°. Eyebolts and brackets should never be bent and should only have stress in tension. A length of pipe and a washer can be used, as shown, to help relieve these stresses on eyebolts.



Forged eyebolt support

Some removals require the use of lifting fixtures to obtain proper balance and to provide safe handling. Use a hoist to remove heavy parts.

If a part resists removal, check to be certain all nuts and bolts have been removed and that an adjacent part is not interfering.

### DISASSEMBLY AND REASSEMBLY

When reassembling a machine, complete each step in turn. Do not partially assemble one part and start assembling some other part. Make all adjustments as recommended. Always check the job after it is completed to see nothing has been overlooked.

Recheck the various adjustments before returning the machine to the job.

### PRESSING PARTS

When one part is pressed into another lubricate the mating surfaces.

Assemble tapered parts dry. Before assembling, be sure the tapers are clean, dry and free from burrs.

### BOLTS AND BOLT TORQUE

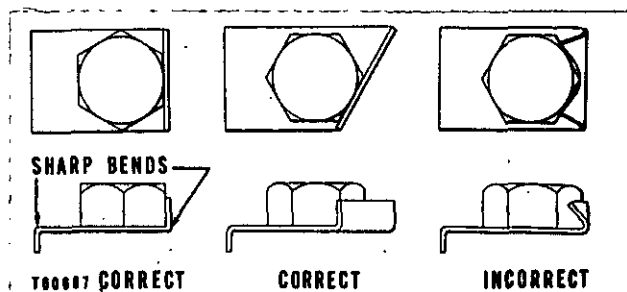
Use bolts of the correct length. A bolt which is too long may "bottom" before the head is tight against the part it is to hold. The threads can be damaged when a "long" bolt is removed.

If a bolt is too short, there may not be enough threads engaged to hold the part securely.


## GENERAL INSTRUCTION

Apply proper torque values to all bolts and nuts when re-assembling equipment. When a specific torque value is required, the value is listed in the text. Tighten all other bolts and nuts for general usage or taperlock studs to the torque values given in the charts at the front of the SPECIFICATION.

## LOCKS



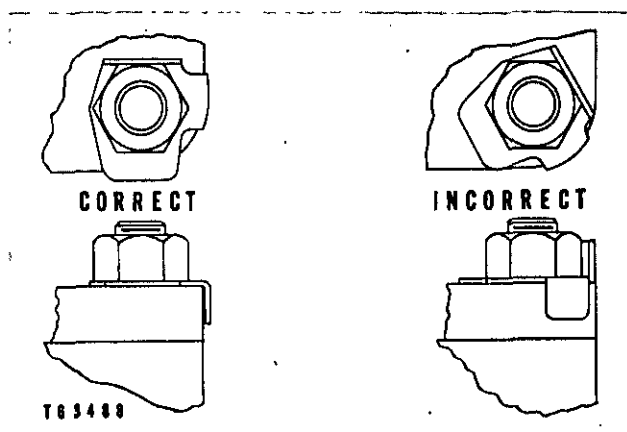Correct and incorrect methods of installing flat metal locks.



Correct and incorrect method for lock positioning and bending.

Lockwashers, flat metal lock or cotter pins are used to lock nuts and bolts.

Flat metal locks must be installed properly to be effective. Bend one end of the lock around the edge of the part. Bend the other end against one flat surface of the nut or bolt head.

Always install new locks in compartments which house moving parts.

When installing lockwashers on housings made of aluminium, use a flat washer between the lockwasher and the housing.

## CABLES AND WIRES

When removing or disconnecting a group of cables or wires, tag each one to assure proper assembly.

## LUBRICATION

Where applicable, fill the compartments of the components serviced with the amount, type and grade of lubricant recommended in the Regular Maintenance Section (1B) of this Manual.

## RUST PREVENTITIVE COMPOUND

Clean the rust preventitive compound from all machined surfaces of new parts before installing them.

## SHIMS

When shims are removed, tie them together and identify them as to location. Keep shims clean and flat until they are reinstalled.

## BEARING BUSHES

Do not install bearing bushes with a hammer. Use a press if possible and be sure to apply the pressure directly in line with the bore. If necessary, drive on a bearing using a bearing driver or a bar with a smooth flat end. If a sleeve bearing has an oil hole, align it with the oil hole in the mating part.

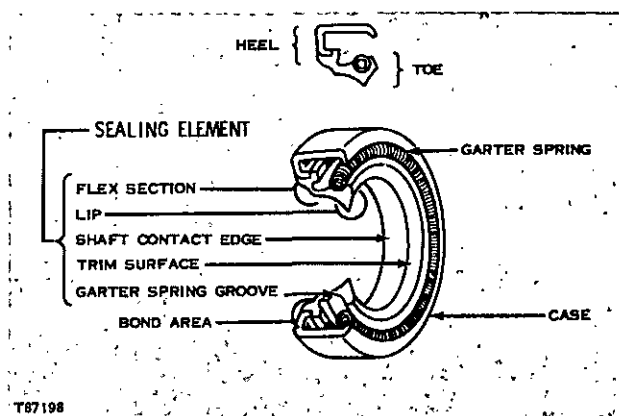
## GASKETS

Be sure the holes in the gaskets correspond with the lubricant passages in the mating parts. If gaskets are to be made, select material of the proper type and thickness. Be sure to cut holes in the right places. Blank gaskets can cause serious damage.

## LIP-TYPE RUBBER SEALS

Lubricate the lips of lip-type rubber seals before installation. Use petroleum jelly. Do not use grease on any seal except a grease seal.

The main parts of a lip-type seal are the case, sealing element, and garter spring. The picture below illustrates the construction of a simple lip-type seal. The cross section at the top shows the terms "heel" and "toe" used to identify the sides of a single element seal. With few exceptions, the toe of an oil seal with one lip is next to the lubricant that is sealed. Some seals have a second auxiliary lip, which does not carry a garter spring.



Lip-type seal construction.

If, during installation, the seal lip must pass over a shaft that has splines, a keyway, rough surface or a sharp edge, the lip can be easily damaged. Always use a seal protector, when one is provided.

CONVERSION TABLES

| INCHES | DECIMALS | MILLI-METRES | INCHES TO MILLIMETRES |       | MILLIMETRES TO INCHES |         | FAHRENHEIT & CENTIGRADE |       |       |       |       |
|--------|----------|--------------|-----------------------|-------|-----------------------|---------|-------------------------|-------|-------|-------|-------|
|        |          |              |                       |       | mm                    | inches  | °F                      | °C    | °C    | °F    |       |
|        | 1/64     | .015625      | .3969                 |       | 0.001                 | .000039 | -20                     | -28.9 | -30   | -22   |       |
|        | 1/32     | .03125       | .7937                 |       | 0.002                 | .000079 | -15                     | -26.1 | -28   | -18.4 |       |
|        | 3/64     | .046875      | 1.1906                |       | 0.003                 | .000118 | -10                     | -23.3 | -26   | -14.8 |       |
| 1/16   |          | .0625        | 1.5875                | .0001 | .00254                | 0.004   | .000157                 | -5    | -20.6 | -24   | -11.2 |
|        | 5/64     | .078125      | 1.9844                | .0002 | .00508                | 0.005   | .000197                 | 0     | -17.8 | -22   | -7.6  |
|        | 3/32     | .09375       | 2.3812                | .0003 | .00762                | 0.006   | .000236                 | 1     | -17.2 | -20   | -4    |
|        | 7/64     | .109375      | 2.7781                | .0004 | .01016                | 0.007   | .000276                 | 2     | -16.7 | -18   | -0.4  |
| 1/8    |          | .125         | 3.1750                | .0005 | .01270                | 0.008   | .000315                 | 3     | -16.1 | -16   | 3.2   |
|        | 9/64     | .140625      | 3.5719                | .0006 | .01524                | 0.009   | .000354                 | 4     | -15.6 | -14   | 6.8   |
|        | 5/32     | .15625       | 3.9687                | .0007 | .01778                | 0.01    | .00039                  | 5     | -15.0 | -12   | 10.4  |
|        | 11/64    | .171875      | 4.3656                | .0008 | .02032                | 0.02    | .00079                  | 10    | -12.2 | -10   | 14    |
| 3/16   |          | .1875        | 4.7625                | .0009 | .02286                | 0.03    | .00118                  | 15    | -9.4  | -8    | 17.6  |
|        | 13/64    | .203125      | 5.1594                | .001  | .0254                 | 0.04    | .00157                  | 20    | -6.7  | -6    | 21.2  |
|        | 7/32     | .21875       | 5.5562                | .002  | .0508                 | 0.05    | .00197                  | 25    | -3.9  | -4    | 24.8  |
|        | 15/64    | .234375      | 5.9531                | .003  | .0762                 | 0.06    | .00236                  | 30    | -1.1  | -2    | 28.4  |
| 1/4    |          | .25          | 6.3500                | .004  | .1016                 | 0.07    | .00276                  | 35    | 1.7   | 0     | 32    |
|        | 17/64    | .265625      | 6.7469                | .005  | .1270                 | 0.08    | .00315                  | 40    | 4.4   | 2     | 35.6  |
|        | 9/32     | .28125       | 7.1437                | .006  | .1524                 | 0.09    | .00354                  | 45    | 7.2   | 4     | 39.2  |
|        | 19/64    | .296875      | 7.5406                | .007  | .1778                 | 0.1     | .00394                  | 50    | 10.0  | 6     | 42.8  |
| 5/16   |          | .3125        | 7.9375                | .008  | .2032                 | 0.2     | .00787                  | 55    | 12.8  | 8     | 46.4  |
|        | 21/64    | .328125      | 8.3344                | .009  | .2286                 | 0.3     | .01181                  | 60    | 15.6  | 10    | 50    |
|        | 11/32    | .34375       | 8.7312                | .01   | .254                  | 0.4     | .01575                  | 65    | 18.3  | 12    | 53.6  |
|        | 23/64    | .359375      | 9.1281                | .02   | .508                  | 0.5     | .01969                  | 70    | 21.1  | 14    | 57.2  |
| 3/8    |          | .375         | 9.5250                | .03   | .762                  | 0.6     | .02362                  | 75    | 23.9  | 16    | 60.8  |
|        | 25/64    | .390625      | 9.9219                | .04   | 1.016                 | 0.7     | .02756                  | 80    | 26.7  | 18    | 64.4  |
|        | 13/32    | .40625       | 10.3187               | .05   | 1.270                 | 0.8     | .03150                  | 85    | 29.4  | 20    | 68    |
|        | 27/64    | .421875      | 10.7156               | .06   | 1.524                 | 0.9     | .03543                  | 90    | 32.2  | 22    | 71.6  |
| 7/16   |          | .4375        | 11.1125               | .07   | 1.778                 | 1       | .03937                  | 95    | 35.0  | 24    | 75.2  |
|        | 29/64    | .453125      | 11.5094               | .08   | 2.032                 | 2       | .07874                  | 100   | 37.8  | 26    | 78.8  |
|        | 15/32    | .46875       | 11.9062               | .09   | 2.286                 | 3       | .11811                  | 105   | 40.6  | 28    | 82.4  |
|        | 31/64    | .484375      | 12.3031               | .1    | 2.54                  | 4       | .15748                  | 110   | 43.3  | 30    | 86    |
| 1/2    |          | .5           | 12.7000               | .2    | 5.08                  | 5       | .19685                  | 115   | 46.1  | 32    | 89.6  |
|        | 33/64    | .515625      | 13.0969               | .3    | 7.62                  | 6       | .23622                  | 120   | 48.9  | 34    | 93.2  |
|        | 17/32    | .53125       | 13.4937               | .4    | 10.16                 | 7       | .27559                  | 125   | 51.7  | 36    | 96.8  |
|        | 35/64    | .546875      | 13.8906               | .5    | 12.70                 | 8       | .31496                  | 130   | 54.4  | 38    | 100.4 |
| 9/16   |          | .5625        | 14.2875               | .6    | 15.24                 | 9       | .35433                  | 135   | 57.2  | 40    | 104   |
|        | 37/64    | .578125      | 14.6844               | .7    | 17.78                 | 10      | .39370                  | 140   | 60.0  | 42    | 107.6 |
|        | 19/32    | .59375       | 15.0812               | .8    | 20.32                 | 11      | .43307                  | 145   | 62.8  | 44    | 112.2 |
|        | 39/64    | .609375      | 15.4781               | .9    | 22.86                 | 12      | .47244                  | 150   | 65.6  | 46    | 114.8 |
| 5/8    |          | .625         | 15.8750               | 1     | 25.4                  | 13      | .51181                  | 155   | 68.3  | 48    | 118.4 |
|        | 41/64    | .640625      | 16.2719               | 2     | 50.8                  | 14      | .55118                  | 160   | 71.1  | 50    | 122   |
|        | 21/32    | .65625       | 16.6687               | 3     | 76.2                  | 15      | .59055                  | 165   | 73.9  | 52    | 125.6 |
|        | 43/64    | .671875      | 17.0656               | 4     | 101.6                 | 16      | .62992                  | 170   | 76.7  | 54    | 129.2 |
| 11/16  |          | .6875        | 17.4625               | 5     | 127.0                 | 17      | .66929                  | 175   | 79.4  | 56    | 132.8 |
|        | 45/64    | .703125      | 17.8594               | 6     | 152.4                 | 18      | .70866                  | 180   | 82.2  | 58    | 136.4 |
|        | 23/32    | .71875       | 18.2562               | 7     | 177.8                 | 19      | .74803                  | 185   | 85.0  | 60    | 140   |
|        | 47/64    | .734375      | 18.6531               | 8     | 203.2                 | 20      | .78740                  | 190   | 87.8  | 62    | 143.6 |
| 3/4    |          | .75          | 19.0500               | 9     | 228.6                 | 21      | .82677                  | 195   | 90.6  | 64    | 147.2 |
|        | 49/64    | .765625      | 19.4469               | 10    | 254.0                 | 22      | .86614                  | 200   | 93.3  | 66    | 150.8 |
|        | 25/32    | .78125       | 19.8437               | 11    | 279.4                 | 23      | .90551                  | 205   | 96.1  | 68    | 154.4 |
|        | 51/64    | .796875      | 20.2406               | 12    | 304.8                 | 24      | .94488                  | 210   | 98.9  | 70    | 158   |
| 13/16  |          | .8125        | 20.6375               | 13    | 330.2                 | 25      | .98425                  | 212   | 100.0 | 75    | 167   |
|        | 53/64    | .828125      | 21.0344               | 14    | 355.6                 | 26      | 1.02362                 | 215   | 101.7 | 80    | 176   |
|        | 27/32    | .84375       | 21.4312               | 15    | 381.0                 | 27      | 1.06299                 | 220   | 104.4 | 85    | 185   |
|        | 55/64    | .859375      | 21.8281               | 16    | 406.4                 | 28      | 1.10236                 | 225   | 107.2 | 90    | 194   |
| 7/8    |          | .875         | 22.2250               | 17    | 431.8                 | 29      | 1.14173                 | 230   | 110.0 | 95    | 203   |
|        | 57/64    | .890625      | 22.6219               | 18    | 457.2                 | 30      | 1.18110                 | 235   | 112.8 | 100   | 212   |
|        | 29/32    | .90625       | 23.0187               | 19    | 482.6                 | 31      | 1.22047                 | 240   | 115.6 | 105   | 221   |
|        | 59/64    | .921875      | 23.4156               | 20    | 508.0                 | 32      | 1.25984                 | 245   | 118.3 | 110   | 230   |
| 15/16  |          | .9375        | 23.8125               | 21    | 533.4                 | 33      | 1.29921                 | 250   | 121.1 | 115   | 239   |
|        | 61/64    | .953125      | 24.2094               | 22    | 558.8                 | 34      | 1.33858                 |       |       |       |       |
|        | 31/32    | .96875       | 24.6062               | 23    | 584.2                 | 35      | 1.37795                 |       |       |       |       |
|        | 63/64    | .984375      | 25.0031               | 24    | 609.6                 | 36      | 1.41732                 |       |       |       |       |
|        |          |              |                       | 25    | 635.0                 | 37      | 1.45669                 |       |       |       |       |
|        |          |              |                       | 26    | 660.4                 | 38      | 1.49606                 |       |       |       |       |
|        |          |              |                       |       |                       | 39      | 1.53543                 |       |       |       |       |
|        |          |              |                       |       |                       | 40      | 1.57480                 |       |       |       |       |



## CONVERSION TABLES

## INCHES TO CENTIMETERS

|    | 0      | 1      | 2      | 3      | 4      | 5      | 6      | 7      | 8      | 9      |    |
|----|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|----|
| —  | —      | 2.54   | 5.08   | 7.62   | 10.16  | 12.70  | 15.24  | 17.78  | 20.32  | 22.86  | —  |
| 10 | 25.40  | 27.94  | 30.48  | 33.02  | 35.56  | 38.10  | 40.64  | 43.18  | 45.72  | 48.26  | 10 |
| 20 | 50.80  | 53.34  | 55.88  | 58.42  | 60.96  | 63.50  | 66.04  | 68.58  | 71.12  | 73.66  | 20 |
| 30 | 76.20  | 78.74  | 81.28  | 83.82  | 86.36  | 88.90  | 91.44  | 93.98  | 96.52  | 99.06  | 30 |
| 40 | 101.60 | 104.14 | 106.68 | 109.22 | 111.76 | 114.30 | 116.84 | 119.38 | 121.92 | 124.46 | 40 |
| 50 | 127.00 | 129.54 | 132.08 | 134.62 | 137.16 | 139.70 | 142.24 | 144.78 | 147.32 | 149.86 | 50 |
| 60 | 152.40 | 154.94 | 157.48 | 160.02 | 162.56 | 165.10 | 167.64 | 170.18 | 172.72 | 175.26 | 60 |
| 70 | 177.80 | 180.34 | 182.88 | 185.42 | 187.96 | 190.50 | 193.04 | 195.58 | 198.12 | 200.66 | 70 |
| 80 | 203.20 | 205.74 | 208.28 | 210.82 | 213.36 | 215.90 | 218.44 | 220.98 | 223.52 | 226.06 | 80 |
| 90 | 228.60 | 231.14 | 233.68 | 236.22 | 238.76 | 241.30 | 243.84 | 246.38 | 248.92 | 251.46 | 90 |

## FEET TO METRES

|    | 0      | 1      | 2      | 3      | 4      | 5      | 6      | 7      | 8      | 9      |    |
|----|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|----|
| —  | —      | 0.305  | 0.610  | 0.914  | 1.219  | 1.524  | 1.829  | 2.134  | 2.438  | 2.743  | —  |
| 10 | 3.048  | 3.353  | 3.658  | 3.962  | 4.267  | 4.572  | 4.877  | 5.182  | 5.486  | 5.791  | 10 |
| 20 | 6.096  | 6.401  | 6.706  | 7.010  | 7.315  | 7.620  | 7.925  | 8.230  | 8.534  | 8.839  | 20 |
| 30 | 9.144  | 9.449  | 9.754  | 10.058 | 10.363 | 10.668 | 10.973 | 11.278 | 11.582 | 11.887 | 30 |
| 40 | 12.192 | 12.497 | 12.802 | 13.106 | 13.411 | 13.716 | 14.021 | 14.326 | 14.630 | 14.935 | 40 |
| 50 | 15.240 | 15.545 | 15.850 | 16.154 | 16.459 | 16.764 | 17.069 | 17.374 | 17.678 | 17.983 | 50 |
| 60 | 18.288 | 18.593 | 18.898 | 19.202 | 19.507 | 19.812 | 20.117 | 20.422 | 20.726 | 21.031 | 60 |
| 70 | 21.336 | 21.641 | 21.946 | 22.250 | 22.555 | 22.860 | 23.165 | 23.470 | 23.774 | 24.079 | 70 |
| 80 | 24.384 | 24.689 | 24.994 | 25.298 | 25.603 | 25.908 | 26.213 | 26.518 | 26.822 | 27.127 | 80 |
| 90 | 27.432 | 27.737 | 28.042 | 28.346 | 28.651 | 28.956 | 29.261 | 29.566 | 29.870 | 30.175 | 90 |

## SQUARE INCHES TO SQUARE CENTIMETRES

|    | 0       | 1       | 2       | 3       | 4       | 5       | 6       | 7       | 8       | 9       |    |
|----|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----|
| —  | —       | 6.452   | 12.903  | 19.355  | 25.807  | 32.258  | 38.710  | 45.161  | 51.613  | 58.065  | —  |
| 10 | 64.516  | 70.968  | 77.420  | 83.871  | 90.323  | 96.774  | 103.226 | 109.678 | 116.129 | 122.581 | 10 |
| 20 | 129.033 | 135.484 | 141.936 | 148.387 | 154.839 | 161.291 | 167.742 | 174.194 | 180.646 | 187.097 | 20 |
| 30 | 193.549 | 200.000 | 206.452 | 212.904 | 219.355 | 225.807 | 232.259 | 238.710 | 245.162 | 251.613 | 30 |
| 40 | 258.065 | 264.517 | 270.968 | 277.420 | 283.871 | 290.323 | 296.775 | 303.226 | 309.678 | 316.130 | 40 |
| 50 | 322.581 | 329.033 | 335.485 | 341.936 | 348.388 | 354.839 | 361.291 | 367.743 | 374.194 | 380.646 | 50 |
| 60 | 387.098 | 393.549 | 400.001 | 406.452 | 412.904 | 419.356 | 425.807 | 432.259 | 438.711 | 445.162 | 60 |
| 70 | 451.614 | 458.065 | 464.517 | 470.969 | 477.420 | 483.872 | 490.324 | 496.775 | 503.227 | 509.678 | 70 |
| 80 | 516.130 | 522.582 | 529.033 | 535.485 | 541.937 | 548.388 | 554.840 | 561.291 | 567.743 | 574.195 | 80 |
| 90 | 580.646 | 587.098 | 593.550 | 600.001 | 606.453 | 612.904 | 619.356 | 625.808 | 632.259 | 638.711 | 90 |

## CUBIC INCHES TO CUBIC CENTIMETERS

|    | 0        | 1        | 2        | 3        | 4        | 5        | 6        | 7        | 8        | 9        |    |
|----|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----|
| —  | —        | 16.387   | 32.774   | 49.162   | 65.549   | 81.936   | 98.323   | 114.710  | 131.097  | 147.484  | —  |
| 10 | 163.872  | 180.259  | 196.646  | 213.033  | 229.420  | 245.808  | 262.195  | 278.582  | 294.969  | 311.356  | 10 |
| 20 | 327.743  | 344.130  | 360.518  | 376.905  | 393.292  | 409.679  | 426.066  | 442.453  | 458.841  | 475.228  | 20 |
| 30 | 491.615  | 508.002  | 524.389  | 540.776  | 557.164  | 573.551  | 589.938  | 606.325  | 622.712  | 639.099  | 30 |
| 40 | 655.486  | 671.874  | 688.261  | 704.648  | 721.035  | 737.422  | 753.809  | 770.197  | 786.584  | 802.971  | 40 |
| 50 | 819.358  | 835.745  | 852.132  | 868.520  | 884.907  | 901.294  | 917.681  | 934.068  | 950.455  | 966.843  | 50 |
| 60 | 983.230  | 999.617  | 1016.004 | 1032.391 | 1048.778 | 1065.166 | 1081.553 | 1097.940 | 1114.327 | 1130.714 | 60 |
| 70 | 1147.101 | 1163.489 | 1179.876 | 1196.263 | 1212.650 | 1229.037 | 1245.424 | 1261.811 | 1278.199 | 1294.586 | 70 |
| 80 | 1310.973 | 1327.360 | 1343.747 | 1360.134 | 1376.522 | 1392.909 | 1409.296 | 1425.683 | 1442.070 | 1458.457 | 80 |
| 90 | 1474.845 | 1491.232 | 1507.619 | 1524.006 | 1540.393 | 1556.780 | 1573.168 | 1589.555 | 1605.942 | 1622.329 | 90 |

**CONVERSION TABLES**

**CENTIMETRES TO INCHES**

|    | 0       | 1       | 2       | 3       | 4       | 5       | 6       | 7       | 8       | 9       |    |
|----|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----|
|    | —       | 0.3937  | 0.7874  | 1.1811  | 1.5748  | 1.9685  | 2.3622  | 2.7559  | 3.1496  | 3.5433  | —  |
| 10 | 3.9370  | 4.3307  | 4.7244  | 5.1181  | 5.5118  | 5.9055  | 6.2992  | 6.6929  | 7.0866  | 7.4803  | 10 |
| 20 | 7.8740  | 8.2677  | 8.6614  | 9.0551  | 9.4488  | 9.8425  | 10.2362 | 10.6299 | 11.0236 | 11.4173 | 20 |
| 30 | 11.8110 | 12.2047 | 12.5984 | 12.9921 | 13.3858 | 13.7795 | 14.1732 | 14.5669 | 14.9606 | 15.3543 | 30 |
| 40 | 15.7480 | 16.1417 | 16.5354 | 16.9291 | 17.3228 | 17.7165 | 18.1102 | 18.5039 | 18.8976 | 19.2913 | 40 |
| 50 | 19.6850 | 20.0787 | 20.4724 | 20.8661 | 21.2598 | 21.6535 | 22.0472 | 22.4409 | 22.8346 | 23.2283 | 50 |
| 60 | 23.6220 | 24.0157 | 24.4094 | 24.8031 | 25.1968 | 25.5905 | 25.9842 | 26.3779 | 26.7716 | 27.1653 | 60 |
| 70 | 27.5590 | 27.9527 | 28.3464 | 28.7401 | 29.1338 | 29.5275 | 29.9212 | 30.3149 | 30.7086 | 31.1023 | 70 |
| 80 | 31.4960 | 31.8897 | 32.2834 | 32.6771 | 33.0708 | 33.4645 | 33.8582 | 34.2519 | 34.6456 | 35.0393 | 80 |
| 90 | 35.4330 | 35.8267 | 36.2204 | 36.6141 | 37.0078 | 37.4015 | 37.7952 | 38.1889 | 38.5826 | 38.9763 | 90 |

**METRES TO FEET**

|    | 0        | 1        | 2        | 3        | 4        | 5        | 6        | 7        | 8        | 9        |    |
|----|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----|
|    | —        | 3.2808   | 6.5617   | 9.8425   | 13.1233  | 16.4042  | 19.6850  | 22.9658  | 26.2467  | 29.5275  | —  |
| 10 | 32.8083  | 36.0892  | 39.3700  | 42.6508  | 45.9317  | 49.2125  | 52.4933  | 55.7742  | 59.0550  | 62.3358  | 10 |
| 20 | 65.6167  | 68.8975  | 72.1783  | 75.4592  | 78.7400  | 82.0208  | 85.3017  | 88.5825  | 91.8633  | 95.1442  | 20 |
| 30 | 98.4250  | 101.7058 | 104.9867 | 108.2675 | 111.5483 | 114.8292 | 118.1100 | 121.3908 | 124.6717 | 127.9525 | 30 |
| 40 | 131.2333 | 134.5142 | 137.7950 | 141.0758 | 144.3567 | 146.6375 | 150.9183 | 154.1992 | 157.4800 | 160.7608 | 40 |
| 50 | 164.0417 | 167.3225 | 170.6033 | 173.8841 | 177.1650 | 180.4458 | 183.7266 | 187.0075 | 190.2883 | 193.5691 | 50 |
| 60 | 196.8500 | 200.1308 | 203.4116 | 206.6925 | 209.9733 | 213.2541 | 216.5350 | 219.8158 | 223.0966 | 226.3775 | 60 |
| 70 | 229.6583 | 232.9391 | 236.2200 | 239.5008 | 242.7816 | 246.0625 | 249.3433 | 252.6241 | 255.9050 | 259.1858 | 70 |
| 80 | 262.4666 | 265.7475 | 269.0283 | 272.3091 | 275.5900 | 278.8708 | 282.1516 | 285.4325 | 288.7133 | 291.9941 | 80 |
| 90 | 295.2750 | 298.5558 | 301.8366 | 305.1175 | 308.3983 | 311.6791 | 314.9600 | 318.2408 | 321.5216 | 324.8025 | 90 |

**SQUARE CENTIMETRES TO SQUARE INCHES**

|    | 0       | 1       | 2       | 3       | 4       | 5       | 6       | 7       | 8       | 9       |    |
|----|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----|
|    | —       | 0.1550  | 0.3100  | 0.4650  | 0.6200  | 0.7750  | 0.9300  | 1.0850  | 1.2400  | 1.3950  | —  |
| 10 | 1.5500  | 1.7050  | 1.8600  | 2.0150  | 2.1700  | 2.3250  | 2.4800  | 2.6350  | 2.7900  | 2.9450  | 10 |
| 20 | 3.1000  | 3.2550  | 3.4100  | 3.5650  | 3.7200  | 3.8750  | 4.0300  | 4.1850  | 4.3400  | 4.4950  | 20 |
| 30 | 4.6500  | 4.8050  | 4.9600  | 5.1150  | 5.2700  | 5.4250  | 5.5800  | 5.7350  | 5.8900  | 6.0450  | 30 |
| 40 | 6.2000  | 6.3550  | 6.5100  | 6.6650  | 6.8200  | 6.9750  | 7.1300  | 7.2850  | 7.4400  | 7.5950  | 40 |
| 50 | 7.7500  | 7.9050  | 8.0600  | 8.2150  | 8.3700  | 8.5250  | 8.6800  | 8.8350  | 8.9900  | 9.1450  | 50 |
| 60 | 9.3000  | 9.4550  | 9.6100  | 9.7650  | 9.9200  | 10.0750 | 10.2300 | 10.3850 | 10.5400 | 10.6950 | 60 |
| 70 | 10.8500 | 11.0050 | 11.1600 | 11.3150 | 11.4700 | 11.6250 | 11.7800 | 11.9350 | 12.0900 | 12.2450 | 70 |
| 80 | 12.4000 | 12.5550 | 12.7100 | 12.8650 | 13.0200 | 13.1750 | 13.3300 | 13.4850 | 13.6400 | 13.7950 | 80 |
| 90 | 13.9500 | 14.1050 | 14.2600 | 14.4150 | 14.5700 | 14.7250 | 14.8800 | 15.0350 | 15.1900 | 15.3450 | 90 |

**CUBIC CENTIMETRES TO CUBIC INCHES**

|    | 0      | 1      | 2      | 3      | 4      | 5      | 6      | 7      | 8      | 9      |    |
|----|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|----|
|    | —      | 0.0610 | 0.1220 | 0.1831 | 0.2441 | 0.3051 | 0.3661 | 0.4272 | 0.4882 | 0.5492 | —  |
| 10 | 0.6102 | 0.6713 | 0.7323 | 0.7933 | 0.8543 | 0.9154 | 0.9764 | 1.0374 | 1.0984 | 1.1594 | 10 |
| 20 | 1.2205 | 1.2815 | 1.3425 | 1.4035 | 1.4646 | 1.5256 | 1.5866 | 1.6476 | 1.7086 | 1.7697 | 20 |
| 30 | 1.8307 | 1.8917 | 1.9527 | 2.0138 | 2.0748 | 2.1358 | 2.1968 | 2.2579 | 2.3189 | 2.3799 | 30 |
| 40 | 2.4409 | 2.5020 | 2.5630 | 2.6240 | 2.6850 | 2.7461 | 2.8071 | 2.8681 | 2.9291 | 2.9901 | 40 |
| 50 | 3.0512 | 3.1122 | 3.1732 | 3.2342 | 3.2953 | 3.3563 | 3.4173 | 3.4783 | 3.5394 | 3.6004 | 50 |
| 60 | 3.6614 | 3.7224 | 3.7834 | 3.8445 | 3.9055 | 3.9665 | 4.0275 | 4.0886 | 4.1496 | 4.2106 | 60 |
| 70 | 4.2716 | 4.3327 | 4.3937 | 4.4547 | 4.5157 | 4.5768 | 4.6378 | 4.6988 | 4.7598 | 4.8208 | 70 |
| 80 | 4.8819 | 4.9429 | 5.0039 | 5.0649 | 5.1260 | 5.1870 | 5.2480 | 5.3090 | 5.3701 | 5.4311 | 80 |
| 90 | 5.4921 | 5.5531 | 5.6142 | 5.6752 | 5.7362 | 5.7972 | 5.8582 | 5.9193 | 5.9803 | 6.0413 | 90 |

## CONVERSION TABLES

## POUNDS TO KILOGRAMS

|    | 0      | 1      | 2      | 3      | 4      | 5      | 6      | 7      | 8      | 9      |    |
|----|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|----|
| —  | —      | 0.454  | 0.907  | 1.361  | 1.814  | 2.268  | 2.722  | 3.175  | 3.629  | 4.082  | —  |
| 10 | 4.536  | 4.990  | 5.443  | 5.897  | 6.350  | 6.804  | 7.257  | 7.711  | 8.165  | 8.618  | 10 |
| 20 | 9.072  | 9.525  | 9.979  | 10.433 | 10.886 | 11.340 | 11.793 | 12.247 | 12.701 | 13.154 | 20 |
| 30 | 13.608 | 14.061 | 14.515 | 14.968 | 15.422 | 15.876 | 16.329 | 16.783 | 17.237 | 17.690 | 30 |
| 40 | 18.144 | 18.597 | 19.051 | 19.504 | 19.958 | 20.412 | 20.865 | 21.319 | 21.772 | 22.226 | 40 |
| 50 | 22.680 | 23.133 | 23.587 | 24.040 | 24.494 | 24.948 | 25.401 | 25.855 | 26.308 | 26.762 | 50 |
| 60 | 27.216 | 27.669 | 28.123 | 28.576 | 29.030 | 29.484 | 29.937 | 30.391 | 30.844 | 31.298 | 60 |
| 70 | 31.751 | 32.205 | 32.659 | 33.112 | 33.566 | 34.019 | 34.473 | 34.927 | 35.380 | 35.834 | 70 |
| 80 | 36.287 | 36.741 | 37.195 | 37.648 | 38.102 | 38.555 | 39.009 | 39.463 | 39.916 | 40.370 | 80 |
| 90 | 40.823 | 41.277 | 41.731 | 42.184 | 42.638 | 43.091 | 43.545 | 43.998 | 44.452 | 44.906 | 90 |

## LBS PER SQUARE INCHES TO KGS. PER SQUARE CENTIMETRE

|    | 0     | 1     | 2     | 3     | 4     | 5     | 6     | 7     | 8     | 9     |    |
|----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|----|
| —  | —     | 0.070 | 0.141 | 0.211 | 0.281 | 0.352 | 0.422 | 0.492 | 0.562 | 0.633 | —  |
| 10 | 0.703 | 0.773 | 0.844 | 0.914 | 0.984 | 1.055 | 1.125 | 1.195 | 1.266 | 1.336 | 10 |
| 20 | 1.406 | 1.476 | 1.547 | 1.617 | 1.687 | 1.758 | 1.828 | 1.898 | 1.969 | 2.039 | 20 |
| 30 | 2.109 | 2.179 | 2.250 | 2.320 | 2.390 | 2.461 | 2.531 | 2.601 | 2.672 | 2.742 | 30 |
| 40 | 2.812 | 2.883 | 2.953 | 3.023 | 3.093 | 3.164 | 3.234 | 3.304 | 3.375 | 3.445 | 40 |
| 50 | 3.515 | 3.586 | 3.656 | 3.726 | 3.797 | 3.867 | 3.937 | 4.007 | 4.078 | 4.148 | 50 |
| 60 | 4.218 | 4.289 | 4.359 | 4.429 | 4.500 | 4.570 | 4.640 | 4.711 | 4.781 | 4.851 | 60 |
| 70 | 4.921 | 4.992 | 5.062 | 5.132 | 5.203 | 5.273 | 5.343 | 5.414 | 5.484 | 5.554 | 70 |
| 80 | 5.624 | 5.695 | 5.765 | 5.835 | 5.906 | 5.976 | 6.046 | 6.117 | 6.187 | 6.257 | 80 |
| 90 | 6.328 | 6.398 | 6.468 | 6.538 | 6.609 | 6.679 | 6.749 | 6.820 | 6.890 | 6.960 | 90 |

## FOOT LBS. TO KILOGRAM METRES

|    | 0      | 1      | 2      | 3      | 4      | 5      | 6      | 7      | 8      | 9      |    |
|----|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|----|
| —  | —      | 0.138  | 0.277  | 0.415  | 0.553  | 0.691  | 0.830  | 0.968  | 1.106  | 1.244  | —  |
| 10 | 1.383  | 1.521  | 1.659  | 1.797  | 1.936  | 2.074  | 2.212  | 2.350  | 2.489  | 2.627  | 10 |
| 20 | 2.765  | 2.903  | 3.042  | 3.180  | 3.318  | 3.456  | 3.595  | 3.733  | 3.871  | 4.009  | 20 |
| 30 | 4.148  | 4.286  | 4.424  | 4.562  | 4.701  | 4.839  | 4.977  | 5.116  | 5.254  | 5.392  | 30 |
| 40 | 5.530  | 5.668  | 5.807  | 5.945  | 6.083  | 6.221  | 6.360  | 6.498  | 6.636  | 6.774  | 40 |
| 50 | 6.913  | 7.051  | 7.189  | 7.328  | 7.466  | 7.604  | 7.742  | 7.881  | 8.019  | 8.157  | 50 |
| 60 | 8.295  | 8.434  | 8.572  | 8.710  | 8.848  | 8.987  | 9.125  | 9.263  | 9.401  | 9.540  | 60 |
| 70 | 9.678  | 9.816  | 9.954  | 10.093 | 10.231 | 10.369 | 10.507 | 10.646 | 10.784 | 10.922 | 70 |
| 80 | 11.060 | 11.199 | 11.337 | 11.475 | 11.613 | 11.752 | 11.890 | 12.028 | 12.166 | 12.305 | 80 |
| 90 | 12.443 | 12.581 | 12.719 | 12.858 | 12.996 | 13.134 | 13.272 | 13.411 | 13.549 | 13.687 | 90 |

## KILOGRAMS TO POUNDS

|    | 0        | 1        | 2        | 3        | 4        | 5        | 6        | 7        | 8        | 9        |    |
|----|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----|
| —  | —        | 2.2046   | 4.4092   | 6.6139   | 8.8185   | 11.0231  | 13.2277  | 15.4324  | 17.6370  | 19.8416  | —  |
| 10 | 22.0462  | 24.2508  | 26.4555  | 28.6601  | 30.8647  | 33.0693  | 35.2740  | 37.4786  | 39.6832  | 41.8878  | 10 |
| 20 | 44.0924  | 46.2971  | 48.5017  | 50.7063  | 52.9109  | 55.1156  | 57.3202  | 59.5248  | 61.7294  | 63.9340  | 20 |
| 30 | 66.1387  | 68.3433  | 70.5479  | 72.7525  | 74.9572  | 77.1618  | 79.3664  | 81.5710  | 83.7756  | 85.9803  | 30 |
| 40 | 88.1849  | 90.3895  | 92.5941  | 94.7988  | 97.0034  | 99.2080  | 101.4126 | 103.6172 | 105.8219 | 108.0265 | 40 |
| 50 | 110.2311 | 112.4357 | 114.6404 | 116.8450 | 119.0496 | 121.2542 | 123.4589 | 125.6635 | 127.8681 | 130.0727 | 50 |
| 60 | 132.2773 | 134.4820 | 136.6866 | 138.8912 | 141.0958 | 143.3005 | 145.5051 | 147.7097 | 149.9143 | 152.1189 | 60 |
| 70 | 154.3236 | 156.5282 | 158.7328 | 160.9374 | 163.1421 | 165.3467 | 167.5513 | 169.7559 | 171.9605 | 174.1652 | 70 |
| 80 | 176.3698 | 178.5744 | 180.7790 | 182.9837 | 185.1883 | 187.3929 | 189.5975 | 191.8021 | 194.0068 | 196.2114 | 80 |
| 90 | 198.4160 | 200.6206 | 202.8253 | 205.0299 | 207.2345 | 209.4391 | 211.6437 | 213.8484 | 216.0530 | 218.2576 | 90 |

**CONVERSION TABLES**

**KILOGRAMS PER SQUARE CENTIMETRE TO POUNDS PER SQUARE INCH**

|    | 0         | 1         | 2         | 3         | 4         | 5         | 6         | 7         | 8         | 9         |    |
|----|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|----|
| —  | —         | 14.2235   | 28.4471   | 42.6706   | 56.8941   | 71.1177   | 85.3412   | 99.5647   | 113.7883  | 128.0118  | —  |
| 10 | 142.2353  | 156.4589  | 170.6824  | 184.9059  | 199.1295  | 213.3530  | 227.5765  | 241.8001  | 256.0236  | 270.2471  | 10 |
| 20 | 284.4707  | 298.6942  | 312.9177  | 327.1413  | 341.3648  | 355.5883  | 369.8119  | 384.0354  | 398.2589  | 412.4825  | 20 |
| 30 | 426.7060  | 440.9295  | 455.1531  | 469.3766  | 483.6001  | 497.8237  | 512.0472  | 526.2707  | 540.4943  | 554.7178  | 30 |
| 40 | 568.9413  | 583.1649  | 597.3884  | 611.6119  | 625.8355  | 640.0590  | 654.2825  | 668.5061  | 682.7296  | 696.9531  | 40 |
| 50 | 711.1767  | 725.4002  | 739.6237  | 753.8472  | 768.0708  | 782.2943  | 796.5178  | 810.7414  | 824.9649  | 839.1884  | 50 |
| 60 | 853.4120  | 867.6355  | 881.8590  | 896.0826  | 910.3061  | 924.5296  | 938.7532  | 952.9767  | 967.2002  | 981.4238  | 60 |
| 70 | 995.6473  | 1009.8708 | 1024.0944 | 1038.3180 | 1052.5414 | 1066.7650 | 1080.9885 | 1095.2120 | 1109.4356 | 1123.6591 | 70 |
| 80 | 1137.8826 | 1152.1062 | 1166.3297 | 1180.5532 | 1194.7768 | 1209.0003 | 1223.2238 | 1237.4474 | 1251.6709 | 1265.8944 | 80 |
| 90 | 1280.1180 | 1294.3415 | 1308.5650 | 1322.7886 | 1337.0121 | 1351.2356 | 1365.4592 | 1379.6827 | 1393.9062 | 1408.1298 | 90 |

**KILOGRAM METRE TO FOOT POUNDS**

|    | 0        | 1        | 2        | 3        | 4        | 5        | 6        | 7        | 8        | 9        |    |
|----|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----|
| —  | —        | 7.2330   | 14.4660  | 21.6990  | 28.9320  | 36.1651  | 43.3981  | 50.6311  | 57.8641  | 65.0971  | —  |
| 10 | 72.3301  | 79.5631  | 86.7961  | 94.0291  | 101.2622 | 108.4952 | 115.7282 | 122.9612 | 130.1942 | 137.4272 | 10 |
| 20 | 144.6602 | 151.8932 | 159.1262 | 166.3593 | 173.5923 | 180.8253 | 188.0583 | 195.2913 | 202.5243 | 209.7573 | 20 |
| 30 | 216.9903 | 224.2233 | 231.4564 | 238.6894 | 245.9224 | 253.1554 | 260.3884 | 267.6214 | 274.8544 | 282.0874 | 30 |
| 40 | 289.3204 | 296.5535 | 303.7865 | 311.0195 | 318.2525 | 325.4855 | 332.7185 | 339.9515 | 347.1845 | 354.4175 | 40 |
| 50 | 361.6506 | 368.8836 | 376.1166 | 383.3496 | 390.5825 | 397.8156 | 405.0486 | 412.2816 | 419.5146 | 426.7476 | 50 |
| 60 | 433.9807 | 441.2137 | 448.4467 | 455.6797 | 462.9127 | 470.1457 | 477.3787 | 484.6117 | 491.8447 | 499.0777 | 60 |
| 70 | 506.3108 | 513.5438 | 520.7768 | 528.0098 | 535.2428 | 542.4758 | 549.7088 | 556.9418 | 564.1749 | 571.4079 | 70 |
| 80 | 578.6409 | 585.8739 | 593.1069 | 600.3399 | 607.5729 | 614.8059 | 622.0389 | 629.2720 | 636.5050 | 643.7380 | 80 |
| 90 | 650.9710 | 658.2040 | 665.4370 | 672.6700 | 679.9030 | 687.1360 | 694.3691 | 701.6021 | 708.8351 | 716.0681 | 90 |

**LITRES TO GALLONS (IMPERIAL)**

|    | 0       | 1       | 2       | 3       | 4       | 5       | 6       | 7       | 8       | 9       |    |
|----|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----|
| —  | —       | 0.2200  | 0.4400  | 0.6599  | 0.8799  | 1.0999  | 1.3199  | 1.5399  | 1.7598  | 1.9798  | —  |
| 10 | 2.1998  | 2.4198  | 2.6398  | 2.8597  | 3.0797  | 3.2997  | 3.5197  | 3.7397  | 3.9596  | 4.1796  | 10 |
| 20 | 4.3996  | 4.6196  | 4.8396  | 5.0595  | 5.2795  | 5.4995  | 5.7195  | 5.9395  | 6.1594  | 6.3794  | 20 |
| 30 | 6.5994  | 6.8194  | 7.0394  | 7.2593  | 7.4793  | 7.6993  | 7.9193  | 8.1393  | 8.3592  | 8.5792  | 30 |
| 40 | 8.7992  | 9.0192  | 9.2392  | 9.4591  | 9.6791  | 9.8991  | 10.1191 | 10.3391 | 10.5590 | 10.7790 | 40 |
| 50 | 10.9990 | 11.2190 | 11.4390 | 11.6589 | 11.8789 | 12.0989 | 12.3189 | 12.5389 | 12.7588 | 12.9788 | 50 |
| 60 | 13.1988 | 13.4188 | 13.6388 | 13.8587 | 14.0787 | 14.2987 | 14.5187 | 14.7387 | 14.9586 | 15.1786 | 60 |
| 70 | 15.3986 | 15.6186 | 15.8386 | 16.0585 | 16.2785 | 16.4985 | 16.7185 | 16.9385 | 17.1584 | 17.3784 | 70 |
| 80 | 17.5984 | 17.8184 | 18.0384 | 18.2583 | 18.4783 | 18.6983 | 18.9183 | 19.1383 | 19.3582 | 19.5782 | 80 |
| 90 | 19.7982 | 20.0182 | 20.2382 | 20.4581 | 20.6781 | 20.8981 | 21.1181 | 21.3381 | 21.5580 | 21.7780 | 90 |

**LITRES PER 100 KILOMETRES TO MILES PER GALLON (IMPERIAL)**

|     |       |     |       |     |       |      |       |      |       |      |       |      |       |      |       |      |       |      |      |
|-----|-------|-----|-------|-----|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|------|
| 4   | 70.62 | 6   | 47.08 | 8   | 35.31 | 10   | 28.25 | 12   | 23.54 | 14   | 20.18 | 17.5 | 16.14 | 22.5 | 12.55 | 27.5 | 10.27 | 32.5 | 8.69 |
| 4.2 | 67.26 | 6.2 | 45.56 | 8.2 | 34.45 | 10.2 | 27.69 | 12.2 | 23.15 | 14.2 | 19.89 | 18   | 15.69 | 23   | 12.28 | 28   | 10.09 | 33   | 8.56 |
| 4.4 | 64.20 | 6.4 | 44.14 | 8.4 | 33.63 | 10.4 | 27.16 | 12.4 | 22.78 | 14.4 | 19.62 | 18.5 | 15.27 | 23.5 | 12.02 | 28.5 | 9.91  | 33.5 | 8.43 |
| 4.6 | 61.41 | 6.6 | 42.80 | 8.6 | 32.85 | 10.6 | 26.65 | 12.6 | 22.42 | 14.6 | 19.35 | 19   | 14.87 | 24   | 11.77 | 29   | 9.74  | 34   | 8.31 |
| 4.8 | 58.85 | 6.8 | 41.54 | 8.8 | 32.10 | 10.8 | 26.15 | 12.8 | 22.07 | 14.8 | 19.09 | 19.5 | 14.49 | 24.5 | 11.53 | 29.5 | 9.58  | 34.5 | 8.19 |
| 5   | 56.49 | 7   | 40.35 | 9   | 31.39 | 11   | 25.68 | 13   | 21.73 | 15   | 18.83 | 20   | 14.12 | 25   | 11.30 | 30   | 9.42  | 35   | 8.07 |
| 5.2 | 54.32 | 7.2 | 39.23 | 9.2 | 30.70 | 11.2 | 25.22 | 13.2 | 21.40 | 15.5 | 18.22 | 20.5 | 13.78 | 25.5 | 11.08 | 30.5 | 9.26  | 35.5 | 7.96 |
| 5.4 | 52.31 | 7.4 | 38.17 | 9.4 | 30.05 | 11.4 | 24.78 | 13.4 | 21.08 | 16   | 17.65 | 21   | 13.45 | 26   | 10.86 | 31   | 9.11  | 36   | 7.85 |
| 5.6 | 50.44 | 7.6 | 37.17 | 9.6 | 29.42 | 11.6 | 24.35 | 13.6 | 20.77 | 16.5 | 17.12 | 21.5 | 13.14 | 26.5 | 10.66 | 31.5 | 8.97  | 36.5 | 7.74 |
| 5.8 | 48.70 | 7.8 | 36.21 | 9.8 | 28.82 | 11.8 | 23.94 | 13.8 | 20.47 | 17   | 16.62 | 22   | 12.84 | 27   | 10.46 | 32   | 8.83  | 37   | 7.63 |

## CONVERSION TABLES

## GALLONS (IMP.) TO LITRES

|    | 0       | 1       | 2       | 3       | 4       | 5       | 6       | 7       | 8       | 9       |    |
|----|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|----|
| —  | —       | 4.546   | 9.092   | 13.638  | 18.184  | 22.730  | 27.276  | 31.822  | 36.368  | 40.914  | —  |
| 10 | 45.460  | 50.005  | 54.551  | 59.097  | 63.643  | 68.189  | 72.735  | 77.281  | 81.827  | 86.373  | 10 |
| 20 | 90.919  | 95.465  | 100.011 | 104.557 | 109.103 | 113.649 | 118.195 | 122.741 | 127.287 | 131.833 | 20 |
| 30 | 136.379 | 140.924 | 145.470 | 150.016 | 154.562 | 159.108 | 163.654 | 168.200 | 172.746 | 177.292 | 30 |
| 40 | 181.838 | 186.384 | 190.930 | 195.476 | 200.022 | 204.568 | 209.114 | 213.660 | 218.206 | 222.752 | 40 |
| 50 | 227.298 | 231.843 | 236.389 | 240.935 | 245.481 | 250.027 | 254.573 | 259.119 | 263.665 | 268.211 | 50 |
| 60 | 272.757 | 277.303 | 281.849 | 286.395 | 290.941 | 295.487 | 300.033 | 304.579 | 309.125 | 313.671 | 60 |
| 70 | 318.217 | 322.762 | 327.308 | 331.854 | 336.400 | 340.946 | 345.492 | 350.038 | 354.584 | 359.130 | 70 |
| 80 | 363.676 | 368.222 | 372.768 | 377.314 | 381.860 | 386.405 | 390.952 | 395.498 | 400.044 | 404.590 | 80 |
| 90 | 409.136 | 413.681 | 418.227 | 422.773 | 427.319 | 431.865 | 436.411 | 440.957 | 445.503 | 450.049 | 90 |

## MILES PER GALLON (IMP.) TO LITRES PER 100 KILOMETRES

|     |       |     |       |     |       |     |       |     |      |     |      |    |      |    |      |    |      |    |      |
|-----|-------|-----|-------|-----|-------|-----|-------|-----|------|-----|------|----|------|----|------|----|------|----|------|
| 10  | 28.25 | 15  | 18.83 | 20  | 14.12 | 25  | 11.30 | 30  | 9.42 | 35  | 8.07 | 40 | 7.06 | 50 | 5.65 | 60 | 4.71 | 70 | 4.04 |
| 10½ | 26.90 | 15½ | 18.22 | 20½ | 13.78 | 25½ | 11.08 | 30½ | 9.26 | 35½ | 7.96 | 41 | 6.89 | 51 | 5.54 | 61 | 4.63 | 71 | 3.98 |
| 11  | 25.68 | 16  | 17.66 | 21  | 13.45 | 26  | 10.87 | 31  | 9.11 | 36  | 7.85 | 42 | 6.73 | 52 | 5.43 | 62 | 4.55 | 72 | 3.92 |
| 11½ | 24.56 | 16½ | 17.12 | 21½ | 13.14 | 26½ | 10.66 | 31½ | 8.97 | 36½ | 7.74 | 43 | 6.57 | 53 | 5.33 | 63 | 4.48 | 73 | 3.87 |
| 12  | 23.54 | 17  | 16.61 | 22  | 12.84 | 27  | 10.46 | 32  | 8.83 | 37  | 7.63 | 44 | 6.42 | 54 | 5.23 | 64 | 4.41 | 74 | 3.82 |
| 12½ | 22.60 | 17½ | 16.14 | 22½ | 12.55 | 27½ | 10.27 | 32½ | 8.69 | 37½ | 7.53 | 45 | 6.28 | 55 | 5.13 | 65 | 4.35 | 75 | 3.77 |
| 13  | 21.73 | 18  | 15.69 | 23  | 12.28 | 28  | 10.09 | 33  | 8.56 | 38  | 7.43 | 46 | 6.14 | 56 | 5.04 | 66 | 4.28 | 76 | 3.72 |
| 13½ | 20.92 | 18½ | 15.27 | 23½ | 12.02 | 28½ | 9.91  | 33½ | 8.43 | 38½ | 7.34 | 47 | 6.01 | 57 | 4.96 | 67 | 4.22 | 77 | 3.67 |
| 14  | 20.18 | 19  | 14.87 | 24  | 11.77 | 29  | 9.74  | 34  | 8.31 | 39  | 7.24 | 48 | 5.89 | 58 | 4.87 | 68 | 4.16 | 78 | 3.62 |
| 14½ | 19.48 | 19½ | 14.49 | 24½ | 11.53 | 29½ | 9.58  | 34½ | 8.19 | 39½ | 7.15 | 49 | 5.77 | 59 | 4.79 | 69 | 4.10 | 79 | 3.57 |

## SCREW THREADS

BSW  
(British Std. Whitworth)

| Size  | Threads per Inch | Tapping Drill |
|-------|------------------|---------------|
| 3/16  | 24               | 9/64          |
| 1/4   | 20               | 3/16          |
| 5/16  | 18               | 1/4           |
| 3/8   | 16               | 19/64         |
| 7/16  | 14               | 23/64         |
| 1/2   | 12               | 25/64         |
| 9/16  | 12               | 29/64         |
| 5/8   | 11               | 1/2           |
| 11/16 | 11               | 37/64         |
| 3/4   | 10               | 5/8           |

BSP  
(British Std. Pipe) (Gas)

| Size | Diameter | Threads per Inch | Tapping Drill |
|------|----------|------------------|---------------|
| 1/8  | .383     | 28               | 11/32         |
| 1/4  | .518     | 19               | 15/32         |
| 3/8  | .656     | 19               | 19/32         |
| 1/2  | .825     | 14               | 3/4           |
| 5/8  | .902     | 14               | 53/64         |
| 3/4  | 1.041    | 14               | 31/32         |
| 7/8  | 1.189    | 14               | 1-7/64        |
| 1    | 1.309    | 11               | 1-13/64       |

BSF  
(British Std. Fine)

| Size  | Threads per Inch | Tapping Drill |
|-------|------------------|---------------|
| 7/32  | 28               | 11/64         |
| 1/4   | 26               | 13/64         |
| 9/32  | 26               | 15/64         |
| 5/16  | 22               | 1/4           |
| 3/8   | 20               | 5/16          |
| 7/16  | 18               | 23/64         |
| 1/2   | 16               | 27/64         |
| 9/16  | 16               | 31/64         |
| 5/8   | 14               | 17/32         |
| 11/16 | 14               | 19/32         |
| 3/4   | 12               | 41/64         |

BA  
(British Association)

| Size | Diameter | Threads per Inch | Tapping Drill |
|------|----------|------------------|---------------|
| 0    | .236     | 25.4             | 7             |
| 1    | .209     | 28.2             | 16            |
| 2    | .185     | 31.4             | 22            |
| 3    | .161     | 34.8             | 29            |
| 4    | .142     | 38.5             | 31            |
| 5    | .126     | 43.1             | 36            |
| 6    | .110     | 47.9             | 42            |
| 7    | .098     | 52.9             | 45            |
| 8    | .087     | 59.2             | 49            |
| 9    | .075     | 64.9             | 52            |
| 10   | .067     | 72.5             | 54            |

## CONVERSION TABLES

### UNC (Unified Coarse)

| Size     | Diameter | Threads per Inch | Tapping Drill |
|----------|----------|------------------|---------------|
| (No. 4)  | .1120    | 40               | 42 or 44      |
| (No. 6)  | .1380    | 32               | 7.64          |
| (No. 8)  | .1640    | 32               | 29            |
| (No. 10) | .1900    | 24               | 24 or 26      |
|          | 1/4      | 20               | 13/64         |
|          | 5/16     | 18               | 17/64         |
|          | 3/8      | 16               | 5/16          |
|          | 7/16     | 14               | U             |
|          | 1/2      | 13               | 27/64         |

### UNF (Unified Fine)

| Size     | Diameter | Threads per Inch | Tapping Drill      |
|----------|----------|------------------|--------------------|
| (No. 10) | .190     | 32               | 5/32               |
|          | 1/4      | 28               | 3                  |
|          | 5/16     | 24               | 1                  |
|          | 3/8      | 24               | 21/64              |
|          | 7/16     | 20               | 25/64              |
|          | 1/2      | 20               | 29/64              |
|          | 9/16     | 18               | .13 mm (.5118 in)  |
|          | 5/8      | 18               | 14.5 mm (.5709 in) |
|          | 3/4      | 16               | 11/16              |

### SELF TAPPING SCREWS

| Size   | Tapping Drill |
|--------|---------------|
| No. 2  | 49            |
| No. 4  | 39            |
| No. 6  | 35            |
| No. 8  | 31            |
| No. 10 | 27            |
| No. 12 | 19            |
| No. 14 | 11            |

FOR 20 SWG SHEET

### Spanner Sizes for unified Nuts and Bolts Measured across the Flats (A/F)

| Bolt diameter |       | 1/4  | 5/16 | 3/8  | 7/16   |
|---------------|-------|------|------|------|--------|
| Spanner Sizes | Nuts  | 7/16 | 1/2  | 9/16 | 11/16* |
|               | Bolts | 7/16 | 1/2  | 9/16 | 5/8    |

| Bolt diameter |       | 1/2 | 9/16* | 5/8   | 3/4   |
|---------------|-------|-----|-------|-------|-------|
| Spanner Sizes | Nuts  | 3/4 | 7/8   | 13/16 | 1 1/8 |
|               | Bolts | 3/4 | 13/16 | 13/16 | 1 1/8 |

\*Note variation in Nut and Bolt Head sizes.

**RECOMMENDED SPECIAL TOOLS****RECOMMENDED SPECIAL TOOLS**

| <b>Tool No.</b>                  | <b>Description</b>  | <b>Tool No.</b>  | <b>Description</b>   |
|----------------------------------|---|------------------|--|
| <b>ENGINE</b>                    |   |                  |  |
| <b>PD.1C</b>                     | Valve Guide Remover & Replacer (Main Tool)                                | <b>MF.263-2</b>  | Front Axle & Steering Bush Remover/Replacer Adaptors (1½")             |
| <b>PD.1C-1</b>                   | Adaptor for PD.1C   | <b>MF.263-3</b>  | Front Axle & Steering Bush Remover/Replacer Adaptors (1½")             |
| <b>PD.1C-4</b>                   | Adaptor for PD.1C   | <b>MF.264</b>    | Front Axle & Steering Bush Reamer (Main Tool)                          |
| <b>4RL</b>                       | Tension Wrench  | <b>MF.264-1</b>  | Reamer & Pilot   |
| <b>No. 13</b>                    | Tension Wrench  | <b>MF.264-2</b>  | Reamer & Pilot   |
| <b>PD.41B</b>                    | Piston Height & Valve Depth Gauge   | <b>MF.268</b>    | Steering Wheel Remover   |
| <b>PD.137</b>                    | Valve Guide Reamer .015" O/size   | <b>MF.332</b>    | Power Steering Pump Oil Seal Protector                                 |
| <b>PD.138</b>                    | Valve Guide Reamer .030" O/size   | <b>6312A</b>     | Steering Drop Arm Remover  |
| <b>PD.150</b>                    | Cylinder Liner Remover & Replacer (Main Tool)                             | <b>MF.334</b>    | Steering Pivot Pin Remover   |
| <b>PD.150-1A</b>                 | Adaptors for PD.150   | <b>REAR AXLE</b> |  |
| <b>PD.150-7</b>                  | Adaptors for PD.150   | <b>MF.9A</b>     | Differential Housing Holder and Bench Plate                            |
| <b>PD.155A</b>                   | Basic Puller  | <b>MF.10</b>     | Wheel Axle Outer Bearing Cone & Differential Cone Replacer (Main Tool) |
| <b>PD.155-1</b>                  | Adaptor for PD.155A   | <b>MF.197</b>    | Differential Carrier Plate Bearing Cone Replacer Adaptor               |
| <b>335</b>                       | Con Rod Jig & Master Arbor  | <b>MF.197-2</b>  | Drive Cover Assembly & Bearing Remover                                 |
| <b>PD.336-6</b>                  | Arbor Adaptor 2.6459" dia.  | <b>MF.200-3</b>  | Differential Carrier Plate Bearing Cone Remover Adaptor                |
| <b>6000C</b>                     | Diesel Compression Tester   | <b>MF.200-2</b>  | Driving Pinion Bearing & Pilot Bearing Remover/Replacer Adaptor        |
| <b>6000C-3</b>                   | Adaptor for 6000C   | <b>MF.200-23</b> | Epicyclic Hub Inner Bearing Cone Remover Adaptor                       |
| <b>6000C-4A</b>                  | Adaptor for 6000C   | <b>MF.202A</b>   | Rear Drive Shaft Needle Bearing Remover                                |
| <b>6118B</b>                     | Valve Spring Compressor   | <b>MF.203A</b>   | Rear Drive Shaft Needle Bearing Replacer & P.T.O. Remover/Replacer     |
| <b>PD.6118-3</b>                 | Adaptor for 6118B   | <b>MF.224</b>    | Differential Lock Shaft Circlip Remover/Replacer                       |
| <b>7066</b>                      | Circlip Pliers  | <b>MF.245D</b>   | Rear Axle Preload Gauge  |
| <b>FC.9900</b>                   | Injector Tester   | <b>MF.245D-1</b> | Straight Edge  |
| <b>MF.200-26</b>                 | Water Pump Overhaul Kit   | <b>MF.257</b>    | Differential Bearing Cone Replacer                                     |
| <b>6200C</b>                     | Small End Reaming Fixture   | <b>MF.258</b>    | Differential Housing Holder  |
| <b>316X</b>                      | Valve Seat Cutter Handle  | <b>MF.265</b>    | Planetary Carrier Assembly Remover                                     |
| <b>316-10</b>                    | Pilot (5/16" dia. Valve Guide)  | <b>MF.266B</b>   | Planetary Carrier Bush Inner Coil Seal Bearing Cone & Unit Replacer    |
| <b>316-12</b>                    | Pilot (3/8" dia. Valve Guide)   | <b>MF.267A</b>   | Epicyclic Hub Pre-load Gauge   |
| <b>316-13</b>                    | Pilot   |                  |  |
| <b>316-125</b>                   | Pilot (.015" O/size on 3/8" Guide)  |                  |  |
| <b>PD.317-22</b>                 | Valve Seat Cutter   |                  |  |
| <b>PD.317-23</b>                 | Valve Seat Cutter   |                  |  |
| <b>317-30</b>                    | Valve Seat Cutter   |                  |  |
| <b>317G-19</b>                   | Valve Seat Glazebreaker   |                  |  |
| <b>317G-25</b>                   | Valve Seat Glazebreaker   |                  |  |
| <b>317G-30</b>                   | Valve Seat Glazebreaker   |                  |  |
| <b>FRONT AXLE &amp; STEERING</b> |   |                  |  |
| <b>MF.148-7</b>                  | Power Steering Adaptor  |                  |  |
| <b>MF.195-4</b>                  | Front Axle Pivot Pin Bush Remover/Replacer & P.T.O. Bush Remover/Replacer |                  |  |
| <b>MF.263</b>                    | Front Axle & Steering Bush Remover (Main Tool)                            |                  |  |

**RECOMMENDED SPECIAL TOOLS**

| <b>Tool No.</b>                  | <b>Description</b>   | <b>Tool No.</b>                                | <b>Description</b>                                       |
|----------------------------------|--|--|--|
| MF.555-2A                        | Differential Coupling Bearing Cone Remover                       | MF.167   | P.T.O. Oil Seal Pilot                                    |
| MF.278                           | Dial Indicator with Magnetic Base (Baty No. D.1)                 | MF.168   | P.T.O. Shaft Oil Seal Remover/Replacer                   |
| MF.1105-2A                       | Differential Bearing Cup Remover/Replacer                        | MF.195-5                                       | P.T.O. Needle Bearing Bush Remover/Replacer Adaptor      |
| MF.1105-6                        | Differential Carrier Plate Oil Seal Remover/Replacer Adaptor     | MF.196B  | Hydraulic Pump Valve Seat Chamber Cutter & Glaze Breaker |
| MF.1105-7A                       | Differential Bearing Cup Remover/Replacer Adaptor                | MF.226A  | Hydraulic Lift Cover Remover/Replacer                    |
| MF.1105-8                        | Epicyclic Hub Inner Bearing Cup Remover/Replacer Adaptor         | MF.260-1                                       | Multi-Power Hydraulic Test Adaptor                       |
| MF.1105-11                       | Rear Axle Shaft Oil Seal Remover and Replacer                    | MF.260-3                                       | Multi-Power Hydraulic Adaptor                            |
| <b>CLUTCH &amp; TRANSMISSION</b> |  | MF.260-4                                       | Multi-Power Pressure Test Adaptor                        |
| MF.159A                          | Single & Dual Clutch Centraliser                                 | MF.260-5                                       | Multi-Power Pump Flow Adaptor                            |
| MF.177                           | Transmission Main Drive Shaft Oil Seal Pilot                     | MF.269   | Response Plunger Adjusting Wrench                        |
| MF.178                           | P.T.O. Main Drive Shaft Pilot                                    | MF.270B  | Dashpot Piston Wedge                                     |
| MF.179                           | Transmission & P.T.O. Pinion Oil Seal Replacer                   | MF.271   | Roller Assembly Tool & Draft Control Rod Gauge           |
| MF.200-25                        | Multi-purpose Bearing Remover                                    | MF.272   | Ram Arm Gauge Fixture                                    |
| MF.215                           | Secondary Clutch Setting Gauge                                   | MF.273   | Hydraulic Control Lever Setting Fixture                  |
| MF.218A                          | Front P.T.O. Housing Replacer (Main Tool)                        | MF.333   | Draft Control Rod Gauge (Increased Tension Range)        |
| MF.218A-2                        | Front P.T.O. Housing Replacer Adaptor                            | 810  | Hydraulic Pressure & Flow Test Fixture (Main Tool)       |
| MF.220                           | Lever Fulcrum Height Setting Gauge                               | MF.810-1                                       | Adaptor  |
| MF.255A                          | Multi-Power Pinion Oil Seal Replacer & Assembly Sleeve           | MF.810-4                                       | Multi-Power Pump Flow Adaptor                            |
| MF.256A                          | Multi-Power Pinion Assembly Inner Oil Seal Replacer              | <b>MULTI-PURPOSE &amp; MISCELLANEOUS TOOLS</b> |  |
| MF.314                           | Lever Fulcrum Height Setting Gauge                               | 13A  | Tension Wrench   |
| MF.315                           | Main Drive Shaft Retainer Needle Bearing & Seal Remover Replacer | MF.148A  | Hydraulic Pressure Test Equipment (Main Tool)            |
| MF.331                           | Transmission Input Shaft Oil Seal Replacer                       | MF.195   | Bearing Cups Remover/Replacer (Main Tool)                |
| 7600B                            | Flywheel Spigot Bearing Remover (Main Tool)                      | MF.200   | Hand Press (Main Tool)                                   |
| MF.7600-1                        | Flywheel Spigot Bearing Remover Adaptor                          | MF.260   | Low Pressure Hydraulic Test Set (Main Tool)              |
| <b>P.T.O. &amp; HYDRAULICS</b>   |  | 270  | Tractor Splitting Kit                                    |
| MF.163                           | Spring Retainer Nut Wrench                                       | 550  | Driver Handle (Main Tool)                                |
| MF.166                           | Hydraulic Adaptor for Lift Cover                                 | 555  | Three Leg Adjustable Puller (Main Tool)                  |
|                                  |  | MF.1105  | Bearing Remover (Main Tool)                              |
|                                  |  | 7065M  | Heavy Duty Circlip Pliers                                |
|                                  |  | 7066   | Circlip Pliers   |
|                                  |  | HD.3   | Circlip Plier Points                                     |



**TORQUE DATA****TORQUE DATA**

The following information gives standard torquing requirements for MF standard bolts, nuts and cap screws for use where the torque requirements are not otherwise specified.

| NOMINAL SIZE<br>(diameter) | WRENCH TORQUE<br>kg-m (lb-ft) |                           |
|----------------------------|-------------------------------|---------------------------|
|                            | A                             | B                         |
| $\frac{1}{4}$ in           | 0,69 to 0,83 (5 to 6)         | 1,1 to 1,4 (8 to 10)      |
| $\frac{5}{16}$ in          | 1,4 to 1,6 (10 to 12)         | 2,1 to 2,5 (15 to 18)     |
| $\frac{3}{8}$ in           | 2,6 to 3,0 (19 to 22)         | 4,1 to 4,8 (30 to 35)     |
| $\frac{7}{8}$ in           | 4,5 to 5,3 (33 to 38)         | 6,9 to 7,6 (50 to 55)     |
| $\frac{1}{2}$ in           | 6,5 to 7,3 (47 to 53)         | 10,5 to 11,7 (76 to 85)   |
| $\frac{9}{16}$ in          | 8,9 to 10,0 (65 to 73)        | 15,9 to 17,3 (115 to 125) |
| $\frac{5}{8}$ in           | 13,8 to 17,3 (100 to 125)     | 21,4 to 23,5 (155 to 170) |
| $\frac{3}{4}$ in           | 24,2 to 27,6 (175 to 200)     | 37,3 to 41,5 (270 to 300) |

**COLUMN A****NON-RIGID JOINTS**

Column "A" specifies the spanner torques to be used with non-rigid joints where extrusion, deformity or other damage would result when higher clamping forces are used.

**LIMITED STRENGTH NUTS**

The torque values in column "A" are also the maximum recommended for weld nuts, slotted nuts or other limited strength nuts.

**STANDARD NUTS WITH LOCK WASHERS**

When lock washers are used under the nut, the torque values in column "A" should be applied.

Laboratory tests indicate that lock washers substantially reduce the friction under the nut. This is especially true if the bolt, nut and lock washer are oiled. Due to this reduction in friction, proper bolt elongation is obtained by use of the torque in column "A". Column "B" torques may cause failure of the nut or bolt during assembly.

**COLUMN B**

Column "B" is the wrench torque to be used for assembly of rigid joints where extrusion, deformity or other damage will not result, and it is desirable to obtain more elastic elongation of the bolt or stud to ensure that it remains tight.

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 1**

**Publication No. 1856 001 M1**

comprising

- A GENERAL SPECIFICATION
- B REGULAR MAINTENANCE
- C PRE-DELIVERY AND INSTALLATIONS

## GENERAL SPECIFICATION

## Part 1 Section A

| Table of Contents                                   | Page<br>No. |
|---|-------------|
| GENERAL   | 01          |
| Recommended Lubricants – British Isles and Overseas | 02          |
| Main Dimensions                                     | 05          |
| Mounting Points and Drawbar Heights                 | 05          |
| ENGINE  | 05          |
| COOLING SYSTEM                                      | 05          |
| FUEL SYSTEM   | 06          |
| TRANSMISSION  | 06          |
| Clutch  | 06          |
| Eight Speed Transmission                            | 06          |
| Multi-Power Transmission                            | 11          |
| REAR AXLE AND BRAKES                                | 11          |
| Live P.T.O.   | 11          |
| FRONT AXLE AND STEERING                             | 11          |
| WHEELS AND TYRES                                    | 12          |
| HYDRAULICS  | 13          |
| LINKAGE   | 13          |
| ELECTRICAL SYSTEM                                   | 13          |
| ACCESSORIES   | 13          |

**GENERAL**

This section of the manual gives details of all general information related to this tractor. The section has

been divided into sub-section related to the various parts of this Manual, i.e. the seventh sub-section is related to Part 7 – Hydraulics.

## GENERAL SPECIFICATION

## Recommended Antifreeze Solutions:

Smith's Super Bluecol  
Duckham's Antifreeze  
Mobil Permazone

Prestone Two-phase  
Esso Antifreeze  
Union Carbide P3B

NOTE - ONLY THE ANTIFREEZE SOLUTIONS LISTED HERE MEET MASSEY-FERGUSON TEST SPECIFICATIONS. THE USE OF INFERIOR GRADES OF ANTIFREEZE (INCLUDING SOME SOLUTIONS CONFORMING TO BS.3151) CAN CAUSE SEVERE DAMAGE TO THE COOLING SYSTEM.

## RECOMMENDED LUBRICATION BRITISH ISLES ALL SEASONS

| UNIT                                      | CAPACITY  | B.P.                      | Castrol                      | Duckham's            | Esso                                       | Mobil                                | Shell                 |
|---|---|---------------------------|------------------------------|----------------------|--|--------------------------------------|-----------------------|
| ENGINE including FILTER<br>Dipstick Full  | 7.96 litres (14½ pints)   | Tractor Oil Universal     | Agricastrol Multi-use        | Farmadcol Multigrade | Tractorlube (Universal)                    | Mobiland Universal                   | Tractor Oil Universal |
| STEERING BOX                              | 1.14 litres (2 pints)   |                           |                              |                      |  |                                      |                       |
| TRANSMISSION See note 2                   | Standard 33 litres (58 pints)<br>Multi-power 31.8 litres (56 pints) | Hydraulic TF8 or Tractran | Agricastrol AS (BB11)        | Hydrolube            | IL 1941                                    | Mobilfluid 422                       | S 7884                |
| POWER STEERING                            | 0.85 litres (1½ pints)  | Autran DX                 | Deusol TFA Dexron            | Fleetmatic D D-matic | Esso Automatic Transmission Fluid (Dexron) | Mobil A.T.F. 200 or Mobil A.T.F. 220 | A.T.F. Dexron         |
| EPICYCLIC HUBS and LIFT SHAFT (2 nipples) | 1.7 litres (3 pints)  | Tractor Gear Oil SAE 90EP | Agricastrol Gear EP90/140    | Farm Mesh EP 90      | Tractorlube Gear Oil GP90/140              | Mobilube GX 90                       | Tractor Gear Oil      |
| GREASE GUN                                |   | Energrease Universal      | Agricastrol Multi-use Grease | Duckham's Admax L2   | Esso Multi purpose Grease H                | Mobilgrease Special                  | Farm Grease Universal |

## NOTES:

1. Provided the oil change periods recommended in the Maintenance Section have been followed, discolouration of the engine oil with use is normal and of no significance.

2. If the tractor is to work on slopes and inclines, the transmission should be filled to the 'H' mark on the dipstick.

## RECOMMENDED LUBRICANTS OVERSEAS

| UNIT   | CAPACITY   | Temperature |           | B.P.                       | Castrol               | Duckham's                | Esso                                       | Mobil               | Shell                  |
|--|--|-------------|-----------|----------------------------|-----------------------|--------------------------|--|---------------------|------------------------|
|  |  | °F          | °C        |                            |                       |                          |  |                     |                        |
| ENGINE Including FILTER<br>STEERING BOX                | 7.96 litres (14½ pints)<br>1.14 litres (2 pints) | Below 30    | Below -1  | B.P. Vanellus SAE 10W      | Castrol Deusol CRB 10 | Duckham's Fleetol HDX 10 | Essolube HDX 10                            | Delvac 1110         | Rotella 'T' Oil 10W    |
|  |  | 30 to 80    | -1 to 27  | B.P. Vanellus SAE 20W      | Castrol Deusol CRB 20 | Duckham's Fleetol HDX 20 | Essolube HDX 20W                           | Delvac 1120         | Rotella 'T' Oil 20/20W |
|  |  | Above 80    | Above 27  | B.P. Vanellus SAE 30       | Castrol Deusol CRB 30 | Duckham's Fleetol HDX 30 | Essolube HDX 30                            | Delvac 1130         | Rotella 'T' Oil 30     |
| TRANSMISSION Standard See notes 3 and 4<br>Multi-Power | 33 litres (58 pints)<br>31.8 litres (56 pints)   | Below 0     | Below -17 | B.P. TF-7                  | Agricastrol M.D.      | Hydrol 303               | Torque Fluid 36                            |                     | S 6332                 |
|  |  | 0 to 80     | -17 to 27 | Hydraulic TF-8 OR Tractran | Agricastrol AS BB11   | Hydrolube                | IL 1941                                    | Mobilfluid 422      | S 7884                 |
| POWER STEERING   | 0.85 litres (1½ pints)                           | All Temps.  |           | Autran DX                  | Castrol TQ Dexron R   | D-matic                  | Esso Automatic Transmission Fluid (Dexron) | Mobilfluid ATF 220  | ATF Dexron             |
| EPICYCLIC HUBS and LIFT SHAFT (2 nipples)              | 1.7 litres (3 pints)                             | All Temps.  |           | Gear Oil SAE 90EP          | Castrol Hypoy EP 90   | Duckham's Farm Mesh      | Esso Gear Oil GP 90                        | Mobilube GX 90      | Spirax 90EP            |
| GREASE GUN   |  | All Temps.  |           | Energrease L2              | Castrol LM Grease     | Duckham's Admax L2       | Esso Multi-purpose Grease                  | Mobilgrease Special | Retinax A              |

## NOTES:

1. Provided the oil change periods recommended in the Maintenance Section have been followed, discolouration of the engine oil with use is normal and of no significance.

2. The multi-purpose oils listed as recommended for U.K. can be used in other territories where available in the temperature range of 30° to 80° F (-1°C to 27°C) only. Where it is desired to use such lubricants in temperature ranges other than this the MF Distributor/Dealer should be consulted.

3. If the tractor is to work on slopes and inclines the transmission should be filled to the 'H' mark on the dipstick.

4. The transmission oils listed for -17°C (0°F) are intended for use only in very severe conditions.

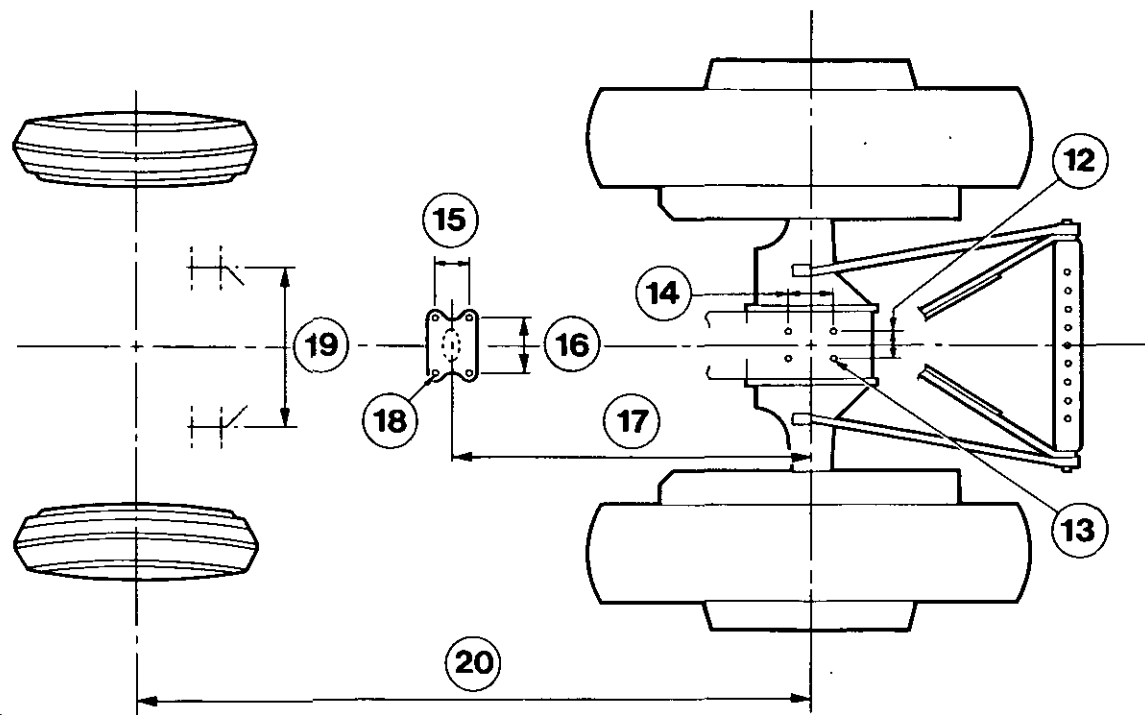
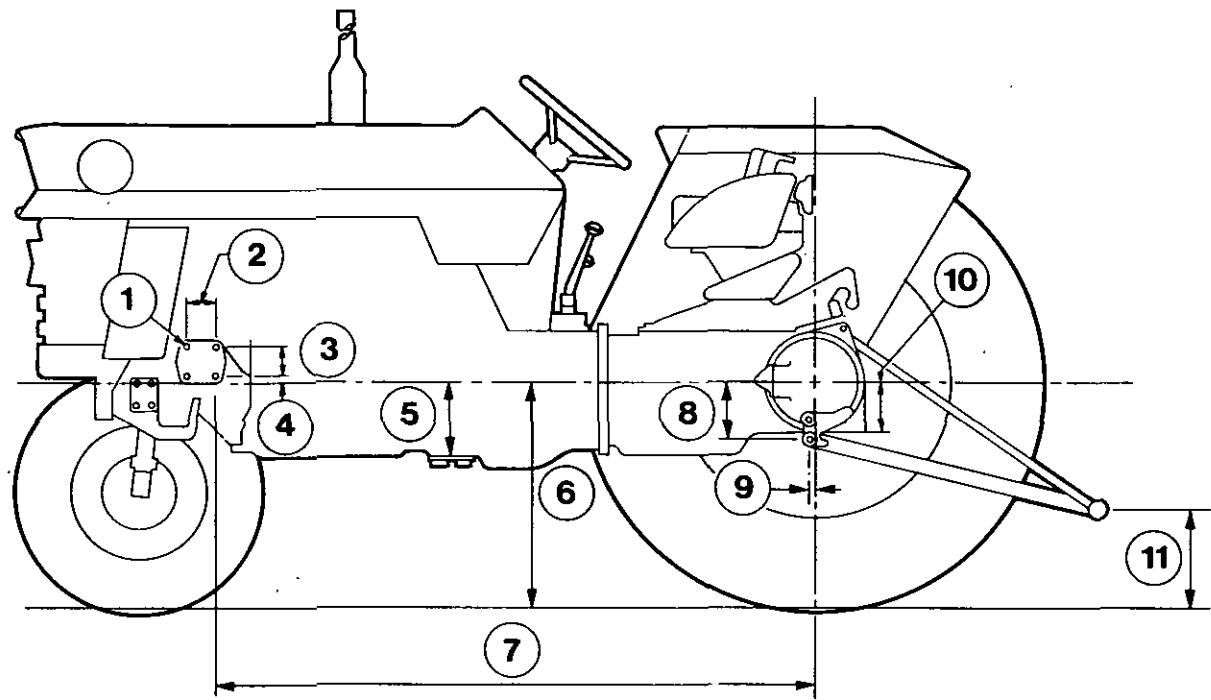


FIG. 2

MF 188 Tractor

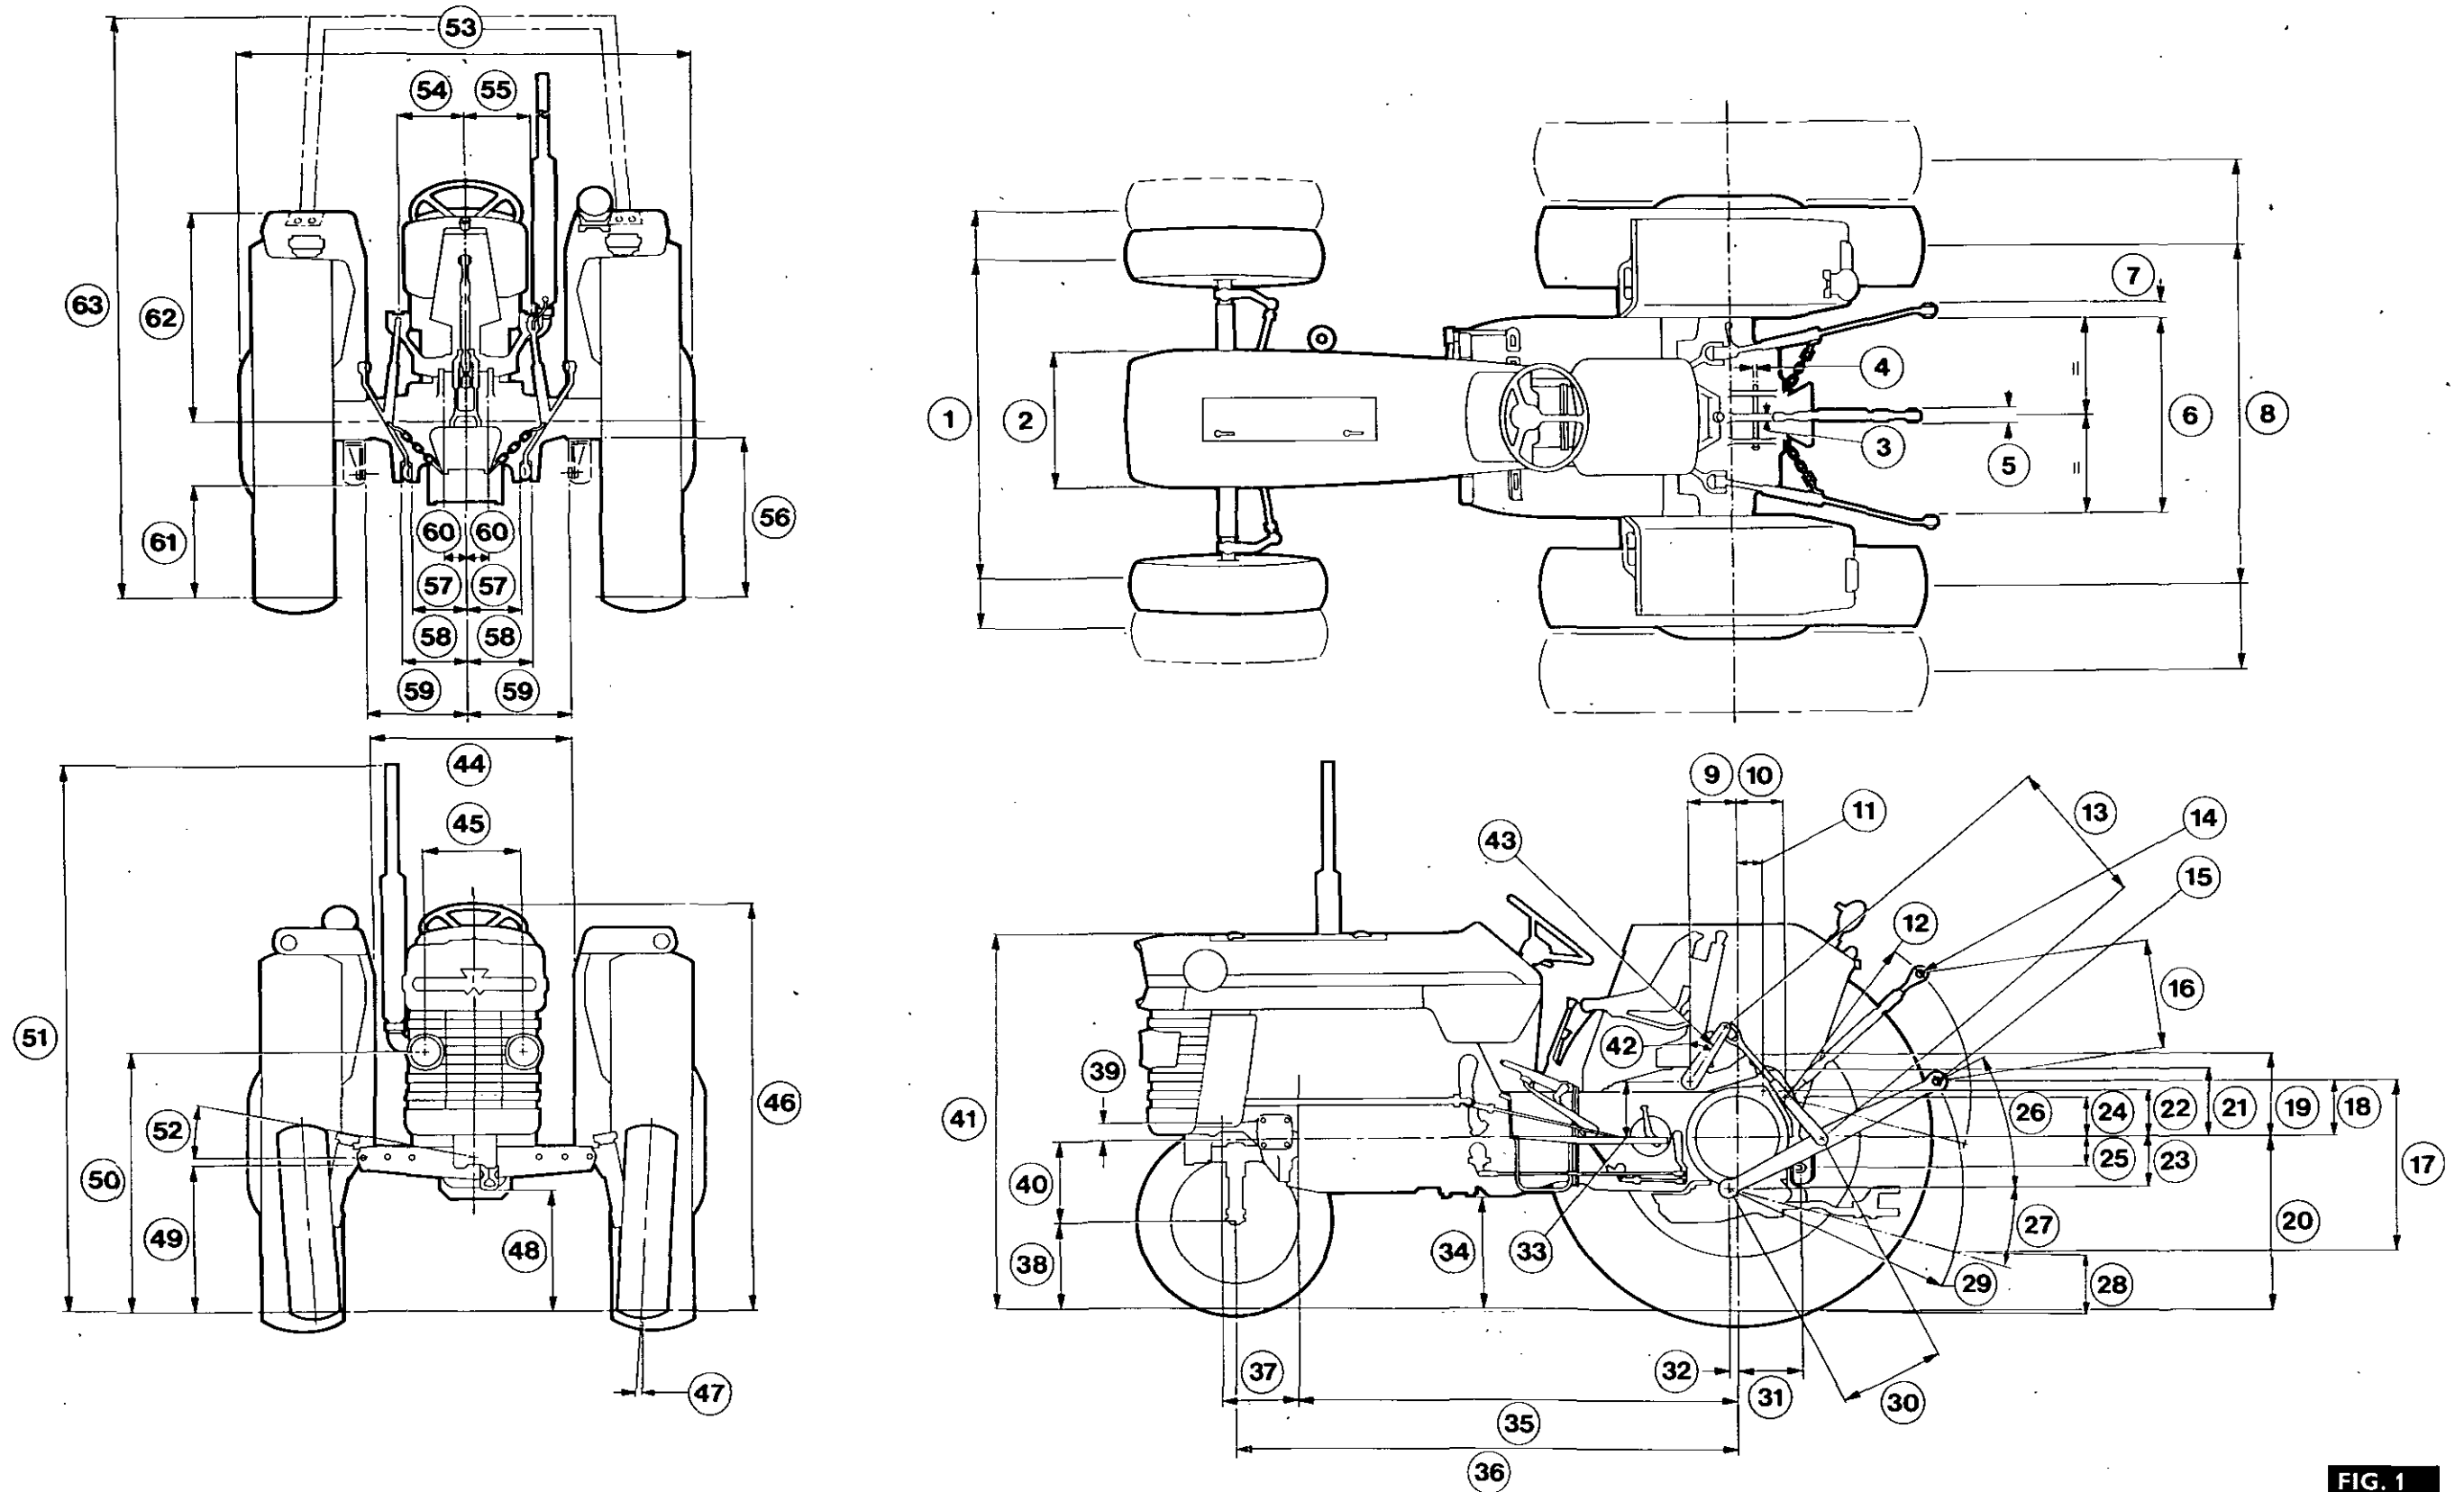


FIG. 1

## GENERAL SPECIFICATION

## GENERAL INFORMATION

## Main Dimensions

The following overall dimensions relate to the MF 188 Tractor. All dimensions relate to a tractor fitted with 7.50-16 front and 12-38 rear tyres.

## Key to Figure 1

1. 1321 to 1727 mm (52 to 68 in) in 102 mm (4 in) steps.
2. 565 mm (22 $\frac{1}{4}$  in).
3. 29 mm (1 $\frac{1}{8}$  in).
4. 19 mm ( $\frac{3}{4}$  in) dia.
5. 51 mm (2.01 in).
6. 824 mm (32 $\frac{7}{16}$  in).
7. 44,4 to 44,7 mm (1.75 to 1.76 in).
8. 1321 to 2286 mm (52 to 90 in) in 102 mm (4 in) steps.
9. 196 mm (7.706 in).
10. 200 mm (7.875 in).
11. 102 mm (4 in).
12. 778 mm (30 $\frac{3}{8}$  in) radius.
13. 628 mm (24.72 in) upper hole.  
683 mm (26.91 in) lower hole.
14. 25,6 to 25,9 mm (1.01 to 1.02 in).
15. 28,8 to 29,1 mm (1.135 to 1.145 in) dia.
16. 457 mm (18 in).
17. 757 mm (29.81 in) forward hole  
583 mm (22.95 in) rear hole
18. 221 mm (8.7 in).
19. 338 mm (13.3 in).
20. 729 mm (28.7 in).
21. 274 mm (10.8 in).
22. 191 mm (7.5 in).
23. 213 mm (8.37 in).
24. 171 mm (6 $\frac{3}{4}$  in).
25. 127 mm (5 in).
26. 44° forward hole  
34° rear hole
28. 202 mm (7.94 in) forward hole  
376 mm (14.8 in) rear hole
29. 1010 mm (39 $\frac{3}{4}$  in).
30. 427 mm (16.8 in) forward hole  
564 mm (22.2 in) rear hole
31. 261 mm (10 $\frac{3}{16}$  in).
32. 32 mm (1.25 in).
33. 233 mm (9.165 in).
34. 462 mm (18 $\frac{3}{16}$  in).
35. 1945 mm (76.6 in).
36. 2286 mm (90 in).
37. 361 mm (14.22 in).
38. 368 mm (14.5 in).
39. 67 mm (2.62 in).
40. 337 mm (13.25 in).
41. 1537 mm (60 $\frac{1}{2}$  in).
42. 33°
43. 64°
44. 813 mm (32 in) approx.
45. 392 mm (15 $\frac{7}{16}$  in).
46. 1708 mm (67 $\frac{1}{4}$  in).
47. 3° 30' Camber.
48. 498 mm (19 $\frac{5}{8}$  in).
49. 613 mm (24 $\frac{1}{8}$  in).
50. 1070 mm (42 $\frac{1}{8}$  in).
51. 2276 mm (89 $\frac{5}{8}$  in).
52. 11° Maximum Swing.
53. 1911 mm (75 $\frac{1}{4}$  in) at 1321 mm (52 in) track.
54. 267 mm (10 $\frac{1}{2}$  in).
55. 267 mm (10 $\frac{1}{2}$  in).
56. 658 mm (25.9 in).
57. 223 mm (8.78 in) each side.
58. 268 mm (10.56 in) each side.

59. 414 mm (16.3 in) each side.
60. 91 mm (3.58 in) each side.
61. 462 mm (18.2 in).
62. 867 mm (34 $\frac{1}{8}$  in).
63. 2520 mm (95 in).

## Mounting Points and Drawbar Height

These mounting points can be used for the attachment of some implements. The drawbar must always be used in conjunction with the stays and must never be positioned higher than the rear axle centre line, otherwise, the tractor may become extremely unstable.

## Key to Figure 2

1.  $\frac{3}{4}$  UNC x 38 mm (1 $\frac{1}{2}$  in) deep.
2. 101,6 mm (4 in).
3. 101,6 mm (4 in).
4. 28,5 mm (1,12 in).
5. 219 mm (8 $\frac{5}{8}$  in)
6. 729 mm (28.7 in) See Note 1.
7. 2053 mm (80.85 in).
8. 213 mm (8.37 in).
9. 32 mm (1.25 in).
10. 19,47 to 19,48 mm (7.665 to 7.67 in).
11. 257 mm (10 $\frac{1}{8}$  in) See Notes 1 and 2.
12. 8,6 mm (3,375 in).
13.  $\frac{3}{4}$  UNC x 28,6 mm (1 $\frac{1}{8}$  in) deep.
14. 152,4 mm (6 in).
15. 101,6 mm (4 in).
16. 184,2 mm (7.25 in).
17. 1293 mm (50.9 in).
18.  $\frac{5}{8}$  UNC x 31,75 mm (1 $\frac{1}{4}$  in) deep.
19. 508 mm (20 in).
20. 2286 mm (90 in).

## Notes

1. These dimensions relate to tractors fitted with 12-38 rear tyres.  
For 15-30 tyres, subtract 28 mm (1.1 in).  
For 14-34 tyres, subtract 15.5 mm (0.61 in).
2. Normal drawbar height, with drawbar stay notches aligned.

## ENGINE

A comprehensive specification for the A4.248 engine is provided in the Perkins Workshop Service Manual. For all data, consult the Perkins A4.248 Manual.

## COOLING SYSTEM

The cooling system comprises a fan and centrifugal type pump, driven by a belt, from the crankshaft, coolant flow being controlled by a wax type thermostat. The radiator is of the conventional fin and tube type, with a header tank.

- System capacity – 13,5 lit (24 Imp pts)  
 Pump Impeller Clearance – 0,38 to 0,89 mm (0.15 to 0.35 in).  
 Thermostat Opening Temperature – 76 to 80°C (169 to 176°F).  
 Thermostat Valve fully open – 88 to 90,6°C (190 to 195°F).  
 Thermostat Valve Lift – 7,9 to 11,9 mm ( $\frac{5}{16}$  to  $\frac{15}{32}$  in).

Antifreeze solutions should be used where there is a risk of freezing.

**GENERAL SPECIFICATION****FUEL SYSTEM****Air Cleaner**

A two stage dry air cleaner is fitted, this cleaner has a washable, pleated main element, an inner safety element and a self acting unloader valve.

**Fuel Tank**

The 86,4 lit (19 Imp gal) fuel tank is situated above the engine and has a built-in thermostart reservoir and a fuel tap at the rear end.

**Thermostart**

C.A.V. Thermostart Mk IIIC is fitted to this tractor. Full details and data are provided in the Perkins A4.248 Manual.

**Fuel Injection Equipment**

A C.A.V. D.P.A. type fuel pump with C.A.V. injector holders and nozzle are fitted. For full details, consult the Perkins A4.248 Manual.

**Fuel Filters**

C.A.V. primary and secondary fuel filters with replaceable cartridge type elements are fitted. A sediment bowl is incorporated in the primary fuel filter.

**Throttle Controls**

A hand throttle and a foot throttle are fitted as standard equipment. The action of the foot throttle over-rides the hand throttle. The throttle controls are of the rod type, adjustable for length to permit setting of maximum engine speed.

**TRANSMISSION****Clutch**

The dual clutch is of the Auburn ventilated type, with a 305 mm (12 in) diameter main drive disc and a 254 mm (10 in) p.t.o. disc. The main drive clutch is coil spring operated and the p.t.o. clutch is Belleville spring operated.

**Colour Code**

Clutch Cover Assembly – Yellow

**Coil Spring – Red**

Free Length 55,75 mm (2.195 in)  
Compressed Length 33,02 mm (1.3 in)  
Working Length 34,42 mm (1.355 in)  
Test Load 68,9 to 76,2 kg (152 to 168 lb)  
Total Load Rating (12 springs) 884,5 kg (1950 lb)

**Belleville Spring – Orange**

Free height 9,5 to 9,8 mm (0.374 to 0.384 in)  
Thickness 3,5 mm (0.139 in)  
Total Load Rating 812 to 893 kg (1790 to 1970 lb)

**Toggle Lever Height Setting**

79,24 to 83,3 mm (3.12 to 3.28 in)

Use Special tool MF 314 to adjust toggle lever height.

**P.t.o. Clutch Setting**

2,03 mm (0.080 in)

Use Special tool MF 215 to adjust.

Pedal free travel, measured between the front of the release arm and the shoulder on the transmission case – 4,8 mm (0.187 in)

**Eight Speed Transmission**

The eight speed transmission provides four forward and one reverse gear, compounded by a planetary reduction gearset on the output end of the mainshaft to give eight forward and two reverse gears.

|   | Number of teeth |
|---|-----------------|
| Main Input Shaft Constant Mesh Gear             | 24              |
| P.t.o. Input Shaft Constant Mesh Gear           | 17              |
| Main Input Layshaft Constant Mesh Gear          | 45              |
| P.t.o. Input Layshaft Constant Mesh Gear        | 53              |
| Mainshaft 1st                                   | 44              |
| Mainshaft 2nd                                   | 46              |
| Mainshaft 3rd                                   | 41              |
| Mainshaft 4th                                   | 36              |
| Layshaft 1st                                    | 15              |
| Layshaft 2nd                                    | 23              |
| Layshaft 3rd                                    | 28              |
| Layshaft 4th                                    | 33              |
| Reverse Gear Cluster                            | 13/21           |
| Planetary Reduction Unit Sun Gear               | 18              |
| Planetary Reduction Unit Planet Gear            | 18              |
| Planetary Reduction Unit Ring Gear              | 54              |
| Transmission Ratios: 1st                        | 2.933 : 1       |
| 2nd   | 2 : 1           |
| 3rd   | 1.464 : 1       |
| 4th   | 1.09 : 1        |
| Reverse   | 2.2 : 1         |
| Constant Mesh Ratios: Main                      | 1.875 : 1       |
| P.t.o.  | 3.12 : 1        |
| Planetary Reduction in Unit Ratios – Low Range  | 4 : 1           |
| Planetary Reduction in Unit Ratios – High Range | 1 : 1           |



## GENERAL SPECIFICATION

## 12-36 Tyres

71.1 cm (28 in) Dyn. R.R.

| Planetary Range | Gear | Total Ratio | Road speeds   |        |               |        |
|-----------------|------|-------------|---------------|--------|---------------|--------|
|                 |      |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |      |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st  | 238.28      | 1.05          | 1.69   | 1.40          | 2.25   |
|                 | 2nd  | 163.19      | 1.53          | 2.46   | 2.04          | 3.29   |
|                 | 3rd  | 119.48      | 2.10          | 3.37   | 2.79          | 4.50   |
|                 | 4th  | 89.01       | 2.81          | 4.53   | 3.74          | 6.02   |
|                 | Rev. | 175.16      | 1.43          | 2.30   | 1.90          | 3.06   |
| HIGH            | 5th  | 59.57       | 4.08          | 6.56   | 5.60          | 9.00   |
|                 | 6th  | 40.80       | 6.13          | 9.86   | 8.17          | 13.14  |
|                 | 7th  | 29.87       | 8.36          | 13.46  | 11.16         | 19.95  |
|                 | 8th  | 22.26       | 11.23         | 18.06  | 14.97         | 24.08  |
|                 | Rev. | 43.79       | 5.52          | 8.88   | 7.60          | 12.24  |

## 12-38 Tyres

73.91 cm (29.1 in) Dyn. R.R.

| Planetary Range | Gear | Total Ratio | Road speeds   |        |               |        |
|-----------------|------|-------------|---------------|--------|---------------|--------|
|                 |      |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |      |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st  | 238.28      | 1.09          | 1.75   | 1.45          | 2.33   |
|                 | 2nd  | 163.19      | 1.59          | 2.56   | 2.12          | 3.41   |
|                 | 3rd  | 119.48      | 2.17          | 3.50   | 2.90          | 4.67   |
|                 | 4th  | 89.01       | 2.92          | 4.69   | 3.89          | 6.26   |
|                 | Rev. | 175.16      | 1.48          | 2.38   | 1.97          | 3.17   |
| HIGH            | 5th  | 59.57       | 4.36          | 7.01   | 5.81          | 9.34   |
|                 | 6th  | 40.80       | 6.37          | 10.24  | 8.49          | 13.66  |
|                 | 7th  | 29.87       | 8.69          | 13.99  | 11.59         | 18.65  |
|                 | 8th  | 22.26       | 11.67         | 18.77  | 15.56         | 25.03  |
|                 | Rev. | 43.79       | 5.93          | 9.54   | 7.90          | 12.72  |

## 14-30 Tyres

68.26 cm (26.8 in) Dyn R.R.

| Planetary Range | Gear | Total Ratio | Road speeds   |        |               |        |
|-----------------|------|-------------|---------------|--------|---------------|--------|
|                 |      |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |      |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st  | 238.28      | 1.00          | 1.61   | 1.33          | 2.14   |
|                 | 2nd  | 163.19      | 1.47          | 2.36   | 1.95          | 3.14   |
|                 | 3rd  | 119.48      | 2.01          | 3.23   | 2.67          | 4.30   |
|                 | 4th  | 89.01       | 2.69          | 4.32   | 3.58          | 5.77   |
|                 | Rev. | 175.16      | 1.36          | 1.36   | 1.81          | 2.91   |
| HIGH            | 5th  | 59.57       | 4.00          | 6.44   | 5.33          | 8.57   |
|                 | 6th  | 40.80       | 5.86          | 9.43   | 7.82          | 12.58  |
|                 | 7th  | 29.87       | 8.01          | 12.88  | 10.68         | 17.19  |
|                 | 8th  | 22.26       | 10.75         | 17.29  | 14.33         | 23.05  |
|                 | Rev. | 43.79       | 5.45          | 8.77   | 7.26          | 11.68  |

**GENERAL SPECIFICATION****14-34 Tyres**

71.88 cm (28.3 in) Dyn R.R.

| Planetary Range | Gear | Total Ratio | Road speeds   |        |               |        |
|-----------------|------|-------------|---------------|--------|---------------|--------|
|                 |      |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |      |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st  | 238.28      | 1.06          | 1.70   | 1.41          | 2.27   |
|                 | 2nd  | 163.19      | 1.55          | 2.49   | 2.06          | 3.32   |
|                 | 3rd  | 119.48      | 2.12          | 3.41   | 2.82          | 4.54   |
|                 | 4th  | 89.01       | 2.83          | 4.56   | 3.78          | 6.08   |
|                 | Rev  | 175.16      | 1.44          | 2.32   | 1.92          | 3.09   |
| HIGH            | 5th  | 59.57       | 4.24          | 6.80   | 5.64          | 2.08   |
|                 | 6th  | 40.80       | 6.19          | 9.96   | 8.25          | 13.27  |
|                 | 7th  | 29.87       | 8.46          | 13.61  | 11.27         | 18.14  |
|                 | 8th  | 22.26       | 11.35         | 18.26  | 15.13         | 24.34  |
|                 | Rev  | 43.79       | 5.77          | 9.28   | 7.68          | 12.36  |

**15-30 Tyres**

72,64 cm (28.2 in) Dyn R.R.

| Planetary Range | Gear | Total Ratio | Road speeds   |        |               |        |
|-----------------|------|-------------|---------------|--------|---------------|--------|
|                 |      |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |      |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st  | 238.28      | 1.06          | 1.70   | 1.41          | 2.27   |
|                 | 2nd  | 163.19      | 1.54          | 2.48   | 2.05          | 3.31   |
|                 | 3rd  | 119.48      | 2.11          | 3.39   | 2.81          | 4.52   |
|                 | 4th  | 89.01       | 2.83          | 4.55   | 3.77          | 6.06   |
|                 | Rev  | 175.16      | 1.44          | 2.31   | 1.92          | 3.08   |
| HIGH            | 5th  | 59.57       | 4.24          | 6.80   | 5.64          | 9.08   |
|                 | 6th  | 40.80       | 6.16          | 9.93   | 8.20          | 13.24  |
|                 | 7th  | 29.87       | 8.44          | 13.56  | 11.24         | 18.08  |
|                 | 8th  | 22.26       | 11.32         | 18.20  | 15.08         | 24.24  |
|                 | Rev  | 43.79       | 5.76          | 9.24   | 7.68          | 12.32  |

## GENERAL SPECIFICATION

12-38 Tyres = 73,91 cm (29.1 in) Dyn R.R.

| Planetary Range | Gear     | Total Ratio | Road speeds   |        |               |        |
|-----------------|----------|-------------|---------------|--------|---------------|--------|
|                 |          |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |          |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st Low  | 247.84      | 1.05          | 1.68   | 1.40          | 2.25   |
|                 | 1st High | 190.64      | 1.36          | 2.19   | 1.81          | 2.92   |
|                 | 2nd Low  | 167.37      | 1.55          | 2.49   | 2.07          | 3.33   |
|                 | 2nd High | 130.29      | 1.99          | 3.20   | 2.66          | 4.28   |
|                 | 3rd Low  | 92.38       | 2.81          | 4.52   | 3.75          | 6.03   |
|                 | 3rd High | 71.66       | 3.62          | 5.82   | 4.83          | 7.77   |
|                 | Rev. Low | 182.0       | 1.43          | 2.30   | 1.90          | 3.06   |
|                 | Rev High | 140.0       | 1.85          | 2.98   | 2.47          | 3.98   |
| HIGH            | 4th Low  | 61.96       | 4.19          | 6.74   | 5.59          | 8.99   |
|                 | 4th High | 47.66       | 5.45          | 8.77   | 7.27          | 11.70  |
|                 | 5th Low  | 42.34       | 6.20          | 9.96   | 8.28          | 13.32  |
|                 | 5th High | 32.57       | 7.96          | 12.80  | 10.64         | 17.12  |
|                 | 6th Low  | 23.09       | 11.24         | 18.08  | 15.16         | 24.12  |
|                 | 6th High | 17.77       | 14.48         | 23.33  | 19.32         | 30.08  |
|                 | Rev Low  | 45.50       | 5.71          | 9.18   | 7.61          | 12.25  |
|                 | Rev High | 35.00       | 7.42          | 11.94  | 9.89          | 15.91  |

14-34 Tyres Dyn R.R. 71,88 cm (28.3 in)

| Planetary Range | Gear     | Total Ratio | Road speeds   |        |               |        |
|-----------------|----------|-------------|---------------|--------|---------------|--------|
|                 |          |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |          |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st Low  | 247.84      | 1.02          | 1.64   | 1.36          | 2.19   |
|                 | 1st High | 190.64      | 1.32          | 2.12   | 1.76          | 2.83   |
|                 | 2nd Low  | 169.37      | 1.49          | 2.40   | 1.99          | 3.21   |
|                 | 2nd High | 130.29      | 1.94          | 3.12   | 2.59          | 4.17   |
|                 | 3rd Low  | 92.38       | 2.74          | 4.40   | 3.66          | 5.88   |
|                 | 3rd High | 71.66       | 3.56          | 5.72   | 4.75          | 7.64   |
|                 | Rev Low  | 182.00      | 1.39          | 2.24   | 1.85          | 2.95   |
|                 | Rev High | 140.00      | 1.80          | 2.90   | 2.39          | 3.86   |
| HIGH            | 4th Low  | 61.96       | 4.08          | 6.56   | 5.44          | 8.76   |
|                 | 4th High | 47.66       | 5.28          | 8.48   | 7.04          | 11.32  |
|                 | 5th Low  | 42.34       | 5.96          | 9.60   | 7.96          | 12.84  |
|                 | 5th High | 32.57       | 7.76          | 12.48  | 10.36         | 16.68  |
|                 | 6th Low  | 23.09       | 10.96         | 17.60  | 14.64         | 23.52  |
|                 | 6th High | 17.77       | 14.24         | 22.88  | 19.00         | 30.56  |
|                 | Rev Low  | 45.50       | 5.56          | 8.96   | 7.40          | 11.92  |
|                 | Rev High | 35.00       | 7.20          | 11.60  | 9.56          | 15.44  |

## GENERAL SPECIFICATION

15-30 Tyres - 71.63 cm (28.2 in) Dyn R.R.

| Planetary Range | Gear     | Total Ratio | Road speeds   |        |               |        |
|-----------------|----------|-------------|---------------|--------|---------------|--------|
|                 |          |             | 1500 E.R.P.M. |        | 2000 E.R.P.M. |        |
|                 |          |             | M.P.H.        | K.P.H. | M.P.H.        | K.P.H. |
| LOW             | 1st Low  | 247.84      | 1.02          | 1.64   | 1.36          | 2.19   |
|                 | 1st High | 190.64      | 1.32          | 2.12   | 1.76          | 2.82   |
|                 | 2nd Low  | 169.37      | 1.49          | 2.40   | 1.99          | 3.20   |
|                 | 2nd High | 130.29      | 1.94          | 3.12   | 2.58          | 4.15   |
|                 | 3rd Low  | 92.38       | 2.12          | 3.41   | 3.64          | 5.86   |
|                 | 3rd High | 71.66       | 3.55          | 5.71   | 4.74          | 7.63   |
|                 | Rev Low  | 182.00      | 1.38          | 2.20   | 1.83          | 2.94   |
|                 | Rev High | 140.00      | 1.79          | 2.88   | 2.38          | 3.83   |
| HIGH            | 4th Low  | 61.96       | 4.08          | 6.56   | 5.44          | 8.76   |
|                 | 4th High | 47.66       | 5.28          | 8.48   | 7.04          | 11.28  |
|                 | 5th Low  | 42.34       | 5.96          | 9.60   | 7.96          | 12.80  |
|                 | 5th High | 32.57       | 7.76          | 12.48  | 10.32         | 16.60  |
|                 | 6th Low  | 23.05       | 8.48          | 13.64  | 14.56         | 23.44  |
|                 | 6th High | 17.77       | 14.20         | 22.84  | 18.96         | 30.52  |
|                 | Rev Low  | 45.50       | 5.52          | 8.88   | 7.32          | 11.76  |
|                 | Rev High | 35.00       | 7.16          | 11.52  | 9.52          | 15.22  |

## GENERAL SPECIFICATION

**Multi-Power Transmission (optional)**

The Multi-Power transmission has three forward and one reverse gear, compounded by a planetary reduction gearset to give six forward and two reverse gears which are further compounded by a hydraulically actuated two-speed input gearset to give twelve forward and four reverse gears.

|   | No of teeth |
|---|-------------|
| Main Input Shaft Constant Mesh Gear (High Range)    | 24          |
| Main Input Shaft Constant Mesh Gear (Low Range)     | 20          |
| P.t.o. Input Shaft Constant Mesh Gear               | 17          |
| Main Input Layshaft Constant Mesh Gear (High Range) | 36          |
| Main Input Layshaft Constant Mesh Gear (Low Range)  | 39          |
| P.t.o. Input Layshaft Constant Mesh Gear            | 53          |
| Mainshaft 1st                                       | 44          |
| Mainshaft 2nd                                       | 46          |
| Mainshaft 3rd                                       | 36          |
| Layshaft 1st  | 15          |
| Layshaft 2nd  | 23          |
| Layshaft 3rd  | 33          |
| Reverse Gear Cluster                                | 13/21       |
| Planetary Reduction Unit Sun Gear                   | 18          |
| Planetary Reduction Unit Planet Gear                | 18          |
| Planetary Reduction Unit Ring Gear                  | 54          |
| Transmission Ratios: 1st                            | 2.933 : 1   |
| Transmission Ratios: 2nd                            | 2 : 1       |
| Transmission Ratios: 3rd                            | 1.09 : 1    |
| Constant Mesh Ratios Main (High)                    | 1.5 : 1     |
| Constant Mesh Ratios Main (Low)                     | 1.95 : 1    |
| Constant Mesh Ratios P.t.o.                         | 3.12 : 1    |
| Planetary Reduction Unit Ratio                      |             |
| --Low Range   | 4 : 1       |
| Planetary Reduction Unit Ratio                      |             |
| --High Range  | 1 : 1       |

**REAR AXLE AND BRAKES**

Spiral bevel rear axle with lockable differential unit is fitted, the final drive ratio being further reduced by epicyclic units mounted on the outer ends of the axle shafts.

|                             | No of teeth |
|-----------------------------|-------------|
| Crownwheel                  | 38          |
| Pinion                      | 11          |
| Epicyclic Unit Sun Gear     | 21          |
| Epicyclic Unit Planet Gear  | 12          |
| Epicyclic Unit Ring Gear    | 45          |
| Crownwheel and Pinion Ratio | 3.45 : 1    |
| Epicyclic Unit Ratio        | 3.14 : 1    |

224 mm (8.81 in) diameter Girling, mechanically actuated, multi-plate disc brakes, operated together, or independently to assist steering. The brake pedals can be locked together for use on the road. The parking brake (where fitted) operates on both rear wheels simultaneously.

The p.t.o. is driven from the clutch through constant mesh gears in the transmission case to the hydraulic lift pump and then to the p.t.o. drive shaft. Engagement by a lever on L.H. side of centre housing. Live p.t.o. is engaged and disengaged by use of the dual clutch in its second stage of movement.

I.p.t.o. is engaged and disengaged by a hydraulic clutch actuated by a lever on the left side of the centre housing.

Reduction Ratio: 3.12 : 1

Speeds: 540 rev/min at 1685 eng. rev/min  
641 rev/min at 2000 eng. rev/min.

**P.t.o. Shaft Dimensions**

|  |   |
|--|---|
| Number of Splines                        | 6   |
| Major Diameter of Splines                | 34,82/34,87 mm<br>(1.371/1.373 in)  |
| Minor Diameter of Splines                | 27,89/28,14 mm<br>(1.098/1.108 in)  |
| Spline Width                             | 8,58/8,63 mm<br>(0.338/0.340 in)  |
| Length suitable for Drive Attachment     | 73,03 mm (2.875 in)   |
| Hole Diameter                            | 8,28/8,53 mm<br>(0.326/0.336 in)  |
| Distance of Hole Centre from Shaft End   | 15,875 mm (0.625 in)  |
| Groove Diameter                          | 29,34/29,46 mm<br>(1.155/1.160 in)  |
| Groove Radius                            | 6,53 mm (0.265 in)  |
| Distance of Groove Centre from Shaft End | 28,575 mm (1.125 in)  |
| Ground Speed Ratio                       | Approx 500 mm<br>(20 in) of forward travel for each revolution of the p.t.o. shaft. When ground speed p.t.o. is engaged, the shaft revolves clockwise when the tractor moves forward, or anticlockwise when the tractor reverses. |

**FRONT AXLE AND STEERING**

A three section heavy duty front axle, adjustable for track width is fitted. Outer arms are secured to the centre beam by three bolts and jamb nuts.

|                         |  |
|-------------------------|--|
| Castor Angle            | 0°   |
| Camber Angle            | 3½° Positive                               |
| King-pin inclination    | 11°  |
| Toe-in                  | 3,2 mm (¼ in)                              |
| King-pin diameter       | 37,97 to 37,985 mm<br>(1.495 to 1.4955 in) |
| King-pin bush diameter  | 38,02 to 38,05 mm<br>(1.497 to 1.498 in)   |
| Pivot Pin diameter      | 47,6 to 47,63 mm<br>(1.874 to 1.875 in)    |
| Pivot Pin bush diameter | 47,7 to 47,74 mm<br>(1.8765 to 1.878 in)   |
| Track Adjustments       | 1320 to 1727 mm (52 to 68 in)              |

Worm and peg with a single drop arm is fitted. Power assisted steering is available as an optional extra.

|  |   |
|--|---|
| Steering Ratio   | 24 : 1  |
| Power Steering Pump Output @ 56 Kg/cm <sup>2</sup> (800 lb/in <sup>2</sup> ) | 21,6 lit (4.75 Imp gal/min)                         |
| Maximum Pressure   | 112,5 kg/cm <sup>2</sup> (1600 lb/in <sup>2</sup> ) |
| Power Steering System Capacity   | 0,85 lit (1.5 Imp pts)                              |

## GENERAL SPECIFICATION

### WHEELS AND TYRES

W14 x 30 P.A.V.T. wheels with pressed steel rims and cast centre hubs. Fitted with 15-30 tyres.

W14 x 34 P.A.V.T. wheels with pressed steel rims and cast centre hubs. Fitted with 14-34 tyres.

W11 x 38 P.A.V.T. wheels with pressed steel rims and cast centre hubs. Fitted with 12-38 tyres.

### WHEEL WEIGHT DATA

#### P.A.V.T. Wheel

14-34 and 15-30 wheel weights weigh 45,4 kg (100 lb).

### Maximum Pressures and Weights

| Tyre Size | Max. Pressure      |                    | Max. Load |      |
|-----------|--------------------|--------------------|-----------|------|
|           | kg-cm <sup>2</sup> | lb-in <sup>2</sup> | kg        | lb   |
| 12-36     | 1,41               | 20                 | 1546      | 3365 |
| 12-38     | 1,41               | 20                 | 1574      | 3470 |
| 14-30     | 1,13               | 16                 | 1778      | 3920 |
| 14-34     | 1,55               | 22                 | 1891      | 4170 |
| 15-30     | 1,13               | 16                 | 2109      | 4650 |

### Front Wheels

| Tyre Size | Rim size | Ply rating | Weight on the tractor front wheels |       | Maximum permissible front end weight |        | Normal tyre pressure |                    | Maximum tyre pressure |                    |
|-----------|----------|------------|------------------------------------|-------|--------------------------------------|--------|----------------------|--------------------|-----------------------|--------------------|
|           |          |            | lb                                 | kg    | lb                                   | kg     | lb-in <sup>2</sup>   | kg-cm <sup>2</sup> | lb-in <sup>2</sup>    | kg-cm <sup>2</sup> |
| 7.50-16   | 5.50-16  | 6          | 1950                               | 884,5 | 3120                                 | 1415,2 | 32                   | 2,25               | 36                    | 2,531              |
| 7.50-16   | 5.50-16  | 8          | 1950                               | 884,5 | 3680                                 | 1669,2 | 34                   | 2,39               | 48                    | 3,374              |

## GENERAL SPECIFICATION

## HYDRAULICS

The four cylinder, Scotch yoke type pump is driven from the p.t.o. driveshaft and supplies oil, under pressure, to the ram cylinder and four external tapping points. The Pressure Control System operates from 10,6 to 211 kg/cm<sup>2</sup> (150 to 3000 lb/in<sup>2</sup>).

The auxiliary hydraulic system (optional extra on Multi-Power tractors) can be used to operate external services and can be used to operate independently, or combined with the output of the linkage pump.

**Lift Pump**

Output @ 2000 eng. rev/min 14,1 lit/min (3.1 Imp gal/min)

Hydraulic h.p. @ 2000 eng. rev/min  
and 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>) 6,4 h.p.

Maximum Pressure 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>)

Piston Diameter 25,04 to 25,06 mm  
(0.986 to 0.9865 in)

Piston Bore 25,08 to 25,11 mm  
(0.9875 to 0.9885 in)

Stroke 15,24 mm (0.06 in)

Piston Area 4,95 cm<sup>2</sup> (0.767 in<sup>2</sup>)

**Auxiliary Pump (High Capacity)**

Output @ 2000 eng. rev/min 28,6 lit/min (6.3 imp gal/min)

Hydraulic h.p. @ 2000 eng. rev/min  
and 141 kg/cm<sup>2</sup> (2000 lb/in<sup>2</sup>) 8.8 h.p.

Multi-Power Circuit Flow @  
2000 eng. rev/min 15,0 lit/min (3.3 Imp gal/min)

Maximum Pressure 169 kg/cm<sup>2</sup> (2400 lb/in<sup>2</sup>)

Multi-Power Relief Valve Pressure  
49,2 to 70,3 kg/cm<sup>2</sup>  
(700 to 1000 lb/in<sup>2</sup>)

**Multi-Power Pump (Low Capacity)**

Output @ 2000 eng. rev/min 17,5 lit/min (3.8 Imp gal/min)

Relief Valve Pressure 49,2 to 70,3 kg/cm<sup>2</sup>  
(700 to 1000 lb/in<sup>2</sup>)

**Hydraulic Tapping Points**

From Lift Pump -

Two tapping points on sides of the lift cover - 3/8" - 18 N.P.T.F. (Dry Seal) taper plug.

On top of the lift cover to the left of the transfer cap - 3/8" N.P.S.M. x 19 mm (3/4 in) deep.

On the transfer cap - 1/2" - 27 N.P.T.F. (Dry Seal).

From Auxiliary Pump -

With Wooster Spool Valve fitted, "Pioneer", self sealing, quick release couplings. The hoses adjacent to the quick release couplings have identification tags for flow and return:  
L.H. Couplers; Flow - White; Return - Yellow  
R.H. Couplers; Flow - Red; Return - Blue

## LINKAGE

Heavy duty three point linkage is fitted, the lower links being of the interchangeable ball type and the top link of the barrel and turnbuckle type.

Lower Links - between centres 1010 mm (39 3/4 in)

Width and Thickness 114 mm x 19 mm  
(4 1/2 in x 3/4 in)

Lift Rod Nominal Length 683 mm (26.91 in)

Top Link Nominal Length 777 mm (30 5/8 in)

Top Link Adjustment 702 to 854 mm (27 5/8 to 33 5/8 in)

Barrel Length 546 mm (21 1/2 in)

**Swinging Drawbar**

Settings and load Capacity (Static) 254 mm (10 in) 1620 kg (3600 lb)

356 mm (14 in) 1170 kg (2600 lb)

Offset - two positions per side  
1. 60 mm (2 3/8 in)

2. 170 mm (6 11/16 in)

## ELECTRICAL SYSTEM

Voltage 12 volt NEGATIVE earth

Battery 17 plate, 96 amp (temperate) or 125 amp (cold climate)

Starter Motor Lucas M50G or M45G with solenoid engaged pinion. Starter circuit protected by neutral safety start switch incorporated in the transmission.

Dynamo Lucas C40A

Voltage Control Box Lucas RB108

Lamp Bulb Sizes:

Headlamp 12v 36/36 watt

Plough Lamp 12v 36 watt

Side Lamp 12v 6 watt

Tail Lamp 12v 6 watt

Number Plate Lamp 12v 6 watt

Panel Light 12v 2.2 watt

Fuses - Tractor 25 amp

Safety Cab Wiper 35 amp (if fitted)

## ACCESSORIES

Front Weights - each weight weighs 27,2 kg (60 lb)

Auto-Hitch - Lift capacity 1814 kg (4000 lb)

---

**GENERAL SPECIFICATION**


---

**Linkage Drawbar**

Length of drawbar, over flat section – 660 mm (26 in)

No. of securing holes – 9

Diameter of securing holes – 19,8 mm (0.781 in)

Stay Length – from the outside corner of the cranked section to the straight end:

Upper – 868 mm ( $34\frac{3}{8}$  in)

Lower – 837 mm ( $32\frac{1}{16}$  in)

**Selector Valve**

Port thread sizes: Ext  $1\frac{1}{16}$  – 18 UNF

Ext  $2\frac{1}{16}$  – 18 UNF

Port 'R'  $\frac{3}{8}$  – 16 UNF

Relief Valve Setting: 260 kg-cm<sup>2</sup> (3700 lb-in<sup>2</sup>)

**Belt Pulley**

Pulley Diameter 254 mm (10 in)

Pulley Width 165 mm ( $6\frac{1}{2}$  in)

Gear ratio to p.t.o. shaft 1.875 : 1

Pulley Oil Capacity 0,85 lit ( $1\frac{1}{2}$  Imp pts)

**Speeds**

| <i>Engine rev/min</i> | <i>P.T.O. rev/min</i> | <i>Pulley rev/min</i> | <i>Belt Speed</i> |               |
|-----------------------|-----------------------|-----------------------|-------------------|---------------|
|                       |                       |                       | <i>m/min</i>      | <i>ft/min</i> |
| 1685                  | 540                   | 1012                  | 827,5             | 2715          |
| 2000                  | 641                   | 1202                  | 961               | 3225          |



## REGULAR MAINTENANCE

## Part 1 Section B

| CONTENTS                         | Page |
|----------------------------------|------|
| GENERAL                          | 01   |
| PERIODIC ATTENTION               | 02   |
| FREE SERVICE VOUCHER - 100 HOURS | 03   |
| FREE SERVICE VOUCHER - 600 HOURS | 03   |
| FREE SERVICE VOUCHER OPERATIONS  | 03   |

**GENERAL**

This section has been compiled to enable the Manual user to ascertain quickly what action is necessary in any servicing period. The section also lists the obligatory tasks specified for FREE SERVICE VOUCHERS.

In addition to the above, operations to be executed on new tractors during the running-in period are listed as follows:

Stipulate that the tractor should be kept on light work for the first 25 hours and, that all nuts and bolts should be examined for tightness.

At 25 hours change the engine oil.

At 100 hours change the transmission oil, clean the hydraulic pump oil strainer and change the Multi-Power filter element.

**IMPORTANT - THE TRANSMISSION OIL IN A NEW TRACTOR MUST NOT BE USED FOR MORE THAN THE FIRST 100 HOURS.**

- (1) In addition to the oils listed in the tables in Part 1, Section A; details of alternative products of the companies listed are available.
- (2) Provided the oil change periods recommended in the Maintenance Section have been followed, discolouration of the engine oil with use is normal and of no significance.
- (3) The multi-purpose oils listed as recommended for U.K. can be used in other territories where available in the temperature range  $-1^{\circ}\text{C}$  to  $27^{\circ}\text{C}$  ( $30^{\circ}\text{F}$  to  $80^{\circ}\text{F}$ ) only. Where it is desired to use such lubricants in temperature range other than this, Distributor/Dealer should provide the information.

**REGULAR MAINTENANCE**

| Carry out Operation below when Tractometer reads =                             | 0 | 100 | 200 | 300 | 400 | 500             | 600 | 700 | 800 | 900 | 000 |
|--|---|-----|-----|-----|-----|-----------------|-----|-----|-----|-----|-----|
| <b>ENGINE</b>  |   |     |     |     |     |                 |     |     |     |     |     |
| Check oil level and replenish if necessary                                     | 0 | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Change engine oil - see note 2   |   |     |     |     |     | Every 250 Hours |     |     |     |     |     |
| Change engine oil filter - see note 2  |   |     |     |     |     | Every 250 Hours |     |     |     |     |     |
| Check and adjust tappets   |   |     |     |     |     | X               |     |     |     |     | X   |
| Clean engine breather pipe   |   |     |     |     |     | X               |     |     |     |     | X   |
| <b>FUEL SYSTEM</b>   |   |     |     |     |     |                 |     |     |     |     |     |
| Inspect the primary fuel filter glass bowl and drain off any water             | 0 | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Check the dry air cleaner hoses and unloader valve                             | 0 | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Replace the dry air cleaner element - See note 3                               |   |     |     |     |     |                 |     |     |     |     | 0   |
| Renew the primary fuel filter element  |   |     |     |     |     | 0               |     |     |     |     | 0   |
| Renew the secondary fuel filter element  |   |     |     |     |     |                 |     |     |     |     | X   |
| Drain, clean and refill fuel tank  |   |     |     |     |     |                 |     |     |     |     | X   |
| Service injectors  |   |     |     |     |     | X               |     |     |     |     | X   |
| <b>COOLING SYSTEM</b>  |   |     |     |     |     |                 |     |     |     |     |     |
| Check the radiator water level   | 0 | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Drain, flush and refill the radiator   |   |     |     |     |     | 0               |     |     |     |     | 0   |
| Clean the radiator fins  |   |     | 0   |     | 0   |                 | 0   |     | 0   |     | 0   |
| <b>ELECTRICAL SYSTEM</b>   |   |     |     |     |     |                 |     |     |     |     |     |
| Examine and replenish battery, if necessary                                    |   | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Wipe the battery top and smear the terminals with petroleum jelly              |   |     | 0   |     | 0   |                 |     |     | 0   |     | 0   |
| Check the dynamo/fan belt tension and adjust if necessary                      |   | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Examine dynamo commutator and brushes  |   |     |     |     |     |                 |     |     |     |     | X   |
| <b>STEERING</b>  |   |     |     |     |     |                 |     |     |     |     |     |
| Check the oil level in the power steering reservoir                            |   | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Check the steering box oil level   |   |     |     |     |     | 0               |     |     |     |     | 0   |
| Renew the power steering filter element  |   |     |     |     |     | 0               |     |     |     |     | 0   |
| Check the front hub nuts for tightness   |   |     | 0   |     | 0   |                 | 0   |     | 0   |     | 0   |
| <b>TRANSMISSION AND HYDRAULICS</b>   |   |     |     |     |     |                 |     |     |     |     |     |
| Check the Transmission oil level   |   | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Change the transmission oil - place both control levers in the down position   |   |     |     |     |     | 0               |     |     |     |     | 0   |
| Change the Multi-Power filter element  |   |     |     |     |     | Every 250 Hours |     |     |     |     |     |
| Clean the Hydraulic pump oil strainer  |   |     |     |     |     |                 |     |     |     |     | X   |
| Check the rubber protective sleeves on the gear lever for the ingress of water |   |     |     |     |     |                 |     |     |     |     | X   |
| <b>MISCELLANEOUS</b>   |   |     |     |     |     |                 |     |     |     |     |     |
| Check all wheel nuts for tightness   |   | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Check the oil level in the rear axle epicyclic hubs                            |   |     | 0   |     | 0   |                 | 0   |     | 0   |     | 0   |
| Change the oil in the rear axle epicyclic hubs - See note 4                    |   |     |     |     |     | 0               |     |     |     |     | 0   |
| Check the clutch pedal free travel   |   | 0   | 0   | 0   | 0   | 0               | 0   | 0   | 0   | 0   | 0   |
| Check the brakes and adjust them if necessary - See note 5                     |   |     | 0   |     | 0   |                 | 0   |     | 0   |     | 0   |
| <b>GREASING AND LUBRICATION</b>  |   |     |     |     |     |                 |     |     |     |     |     |

**NOTES :**

- Operations marked X are to be carried out by the Distributor or Dealer.
- The oil change periods at 250 hours assumes that maintenance of the engine and ancillaries (i.e. air cleaner and lubrication filter) have been efficiently fulfilled and that oils and fuels are within the recommended specifications. If inadequate maintenance or inferior oil and fuels are used, engine oil changes must be more frequent.
- The dry air cleaner elements must be renewed at either 1000 hour, or yearly periods, or after a maximum of 10 washings of the main element.
- If conditions are wet, muddy, or exceptionally humid, change the oil in the epicyclic hubs every 200 hours.
- If very heavy work is involved, check the brakes at more frequently than 200 hour intervals.

**REGULAR MAINTENANCE****FREE SERVICE VOUCHER –  
100 HOURS (INITIAL SERVICE)****Engine:**

Check fan belt tension.  
Clean fuel sediment bowl and gauze filters.  
Renew fuel filter element (primary).  
Ensure engine oil has been renewed at 25 hour period.  
Renew oil filter element.  
Service air cleaner.  
Tighten manifold nuts.  
Check the tightness of the steering box to engine attachment bolts.

**Clutch and Brakes:**

Check clutch operation and pedal clearance.  
Check/adjust secondary clutch (if tractor performing heavy p.t.o. work).  
Adjust brakes (foot and parking) as necessary, and test.

**Hydraulic System and Transmission:**

Renew transmission oil.  
Check oil level in epicyclic hubs.  
Clean hydraulic pump oil strainer.  
Tighten four nuts securing hydraulic cylinder to lift cover.  
Renew Multi-Power filter element.  
Check operation of Multi-Power.  
Check operation of Auxiliary Hydraulics.

**Front Axle and Steering:**

Grease front hubs to flush out dust.  
Adjust front hub bearings if necessary.  
Check oil level in steering box.  
Check power steering oil level, check operation of steering, and adjust as necessary.  
Grease pedestal, drag links, ram-arm and centre pivot pin, etc.

**Safety Frame (if fitted)**

Check all safety frame bolts for correct torque tightness.

**Electrical:**

Top up battery and clean terminals.  
Lubricate dynamo rear bearing.  
Check tightness of terminals and cable clips.  
Check all electrical wiring and examine for chafing.  
Check operation of starter safety switch.  
Check operation of all lamps.

**General:**

Lubricate all points and oil where necessary.  
Examine for external leaks, generally check all bolts, nuts, clips and unions for tightness notably air intake connections.  
Check all pipes for chafing.  
Carry out any other maintenance as detailed for 10 and 100 hours.  
Check tyre pressures and tightness of wheel nuts.  
Check tractor for satisfactory operation of hydraulics, engine, instruments, etc., and field test.

**FREE SERVICE VOUCHER –  
600 HOURS (INITIAL SERVICE)****Engine**

Check fan belt tension.  
Clean fuel sediment bowl and gauze filters.  
Renew primary fuel filter element.  
Drain engine oil and renew.  
Renew oil filter element.  
Service air cleaners.  
Check tightness of engine to steering box attachment bolts.  
Service injectors.  
Examine valve springs and set valve clearances.  
Clean the engine breather pipe.

**Clutch and Brakes**

Check clutch operation and pedal clearance.  
Adjust brakes (foot and parking) as necessary and test.

**Hydraulic System and Transmission:**

Check transmission oil level.  
Check oil level in epicyclic hubs.  
Clean hydraulic pump oil strainer.  
*Tighten four nuts securing hydraulic cylinder to lift cover.*  
Renew Multi-Power filter element.  
Check operation of Multi-Power.  
Check operation of Auxiliary Hydraulics.

**Front Axle and Steering:**

Grease front hubs to flush out dust and adjust if necessary.  
Check oil level in steering box.  
Check power steering oil level, check operation of steering, and adjust as necessary.  
Grease pedestal drag links, ram-arm and centre pivot pin, etc.

**Electrical**

Top up battery and clean terminals.  
Lubricate dynamo rear bearing.  
Check tightness of terminals and cable clips.  
Check all electrical wiring.  
Check operation of starter safety switch.  
Check operation of all lamps.

**General**

Lubricate all points and oil where necessary.  
Check tyre pressures and tightness of wheel nuts.  
Examine for external leaks; generally check all bolts, nuts, clips, and unions for tightness, notably air intake connections.  
Check all pipes for chafing.  
Check tractor for satisfactory operation of hydraulics, engine, instruments, etc., and field test.  
Carry out any other maintenance detailed for 100, 200, 300, 400, 500 and 600 hours.

**PRE-DELIVERY AND INSTALLATION****Part 1 Section C**

| <b>Table of contents</b>                            | <b>Page<br/>No.</b> |
|---|---------------------|
| Pre-delivery check and customer Installation        | 02                  |
| <b>GENERAL</b>                                      | 02                  |
| Tractor Storage                                     | 02                  |
| Power Steering                                      | 03                  |
| Engine  | 03                  |
| Clutch  | 03                  |
| Battery   | 03                  |
| Sheet Metal & Exposed Castings                      | 03                  |
| Fuel System & Bright Metal Components               | 03                  |
| Preparing the tractor, prior to re-entering Service | 04                  |
| <b>TRACTOR WATERPROOFING</b>                        | 05                  |

## PRE-DELIVERY AND INSTALLATION

### PRE-DELIVERY CHECK AND CUSTOMER INSTALLATION

To ensure regular maintenance of the tractor during the 12 months warranty period, two free services must be carried out. The two Service Vouchers, detailing the work to be undertaken, cover the first 100, and 600 hours running of the tractor. The intervals between the free Service Vouchers are calculated to provide maximum benefit throughout the tractor warranty period.

#### Pre-Delivery Check

The following items must be checked by the Distributor before disposal, and by The Dealer before sale of the tractor.

1. Check the battery electrolyte level and terminals. Charge the battery as necessary.
2. Check all electrical connections, lights and cable clips.
3. Check the oil level in the following:
  - Power Steering Reservoir
  - Engine Sump
  - Steering Box
  - Transmission
  - Epicyclic Hubs
  - Belt Pulley
4. Apply grease to all greasing points.
5. Check the fan belt adjustment, which must be 19 mm ( $\frac{3}{4}$  in) deflection, measured midway between the water pump pulley and the crankshaft pulley.
6. Flush the radiator and fill with rain water, except where anti-freeze solution is provided.
7. Remove the clutch pedal keeper and check the clutch adjustment.
8. Check that the correct fuel is in the tank.
9. De-aerate the fuel system, check the injectors, and tighten all fuel pipe connections.
10. Check the tightness of the clips securing the hose connecting the air cleaner to engine manifold.
11. Start the engine.
12. Check the engine oil pressure.
13. Check the dynamo, ammeter and fuel gauge.
14. Check the water temperature gauge.
15. Check the engine governor with the hand and foot throttle and the tractormeter.
16. Fit the lower links and free the linkage joints. Check that the correct top link barrel is fitted.
17. Mount an implement and check the operation of the tractor hydraulics.
18. Check the tyre pressures which should be:
  - front 1,83 kg/cm<sup>2</sup> (26 lb/in<sup>2</sup>)
  - rear 0,84 kg/cm<sup>2</sup> (12 lb/in<sup>2</sup>)
19. Check all nuts, bolts, plugs, unions and clips for tightness.
20. Road test the tractor. Check the brakes, Multi-Power and tractormeter.
21. Check the oil cooler hoses for leaks and chafing.
22. Check the headlamp adjustment.
23. Fit the cigarette lighter and mirror.

#### Customer Installation

Instructions must be given to the Owner or Operator on the items below, appropriate to his tractor model. When the instructions have been given to the Owner or Operator, the Installation Certificate must be signed by the Distributor and returned to Service Department, Coventry, also the Marketing and

Economic Research Card should be returned to the appropriate Department.

1. Use of the tractor instruction book.
2. Location and significance of the tractor and engine numbers. Importance of quoting these numbers in any communication. (It is the Distributor's responsibility *physically* to verify all serial numbers).
3. Instruments and controls.
4. Starting and stopping procedure. Position of dual range selector lever for starting.
5. Uses of Multi-Power.
6. Coasting and towing. Multi-Power tractors cannot be stated by towing.
7. Gear selection. Danger of chaging gear when the tractor is moving.
8. Use and adjustment of brakes. Interlock latch.
9. Use of the differential lock.
10. Running in.
11. Tyre pressures.
12. Operation of hydraulic system.
13. Attaching and detaching implements. Danger of towing from top link.
14. Using power take-off. Danger of reversing the tractor when ground speed p.t.o. is being used.
15. Use of dual clutch. Consequences of continually resting the foot on the clutch pedal.
16. Wheel track width adjustments. P.A.V.T. wheels.
17. Accessories, Belt pulley, drawbars, hitches.
18. Lubrication and grease points. Daily attention.
19. Changing factory fill oils.
20. Engine and hydraulic oil filter replacements.
21. Operation of fuel system. De-aeration. Cold starting. Air Cleaner.
22. Fuel handling and storage. Fuel cleanliness.
23. Cooling system. Frost precautions. Fan belt adjustment.
24. Engine speed adjustments.
25. Maintenance of electrical equipment. Negative earth system.
26. Power steering. Position of front wheels when topping up reservoir oil level.
27. Tightness of all nuts, bolts, plugs, unions and clips.
28. Use of auxiliary hydraulics.

### GENERAL

#### Tractor Storage

When preparing a tractor for storage, comply with the following recommendations, to ensure that the tractor is in good condition when required for service again.

Clean tractor thoroughly, paying special attention to greasing points and oil filler plugs.

Select a dry protected area where the tractor is not exposed to weather or livestock. If the tractor has to be stored outside, park it in the shelter of a building or wall, and cover it completely with a good tarpaulin or cover.

#### Tyres

If water ballasted tyres are not filled with calcium chloride it is necessary to empty and inflate with air. All tyres should be inflated slightly above normal pressures, and protected from direct sunlight.

#### Hydraulics - All Tractors

Check the oil level in the centre housing, if it is low, top-up to the full mark on the dipstick.

## PRE-DELIVERY AND INSTALLATION

Using the hydraulics, raise and lower the linkage several times with the p.t.o. engaged to circulate the oil around the inside of the housing. Raise the rear linkage to its transport position. Use a piece of wood as a prop, between the top of the L.H. rear axle casing and the "crook" formed by the lift arm and the lift rod, to hold the linkage in this position. Leave the control quadrant levers at transport, i.e. outer lever placed in the fully "UP" position and the inner lever against "TRANSPORT". DO NOT move the levers from this position. The response lever would be left in the "FAST" position.

### Power Steering

Apply full LEFT lock to close up the piston ram and so protect it from corrosion. With the steering in this position and the engine running, remove filler plug from reservoir, and add oil to filler hole level. Replace plug.

### Engine

Clean all the fuel filters and fuel lift pump sediment bowl, (see Operator Instruction Book) and drain the fuel tank of all diesel fuel.

Completely refill the tank and add rust inhibitor, see chart. The fuel system must now be bled as per instructions in the Maintenance section of this book.

Start the engine and run it for 15 minutes at half maximum speed. The oil will have then thoroughly circulated through the pump and fuel lines.

Drain the radiator and block while the engine is still warm and leave the taps in the open position after all the water has drained out.

Ensure that the tractor is on level ground and drain the engine sump oil. Change the filter element.

Refill engine with a recommended grade of oil.

Remove atomisers and spray into the cylinder bores approximately 72 cc ( $\frac{1}{2}$  pt.) of engine oil, divided between all the cylinders. Replace the atomisers (using new joint washers) and slowly rotate the crankshaft through one complete revolution.

Seal the fuel tank cap air intake, crankcase breather pipe and exhaust pipe with adhesive tape or polythene bags.

Lubricate throttle control linkage joints.

### Clutch

In order to prevent the clutch lining bonding itself to the flywheel when stored for long periods, the following procedures should be used:

Depress the clutch pedal fully (onto the step board) then slip a wedge of hardwood, or similar material in between the clutch release shaft arm and the gearbox casing.

### Battery – All Tractors

Remove the battery from the tractor.

Check the electrolyte level, if it is low, top it up with distilled water so that the top of the separator plates are just covered. Fully charge the battery i.e. to a state of free gassing, from a separate source of supply.

Repeat this charging process every month of storage. A smear of petroleum jelly or a non-acid grease, on the terminals will prevent corrosion.

The battery should be stored in a cool dry dust-free place where there is no chance of freezing. DO NOT store batteries directly on metal or concrete surfaces.

### General

Lubricate all grease fittings with appropriate grease.

Smear starter motor and generator terminals with petroleum jelly.

Remove the seat and backrest and store them in a cool dry place where vermin cannot reach them.

### Sheet Metal & Exposed Castings

Any rusty, scratched or bare patches should be cleaned with an abrasive paper and re-painted in the appropriate colour. Matching shades are available for all MF tractors from MF Distributors.

### Fuel System & Bright Metal Components

The products listed on the next page are recommended not only for out of use storage, but also as normal fuels, except where stated.

The bright metal protectives can be applied either by spraying, or with a brush.

### BATTERY ELECTROLYTE CONDITION

| State of Charge          | Home and<br>Climates<br>ordinarily below<br>80°F (26.6°C):<br>Specific Gravity<br>of Electrolyte<br>(Corrected to<br>60°F (15.5°C)) | Climates<br>frequently over<br>80°F (26.6°C):<br>Specific Gravity<br>of Electrolyte<br>(Corrected to<br>60°F (15.5°C)) |
|--------------------------|---|--|
| Fully charged            | 1.270 - 1.290   | 1.210 - 1.230  |
| About half<br>discharged | 1.190 - 1.210   | 1.130 - 1.150  |
| Completely<br>discharged | 1.110 - 1.130   | 1.050 - 1.070  |

**PRE-DELIVERY AND INSTALLATION**

| Manufacturer | Diesel Fuel System   | Bright Metal Surfaces |
|--------------|--|-----------------------|
| Duckham's    | 7% Adcoide Fuel Additive   | Hydropel 400          |
| Esso         | IL 1047A   | Rust-Ban 392          |
| Shell        | Shell Calibration Fluid "C"<br>(U.K. only).<br>Shell Calibration Fluid "B"<br>(Overseas) | Ensis 256             |
| B.P.         | Energol LM   | Energol CPD 32        |
| Castrol      | Castrol Iso  | Surecoat              |
| Mobil        | Mobilkote 203  | Mobilkote 236         |

The following points must be observed when using fuel system protectors:

- When using Duckham's Adcoide additive, a winter grade fuel must be used.
- With Mobilkote 203, the following procedure is recommended:
  - Drain the diesel fuel tank.
  - Pour 2.25 litres (½ gal.) of Mobilkote 203 into the fuel tank.
  - Start the engine and run it until the Mobilkote has completely filled the fuel pump, pipes and injectors.
  - Stop the engine and fill the fuel tank with winter grade diesel fuel, as recommended above.
- Check that the battery is fully charged and that the electrolyte is to the correct level. After checking the specific gravity of the electrolyte (see page 8A-02), refit the battery into the tractor.
- Wipe the petroleum jelly from the dynamo and starter motor terminals.
- On diesel engine tractors, the fuel level should be high, but some topping up may be necessary. Bleed the system.
- Lubricate all nipples as recommended in "Maintenance" in Operator Instruction Book.
- Check the oil level in the engine sump and the transmission. Top up if necessary.
- Remove the wooden blocks from the clutch pedal and hydraulic linkage.
- Remove the jacking blocks from under the axles.
- Check tyre pressures and adjust if necessary.
- Start the engine and run on light load for 10-15 minutes.  
Check the instruments to ensure that all services are working correctly, especially the oil pressure gauge and ammeter.

**NOTE -- THE FUEL TANK SHOULD BE FILLED AS FULLY AS POSSIBLE, TO PREVENT CONDENSATION FORMING ON THE UNFILLED PORTION OF THE TANK, THUS CAUSING RUSTING. RUST, IF ALLOWED TO FORM IN LARGE QUANTITIES CAN CAUSE FILTER BLOCKAGE.**

**Final Preparation**

- Jack up the tractor and place substantial blocks under the axles to relieve the tyres of weight.
- Ensure that water ballast has been drained from the tyres and that any wheel weights have been removed.

**PREPARING THE TRACTOR PRIOR TO RE-ENTERING SERVICE**

- Remove all the covering from the exhaust pipe, air intake, crankcase breather pipe and fuel tank filler cap.
- Close all taps on the cylinder block and radiator. Re-fill the system with either clean rain water or soft water. In winter, re-fill with an anti-freeze solution. Check for leaks.

**IF ANY INSTRUMENT INDICATES A MALFUNCTION IN ITS SYSTEM, SWITCH OFF THE ENGINE IMMEDIATELY AND RECTIFY THE FAULT BEFORE RE-STARTING.**

Drive the tractor for a short time under light load, constantly checking all instruments and making use of all systems to check for correct functioning.

**DO NOT APPLY THE BRAKES HARD UNTIL THE OIL HAS BEEN ALLOWED TO FULLY LUBRICATE THE BRAKE PLATES.**

---

**PRE-DELIVERY & INSTALLATION**


---

**TRACTOR WATERPROOFING****General**

Before working in Paddy Fields certain essential modifications must be made to prevent water entering the major components and electrical equipment of the tractor. Complete sealing is not possible if the depth of the water exceeds 60 cm (24 in)

**MODIFICATIONS****Clutch Housing Drain Hole**

1. Remove the split pin from the drain hole under the clutch housing.
2. Enlarge the hole, tap and fit a screwed plug.

**Clutch Housing Cover Plate**

Ensure that a gasket (180 481 M1) is fitted between the clutch housing and the cover plate (180 482 M1).

**Engine Breather Pipe**

1. Shorten the existing breather pipe by approximately 20 cm (8 in).
2. Attach a suitable length of rubber hose, 23 cm (9 in) long to the shortened breather pipe.
3. Route the hose to the front of the engine and secure it to one of the timing case bolts with a suitable clip.

**NOTE** — THE BREATHER PIPE IN AN UNMODIFIED CONDITION IS OF A CRITICAL LENGTH. AFTER MODIFICATION, THE PIPE MAY BE LENGTHENED, BUT NEVER SHORTENED AND MUST POINT IN A GENERALLY DOWNWARD DIRECTION, WITHOUT ANY RESTRICTION, OR A 'U' BEND WHICH COULD TRAP LIQUID OR DIRT.

**Engine and Transmission Dipsticks**

Remove the dipsticks and replace them with seal fit tapered rubber plugs. The dipsticks can be stored in the tractor toolbox.

**Brake and Clutch Pedal Cross — Shafts**

The bosses from which the brake and clutch pedal cross-shafts protrude should be drilled, tapped and fitted with grease nipples. Charge the nipples with a recommended grease until grease exudes from the bearings, thus building up a wall of grease and preventing the ingress of water. Do not over-grease.

**Brakes**

Apply a thick coating of grease to the actuating rods on the rear axle housings, also round the rubber sealing boots.

**P.T.O. Shaft**

Grease the thread of the p.t.o. cap and screw it fully home.

**ELECTRICAL SYSTEM****Starter Motor and Solenoid**

1. Remove the starter motor complete. Thoroughly clean the starter motor and solenoid.
2. Carefully fill any slots, or gaps, where water could enter with 'VYPATCH' putty, available from:  
Plastic Coating Ltd.,  
Products Division,  
Trading Estate,  
Farnham, Surrey  
England.

3. Spray the starter motor and solenoid with 'VYCOAT' plastic coating (also available from the same address).
4. Leave the 'VYCOAT' coating to harden for at least 10 minutes, then give a second liberal coat of 'VYCOAT'.
5. Leave the 'VYCOAT' to finally dry, then clean off all terminals to ensure a good contact when reconnecting the wiring.
6. Re-fit the starter motor.

**Dynamo**

Only the Lucas type C40A dynamo, should be used. The dynamo must be fitted with a breather pipe, as, unlike the starter motor, continuous air circulation is necessary.

1. Remove the dynamo from the tractor.
2. Disassemble the dynamo and thoroughly clean all components.
3. Strip the paint from the dynamo outer cast.
4. Drill and tap the top of the dynamo outer case  $\frac{1}{4}$  UNC to accept a breather pipe.
5. Using a piece of tubing approximately 25 cm (10 in) long tap the inside diameter at one end  $\frac{1}{8}$  in x 27 PTF and fit a one-way breather (182 099 M91 is suitable).
6. Die the opposite end of the tube  $\frac{1}{4}$  UNC and screw the tube into the tapped hole in the top of the dynamo case.
7. Apply a thick layer of grease to the commutator, the bearing shafts and the outside diameter of the armature.
8. Spray a thick coating of 'VYCOAT' on to the armature field coils.
9. Remove the grease from the armature, bearing shafts and commutator.
10. Re-assemble the dynamo.
11. Seal all openings with 'VYPATCH' putty, then spray the entire exterior of the dynamo with 'VYCOAT'.
12. Leave for at least 10 minutes, then liberally re-coat the dynamo with 'VYCOAT'. Allow the 'VYCOAT' to finally harden, then clean the terminals thoroughly.
13. Re-fit the dynamo and re-connect the wiring harness.

**Voltage Control Box**

Ensure that the rubber gasket fits correctly; also, if necessary, seal with 'VYCOAT'.

**Batteries**

Keep the battery terminals clean and well smeared with petroleum jelly.

**Special Extra Maintenance**

Every 10 hours or daily.

1. Charge all grease points with a recommended grease until grease exudes from the seals.
2. Remove the dynamo drain plug and allow any water to drain away. Replace the plug.

Every 50 hours or weekly.

1. Remove the special drain plug from the clutch housing and allow any oil which may have accumulated to drain away.
2. Ensure that the engine breather pipe is clear of foreign matter.



**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 2**

**Publication No. 1856 001 M1**

comprising

- A SEATS
- B SHEET METAL AND FENDERS
- C SAFETY FRAME AND CABS

**SEATS**

**Part 2 Section A**

| <b>Operation No.</b> | <b>Table of Contents</b>                 | <b>Page No.</b> |
|----------------------|--|-----------------|
|                      | <b>GENERAL</b>                           | 01              |
|                      | Deluxe Seat Adjustment                   | 02<br>02        |
|                      | <b>MF SPRING SUSPENSION SEAT</b>         | 02              |
| 2A-01-05             | Adjustment<br>Disassembly and Reassembly | 02<br>05        |

**GENERAL**

This section of the Service Manual covers the seats which are optional equipment.

## SEATS

### DE-LUXE SEAT

#### Figure 1

This seat is a pan type unsprung seat with a detachable foam rubber cushion covered in water-proof leathercloth.

The cushion is secured to the seat pan by webbing straps. A backrest, similarly upholstered, is secured to the seat pan by bolts and nuts.

The seat pan is connected to the tractor by a double hinged link which in turn is attached to a mounting bracket secured to a seat riser. The seat riser is fitted to the tractor hydraulic lift cover by studs and nuts.

The double hinged link allows the seat to be tilted backwards, enabling the driver to operate the tractor from a standing position.

### ADJUSTMENTS

The seat riser has two 50,0 mm ( $1\frac{3}{4}$  in) long slots in the base allowing fore and aft adjustment on the mounting studs in the hydraulic lift cover. In addition a 246,8 mm ( $9\frac{3}{4}$  in) long slot is machined to the inclined face of the riser to allow variable height adjustment of the seat.

### SPRING SUSPENSION SEAT

#### Figures 2, 3, 4 & 5

This seat has a pressed steel pan to which is attached a foam rubber insert, with a formed leathercloth cover bonded to the pan. A plastic sealing strip is attached around the edge of the cover and pan, thus making the upholstery waterproof.

The seat cover incorporates a waterproof air valve, which allows the foam rubber insert to "breathe". The seat pan has water drain holes and can be inverted when the tractor is parked, giving additional weather protection to the upholstery.

The seat pan is mounted on nylon bearings to the front of a tubular swing arm (1, Figure 2), the swing arm in turn, is mounted on nylon bushes and bolted to the seat pillar (2). A bracket (16, Figure 3) bolted to the seat backrest, locates on runners (17) with

nylon inserts, welded to a channel section plate (18) on the seat pillar. The channel section plate, is mounted at the top on nylon rollers (3, Figure 2) which travel through a vertical plate on tracks (4) welded to the seat pillar.

The suspension is governed by two coil springs (5) which are mounted vertically with the seat pillar. The springs are attached at one end to a threaded spring adjuster (6), secured to the top of the seat pillar by a control knob (7), the other end of the springs are mounted on a pin (8) fitted to the base of the channel section plate. Nylon spacers (9) are positioned between the spring end loops on the plate pin to maintain the springs in a vertical position.

The spring adjuster is threaded into the control knob and rotation of the knob causes the spring adjuster to rise or fall, depending on the direction of rotation, thereby altering the tension in the springs to suit the driver's weight.

A hydraulic damper (10), is located between the fixed seat pillar and sliding channel section plate, to compensate for seat oscillations when travelling over rough ground.

The seat assembly is mounted on runners, with nylon inserts, to a seat riser (11) secured by studs and nuts to the tractor hydraulic lift cover.

### ADJUSTMENTS

A control lever (20, Figure 3) situated on the bottom of the seat frame allows the seat to be locked in any position on the seat riser. With the lever in the central position, the seat can be moved on its runners, along the riser, giving fore, aft and height adjustment. The seat is locked in the selected position by moving the lever to the right.

To adjust the rake of the seat, loosen the four nuts (14, Figure 2) securing the bearings and housings (12) to the seat pan and tubular swing arm. The bearing housings are slotted and sliding the bearing housings fully rearwards will increase the rake by 25 mm (1 in). Conversely sliding the housings fully forwards will reduce the rake by 25 mm (1 in). Re-tighten the nuts when the desired inclination is reached.

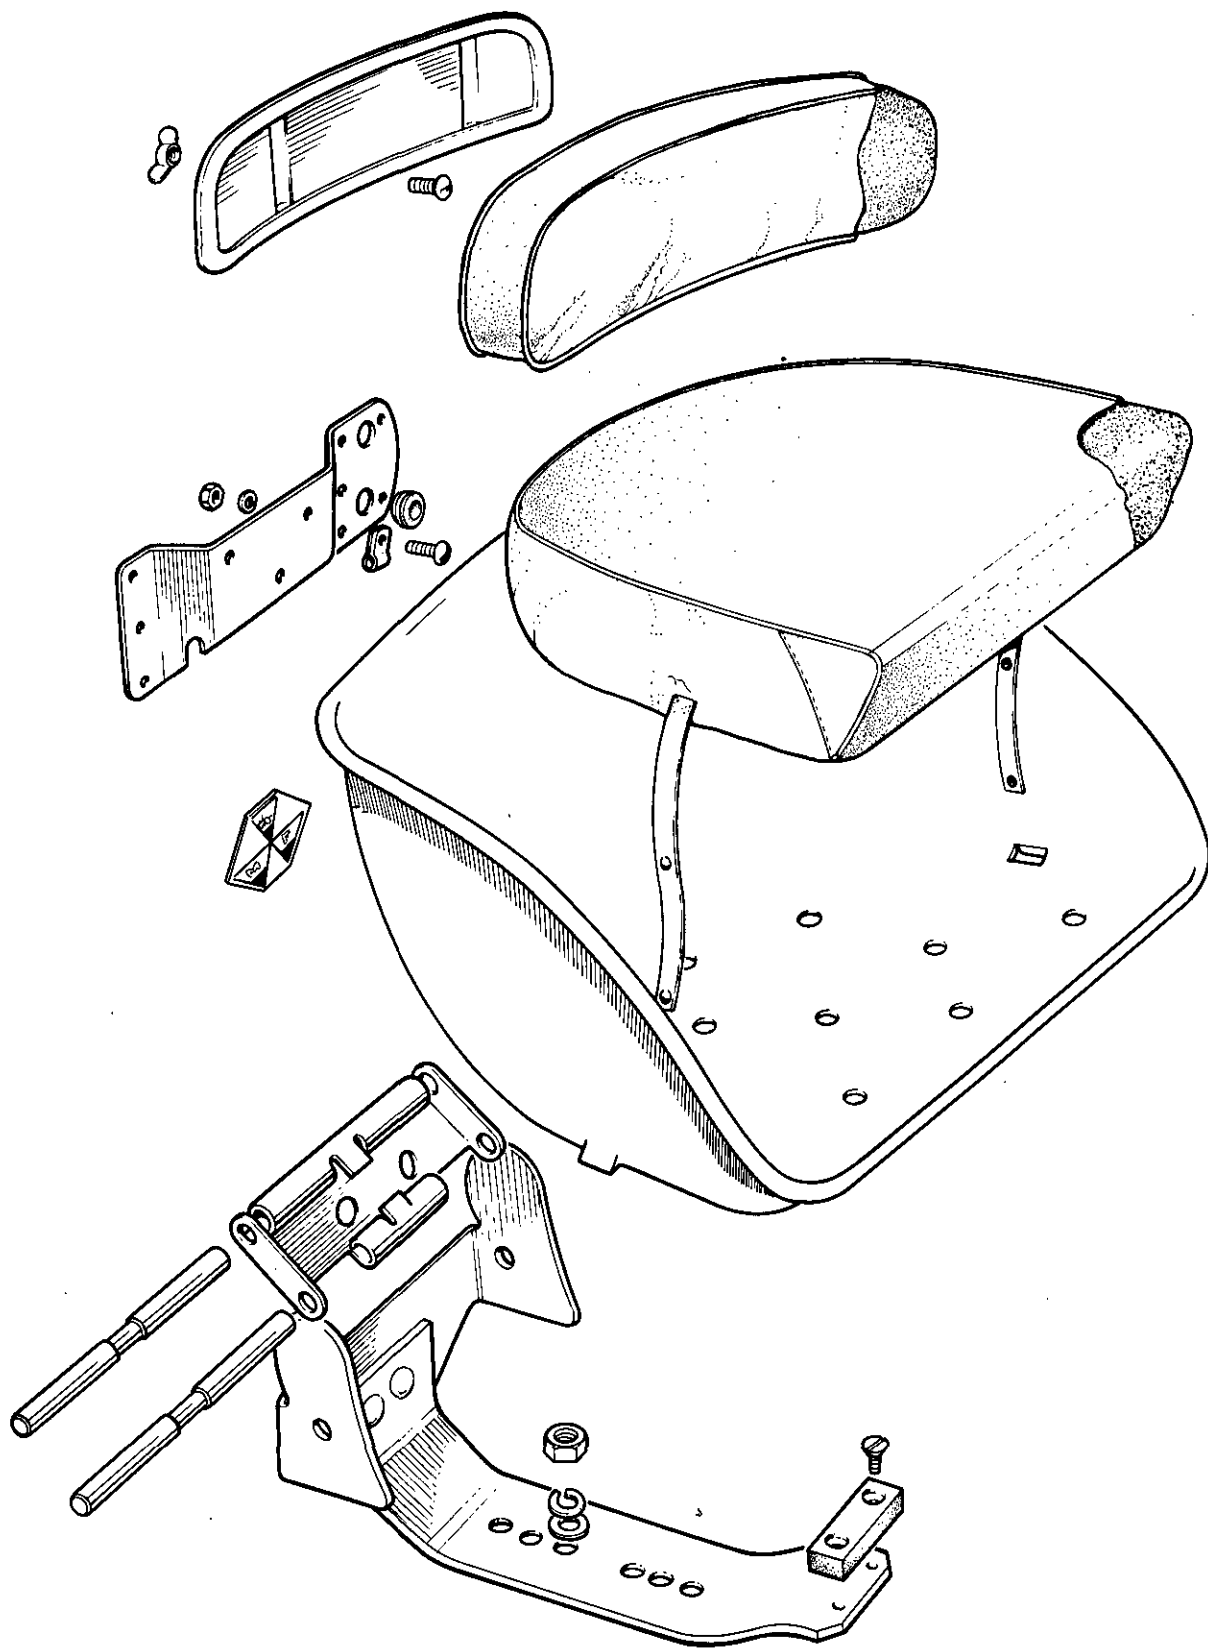


FIG. 1

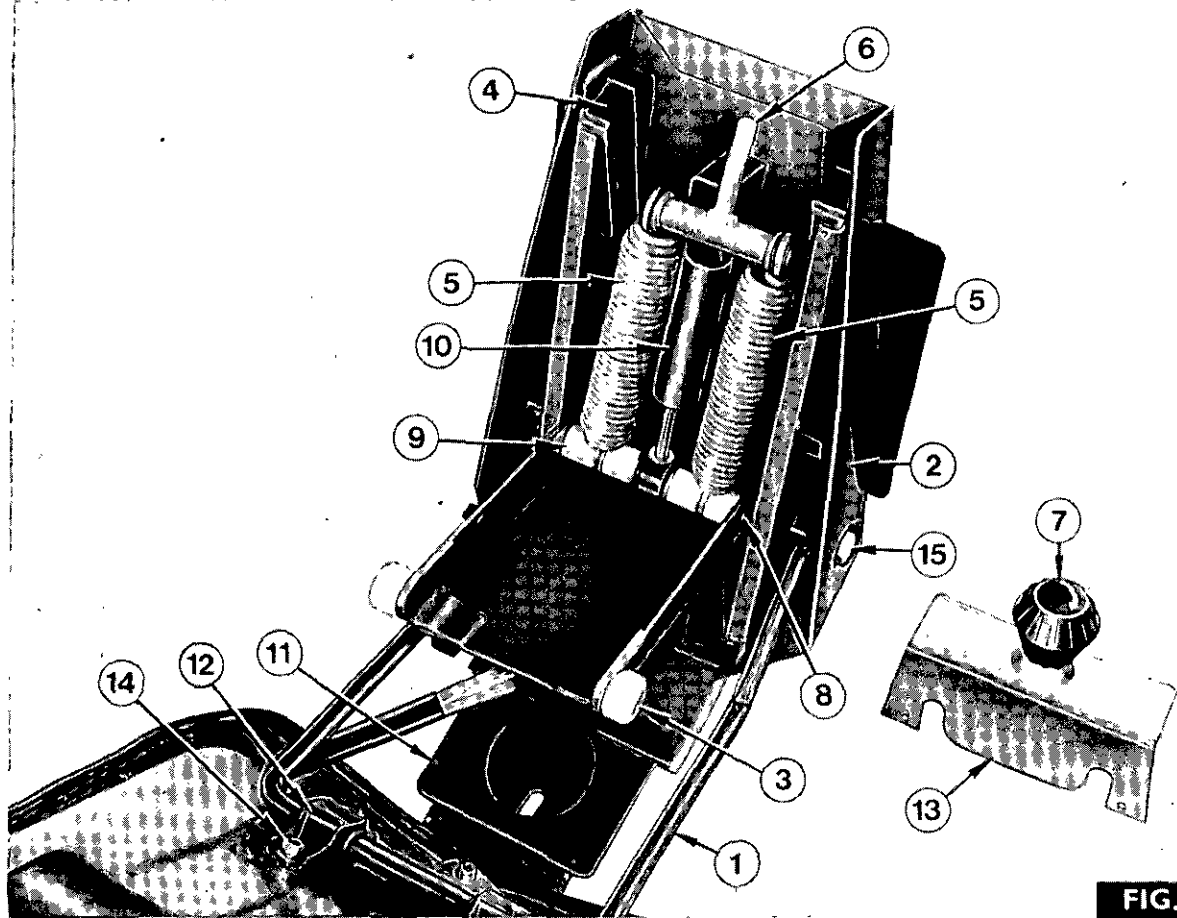


FIG. 2

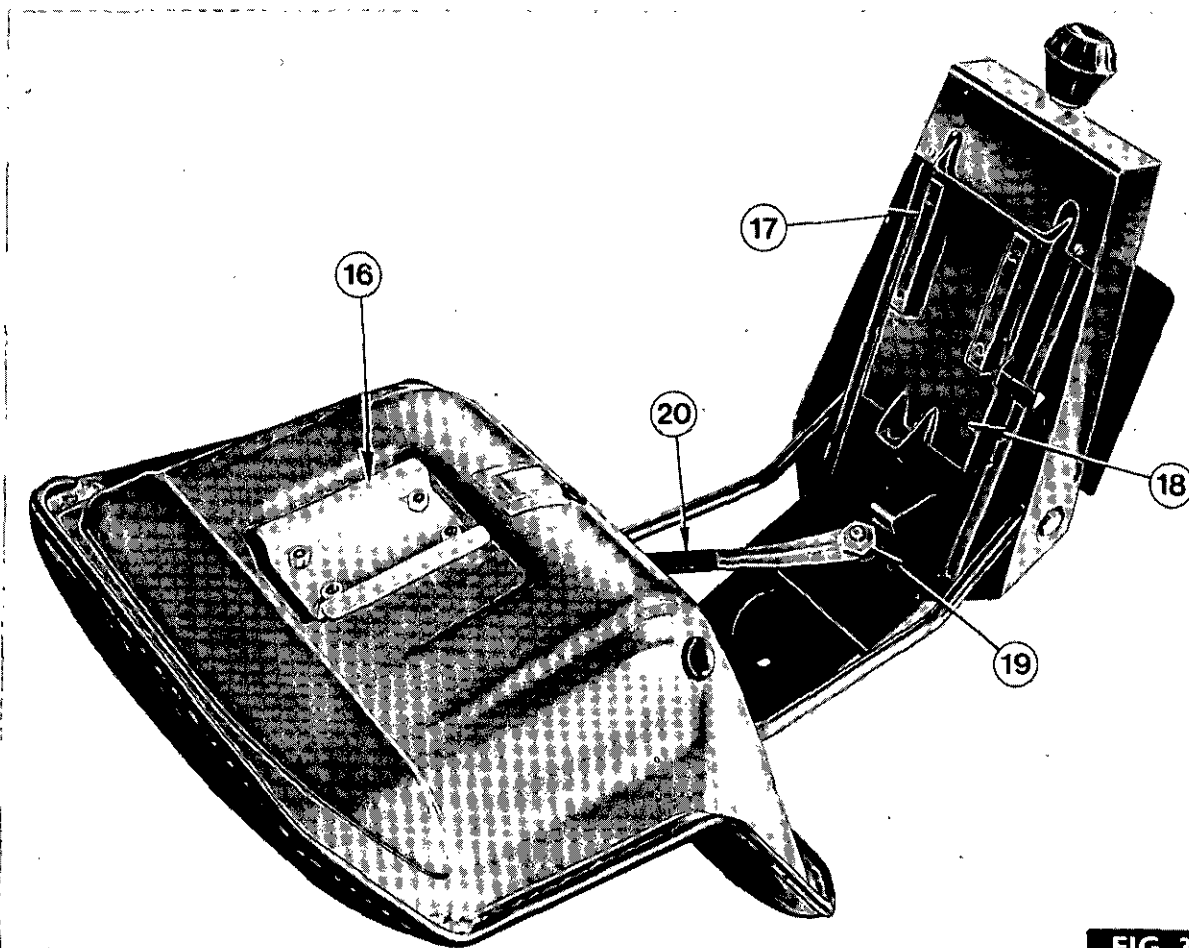


FIG. 3

**SPRING SUSPENSION SEAT****Disassembly and Reassembly**

2A-01-05

Figures 2, 3, 4 &amp; 5

1. Rotate the control knob (7, Figure 2), in an anti-clockwise direction to remove the tension from the suspension springs, and to release the control knob from spring adjuster.
2. Lift the back of the seat pan to disconnect it from its runners (17) on the channel section plate (18) in the seat pillar (2).
3. Remove the four nuts and washers (14), bearing caps (12), and nylon bearings securing the seat pan to the tubular swing arm (1) and lift off the seat pan.
4. Remove the seat suspension assembly from the studs in the tractor hydraulic lift cover.
5. Unscrew the self tapping screws retaining the top cover (13) and control knob to the seat pillar and lift off the cover complete with control knob. Remove the retaining circlip beneath the top cover, to detach the knob.
6. Lift the base of the channel section plate as shown in Figure 4, to free the nylon rollers (3, Figure 2) from their tracks (4) on the seat pillar.
7. Remove the snap rings and washers retaining the spring loops to the spring adjuster (6) and remove the adjuster.
8. Remove the snap rings retaining the pin (8) to the bottom of the channel section plate and withdraw the pin. The nylon spacers (9) and piston end of shock absorber (10) can now be removed.
9. Remove the snap ring and pin securing the barrel end of the shock absorber.
10. Remove the bolts (15) securing the tubular swing arm and nylon bushes to the seat pillar.
11. Remove the bolt (19, Figure 3) securing the seat locking lever (20) to the seat and lift off the lever. The large bolt beneath the locking lever can now be removed to release the locking plate, situated beneath the top face of the seat riser.
12. Slide the seat frame backwards to detach from the riser.
13. Reassembly is a reversal of the disassembly procedure.

SEATS

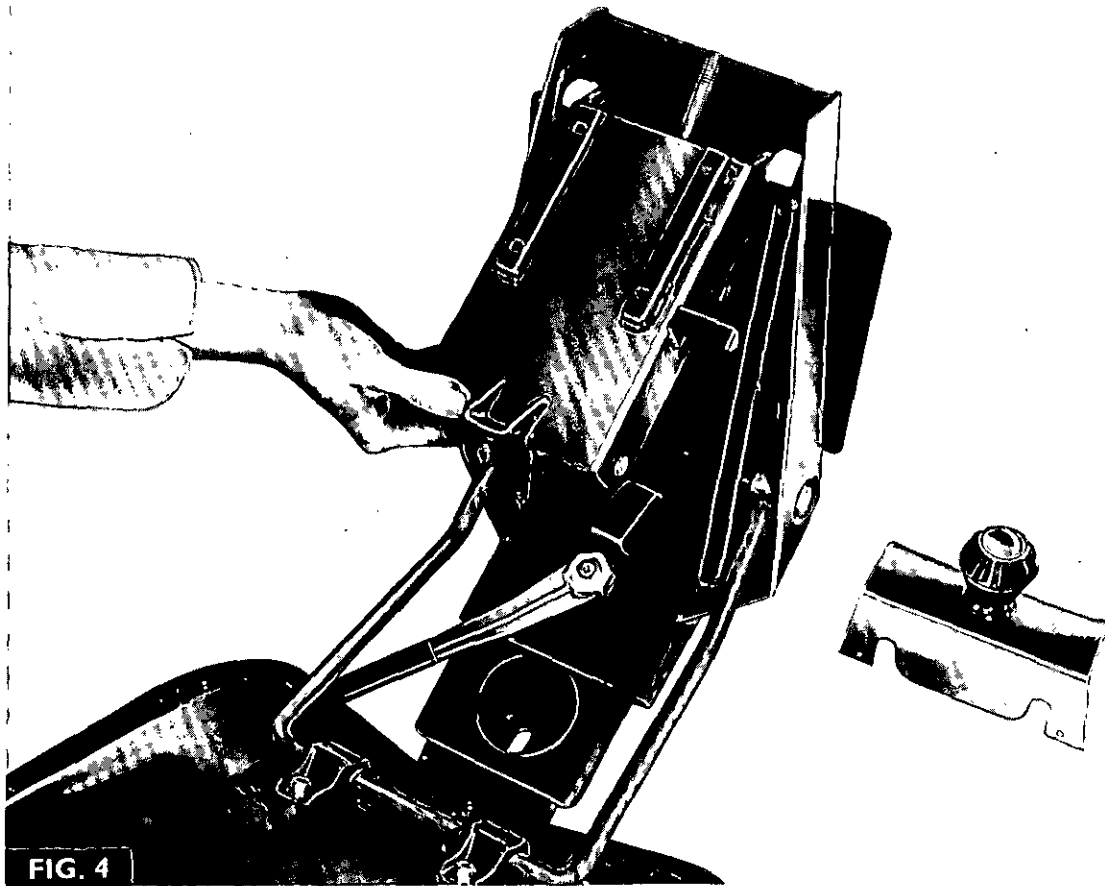


FIG. 4



FIG. 5

## SHEET METAL AND FENDERS

## Part 2 Section B

| Operation<br>No. | Table of contents  | Page<br>No. |
|------------------|--|-------------|
|                  | GENERAL  | 01          |
| 2B-01-02         | HOOD AND GRILLE ASSEMBLY                                     | 02          |
| 2B-02-02         | Removal and Refitment<br>Hood Seal Removal and Replacement   |             |
| 2B-03-02         | GRILLE AND FRONT SIDE PANELS ASSEMBLY                        | 02          |
| 2B-04-05         | Removal and Refitment<br>Panel Seals Removal and Replacement |             |
| 2B-05-05         | GRILLE PAN   | 05          |
|                  | Removal and Refitment  |             |
| 2B-06-05         | STEERING DRAG LINK SEAL                                      | 05          |
|                  | Removal and Replacement                                      |             |
| 2B-07-05         | FENDERS  | 05          |
|                  | Removal and Refitment  |             |
| 2B-08-05         | FOOTPLATE  | 05          |
|                  | Removal and Refitment  |             |

**GENERAL**

Fig. 1. The hood (1), grille (2), pan (4), fender (7) and footplate (6) assemblies are shown. There are also two rear side panels (5) giving access to the battery and underside of the instrument panel. The battery is inspected by removing the access panel (8)

Each of the fenders (7) incorporate a toolbox with a hinged lid.

All sheet metal is readily removed and refitted and gives protection to the tractor and the operator. The tractor must not be operated with any of these panels removed, except for the p.t.o. guard which has to be removed when certain implements are used.

Always keep the sheet metal clean and respray, as soon as possible, any parts which become chipped, to prevent corrosion.



**SHEET METAL AND FENDERS****HOOD AND GRILLE ASSEMBLY****Removal and Refitment** 2B-01-02**Removal**

1. Fig. 2. Remove the five bolts, spring and flat washers securing each side panel and remove the panels.
2. Remove the four screws, spring and flat washers securing the hood to the instrument panel.
3. Remove the two bolts, spring and flat washers securing each front side panel to the radiator brackets.
4. Remove the bolt and spring washer securing each front side panel to the front support casting.
5. Remove the two bolts, spring and flat washers securing the hood to each radiator bracket.
6. Remove the grille door and rest the oil cooler (if fitted) on the front support casting.
7. Remove the five bolts, spring and flat washers securing the grille to the grille tray (3, Fig. 1).
8. Disconnect the wiring at the light switch and the instrument panel light (if fitted).
9. Fig. 3. Lift the hood assembly clear of the tractor.

**Refitment**

1. Locate the hood and grille assembly on the tractor.
2. Refit the following bolts, spring and flat washers.
  - Two each side securing the hood to the radiator brackets.
  - Two each side securing the front side panels to the radiator brackets.
  - Five securing the grille to the grille tray.
3. Refit the four screws, spring and flat washers securing the hood to the instrument panel.
4. Refit the bolt and spring washers securing each front side panel to the the front support casting.
5. Secure the oil cooler (if fitted) in place and refit the grille door.
6. Reconnect the wiring at the instrument panel light and the light switch (if fitted).
7. Refit the two side panels and secure with five bolts, spring and flat washers each side.

**HOOD SEAL****Removal and Replacement** 2B-02-02**Removal**

1. Remove the hood and grille assembly as stated in operation 2B-01-02.
2. Remove all traces of the old seal and adhesive from the hood.

**Replacement**

1. Precoat the neoprene material on the contact surface of the new seal with an approved adhesive (i.e. Bostik 19A 186) and allow to dry completely.
2. Apply a coat of the adhesive to the metal surface and allow it to become tacky.
3. Fig 4. Place the seal in position, applying pressure evenly to exclude air bubbles.
4. Refit the hood and grille assembly as stated in operation 2B-01-02.

**GRILLE AND FRONT SIDE PANELS ASSEMBLY****Removal and Refitment** 2B-03-02**Removal**

1. Remove the grille door and rest the oil cooler if fitted on the front support casting.
2. Remove the grille pan as stated in operation 2B-05-05.
3. Remove the two bolts, spring and flat washers securing each front side panel to the radiator brackets.
4. Remove the bolt and spring washer securing each front side panel to the front support casting.
5. Remove the five bolts, spring and flat washers securing the grille to the grille tray (3, Fig. 1).
6. Remove the four bolts, spring and flat washers securing the grille to the hood.
7. Disconnect the wiring at the Lucar connectors adjacent to the headlamps (if fitted).
8. Fig. 5. Lift the grille and front side panel assembly clear of the tractor.

**Refitment**

1. Locate the grille and front side panel assembly on the tractor.
2. Refit the two bolts, spring and flat washers securing each front side panel to the radiator bracket.
3. Refit the bolt and spring washer securing each front side panel to the front support casting.
4. Refit the following bolts, spring and flat washers:
  - Five securing the grille to the grille tray.
  - Four securing the grille to the hood.
5. Reconnect the wiring.
6. Refit the grille pan as stated in operation 2B-05-05.
7. Secure the oil cooler (if fitted) in place and refit the grille door.



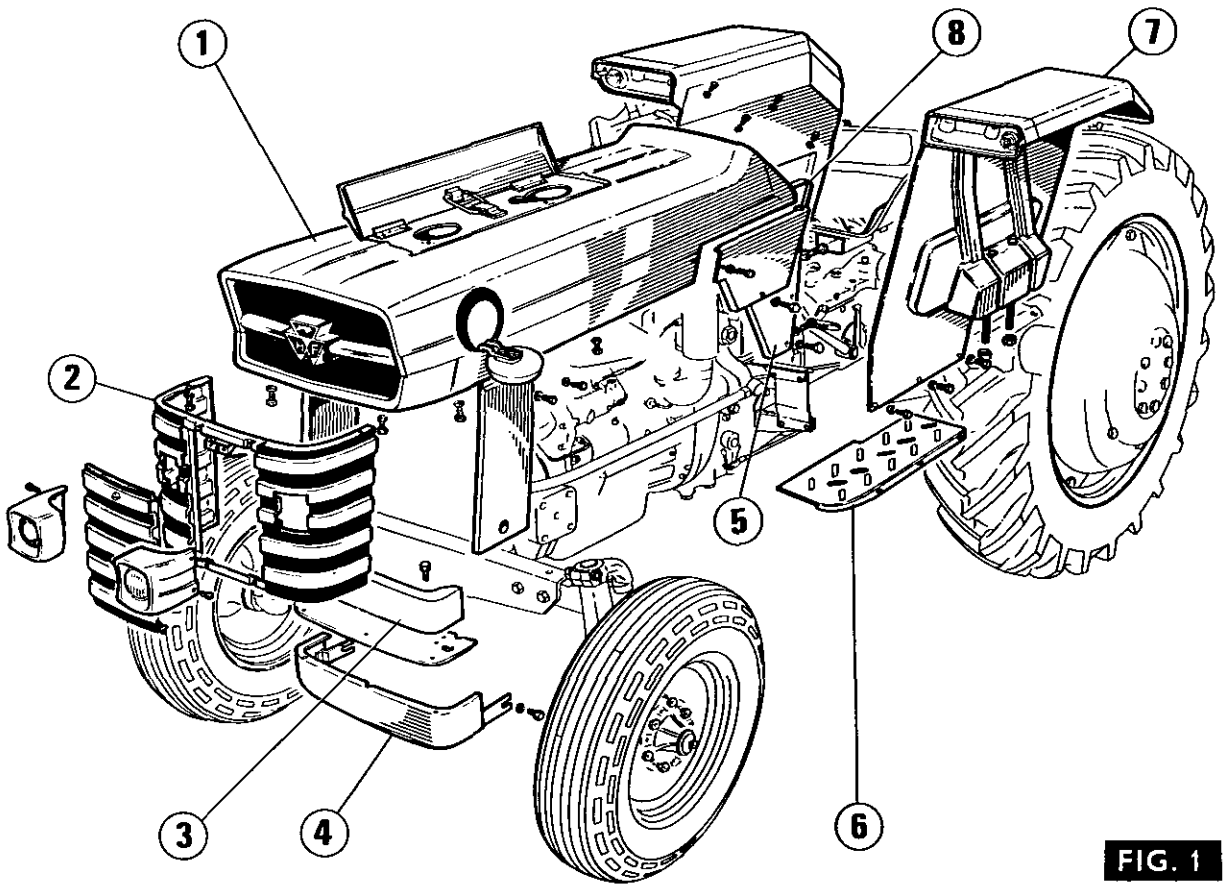
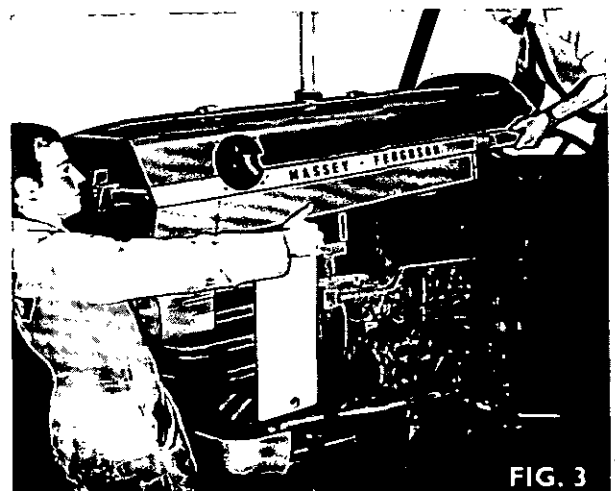
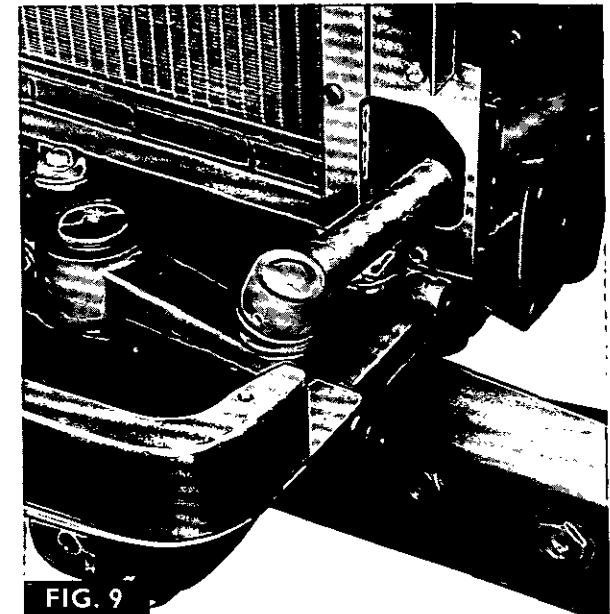
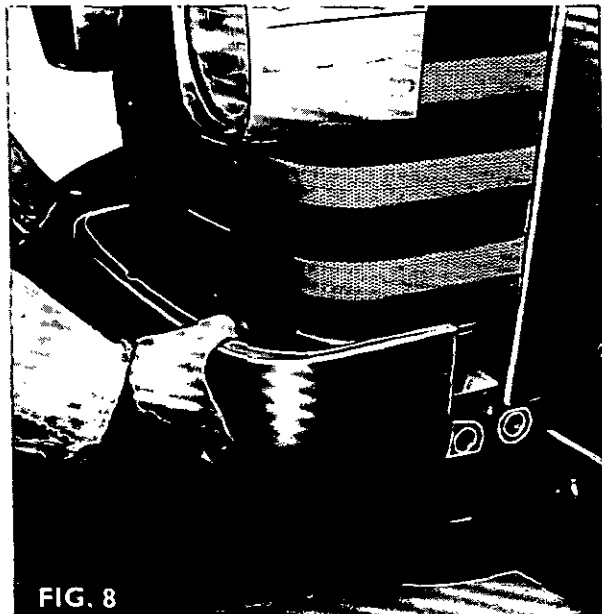
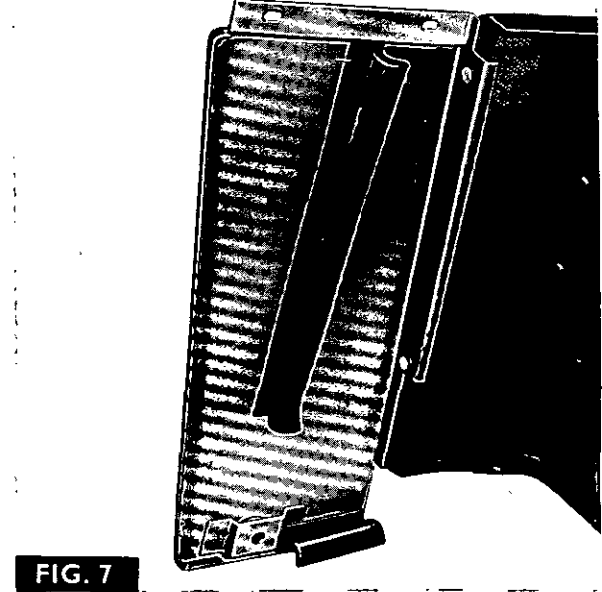
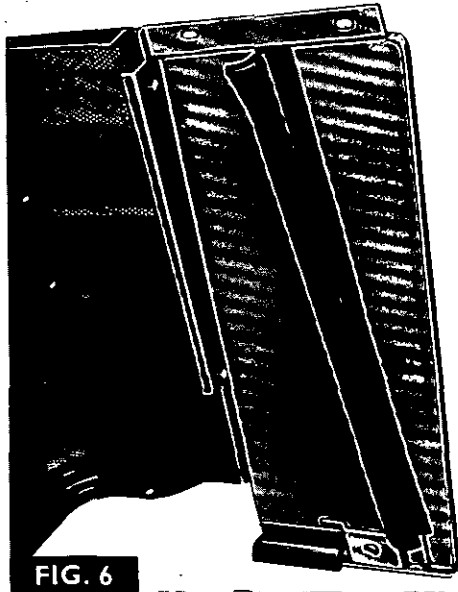


FIG. 1

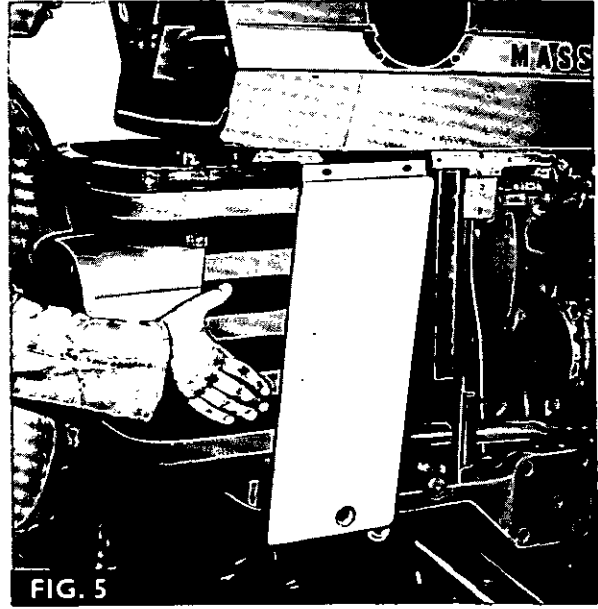

SHEET METAL AND FENDERS

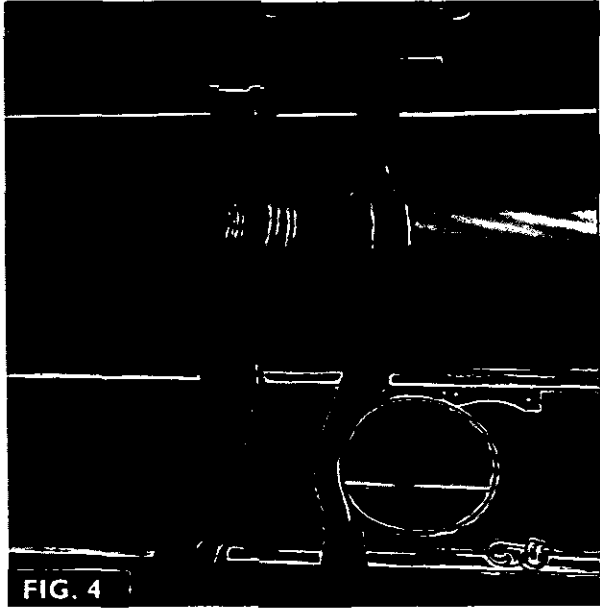

**SHEET METAL AND FENDERS****PANEL SEALS****Removal and Replacement** 2B-04-05**Removal**

1. Remove the grille and front side panels assembly as stated in operation 2B-03-02.
2. Remove all traces of the old seal and adhesive from the panels.

**Replacement**

1. Precoat the neoprene material on the contact surface of the new seal with an approved adhesive (i.e. Bostik 19A 186) and allow to dry completely.
2. Apply a coat of the adhesive to the metal surface and allow it to become tacky.
3. Fig. 5 and 6. Place the seal in position, applying pressure evenly to exclude air bubbles.
4. Refit the grille and front side panels assembly as stated in operation 2B-03-02.

**GRILLE PAN****Removal and Refitment** 2B-05-05**Removal**

1. Remove the two bolts and spring washers securing the pan to the front support casting.
2. Fig. 8. Slide the pan out forwards.

**Refitment**

1. Locate the pan into position and secure with the two bolts and spring washers.

**STEERING DRAG LINK SEAL****Removal and Replacement** 2B-06-05**Removal**

1. Remove the two bolts, spring and flat washers securing the L.H. front side panel to the radiator bracket.
2. Remove the bolt and spring washer securing the L.H. front side panel to the front support casting.
3. Remove the grille door and rest the oil cooler (if fitted) on the front support casting.
4. Remove the two bolts, spring and flat washers securing the L.H. front side panel to the grille and remove the panel.
5. Fig. 9. Remove the two bolts, nuts and washers securing the seal housing to the radiator cowl.
6. Remove the housing and the seal.

**Replacement**

1. Fit a new seal in the housing and secure the housing to the radiator cowl with the two bolts, nuts and washers.
2. Locate the L.H. front side panel on the tractor.

3. Refit the following bolts, spring and flat washers:

Two securing the L.H. front side panel to the radiator bracket.

Two securing the L.H. front side panel to the grille.

4. Refit the bolt and spring washer securing the panel to the front support casting.
5. Secure the oil cooler (if fitted) in place and refit the grille door.

**FENDERS****Removal and Refitment** 2B-07-05**Removal**

1. Disconnect the rear light wiring (if fitted) at the fender.
2. Remove the three bolts, nuts and washers securing the fender to the footplate.

**NOTE – IF A SAFETY FRAME IS FITTED, THE UNDER FENDER SUPPORT MUST BE REMOVED.**

3. Remove the two nuts, spring washer, flat washers and plate securing the fender to the trumpet housing.
4. Lift the fender slightly and remove the two bolts from inside the tool box.
5. Lift the fender clear of the tractor.

**Refitment**

1. Locate the fender on the trumpet housing and refit the two bolts through the base of the tool box.
2. Secure the fender with the two nuts, spring washers, flat washers and plate.
3. If necessary, refit the under fender support.
4. Secure the fender to the footplate with the three bolts, nuts and washers.
5. Reconnect the rear light wiring (if fitted) at the fender.

**FOOTPLATE****Removal and Refitment** 2B-08-05**Removal**

1. Remove the three bolts, nuts and washers securing the fender to the footplate.
2. Remove the footplate step if necessary.
3. Remove the six bolts, nuts and washers securing the footplate to the footplate mounting brackets.
4. Remove the footplate.

**Refitment**

1. Locate the footplate on the footplate mounting brackets and secure with the six bolts, nuts and washers.
2. If necessary refit the footplate step.
3. Secure the fender to the footplate with the three bolts, nuts and washers.



## SAFETY FRAME AND CABS

## Part 2 Section C

| Operation<br>No. | Table of Contents                          | Page<br>No. |
|------------------|--|-------------|
|                  | GENERAL                                    | 01          |
| 2C-01-02         | SAFETY FRAME KIT<br>Fitment                | 02          |
| 2C-02-05         | SAFETY FRAME<br>Removal and Refitment      | 05          |
| 2C-03-05         | FLEXIBLE CLADDING KIT<br>Fitment           | 05          |
| 2C-04-06         | FLEXIBLE CLADDING<br>Removal and Refitment | 06          |
| 2C-05-07         | RIGID CLADDING KIT<br>Fitment              | 07          |
| 2C-06-09         | RIGID CLADDING<br>Removal and Refitment    | 09          |

**GENERAL**

This section details fitment of flexible and rigid safety cabs.

For full details of the Government Statutory Instrument 1967 No. 1072, or any queries related to safety cabs, apply to:

Ministry of Agriculture, Fisheries and Food,  
Safety Branch  
Great Westminster House  
Horseferry Road,  
London S.W.1.

A comprehensive statement regarding Distributor's and Dealer's responsibilities related to cab fitment and Massey-Ferguson policy concerning safety cabs is contained in Service Information TRAC 233, 8th October, 1970, which was circulated to all Massey-Ferguson Distributors and Dealers in Great Britain.

Before beginning any assembly, always check the contents of the kits and prepare the components for assembly, as described.

**SAFETY FRAME AND CABS**

**SAFETY FRAME KIT**

**Fitment** 2C-01-02

**Before Fitment**

The following important points must be noted before attempting assembly:

**ALWAYS:-**

Remove any surface irregularities (paint lumps, burrs, swarf and dirt) from mating faces, this will ensure firm contact when torque loading is applied.

Assemble the complete safety frame with all bolts finger tight, then fully tighten all bolts, progressively and evenly.

Torque values must be strictly obeyed.

ALL bolts which project into the inside edges and faces of the frame or cab, must be fitted from the inside, facing outwards, i.e. the threaded portion of the bolt and the nut must be outside the frame to reduce the number of sharp corners and projections to a minimum.

During assembly use only the bolts and other hardware supplied in the kit. These bolts are manufactured from high tensile steel; the use of substitute mild steel nuts and bolts automatically invalidates regulation approval and could be extremely dangerous. All slotted holes must be covered by a flat washer and all nuts must be secured with a lock washer, except where self locking nuts are provided. Before assembly, identify all of the safety cab components.

If the frame is to be removed for tractor servicing, refitting must follow the initial procedure exactly and all bolts must be re-tightened to the correct torque values.

**ILLEGAL PRACTICES**

Never drill the frame to accept equipment such as extra mirrors or flashing indicators as this could dangerously weaken the frame structure.

Never weld anything to the frame.

Never straighten a bent frame.

Never interchange components with other safety frames even of identical type, or modify the frame in any way whatsoever without prior approval by Massey-Ferguson.

**OTHER IMPLEMENTS**

It is an offence to attach other implements or fittings to the tractors by means of the safety frame or its attachment points unless such attachments are approved by Massey-Ferguson.

**New Tractors Fig. 1**

New tractors are despatched from the factory with the rear lower struts fitted (6, 7, 8 & 9) except where an MF approved conversion is to be fitted.

**Assembly Method (Fig. 1)**

1. Remove the bolt and nut securing the rear lower strut to the fender top. Discard the nut but retain the bolt.
2. Slacken the fender mounting bolts and the rear lower strut mounting bolts.
3. Attach the rear upper struts (3 & 5) to the top of the fender using two ½ UNF x 2 in lockwashers.

**NOTE – ENSURE THAT THE UPPER STRUTS ARE FITTED WITH THE OPEN THREADED HOLES ON THE INSIDE OF THE MEMBER.**

4. Attach each front strut (2 & 4, Fig. 1) to the transmission housing using four ½ UNC bolts (1 off 1½ in, 2 off 1¾ in and 1 off 2½ in, Fig. 2) and ½ lockwashers.
5. Inspect the roof frame for obstructions in strut location points (extraneous paint, packing or weld). Raise the roof frame and locate it on the four struts.

**NOTE – THE FRAME SERIAL NUMBER PLATE MUST BE LOCATED IN THE FRONT L.H. CORNER OF THE ROOF FRAME.**

6. Secure the roof frame with two ½ UNF x 3½ in bolts, plain washers, lockwashers and nuts per strut.

**IMPORTANT – THE ROOF FRAME BOLTS MUST BE FITTED FROM THE INSIDE, I.E. NUTS AND ALL WASHERS ON THE OUTSIDE.**

7. Tighten all bolts and nuts progressively in the following order and to the torque values stated:

|  | kgm | lb-ft |
|--|-----|-------|
| Rear fender to rear axle               | 17  | 125   |
| Rear lower strut to attachment bracket |     |       |
| Rear lower strut to rear upper strut   |     |       |
| Front strut to transmission case       | 8.7 | 50    |
| Roof Frame                             |     |       |

8. Attach the plough lamp to the R.H. rear upper strut approximately 300 mm (12 in) above the fender top. Route the wire down the front side of the strut, secure it with the two plastic straps, then feed the wire through the grommet on the fender top. Attach the spade end connector to the spare terminal in the rear lamp, and attach the eyelet terminal to one of the rear lamp securing screws.
9. Insert a plastic plug into each top outer corner of the roof frame.

SAFETY FRAME AND CABS



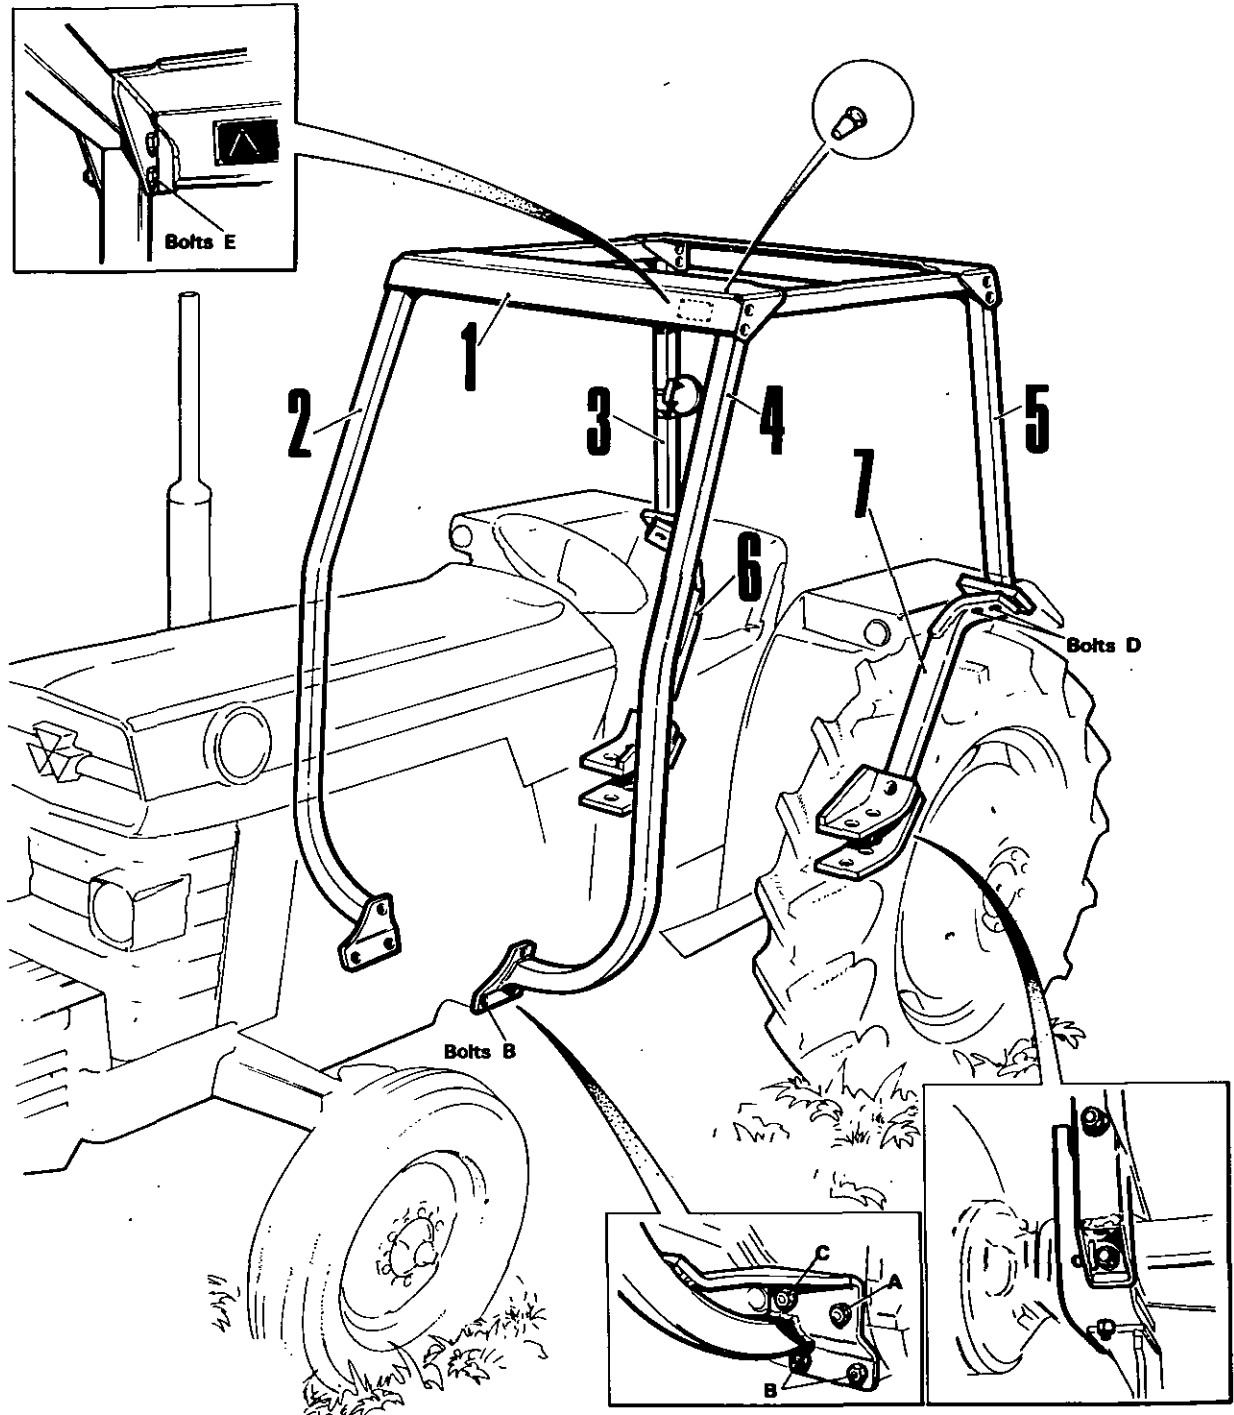


FIG. 1

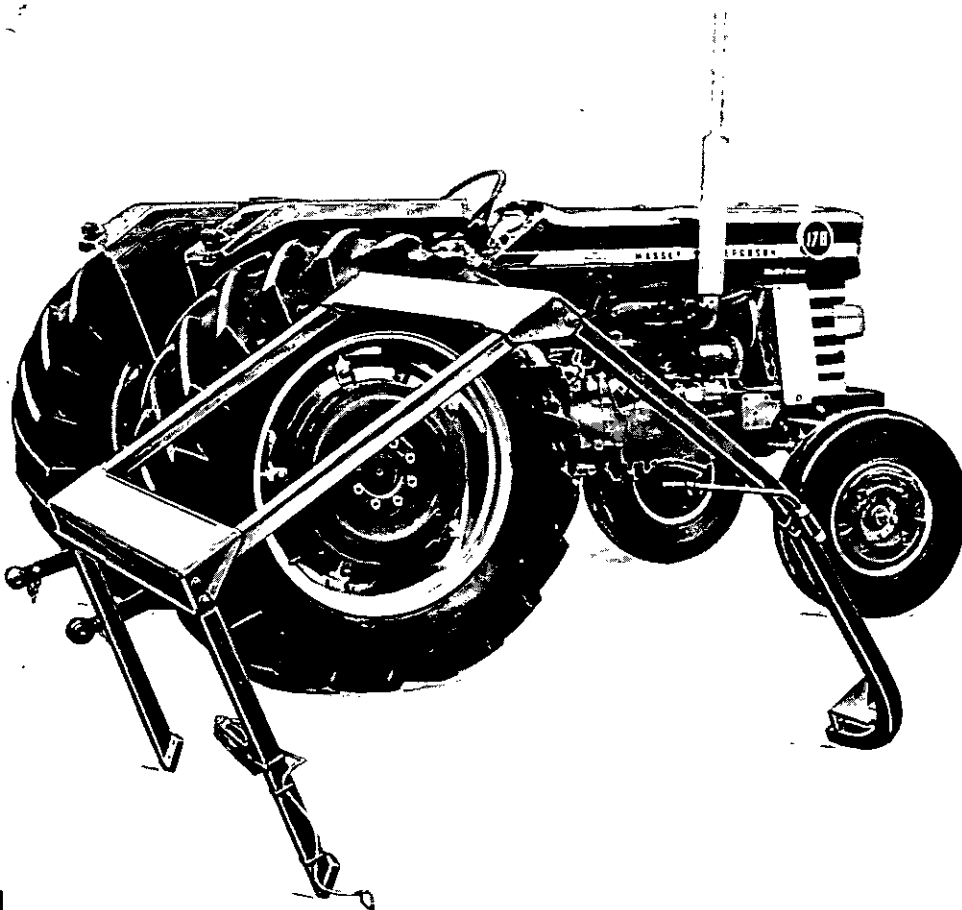

**SAFETY FRAME AND CABS**

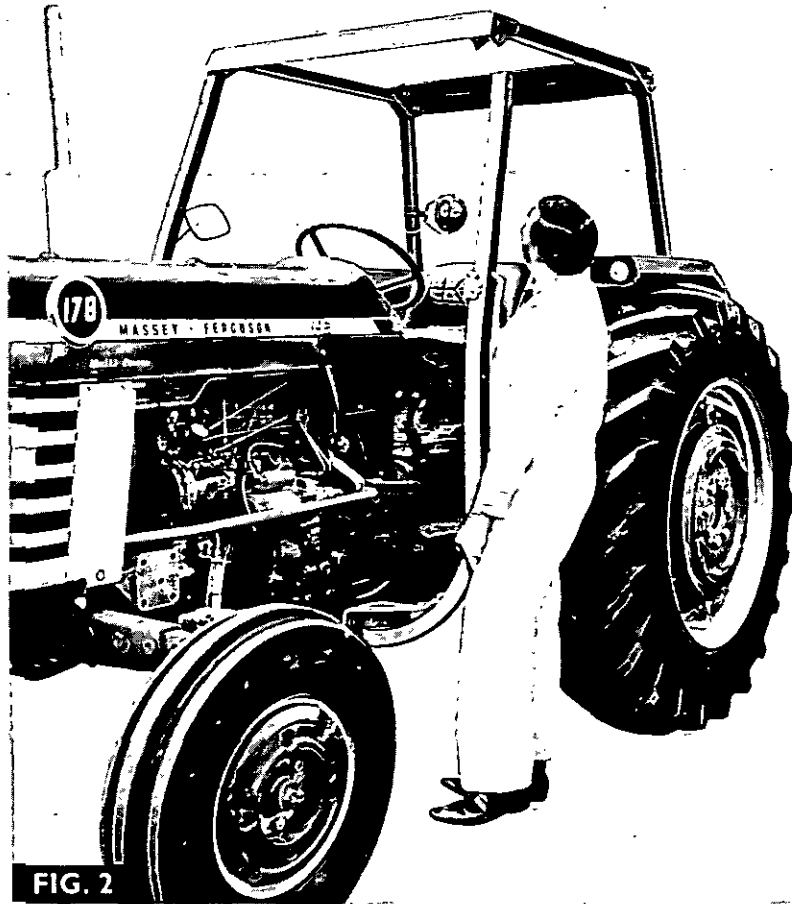

**FIG. 3**

## SAFETY FRAME AND CABS

## SAFETY FRAME

## Removal and Refitment

2C-02-05

## Removal

1. Remove the cladding as stated in either operation 2C-04-06 or 2C-06-09 for flexible or rigid cladding respectively.
- 2A. If a crane is available: Remove the L.H. front strut as shown in Fig. 2, then, using a crane support the frame by slinging from the roof member. Remove the remaining bolts securing the other three legs to the tractor, then lift the complete assembly off the tractor as shown in Fig. 3.
- 2B. If no crane is available: Remove the bolts securing the roof member, then lift off the roof member. Remove the bolts securing the front and rear struts.
3. Store the bolts, nuts and washers carefully, as they must all be refitted to comply with the safety regulations.  
Except in exceptional circumstances, there is no necessity to remove the under fender supports.
4. If the under fender supports are to be removed, removed the fender mounting bolts and the bolts securing the brackets to the fender.

## Refitment

1. If necessary, refit the under fender supports and their brackets, then refit the fender mounting bolts.
- 2A. If a crane is available: Refit the L.H. front leg, securing it with one bolt (A, Fig. 2), two bolts (B) and one bolt (C). Using the crane, lift the roof assembly back on to the tractor and refit the bolts (two  $\frac{3}{8}$  UNF x 2 in bolts for each rear strut and  $3\frac{1}{2}$  x  $\frac{1}{2}$  UNF to the roof).
- 2B. If no crane is available, refit the two rear struts using two  $\frac{3}{8}$  UNF x 2 in bolts for each, then refit the two front struts, securing them with one  $1\frac{1}{2}$  in bolt, two  $1\frac{3}{4}$  in bolts and one  $2\frac{1}{2}$  in bolt for each. Refit the roof member and refit the two  $\frac{1}{2}$  UNF x  $3\frac{1}{2}$  in bolts to each corner from the INSIDE, facing OUTWARDS. Refit the flat washers, spring washers and nuts.
3. Refit the cladding, as stated in either operation 2C-04-06 or 2C-06-09 for flexible or rigid cladding respectively.

## FLEXIBLE CLADDING KIT

## Fitment

2C-03-05

1. Assemble the safety frame as stated in operation 2C-01-02.
2. Place the windscreen on the front of the safety frame. Locate the channel on the screen top edge over the lip on the roof frame front edge.

**NOTE - TO OVERCOME TIGHTNESS BETWEEN THE SAFETY FRAME AND THE HINGE BRACKETS, RAISE THE WINDSCREEN APPROXIMATELY 150 MM (6 IN) THEN LOWER IT INTO THE CORRECT POSITION.**

3. Loosely assemble the four windscreen attachment bolts using two 'U' bolts at the top and two 'L' bolts at the bottom.

4. Attach the top edge of each lower screen behind the bottom edge of the windscreen using the bottom edge of the windscreen using two bolts, plain washers and locknuts each side.

**NOTE - FLAT WASHERS SHOULD BE PLACED UNDER THE BOLTS HEADS AND UNDER THE LOCKNUTS.**

5. Loosely assemble the 'S' brackets to the lower panels, using a bolt, plain washers and locknut each side.
6. Fully tighten the front screen bolts, starting at the top and working downwards. Before tightening the bolts securing the lower front screen, hold each lower screen firmly against the safety frame strut. Do not tighten the two inner bolts.
7. Remove the bottom bolts, securing the sump to the clutch housing on each side, and fit the heat duct retaining tabs, securing them with the bolts.
8. Place the inverted 'U' frame of the engine shroud over the bonnet, just forward of the steering wheel, but behind the windscreen, locating the end of the 'U' frame on the pegs attached to the lower screens. Draw the side covers through the gaps between the engine and the front screens.
9. Engage the heat duct retaining hooks on the lips under the bonnet, adjacent to the battery compartment and at the tabs on the sump. Adjust the strap at the sump until the duct is a tight fit around the bonnet.
10. Fasten the side covers at the front end of the tractor with the rubber straps. Place the two wire hooks through the drain slots in the footplates and fasten the clips around the tie rods.
11. Fit the two 'Z' clips to the inner bolts securing the lower screen to the windscreen to secure the top edge of the heat shield.
12. Place the heat shield exhaust frame in the side duct (if necessary).
13. Remove the protective sleeve from the wiper motor shaft. Position the wiper mechanism in place (R.H. top corner of the windscreen) taking care not to dislodge the rubber grommet with the wiper motor shaft, and secure the wiper mechanism with three screws, plain washers and locking nuts.
14. Connect the wiring to the starter motor solenoid and clip the wire to the R.H. safety frame leg with the strap provided.
15. Fit the windscreen wiper blade and arm. Pull back the arm until the  $\frac{1}{8}$  in A/F Allen screw can be tightened. Before fully tightening the screw, adjust the sweep of the arm.
16. Insert a plastic plug into each top outer corner of the safety frame.
17. Slacken off the adjusters on the roof canopy and position the roof canopy on top of the safety frame.
18. Secure the rear corners of the roof canopy to the safety frame rear struts using a 'U' bolt, plate, plain washers and locking nut each side. Do not fully tighten the bolts at this stage.
19. Secure the front corners using the over-centre catches. Make sure by use of the adjusters that the gap between the safety frame and the roof frame is the same both sides.

## SAFETY FRAME AND CABS

20. Fit the top half of each door.
21. Position the centre post on top of the fender, approximately 102 mm (4 in) inwards from a line taken from the inside edge of the side light. Whilst ensuring that the rear edge of the door and the door catch locate correctly on the centre post, drill the fender through the hole in the centre post. Remove the burrs and retouch the paintwork.
22. Secure the centre post to the fender with a bolt, flat washer and locknut.
23. Repeat operations 20 and 21 for the other side.
24. Position the front edge of a side screen in place at the centre post by locating the rod in the side screen, first at the top and then at the bottom of the centre post.
25. Make sure the stay in the rear of the side screen is located in the side screen correctly, then secure the stay to the plate at the top of the safety frame leg, with a bolt, plain washers and locknut.
26. With the stay vertical (approx. 38 mm (1½ in) from the reflector) drill the fender through the bottom hole in the stay, secure the stay with a bolt, flat washer and locknut.
27. Drill a hole in the front end of the fender to take the side screen front retaining hook, and locate the hook.
28. Locate the side screen rear retaining hook in the upper hole in the stay, taking care that both the side screen bottom sealing edges face outwards.
29. Fully tighten the 'U' bolt on the rear leg of the safety frame.
30. Secure the top rear corner of the side screen by engaging the rubber ring with the angled hook suspended from the underside of the roof canopy.
31. Repeat operation 23 to 30 for the other side.
32. If the rear screen is to be fitted, unroll the screen and hook the metal cross-bar on to the vertical hooks suspended from the roof canopy. With the stowing strap on the inside, engage the rubber loop on the bottom corners of the rear screen to the upper hole in the side screen stays.
33. Ensure that the roof edging pelmet hangs freely to cover the roof to side screen joint.
34. Place the fender extension in position on the outside of each fender and secure them to the footplates using a new bolt, plain washer and locknut, and the existing bolt, flatwasher, spring washer and nut each side, then drill the fenders through the holes in the fender extensions and secure the extensions with two bolts, flat washers and locknuts each side.
35. Fit the bottom half of each door; engage the hinge pin in the hinge bracket, push the door upwards and forwards to locate the frame into the inverted 'U' bracket, and locate the front pin through the hole in the door top half. Insert a hairpin through the top front pin.
36. Close each door and draw the flaps inside the fender. Pull the rubber loops onto the inner face of the fenders at right angles to the edge of the door flaps.
37. Stretch the loops approximately 20 mm (¾ in) and mark the position on the fenders. Drill a hole and fit a nylon thimble with a bolt, plain washer and locknut each side.
38. Bolt the rear view mirror to the R.H. side of the windscreen.

39. Lubricate the door hinges with oil.
40. If a loader is fitted, the clear plastic in the R.H. front lower screen must be removed and a suitable aperture cut out to enable the loader trip mechanism to be used.
41. Remove the existing footstep from the L.H. footplate, then position the new step. This long leg is attached between the footplate front bracket and the extension plate and is secured by the R.H. top bolt and the L.H. bottom bolt, the short leg is attached to the outside of the footplate with the small right angle plate on the inside.

## FLEXIBLE CLADDING

### Removal and Refitment

2C-04-06

#### Removal

1. Remove the hairpins securing the lower doors to the upper doors, then remove the lower doors.
2. Lift off the upper doors.
3. Release the heat shield retaining straps from the front of the bonnet; the retaining tabs at the sump; the bonnet, adjacent to the battery compartment; the footplates and the tie rods; then remove the two 'Z' clips securing the heat shield to the lower edge of the windscreen, and lift off the heat shield.
4. Remove the rear screen by releasing the two rubber loops at the bottom of the screen and unhooking the screen from the roof canopy.
5. Disengage the sidescreen hooks from the front and rear of the fenders and release the rubber loops from each side screen upper edge.
6. Remove the two bolts, washers and nuts, securing each side screen rod to the fender and to the plate attached to the safety frame strut, then push each side screen up at the front until it becomes free from the retaining rod and then pull down and release it from the top and lift clear of the tractor.
7. Release the over-centre catches securing the front edge of the roof.
8. Remove the two bolts, washers and nuts securing the rear edge of the roof to the plates attached to the safety frame struts.
9. Remove the bolt, washer and nut securing the centre post to each fender and lift the roof assembly clear of the tractor.
10. Disconnect the wiper motor wiring to allow the lower panels and windscreen to be removed.
11. Remove the 'S' brackets securing the two front lower panels to the safety frame, then remove the remaining bolts and washers securing the panels to the windscreen and remove the panels.
12. Remove the wiper arm, then remove the three screws, washers and nuts securing the wiper motor to the windscreen and remove the wiper motor.
13. Remove the nuts and washers securing the 'U' bolts and 'L' bolts at the top and bottom of the windscreen and lift off the windscreen.

#### Refitment

Refitment procedure is similar to that for assembling the kit (operation 2C-03-05) except that certain operations (e.g. operation 21) will already have been completed.

## SAFETY FRAME AND CABS

## RIGID CLADDING KIT

## Fitment

2C-05-07

Special Tools Required: A/F Socket Screwdriver  
 (Hydraulic Adjustment Tool MF 269 is suitable)  
 No 10 UNC Taps  
 No ¼ UNC Taps

## Before Assembly

Check the markings on cladding pack for tractor compatibility. Open the pack and check its contents against the list provided. The list is protected in a polythene bag attached to the inside of the crate. Count and group all hardware to ascertain correct quantities of nuts, bolts, washers, brackets, etc.

Before commencing assembly, use the appropriate tap to clean all threads in welded nuts, and lightly oil all tapped threads.


## Assembly Method:

1. Assemble the safety frame, as stated in operation 2C-01-02.
2. Detach the 'U' shaped footstep from the L.H. footplate. Reaffix forward nut to securing existing footplate. Retain the rear nut, bolt and washer for later use.

## NOTE - LEAVE ALL ASSEMBLED BOLTS SLACK UNTIL BOLT TIGHTENING IS SPECIFIED.

3. Fig. 4. Position the roof rail (1) on the top of the safety frame, ensure that the narrow groove is on the underside and that weld nuts are situated to the front and rear. Assemble four 'Z' retainers (2) to secure the roof rail to the safety frame. Use four ¼ UNC x ⅝ in bolts and nuts, together with plain washers and spring washers. Assemble with nuts at the top and both washers under each nut.
4. Fit sealing strip (19) to the lower centre edge of the windscreen panel using angle bar as shown. This bar incorporates four weld nuts and is used to sandwich the sealing strip to the inside bottom edge of the windscreen panel. Use four No. 10 x ½ in bolts, spring washers and plain washers.
5. Position the windscreen assembly (3) against the safety frame front members and attach it to the roof rail (1) using three ¼ UNC x ⅝ in bolts screwed into weld nuts. Use a spring and a plain washer under each bolt head.
6. Before fitting lower front panels, disconnect the throttle control rod from the throttle pedal. Position the lower front panels (5). On the R.H. panel, feed the throttle control rod through the hole in the skirt, then reconnect the throttle control rod. Attach the top edge of lower front panels (5) to the bottom edge of windscreen assembly (3) using eight (4 per side) No. 10 UNC x ½ in bolts, spring washers and plain washers. First assemble the outer bolt on each lower panel, then assemble the remaining bolts with heads and washers on the inside. Unless a loader is to be fitted, fit blanking plate (22) using two of the above No. 10 bolts. Fit skirts (21) to existing bolts as shown, omit washers, and fit retaining bracket (23) to secure firmly against panel form.
7. Attach the windscreen assembly to the safety frame front members using 4 retainers (7) and two No. 10 UNC x ½ in bolts, spring washers and plain washers per retainer.
8. Attach both lower front panels to the safety frame using the retainers shown, and two No. 10 UNC x ½ in bolts, spring washers and plain washers per retainer. The upper retainer (6) is designed to secure the inner end of the door check strap.
9. Secure the rear view mirror arm (8) to the top outer corner of the lower front panel 'RH'. Use two ¼ in UNF x ½ in bolts, spring washers and plain washers.
10. The top inner corner of each side panel sealing skirt is to be laced to the cross bar securing the central sealing strip.
11. Fit rear curtain (15) to roof rail (1). Use three ¼ in UNC x ⅝ in bolts and plain washers. (Turn buttons to face rearwards).
12. Attach side panel assemblies (12) by pushing the top edge of each panel fully into the groove in the underside of the roof rail. Locate the rear curtain (15) and the bottom rear corner of the side panel against the safety frame rear member. Insert and secure the three turn buttons in each side of the rear curtain. Ensure that the 'side-panel-to-fender' sealing rubber remains in its true location. Secure the rear of each panel with a retainer (13) and two No. 10 UNC x ½ in bolts, spring washers and plain washers. The top front of each panel must be secured to the safety frame roof member using a slotted bracket (14) and two ¼ in UNC x ⅝ in bolts, spring washers and plain washers.
13. Assemble clamp brackets to slotted holes in fender extensions (9) using three ¼ in UNC x ⅝ in bolts, spring washers and plain washers per assembly. Slacken the front bolt attaching the fender to the fender support bracket (10). When attaching the extension (9) slide the bottom rear edge between the fender and the support bracket. Position the clamps over the fender rim. Insert a ¼ UNC x 2½ in bolt, nut, spring washer and plain washer to secure the bottom front corner of the side panels to the attachment block on the fender extensions.
14. Attach each footstep extension (11) to the appropriate fender extension (9) and to the lower front panel (5). Use four ¼ in UNC x ⅝ in bolts, plain washers and spring washers. Insert two bolts through panel (5). Ensure that bolts securing the fender extension (9) to the fender front edge are slack, push the extension (9) forward until the lower edge locates against the rear edge of footplate extension (11). Insert two bolts through extension (9) in the rear edge of footplate (11). Secure the front inner corner of each footplate extension to the safety frame using the brackets (24 and 26) as illustrated. Use two ¼ in bolts, plain washers and spring washers. Refit the 'U' shaped footstep (25) to the outer edge of footplate extension (11). Use existing bolt from original rear attachment. Attach forward end using a new ⅝ in UNC bolt screwed into weld nut.

**SAFETY FRAME AND CABS**

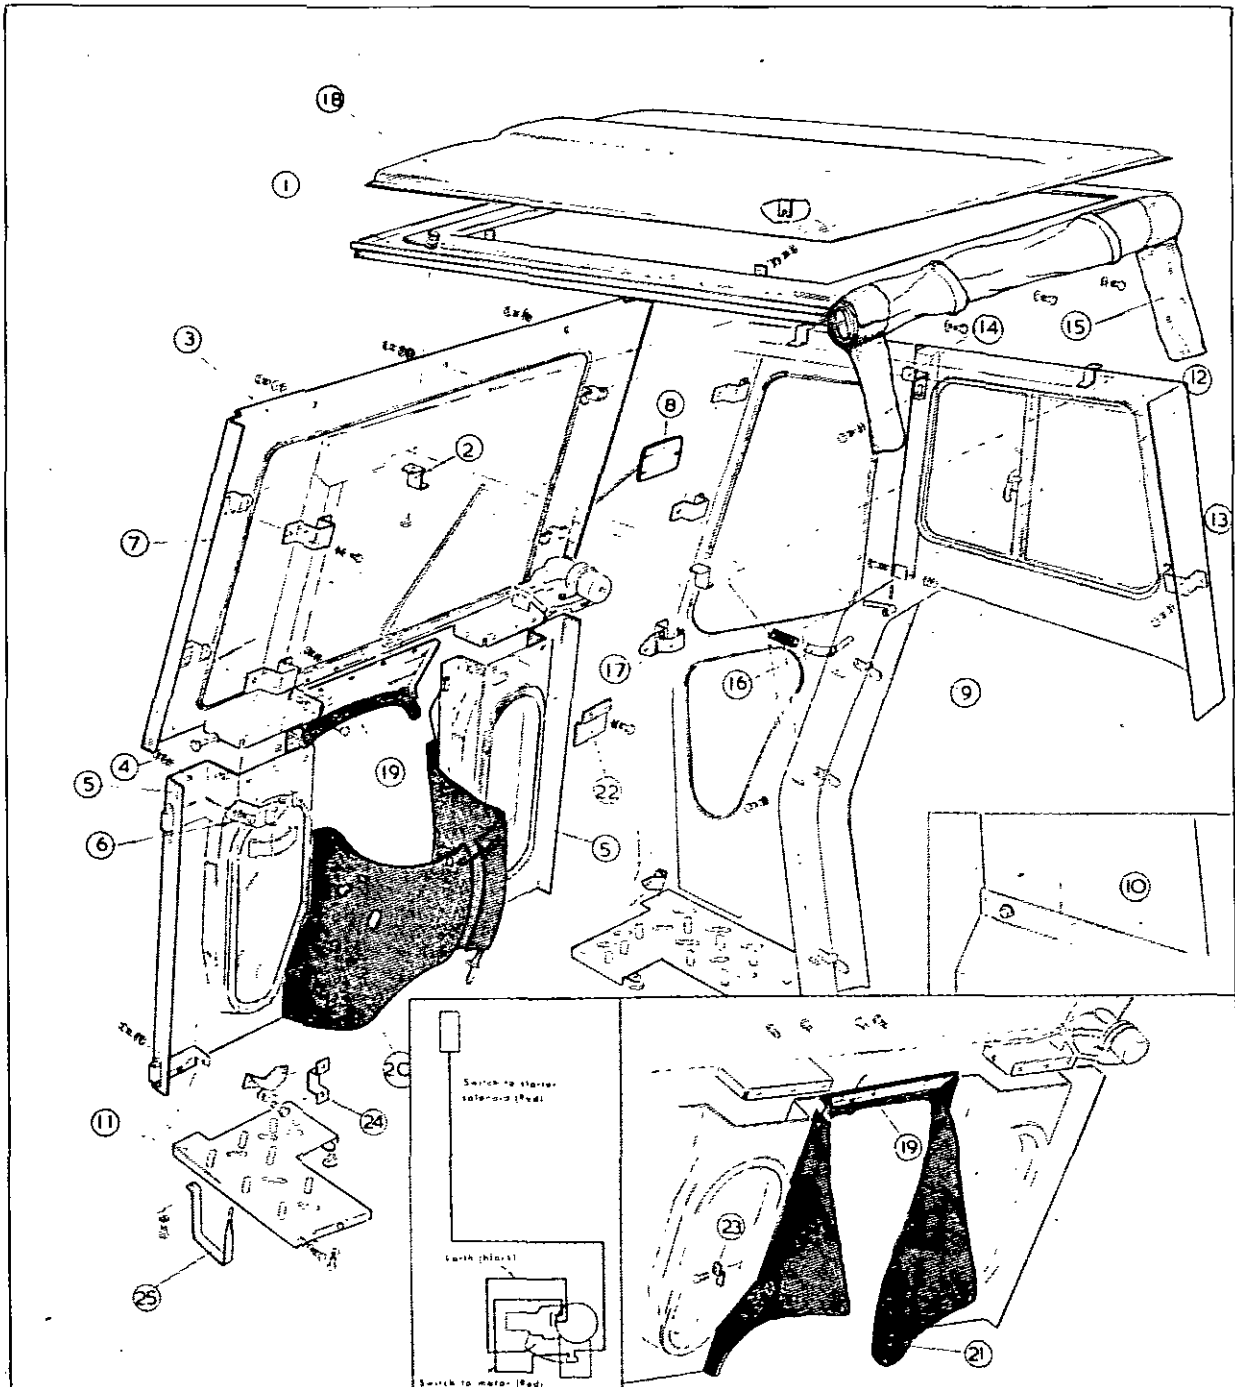

**FIG. 4**

## SAFETY FRAME AND CABS

15. Connect wiper motor wiring (see inset). Tighten the nuts securing the plate behind the wiper pivot. Use one spring clip to secure the supply wire to the lower front panel as shown, cross the wire under the hood behind the engine, and use the remaining two clips to route the wire along the underlip of the hood to the starter motor. Ensure that there is a metal-to-metal contact at the earth eyelet attachment on the wiper motor mounting. Check operation of wiper mechanism and inclusion of correct fuse (35A). Fit and adjust wiper arm and blade.
16. Lubricate the hinge pins on both doors, ensure that the female portion of the hinge is fully tightened, and hang the doors. Slide a black plastic cover on to each inner door handle (16) and fit each handle into the release mechanism. Assemble a fibre washer on to the outer end of the stem and fit the outer door handles using a roll pin in each handle. Gently close the doors to ascertain what adjustment is necessary for a satisfactory fit. Use available manoeuvrability of fender extensions and door hinge brackets to obtain a secure engagement of door catch and adequate sealing around the door. The outer angle of the door sealing rubber, at the front, should seal against the rearward facing sharp edge of the front panel. If there are any gaps under the door seal after all adjustments have been made, set the door by hand to eliminate the gaps. Fit check strap (17) using pins provided.  
If difficulty is still experienced with door fitting, the following procedure should be adopted: Remove the floor extension plate. Slacken off all of the fender and safety frame mounting bolts, then attach a piece of rope to the fender handgrip. Pass the rope round the front leg of the safety frame, diagonally opposite the fender being worked on. Pull the cord tight to "toe-in" the fender, then fully tighten all of the fender and safety frame bolts, using the specified torques, where necessary. Remove the rope and check the door for fit. Refit the floor extension plate.
17. Tighten all remaining bolts, re-check bolts previously tightened and ensure that cab doors close satisfactorily.
18. Fit roof panel (18) and secure it with four  $\frac{1}{4}$  in UNC x  $\frac{3}{8}$  in bolts, plain washers and spring washers.
19. Clean the cab windows; touch up paintwork where necessary; check zips on rear curtain and remove protective tissue from transparent portion.
20. Check that throttle control is free of restrictions. If the sealing skirt rubs the control rod, enlarge the hole in the skirt with a knife or coarse file.

## RIGID CLADDING

## Removal and Refitment

2C-06-09

Special Tools Required: A/F Socket Screwdriver  
Hydraulic Adjustment Tool  
MF 269 is suitable.

## Removal

1. Slacken the four roof bracket securing bolts, then lift off the roof.
2. Remove the rear curtain.
3. Remove the screws securing each side panel to the safety frame and fender extension, then lift off the side panels.
4. Release the door check straps then lift off the doors.
5. Remove the bolts securing the skirt to the tractor hood.
6. Release the throttle rod.
7. Remove the bolts securing the lower front panels and lift off the panels, sliding the throttle rod out of the hole in the skirt.
8. Remove the windscreen assembly by releasing the clamps and the wiper wire, then removing the bolts securing the windscreen to the roof rail.
9. Remove the four Z clamps securing the roof rail and lift off the roof rail.
10. Reconnect the throttle rod.  
The floor extension plates and the fender extensions need not normally be removed.

## Refitment

Refitment procedure is generally similar to that for kit fitment except that items such as sealing strip or skirt attachment will be unnecessary.

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 3**

**Publication No. 1856 001 M1**

comprising

- A ENGINE REMOVAL
- B ENGINE COOLING
- C ENGINE FUEL SYSTEM

## ENGINE REMOVAL

## Part 3 Section A

| Operation No. | Table of Contents   | Page No. |
|---------------|---|----------|
|               | GENERAL   | 01       |
| 3A-01-02      | Splitting the Tractor between engine and Transmission                 | 02       |
| 3A-02-02      | FRONT AXLE ASSEMBLY<br>Removal and Refitment                          | 02       |
| 3A-03-03      | ENGINE UNIT<br>Removal and Refitment                                  | 03       |
| 3A-04-03      | STEERING BOX UNIT<br>Removal and Refitment                            | 03       |
|               | Splitting the Tractor between the Transmission and the Centre Housing | 03       |

**GENERAL**

This section gives details on procedure for splitting the tractor into five major assemblies and will be referred to whenever major splitting operations are required.



**ENGINE REMOVAL****SPLITTING THE TRACTOR BETWEEN THE ENGINE AND TRANSMISSION**

3A-01-02

Special tools required:— 270 Rail trolley.  
MF 27G Support Stand.

**Disassembly**

1. Remove the hood and grille as a complete assembly as stated in Part 2B.
2. Place wedges between the front axle beam and engine support casting.
3. Remove the drag link from the steering drop arm.
4. Position the tractor dismantling stand No. 270 under the tractor and support the transmission housing on a rail trolley and the engine on a fixed stand.
5. Release the fuel tank rear mounting strap.
6. Disconnect the battery leads.
7. Disconnect the wiring from the starter motor, dynamo thermostart, fuel gauge sender unit, light switch (if fitted) and horn switch (if fitted).
8. Disconnect the Multi-Power oil cooler pipes (if fitted) at the transmission housing and remove the retaining clamp.
9. Disconnect the temperature gauge bulb, the oil pressure gauge pipe and the tractormeter drive cable.
10. Disconnect the fuel cut-off control rod from the injector pump and the throttle control rod at the injector pump and at the cross shaft.
11. Disconnect the following pipes:—  
Primary to secondary fuel filter, at the primary fuel filter.  
Thermostart to fuel reserve tank, at the thermostart.  
Injector leak off pipe to fuel reserve tank, at the injector leak off pipe.  
Injector leak off pipe to secondary fuel filter, at the injector leak off pipe.  
Both pipes from the secondary fuel filter to injector pump, at the injector pump.
12. If the tractor is fitted with a horizontal exhaust system; remove the bolt, nut, washer and clip securing the silencer to the exhaust down-pipe, then release the down-pipe from the silencer.
13. Remove the two bolts and spring washer securing the steering box to the engine.
14. Remove the bolts securing the engine to the transmission.
15. Roll the rear half of the tractor on the trolley, clear of the engine.
16. Fit the support stand MF 27G on the front of the transmission housing and secure it with two bolts each side.

**Reassembly**

1. Support the transmission on a rail trolley No. 270 and remove the support stand MF 27G from the front of the transmission housing.
2. Align the transmission with the engine, the use of a slave bolt in each side of the transmission will facilitate alignment.
3. Push the rear half of the tractor towards the engine, simultaneously rotating the flywheel to engage the transmission input shaft spline with the splines of the clutch friction disc. To engage the p.i.o. input shaft splines with the splines of the clutch friction disc, remove the  $\frac{1}{16}$  A/F Alan plug from the left-hand side of the clutch housing, and using a suitable lever, rotate the

flywheel.

4. Bolt the engine to the transmission. Tighten the nuts and bolts to a torque of 7.5 kg-m (55 lbs-ft).
5. Refit the two bolts and washers securing the steering box to the engine.
6. If the tractor is fitted with a horizontal exhaust system, re-fit the down-pipe into the silencer, and secure the silencer with the clip, bolt, nut and washer.
7. Re-connect the fuel pipes.
8. Re-connect the throttle rod and fuel cut-off rod.
9. Re-connect the temperature gauge bulb, oil pressure gauge pipe and the tractormeter drive cable.
10. Connect the wiring to the starter motor, dynamo, thermostart, fuel gauge sender unit, light switch (if fitted) and the horn switch (if fitted).
11. Re-connect the Multi-Power oil cooler pipes (if fitted) at the transmission housing and refit the retaining clamp.
12. Refit the fuel tank rear securing strap and bleed the fuel system.
13. Refit the drag link to the steering drop arm.
14. Remove the wedges from the front axle beam and remove the tractor stand from beneath the tractor.
15. Re-connect the battery leads.
16. Refit the bonnet and grille unit as stated in Part 2B.

**FRONT AXLE ASSEMBLY****Removal and Refitment**

3A-02-02

**Removal**

1. Remove the hood and grille assembly as stated in Part 2B.
2. Drain the water from the engine and the radiator.
3. Release the top and bottom radiator hoses and the air cleaner hose from the engine.
4. Disconnect the pipes from the power steering pump (if fitted).
5. Release the drag link from the steering box drop arm.
6. Disconnect the hoses from the Multi Power oil cooler (if fitted).
7. Jack up under the transmission housing.
8. Remove the nuts and bolts securing the engine support to the engine and manoeuvre the front axle assembly complete with drag link, power steering (if fitted), oil cooler (if fitted) and radiator clear of the tractor.

**Refitment**

1. Manoeuvre the front axle assembly in line with the engine support and secure it with the nuts and bolts.
2. Reconnect the Multi-Power oil cooler hoses (if fitted).
3. Reconnect the drag link to the steering box drop arm.
4. Refit the top and bottom radiator hoses and the air cleaner hose to the engine.
5. Refill the radiator and the engine with water.
6. Reconnect the power steering pump pipes (if fitted) and top up the reservoir to the correct level.
7. Refit the hood and grille assembly as stated in Part 2B.

**ENGINE REMOVAL****ENGINE UNIT****Removal and Refitment** 3A-03-03

Special tools required:— 270 Rail trolley.  
MF 27G Support stand

**Removal**

1. Remove the exhaust pipe.
2. Split the tractor between the engine and transmission as stated in Part 3A-01-02.
3. Disconnect the fuel pipe from the fuel tank tap.
4. Release the fuel tank front securing strap and lift the fuel tank clear.
5. Remove the front axle assembly as stated in operation 3A-02-02.

**Refitment**

1. Refit the front axle assembly as stated in operation 3A-02-02.
2. Place the fuel tank into position and secure with the front strap.
3. Reconnect the fuel pipe to the fuel tank tap.
4. Reassemble the rear half of the tractor to the engine as stated in operation 3A-01-02.
5. Refit the exhaust pipe.

**STEERING BOX UNIT****Removal and Refitment** 3A-04-03**Removal**

1. Remove the hood and grille assembly as stated in Part 2B.
2. Disconnect the battery leads, detach the battery retainer and lift the battery clear.
3. Disconnect the wiring from the starter motor, dynamo, thermostart, fuel gauge sender unit, safety start switch, light switch (if fitted) and the horn switch (if fitted).
4. Remove the horn (if fitted). Feed the main wiring harness back through the bulkhead.
5. Turn the fuel tap off and disconnect the fuel pipe at the fuel tap.
6. Release the fuel tank front and rear securing straps and lift tank clear.
7. Disconnect the oil pressure gauge pipe at the engine and gauge and remove it.
8. Remove the temperature gauge bulb from the thermostat housing and release the tube back to the bulkhead.
9. Remove the split pin securing the fuel cut-off control rod to the injector pump, remove the fuel cut-off knob and withdraw the rod forward from the instrument panel.
10. Disconnect the left-hand throttle control rod at the crosshaft by releasing the clip.
11. Remove the split pin securing the foot throttle rod to the quadrant and release the rod.
12. Release the drag link from the steering drop arm.
13. Remove the Multi-Power oil cooler pipes retaining clamp (if fitted).
14. Disconnect the following fuel pipes:
  - Primary to secondary fuel filter at the secondary fuel filter.
  - Injector leak off pipe to secondary fuel filter, at the secondary fuel filter.
  - Both pipes from the secondary fuel filter to the injector pump, at the secondary fuel filter.

15. Release the L.H. and R.H. foot plates by removing three bolts and spring washers each side.
16. Remove two bolts and spring washers securing the front of the steering box to the engine.
17. Remove four bolts and spring washers securing the rear of the steering box to the transmission housing.
18. Remove four bolts and spring washers securing the battery platform to the transmission housing.
19. Lift the steering box unit clear of the tractor and place on a suitable surface taking care not to damage the filter or the gear selector levers.

**Refitment**

1. Ensuring that all the gears and levers are in the neutral position, place the steering box unit into the transmission housing and secure it with eight bolts and spring washers.
2. Secure the front of the steering box to the engine with two bolts and spring washers.
3. Refit the L.H. and R.H. footplates and secure with three bolts and spring washers each side.
4. Reconnect the fuel pipes.
5. Refit the Multi-Power oil cooler pipes retaining clamp (if fitted).
6. Reconnect the drag link to the steering box drop arm.
7. Reconnect the throttle control rods.
8. Refit the fuel cut off rod and knob.
9. Reconnect the temperature gauge bulb and the oil pressure pipe.
10. Place the fuel tank into position and secure with the two straps.
11. Reconnect the fuel pipe to the fuel tank tap.
12. Refit the horn (if fitted).
13. Feed the main wiring harness through the bulkhead and connect the wiring to the starter motor, dynamo, thermostart, fuel gauge, sender unit, safety start switch, light switch (if fitted) and the horn switch (if fitted).
14. Refit the battery and secure it with the battery retainer. Reconnect the battery leads.
15. Turn the fuel tap on and bleed the fuel system.
16. Refit the hood and grille assembly as stated in Part 2B.

**SPLITTING THE TRACTOR BETWEEN THE TRANSMISSION AND CENTRE HOUSING**

3A-05-03

Special tools required:— 270 Rail trolley.  
MF 27T Support stand.

**Disassembly**

1. Drain the oil from the transmission and centre housing.
2. Release the footbrake operating rods from the brake cross shaft levers.
3. Release the clutch operating rod from the clutch release shaft arm.
4. Remove two bolts, nuts and washers each side securing the footplates to their front mounting brackets.
5. Disconnect the wire from the light switch to the rear lights, at the switch. Release the wire from the clips underneath the right hand foot step mounting bracket.

**ENGINE REMOVAL**

6. If the tractor is fitted with a horizontal exhaust system, remove the bolt, nut, washer and clip securing the silencer to the exhaust down-pipe, then release the down-pipe from the silencer.
7. Place wedges between the front axle beam and engine support casting.
8. Position the tractor dismantling stand No. 270 under the tractor and support the transmission housing and centre housing on trolleys.
9. Remove the hydraulic lift cover as stated in Part 7A. Disconnect the hose to the Multi-Power spool valve at the auxiliary pump. (Multi-Power tractors only).
10. Remove the bolts securing the transmission housing to the centre housing.
11. Push the rear part of the tractor out of engagement with the transmission.
12. Fit support stand MF 27T to the rear of the transmission housing and secure with one bolt each side.

**Reassembly**

1. Support the transmission on a rail trolley and remove the support stand MF 27T from the rear of the transmission housing.
2. Fit the rear drive shaft to the gearbox, then fit the shear tube to the rear drive shaft.
3. Remove the p.t.o. shift lever and cover from the centre housing (8 speed transmission tractors only).
4. Push the rear half of the tractor into engagement with the transmission, simultaneously aligning the shear tube splines onto the rear axle pinion splines and the hydraulic pump drive gear splines onto the gearbox front p.t.o. drive shaft. Alignment of the shear tube can be effected through the p.t.o. lever aperture in the centre housing (8 speed transmission tractors only). Alignment of the hydraulic pump drive is facilitated by rotating the flywheel. This is effected by removal of the A/F Allen plug in the L.H. side of the clutch housing and using a suitable lever.
5. End float between the rear drive shaft and the main shaft must be governed to 0.4 mm to 2.5 mm (0.015 in to 0.100 in), by fitting the split pin to the appropriate hole in the shear tube.
6. Bolt the transmission to the centre housing.
7. Replace the p.t.o. lever and cover (8 speed transmission only).
8. Re-connect the Multi-Power spool valve hose to the auxiliary pump and refit the hydraulic lift cover as stated in Part 7A. (Multi-Power transmission tractors only).
9. Remove the wedges from the front axle beam and remove the tractor stand from beneath the tractor.
10. If the tractor is fitted with a horizontal exhaust system, refit the exhaust down-pipe into the silencer and secure with clip, bolt, nut and washer.
11. Re-connect the wiring from the rear lights to the light switch.
12. Secure the footplates.
13. Re-connect the clutch operating rod.
14. Reconnect the footbrake operation rods.
15. Refill the transmission with recommended oil.

## COOLING SYSTEM

## Part 3 Section B

| Operation No.        | Table of Contents  | Page No. |
|----------------------|--|----------|
|                      | GENERAL  | 01       |
| 3B-01-02             | RADIATOR<br>Removal and Refitment                        | 02       |
| 3B-02-02<br>3B-03-02 | WATER PUMP<br>Removal and Refitment<br>Servicing         | 02       |
| 3B-04-02<br>3B-05-02 | THERMOSTAT<br>Removal and Refitment<br>Testing Procedure | 02       |
|                      | FROST PRECAUTION   | 02       |
|                      | FAULT DIAGNOSIS  | 02       |

**GENERAL**

The coolant is circulated by thermo-syphon action and a centrifugal type pump driven by a belt from the crankshaft. The system incorporates a thermostat, which prevents the coolant flowing to the radiator unit the working temperature is reached. Cooling is aided by the action of the fan drawing air through the radiator and the fan shroud.

The only maintenance required on the cooling system is to ensure that there is no obstruction to the flow of air to the radiator, and that the fan belt is kept to the correct tension.

This section of the Workshop Manual gives only partial details of the cooling system components. For more comprehensive details, particularly related to servicing, see the Perkins Workshop Manual.

**COOLING SYSTEM****RADIATOR****Removal and Refitment** 3B-01-02**Removal**

1. Remove the radiator cap and drain the coolant from the radiator and engine.
2. Remove the hood and grille assembly as stated in Part 2B.
3. Remove the air cleaner hose.
4. Remove the top and bottom radiator hoses.
5. Remove the top screen from the radiator support frame.
6. Remove the eight screws securing the fan shroud to the radiator.
7. Remove the six bolts and washers securing the radiator to the support frame.
8. Lift the radiator clear of the tractor.

**Refitment**

1. Locate the radiator into the support frame and secure it with the six bolts and washers.
2. Secure the shroud to the radiator with the eight screws.
3. Refit the top screen and secure it to the support frame.
4. Refit the top and bottom radiator hoses and the air cleaner hose.
5. Refit the hood and grille assembly as stated in Part 2B.
6. Shut the engine and radiator drain taps and refill the radiator and engine with coolant.
7. Refit the radiator filler cap.

**WATER PUMP****Removal and Refitment** 3B-02-02**Removal**

1. Remove the radiator as stated in Operation 3B-01-02.
2. Remove the water pump as stated in the Perkins Workshop Manual.

**Refitment**

1. Refit the water pump as stated in the Perkins Workshop Manual.
2. Refit the radiator as stated in operation 3B-01-02

**WATER PUMP****Servicing** 3B-03-02

1. Remove the water pump as stated in operation 3B-02-02.
2. For servicing details see the Perkins Workshop Manual.
3. Refit the water pump as stated in operation 3B-02-02.

**THERMOSTAT****Removal and Refitment** 3B-04-02**Removal**

1. Remove the hood and grille assembly as stated in Part 2B.
2. Remove the thermostat as stated in the Perkins Workshop Manual.

**Refitment**

1. Refit the thermostat as stated in the Perkins Workshop Manual.
2. Refit the hood and grille assembly as stated in Part 2B.

**THERMOSTAT****Testing Procedure** 3B-05-02

1. Remove the thermostat as stated in operation 3B-04-02.
2. Test the thermostat as stated in the Perkins Workshop Manual.
3. Refit or Replace the thermostat as necessary, as stated in operation 3B-04-02.

**FROST PRECAUTIONS**

For obvious reasons precautions must be taken against the ravages of frost. There are three methods whereby protection may be afforded. These are listed below.

**Draining the Cooling System after each day's work**

This method offers economy, but can be inconvenient and leaves the cooling system unprotected during idle periods. In extremely unfavourable conditions the cooling system can freeze while the engine is running.

Under conditions where hard water conditions exist, silt formation and impeller erosion will be accelerated by the frequent draining and refilling of the cooling system.

Under these conditions the saving is debatable.

**The use of Heated Premises, Engine or sump Heaters**

Possesses disadvantages similar to the above method, i.e. during the working day no protection is afforded if the tractor is standing idle.

**The use of Anti-Freeze**

Probably the most universally accepted method of frost protection. Anti-freeze solutions, by their very nature, are capable of power of penetration not possessed by water. A cooling system which is normally sound may well exude leaks and drips when anti-freeze is employed. Even if no leaks are apparent in the initial filling, they may subsequently develop within a very short time. It is precisely for this reason that all cooling system hoses, joints, etc., must be in sound condition if expensive loss is to be avoided. A leaky cooling system and frequent topping up will reduce the protection afforded to dangerous limits.

**NOTE** – ONLY THE ANTI-FREEZE SOLUTIONS LISTED IN THE SPECIFICATION SECTION MEET MASSEY-FERGUSON TEST SPECIFICATIONS. THE USE OF INFERIOR GRADES OF ANTI-FREEZE (INCLUDING SOME SOLUTIONS CONFORMING TO B.S. 3151) CAN CAUSE SEVERE DAMAGE TO THE COOLING SYSTEM.

**COOLING SYSTEM**

Recommended Anti-freeze solutions are given in the Specification section.

The cooling system must be drained and flushed when the risk of frost has passed.

**FAULT DIAGNOSIS**

The diagnosis of faults contributing to overheating of the engine must be undertaken carefully, and all external causes thoroughly investigated. An apparent cooling system defect may, for example, be cured by adjusting the injection setting, or by tightening the fan belt. It is not intended to cover in this section the engine defects which may contribute towards overheating. The faults listed below are cooling system faults which, of course, can be accentuated by engine deficiencies, conditions, and the handling of the tractor.

| Symptom              | Possible Causes  | Remedy  |
|----------------------|--|---|
| Coolant Boils        | Insufficient water in radiator                                       | Top up radiator   |
|                      | Leaking radiator filler cap  | Rectify   |
|                      | Leaking hoses or joints  | Rectify   |
|                      | Leaking water pump seal  | Rectify   |
|                      | Weak or broken spring<br>Defective valve seat in radiator filler cap | Renew filler cap  |
|                      | Fan blades incorrectly fitted  | Rectify   |
|                      | Slack or worn fan belt   | Adjust or renew belt  |
|                      | Incorrect gear selection<br>(Engine slogging or racing)              | Select correct gear to suit operation requirements                        |
|                      | Faulty thermostat (remaining closed or not opening sufficiently)     | Renew thermostat  |
|                      | Perished cooling system hoses  | Renew hoses   |
| Engine runs too cool | Choked radiator core or restricted water passages                    | Flush out cooling (reversed flushing advised) or fit replacement radiator |
|                      | Damaged or corroded water pump impeller                              | Fit new impeller  |
|                      | Radiator choked with mud or chaff                                    | Clean radiator and grille   |
|                      | Faulty thermostat (remaining open or not closing sufficiently)       | Renew thermostat  |
|                      | Operating conditions<br>(cold head winds, etc.)                      | Blank off portion of the radiator   |

## FUEL SYSTEM &amp; AIR CLEANERS

## Part 3 Section C

| Operation<br>No. | Table of contents              | Page<br>No. |
|------------------|--------------------------------|-------------|
|                  | GENERAL                        | 01          |
|                  | DRY ELEMENT AIR CLEANER        | 05          |
| 3C-01-05         | Servicing                      |             |
| 3C-02-05         | Removal and Refitment          |             |
|                  | FUEL TANK                      | 05          |
| 3C-03-05         | Removal and Refitment          |             |
|                  | FUEL GAUGE SENDER UNIT         | 05          |
| 3C-04-06         | Removal and Replacement        |             |
|                  | START AID TANK                 | 06          |
|                  | THERMOSTART                    | 06          |
|                  | FUEL LIFT PUMP                 | 06          |
|                  | FUEL INJECTORS                 | 06          |
|                  | FUEL INJECTION PUMP            | 06          |
|                  | FUEL FILTERS                   | 06          |
|                  | PRIMARY FUEL FILTER ELEMENT    | 06          |
| 3C-05-06         | Replacement                    |             |
|                  | PRIMARY FUEL FILTER ASSEMBLY   | 09          |
| 3C-06-09         | Removal and Refitment          |             |
|                  | SECONDARY FUEL FILTER          | 09          |
|                  | SECONDARY FUEL FILTER ELEMENT  | 09          |
| 3C-07-09         | Replacement                    |             |
|                  | SECONDARY FUEL FILTER ASSEMBLY | 09          |
| 3C-08-09         | Removal and Refitment          |             |
|                  | FUEL CONTROL LINKAGE           | 09          |
|                  | FUEL CUT-OFF CONTROL           | 09          |
| 3C-09-09         | Removal and Refitment          |             |
|                  | HAND THROTTLE LINKAGE          | 09          |
| 3C-10-09         | Removal and Refitment          |             |
|                  | FOOT THROTTLE LINKAGE          | 10          |
| 3C-11-10         | Removal and Refitment          |             |
|                  | THROTTLE LINKAGE               | 10          |
| 3C-12-10         | Adjustments                    |             |

**GENERAL**

The components and layout of the fuel and air systems are shown in Fig. 1. Cleanliness must always be observed when servicing any components of the fuel system. Suitable caps or masking tape should be available for blanking off open fuel connections as soon as a union has been removed. Do not use cotton waste or fluffy rags to clean out any part of the fuel system. When working with Diesel equipment,

mechanics should always protect their hands with a protective cream. Servicing of fuel and air system components should be limited to the recommendations given in the following pages.

This section of the Workshop Manual gives only partial details of the fuel systems components. For more comprehensive details of the fuel system components, particularly related to servicing, see the Perkins Workshop Manual.

**FUEL SYSTEM & AIR CLEANERS**

**KEY TO FIG. 1**

- |                            |                           |
|----------------------------|---------------------------|
| 1. Fuel Cut Off Control    | 8. Unloader Valve         |
| 2. Fuel Tap                | 9. Start-Aid Tank         |
| 3. Fuel Tank               | 10. Injection Pump        |
| 4. Fuel Gauge Sender Unit  | 11. Thermostart           |
| 5. Injectors               | 12. Secondary Fuel Filter |
| 6. Dry Element Air Cleaner | 13. Fuel Lift Pump        |
|                            | 14. Primary Fuel Filter   |
|                            | 15. Foot Throttle         |
|                            | 16. Hand Throttle         |



FUEL SYSTEM & AIR CLEANERS

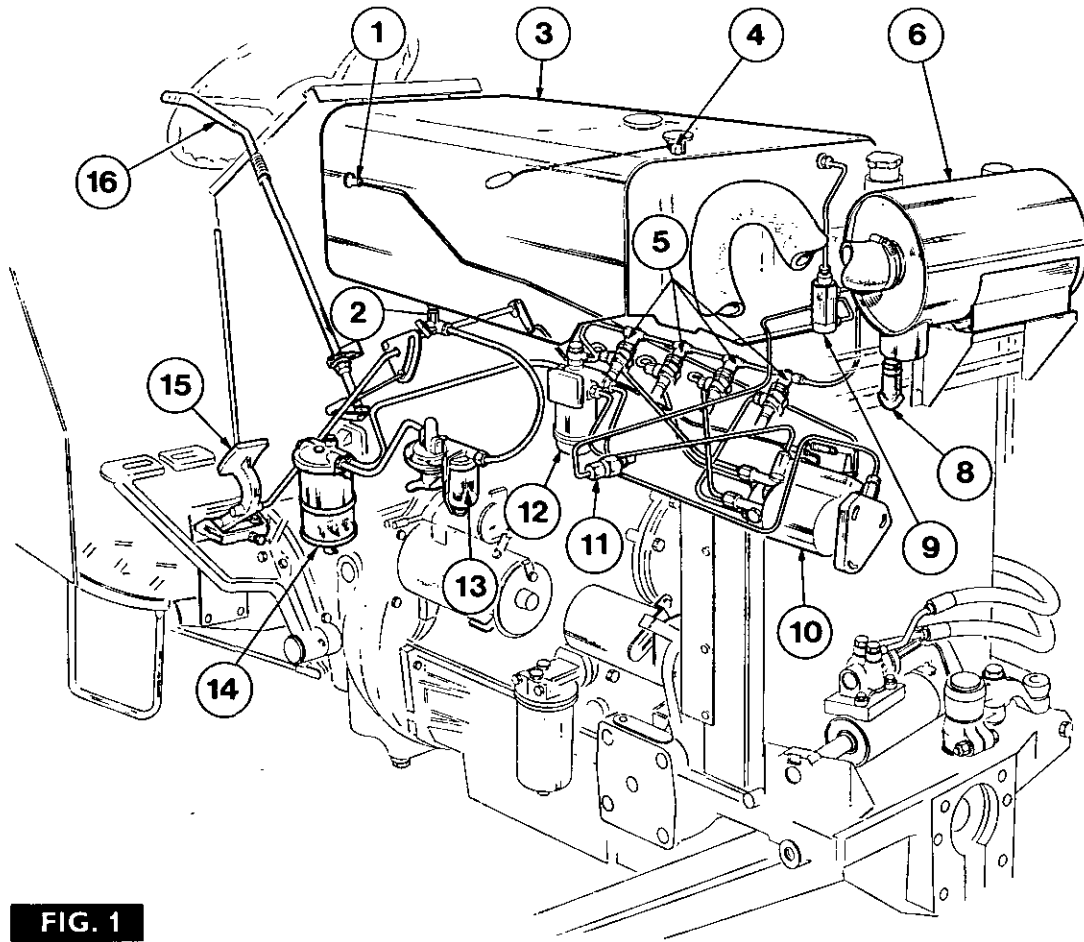


FIG. 1

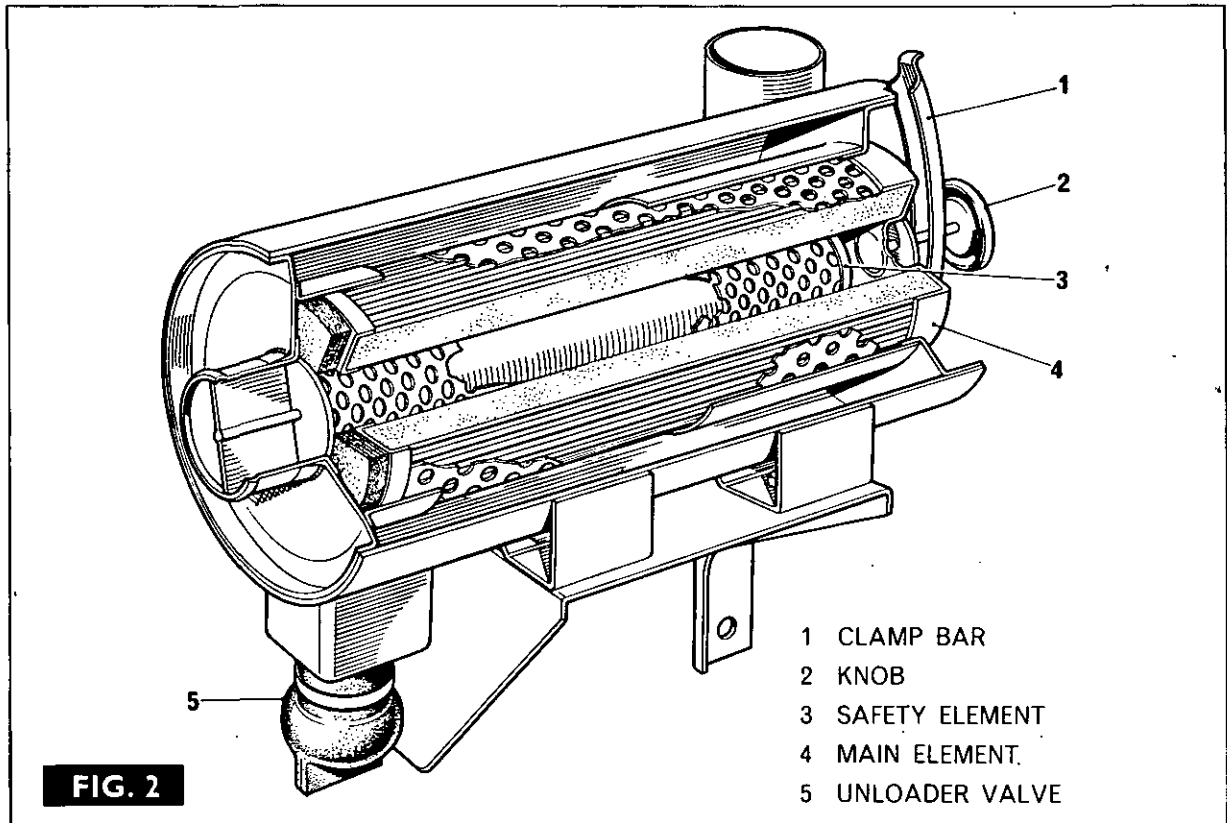


FIG. 2

FUEL SYSTEM & AIR CLEANERS

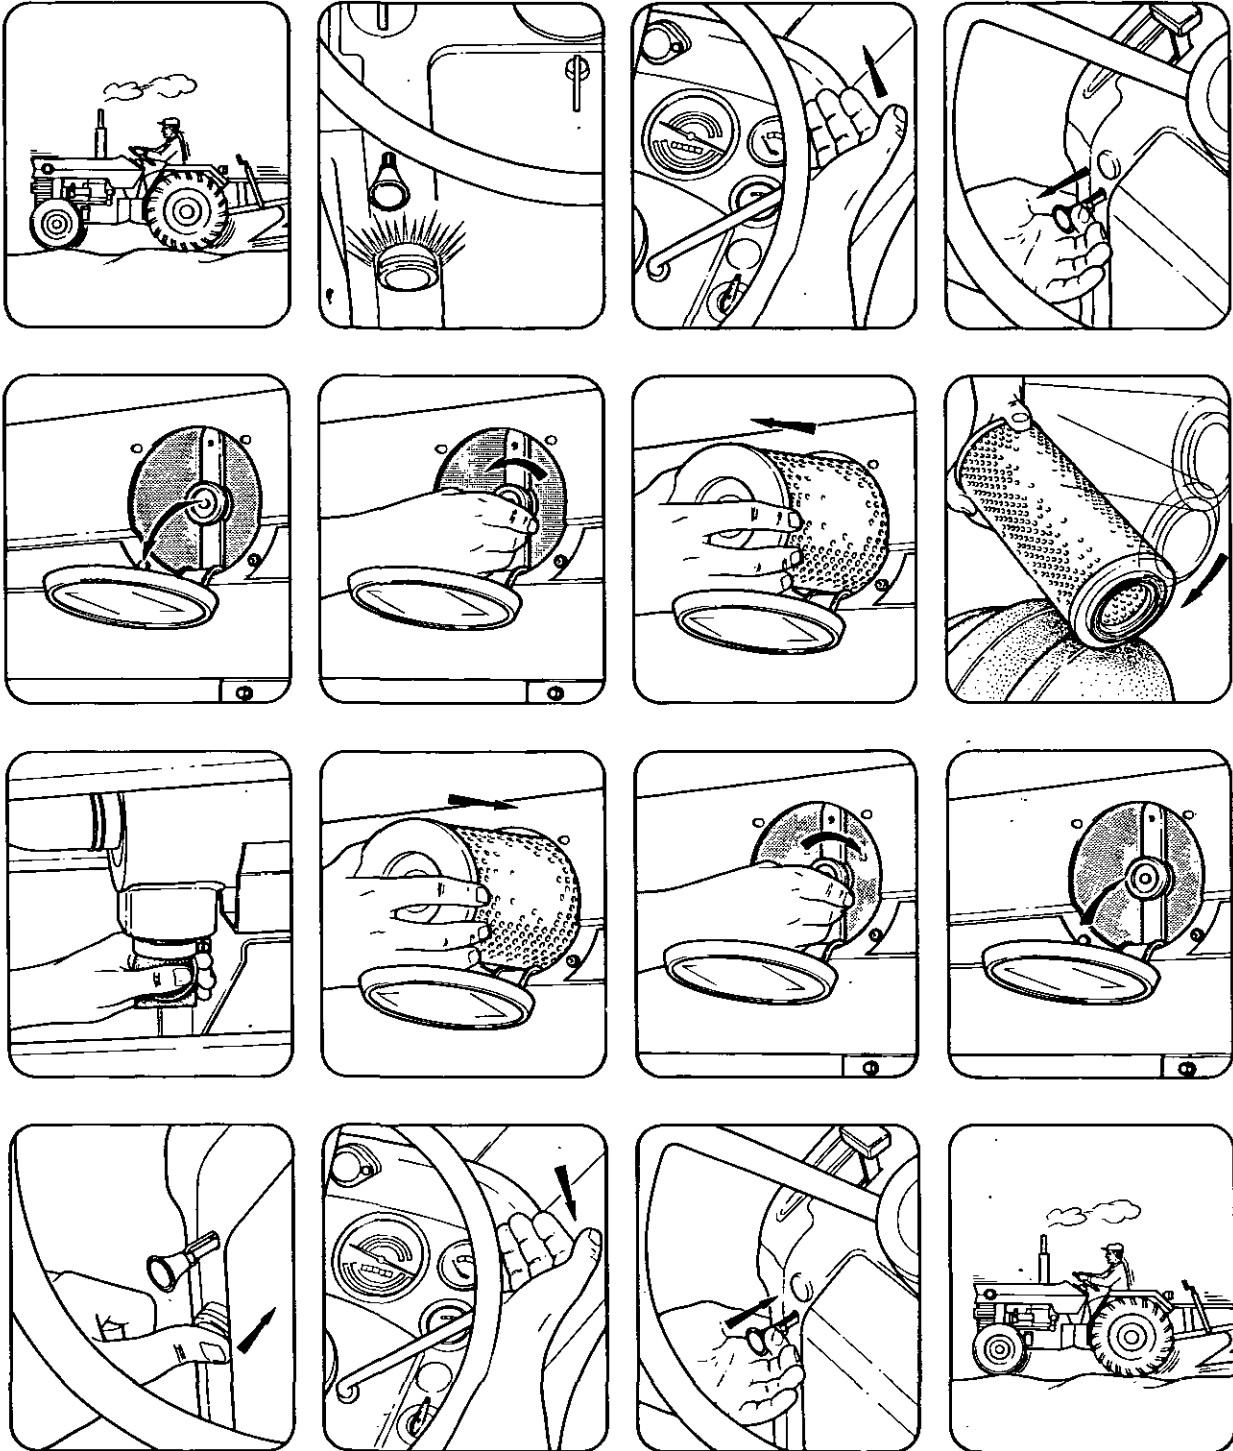


FIG. 3

## FUEL SYSTEM & AIR CLEANERS

### TWO STAGE DRY AIR CLEANER 3C-01-05

The purpose of the air cleaner is to filter the air entering the engine combustion chambers, to protect the engine from dust and other abrasives. The service indicator (Part 8B) shows red when the air cleaner requires attention. After cleaning the air cleaner main element (4) reset the indicator by pressing the button on top of the indicator body.

#### Servicing

Clean the MAIN element (4) only when the indicator shows red. DO NOT attempt to clean the inner SAFETY element (3).

Every 10 hours, or daily – check the housing for damage and ensure that all hose connections are tight. Also check the unloader valve (5), squeezing the valve, as shown, to release caked dirt.

WHEN THE INDICATOR SHOWS RED, THE MAIN ELEMENT REQUIRES SERVICING.

1. Close the throttle and stop the engine.
2. Fig. 2. Remove the clamp bar and carefully slide out the main element.
3. Either – (a) Carefully tap the element on a CLEAN, DRY tyre. Rotate the element and continue tapping until all loose dust is removed. Alternatively – Blow the element clean, FROM THE INSIDE, with compressed air at not more than  $7 \text{ kg/cm}^2$  ( $100 \text{ lb/in}^2$ ), and keeping the air line at a reasonable distance from the element at all times.

THESE PRACTICES WILL ONLY WORK SATISFACTORILY IN DRY CONDITIONS.

(b) If the element is oily soot laden or contains damp foreign matter, the element should be washed as follows. Seal the open end of the element with either a suitable plug, or waterproof adhesive tape, then immerse the element in a vessel containing a solution of warm water (not more than  $38^\circ\text{C} - 100^\circ\text{F} - \text{BLOOD HEAT}$ ) and a non-foaming automatic washing machine detergent (e.g. 'Pat Low Lather or Persil Automatic'). Leave the element to stand for approximately 10 minutes, then roll the element around in the liquid to clean off the dirt. Thoroughly rinse the element in CLEAN water, then remove the bung and flush out the element from the inside until the water comes through clear. Shake off the excess water and leave the element to dry naturally (this will take at least 12 hours in humid conditions). After drying out the element, check its condition for damage, or deterioration – particularly the sealing washer. A small light shone inside the element will reveal any holes of 'thin' areas. If the element is in any way damaged, it must be discarded.

4. Before refitting the element, wipe out the cleaner body with a damp cloth to remove any loose dust.
5. Squeeze the unloader valve to release any loose dust.
6. Slide the cleaned element back into place and refit the clamp bar.
7. Reset the indicator, then start the engine. If the indicator shows red after a very short interval, the main element (4) is unfit for service and must be replaced.

However, if, after replacement of the outer element, the indicator continues to show red,

the inner SAFETY element (3) must also be replaced – DO NOT ATTEMPT TO CLEAN IT.

#### Advice

Always keep at least one spare main and inner element available ready for use to prevent excessive out of service time. Store the spare elements in a cool, dry place and protect them from dust and damage.

Mark the element end plate after each washing – do not wash an element more than 10 times.

Always replace both elements after 1000 hours (maximum) service.

**WARNING – DO NOT ATTEMPT TO BLOW THE MAIN ELEMENT CLEAN USING THE TRACTOR EXHAUST GASES.**

**NEVER ADD OIL TO A DRY AIR CLEANER. NEVER USE PETROL (GASOLINE), PARAFFIN OR CLEANING SOLVENTS TO CLEAN THE ELEMENT.**

**IF SERVICING IS NOT CARRIED OUT WHEN THE SERVICE INDICATOR SHOWS RED, THE ENGINE WILL LOSE POWER AND PRODUCE EXCESSIVE BLACK SMOKE. IF THESE SYMPTOMS OCCUR WITHOUT THE INDICATOR SHOWING RED, CHECK THE INDICATOR FOR CORRECT OPERATION.**

### DRY AIR CLEANER

#### Removal and Refitment

3C-02-05

1. Remove the radiator grille door and the upper front grille panel.
2. On Multi-Power tractors swing the oil cooler clear.
3. Disconnect the hose to induction manifold at the air cleaner.

**NOTE – ON CERTAIN TRACTORS IT MAY BE NECESSARY TO REMOVE THE HOOD IN ORDER TO DISCONNECT THE HOSE.**

4. Remove the four bolts, securing the air cleaner to mounting bracket, and remove air cleaner
5. Assemble in reverse sequence.

### FUEL TANK

The fuel tank has a capacity of 86,37 lit. (19 imp. galls.) and is rubber mounted on a sub-frame above the engine. A fuel tap is fitted to the rear of the tank which enables the fuel to be turned off when required. The fuel tap incorporates a gauze filter, which extends inside the fuel tank. A fuel gauge sending unit is located in the top of the fuel tank.

### FUEL TANK

#### Removal and Refitment

3C-03-05

1. Remove the hood cowl as stated in Part 2.
2. Disconnect the start aid tank pipes.
3. Turn off the fuel and disconnect the pipe at the fuel tank.
4. Disconnect the fuel gauge sender unit wires.
5. Release the fuel tank retaining straps and remove the straps, then lift off the fuel tank.
6. Replace the tank in reverse order.

## FUEL SYSTEM & AIR CLEANERS

### FUEL GAUGE SENDER UNIT

#### Removal and Replacement 3C-04-06

1. Open hood panel and disconnect the wires from the sender unit.
2. Remove 5 screws and washers.
3. Manoeuvre the sender unit out through the aperture in the tank (Fig. 4).
4. Remove cork seal.
5. When replacing, attach the wire to the centre terminal before placing the sender unit into the fuel tank.

### START-AID TANK

The start-aid tank is a small container situated in the front of the fuel tank. This tank serves as a reservoir for the engine thermostart and a junction for the primary fuel filter, fuel injection pump and injection leak-off pipes.

### THERMOSTART

To facilitate starting under cold weather conditions, thermostart is fitted to the engine induction manifold and provides pre-heating and priming of the inlet manifold and combustion chambers. The first movement anti-clockwise of the switch operates the thermostart heater, so causing the heater coil to expand and allowing the ball valve to lift and, at the same time, a small quantity of fuel flows from the reservoir tank through the heater, wherein it is vaporised and then ignited by the heater coil. A second anti-clockwise movement of the starter switch operates the starter motor and the ignited fuel is drawn into the engine. Before operating the thermostart, ensure fuel is present in the start aid tank.

**NOTE** — SEE PERKINS WORKSHOP MANUAL FOR SERVICING DETAILS.

### FUEL LIFT PUMP

#### Figure 5

A mechanical diaphragm type fuel lift pump operated by the engine camshaft and incorporating a hand primer is fitted to the right-hand side of the engine. The pump is installed between the fuel tap and the primary fuel filter. A gauze strainer, located above the sediment bowl, safeguards the non-return valves positioned in the top body assembly.

**NOTE** — SEE PERKINS WORKSHOP MANUAL FOR SERVICING DETAILS.

### FUEL INJECTORS

The fuel injectors deliver to the engine combustion chambers the quantity of atomised fuel determined by the engine throttle load.

Injector operation pressure is 170 atmospheres. The servicing of injectors must not be attempted unless proper facilities and equipment are available.

Servicing is advised at least every 600 hours. Attention will be required more frequently if the fuel cleanliness, or the engine cooling system is neglected.

**NOTE** — SEE PERKINS WORKSHOP MANUAL FOR SERVICING DETAILS.

### FUEL INJECTION PUMP

The C.A.V. distributor type fuel injection pump is a robust precision built unit incorporating a mechanical governor, and is gear driven from the engine timing case. Provided clean fuel of correct grade is used, and regular attention paid to the fuel filters, very little trouble should be experienced with the injection pump. Servicing of the injection pump should be limited to recommendations given in the Perkins Workshop Manual.

### FUEL FILTER

Two Fuel Filters, a primary and secondary, are installed between the fuel lift pump and the fuel injection pump.

These filters are fitted, not to compensate for careless filling, but to protect the finely machined components of the fuel injection equipment from the ravages of dirt and foreign bodies which may be present in the fuel oil. Careless filling can over-burden these filters and defeat their purpose. Before attempting to dismantle the fuel filters, thoroughly clean the exterior of the filter bodies.

### PRIMARY FUEL FILTER

#### Figure 6

The primary fuel filter is mounted on the right-hand side of the cylinder block, at the rear, beneath the exhaust manifold. The filter consists of the filter head (2) element (6) glass bowl filter base (8) and drain tap (9). Any water which accumulates in the bottom of the glass bowl can be drained off, by turning the tap in the base of the filter, anti-clockwise.

An expendable cartridge type filter element is employed and this should be discarded and replaced by a new one every 600 hours. No attempt must be made to clean or in any way reclaim the old element.

### PRIMARY FUEL FILTER ELEMENT

#### Replacement 3C-05-06

1. Remove drain plug (9) and run off fuel. The bleed screw (12) may need slackening to permit fuel to drain off.
2. Remove the  $\frac{1}{8}$  in AF bolt (1) from the filter head (2).
3. Remove the sediment filter bowl (8) complete with the filter element (6).
4. Discard the filter element. Reclamation must not be attempted.
5. Flush out the filter sediment bowl in clean fuel or paraffin. Do not use rags.
6. Fit new 'O' rings (3, 4 & 7)
7. Insert a new filter element and assemble bowl.
8. Bleed fuel system before attempting to start engine.

**NOTE** — RENEW ELEMENT EVERY 600 HOURS.

FUEL SYSTEM & AIR CLEANERS

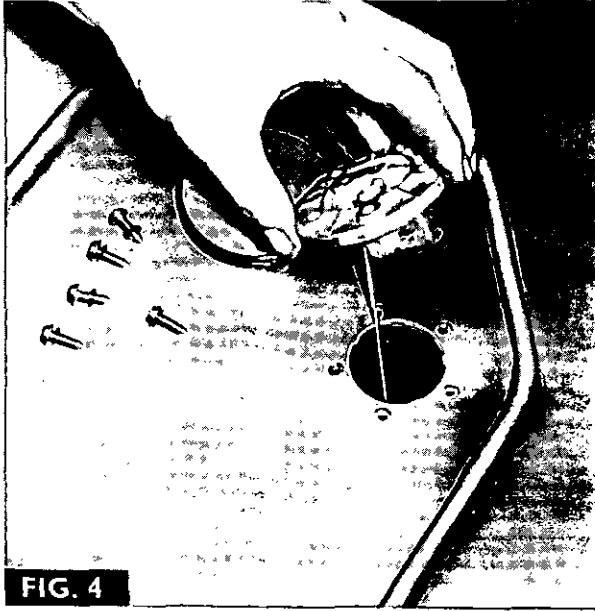


FIG. 4

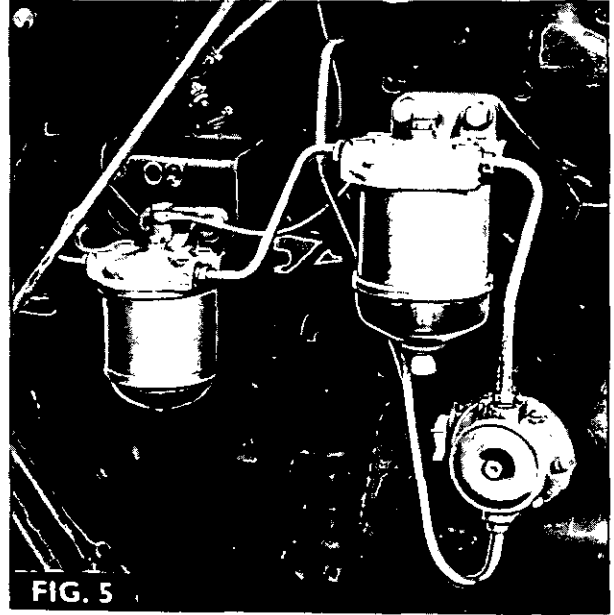


FIG. 5

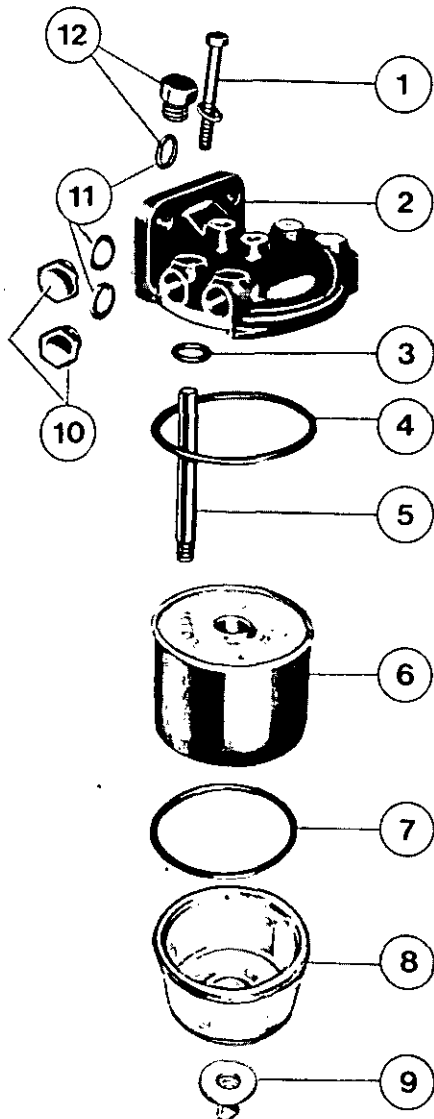


FIG. 6

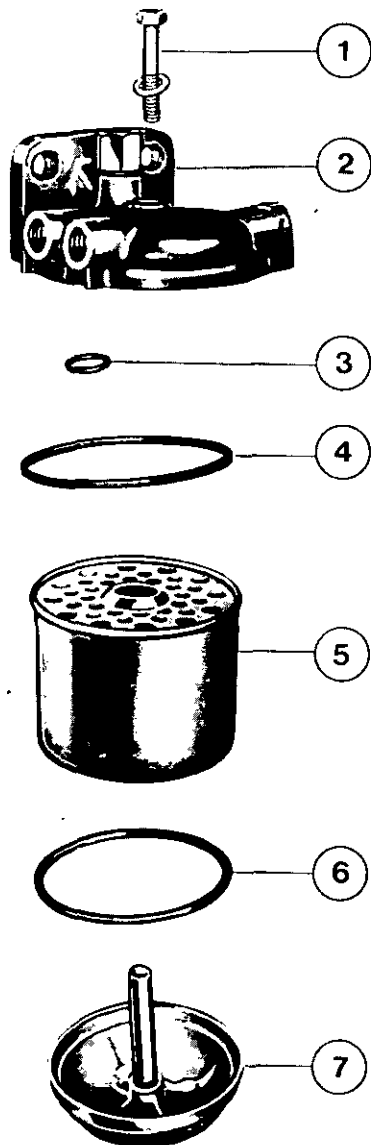


FIG. 7

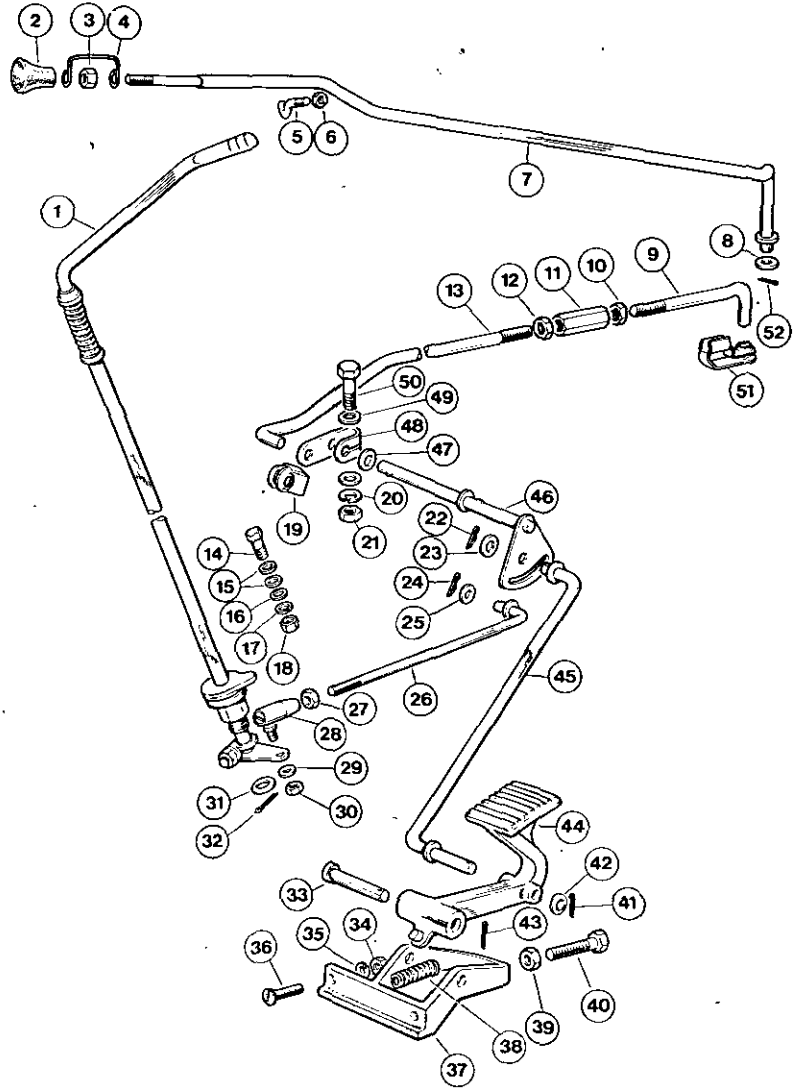


FIG. 8

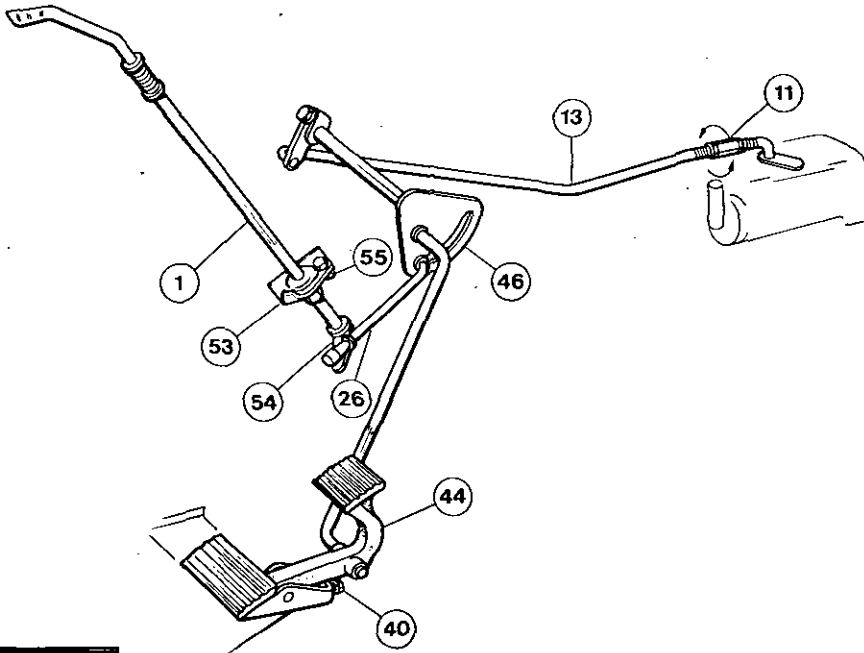


FIG. 9

## FUEL SYSTEM & AIR CLEANERS

### PRIMARY FILTER ASSEMBLY

#### Removal & Refitment 3C-06-09

1. Disconnect and blank off pipes.
  - (a) Primary to secondary filter.
  - (b) Fuel lift pump to primary filter, at primary filter.
2. Remove two securing bolts and withdraw filter complete.
3. Replace in the reverse order and bleed the fuel system.

### SECONDARY FUEL FILTER

#### Figure 7

The secondary fuel filter is mounted on the steering box on the right hand side of the tractor, and consists of a filter head (2) element (4) and base (6). Again an expendable cartridge type element is employed, and this should be changed every 1200 hours. No attempt must be made to clean or reclaim the element.

### SECONDARY FUEL FILTER ELEMENT

#### Element Replacement 3C-07-09

1. Remove  $\frac{7}{8}$  in AF centre bolt (1) from the filter head (2).
2. Ease base (7) and element (5) from the filter head.
3. Fit new 'O' rings (3, 4 & 6).
4. Change element (5) and replace in reverse order. Bleed the fuel system.

**NOTE — ELEMENT RENEWAL SHOULD BE CARRIED OUT EVERY 1200 HOURS. NO ATTEMPT SHOULD BE MADE TO CLEAN OR RECLAIM THE FILTER ELEMENT.**

### SECONDARY FUEL FILTER ASSEMBLY

#### Removal & Refitment 3C-08-09

1. Disconnect and blank off pipes:
  - (a) From secondary to primary filter.
  - (b) From secondary filter to fuel injection pump (2 pipes).
  - (c) From secondary filter to start-aid tank, at the secondary filter.
2. Remove the two securing bolts and washers and remove filter.
3. Replace in the reverse order. Bleed the fuel system.

#### Key to Fig. 6

- |                   |                            |
|-------------------|----------------------------|
| 1. Centre Bolt    | 7. 'O' Ring                |
| 2. Filter Head    | 8. Sediment Bowl           |
| 3. 'O' Ring       | 9. Drain Plug              |
| 4. 'O' Ring       | 10. Plug and Washer        |
| 5. Centre Bolt    | 11. Plug and Washer        |
| 6. Filter Element | 12. Bleed Screw and Washer |

#### Key to Fig. 7

- |                |                   |
|----------------|-------------------|
| 1. Centre Bolt | 5. Filter Element |
| 2. Filter Head | 6. 'O' Ring       |
| 3. 'O' Ring    | 7. Base           |
| 4. 'O' Ring    |                   |

### FUEL CONTROL LINKAGE

### FUEL CUT-OFF CONTROL

#### Removal & Refitment 3C-09-09

#### Figure 8

1. Remove cotter pin (53) and washer (8) from rod (7) at fuel injection pump.
2. Remove knob (2), nut (3), spring (4) and rod (7) clear.
3. Replace in reverse sequence.

### HAND THROTTLE LINKAGE

#### Removal & Refitment 3C-10-09

#### Figure 8

1. Remove rod (9) from clip (52) at fuel injection pump.
2. Disconnect rod (13) from clip (19) at lever (49).
3. Remove nut (21) washer (50) and lock washer (20) from bolt (51) and remove lever (49) from shaft (47).
4. Remove clip (24) and washer (25) from rod (26).
5. Remove nut (30) washer (29) from joint (28) and remove rod (26) complete with joint (28) from lever at the base of the hand throttle lever.
6. Replace in reverse sequence to above.

**FUEL SYSTEM & AIR CLEANERS****Key to Fig. 8**

- |     |                           |                    |
|-----|---------------------------|--------------------|
| 1.  | Hand Throttle Lever Assy. |                    |
| 2.  | Fuel Cut off Control Knob |                    |
| 3.  | Nut                       |                    |
| 4.  | Fuel Cut off Rod Spring   |                    |
| 5.  | Fuel Cut off Rod Support  |                    |
| 6.  | Nut                       |                    |
| 7.  | Fuel Cut off Rod          |                    |
| 8.  | Washer                    |                    |
| 9.  | Throttle Rod              |                    |
| 10. | Nut                       |                    |
| 11. | Connector                 |                    |
| 12. | Nut                       |                    |
| 13. | Throttle Control Rod      |                    |
| 14. | Bolt                      | ] Throttle<br>Stop |
| 15. | Flat Washer               |                    |
| 16. | Washer                    |                    |
| 17. | Lock Washer               |                    |
| 18. | Nut                       |                    |
| 19. | Linkage Clip              |                    |
| 20. | Lock Washer               |                    |
| 21. | Nut                       |                    |
| 22. | Clip                      |                    |
| 23. | Washer                    |                    |
| 24. | Clip                      |                    |
| 25. | Washer                    |                    |
| 26. | Throttle Control Rod      |                    |
| 27. | Nut                       |                    |
| 28. | Ball Joint Assy.          |                    |
| 29. | Lock Washer               |                    |
| 30. | Nut                       |                    |
| 31. | Washer                    | ]Retaining hand    |
| 32. | Nut                       | ]throttle assy.    |
| 33. | Clevis Pin                |                    |
| 34. | Nut                       | ]Support           |
| 35. | Lock Washer               | ]to                |
| 36. | Bolt                      | ]Footstep          |
| 37. | Support                   |                    |
| 38. | Spring                    |                    |
| 39. | Nut                       |                    |
| 40. | Bolt                      |                    |
| 41. | Cotter Pin                | ]Link Rod          |
| 42. | Washer                    | ]Attachment        |
| 43. | Cotter Pin                |                    |
| 44. | Foot Pedal                |                    |
| 45. | Throttle Rod              |                    |
| 46. | Cross Shaft               |                    |
| 47. | Flat Washer               |                    |
| 48. | Throttle Rod Lever        |                    |
| 49. | Washer                    |                    |
| 50. | Bolt                      |                    |
| 51. | Cotter Pin                |                    |
| 52. | Linkage Clip              |                    |

**FOOT THROTTLE LINKAGE E****Removal & Refitment**

3C-11-10

**Figure 8**

1. Carry out operations 1, 2 and 3 of operation 3C-13-09.
2. Remove split pin (41) and washer (42) from rod (45).
3. Pull rod (45) and lever (46) clear.
4. Remove clip (22) and washer (23) and separate rod (45) from rod (46).
5. Remove the two bolts (36) washer (35) and nut (34) and remove foot pedal (44) and bracket (37) complete.
6. Assembly is a reversal of the removal procedure.

**THROTTLE LINKAGE****Adjustment**

3C-12-10

**Figure 9**

1. With rod (13) disconnected from injector pump, and lever (54) slack on lever (1), fully depress foot pedal (44).
2. With foot pedal fully depressed, adjust rod (13) until it freely assembles into injector pump lever at full throttle setting. Tension linkage by giving half turn to connector (11) in direction indicated. Tighten locknuts on rod (13).
3. Release foot pedal (44) and with bolt (55), slack, adjust bolt (40) so that engine idling speed is obtained. Without further movement of bolt (40) tighten locknut.
4. With foot pedal (44) fully depressed, open hand throttle (1) against stop on bracket (53). Adjust lever (54) so that link (26) just contacts rear of slot on quadrant (46). Lock lever (54) in this position.
5. Release foot pedal (44) and fully close hand throttle (1). Move hand throttle (1) slowly towards open throttle setting until engine idling R.P.M. is just at point of increase. At this position, adjust bolt (55) to provide hand throttle idling stop.



**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 4**

**Publication No. 1856 001 M1**

comprising

- A CLUTCH
- B TRANSMISSION (MULTI-POWER)
- C TRANSMISSION (8 SPEED)

## DUAL CLUTCH

## Part 4 Section A

| Operation No. | Table of Contents  | Page No. |
|---------------|--|----------|
|               | GENERAL<br>Description and Principle of Operation                | 01       |
| 4A-01-02      | MAIN FRICTION DISC or CLUTCH ASSEMBLY<br>Removal and Refitment   | 02       |
| 4A-02-02      | CLUTCH ASSEMBLY<br>SERVICING                                     | 02       |
| 4A-03-05      | RELEASE BEARING CARRIER, FORK AND SHAFT<br>Removal and Refitment | 05       |

**GENERAL**

The Dual Clutch Assembly enables the main transmission drive to be disconnected without interrupting the drive to the pump and p.t.o. shaft. When the main transmission drive is stopped, with the first movement of the pedal, p.t.o. driven implements can still be operated and raised and lowered by the hydraulic system. Further movement of the pedal will stop p.t.o. driven implements and the hydraulic pump.

**DESCRIPTION AND PRINCIPLE OF OPERATION.**

Figures 1 and 2.

The Dual Clutch Assembly consists of a main 305 mm (12 in) friction disc (16), driving the transmission main input shaft, and a p.t.o. 254 mm

(10 in) friction disc (12) driving the p.t.o. input shaft. The main friction disc (16) is operated by the main pressure plate (15), against the engine flywheel. The p.t.o. friction disc (12) is operated by the p.t.o. pressure plate (11) against a false flywheel (13). Pressure plate movement is obtained by three release levers (7), pivoted on the clutch cover plate (9). Initial release lever movement operating against the 12 coil springs (18), moves the main pressure plate (15), rearwards and so releases the main friction disc (16). Further movement of the main pressure plate (15), by the release levers, forces the setscrews (5) on the main pressure plate against the p.t.o. pressure plate (11). This moves the p.t.o. pressure plate (11) against its belleville spring (10), and releases the p.t.o. friction disc (12). The clutch release levers (7) are operated by a release bearing (3) which is moved by the clutch pedal.

**DUAL CLUTCH****MAIN FRICTION DISC OR CLUTCH ASSEMBLY**

**Removal and Refitment.** 4A-01-02  
**Special Tools Required:** MF 159A Clutch Centraliser  
 MF 215 P.T.O. Clutch Setting Gauge  
 MF 314 Lever Height Setting Gauge

**WARNING :** SPRING PRESSURE WILL CAUSE THE CLUTCH COVER TO FLY APART IF PRESSURE IS NOT RELEASED SLOWLY AND EVENLY. THE GIVEN SEQUENCE OF INSTRUCTIONS MUST BE CAREFULLY FOLLOWED.

**Removal**

1. Split the tractor between the engine and transmission as stated in Part 3.
2. Fig 3. Fit three slave bolts, ¼ in UNC x 54 mm (2 ¼ in) to the three equi-spaced holes in the clutch cover.
3. Fig. 4. Progressively slacken and remove the six bolts securing the clutch assembly to the flywheel. Detach the complete clutch assembly from the flywheel. The main friction disc will remain separate from the clutch assembly.

**Refitment.**

1. Fit the main friction disc (16) to the flywheel, with the splined boss facing away from the flywheel. A very slight smear of Mobilgrease Super should be applied to the splines.
2. Fig 5. Position the clutch assembly on the flywheel and centralise the clutch assembly and main friction disc with special tool MF159A
3. Fig 4. Refit the six bolts and washers securing the clutch to the flywheel and progressively tighten the bolts.
4. Remove the three ¼ in UNC x 54 mm (2 ¼ in) slave bolts and then the centraliser tool.
5. Fig 6. Using gauge MF 215, check the clearance between the p.t.o. clutch adjusting setscrews and the p.t.o. pressure plate. Slacken each adjusting screw locknut, and adjust the setscrews as required. Tighten the locknuts after adjustment.
6. Figs 7 & 8. Fit the guage MF 314 and check the adjustment of each release lever. The domed end of the release lever setscrew must be touching the gauge. Slacken the release lever setscrew locknut, then adjust the setscrew as required. Tighten the locknut after adjustment.
7. Connect the rear half of the tractor to the engine as stated in Part 3.
8. Fig. 9. To adjust the clutch pedal to the correct clearance, fit a suitable lever to the hole (A) in the end of the clutch release shaft.
9. Fig. 9. Depress the clutch pedal until the distance between the arm and the transmission case is 3,2 mm ( ¼ in). Retain the arm in this position and tighten the clamping bolt (B). Re-check the adjustment.

**NOTE - THE ROD ASSEMBLY MUST BE FITTED TO THE FRONT HOLE IN THE ARM. THE CORRECT ADJUSTMENT OF THE ROD ASSEMBLY IS 646 mm (25 ¼ in) MEASURED BETWEEN THE HOLE CENTRES IN THE FORK ENDS.**

Issue 1

**CLUTCH COVER ASSEMBLY SERVICING. 4A-02-02**

**Special Tools Required:** Hydraulic Press.

**Disassembly.**

1. Remove the clutch assembly, as stated in operation 4A-01-02.
2. Mark the following components to permit their refitment in the same relative positions:  
 Cover Plate (9)  
 P.t.o. Pressure Plate (11)  
 False Flywheel (13)  
 Main Pressure Plate (15)
3. Fig 10. Place the cover assembly on the hydraulic press and locate a suitable bar, as shown.
4. Apply the press pressure until the three ¼ UNC slave bolts can be easily removed. Remove the retaining clips (6), then drive the lever pivot pins (8) out of the cover.
6. Remove the springs (4) from the release levers (7).
7. Release the pressure from the press. The springs (18) will fully expand, raising the cover.
8. Lift off the cover plate (9) Belleville spring (10) p.t.o. pressure plate (11) p.t.o. friction disc (12) and false flywheel (13).
9. Remove the twelve springs (18) and the fibre washers (17).
10. If necessary remove the links (7 and 14).

**Examination**

Check all components for signs of wear, scoring, overheating or other damage. Always check the coil springs and Belleville springs for correct loading and pressures, as stated in the Specification section. Always fit a new pair of friction discs (12 and 16) and new fibre washers (17). If the tractor flywheel is scored, it can be skimmed to remove scoring in 0,254 mm (0.010 in) increments up to a maximum of 1,00 mm (0.040 in). The ledge to which the clutch cover is bolted, must also be skimmed by the same amount to maintain the distance from the clutch face to 39,75 to 39,62 mm (1.565 to 1.560 in).

**WARNING: - NEVER, UNDER ANY CIRCUMSTANCES, ATTEMPT TO SKIM EITHER THE FALSE FLYWHEEL, OR THE PRESSURE PLATES, AS THIS WILL SEVERELY IMPAIR THEIR HEAT DISSIPATION CHARACTERISTICS.**

**KEY TO FIG 1 & 2**

- |    |                       |
|----|-----------------------|
| 1  | Spring                |
| 2  | Carrier               |
| 3  | Bearing               |
| 4  | Spring                |
| 5  | Setscrews             |
| 6  | Clip                  |
| 7  | Release Lever         |
| 8  | Pin                   |
| 9  | Cover Plate           |
| 10 | Belleville Spring     |
| 11 | P.T.O. Pressure Plate |
| 12 | P.T.O. Friction Disc  |
| 13 | False Flywheel        |
| 14 | Link                  |
| 15 | Main Pressure Plate   |
| 16 | Main Friction Disc    |
| 17 | Washer                |
| 18 | Coil Spring           |

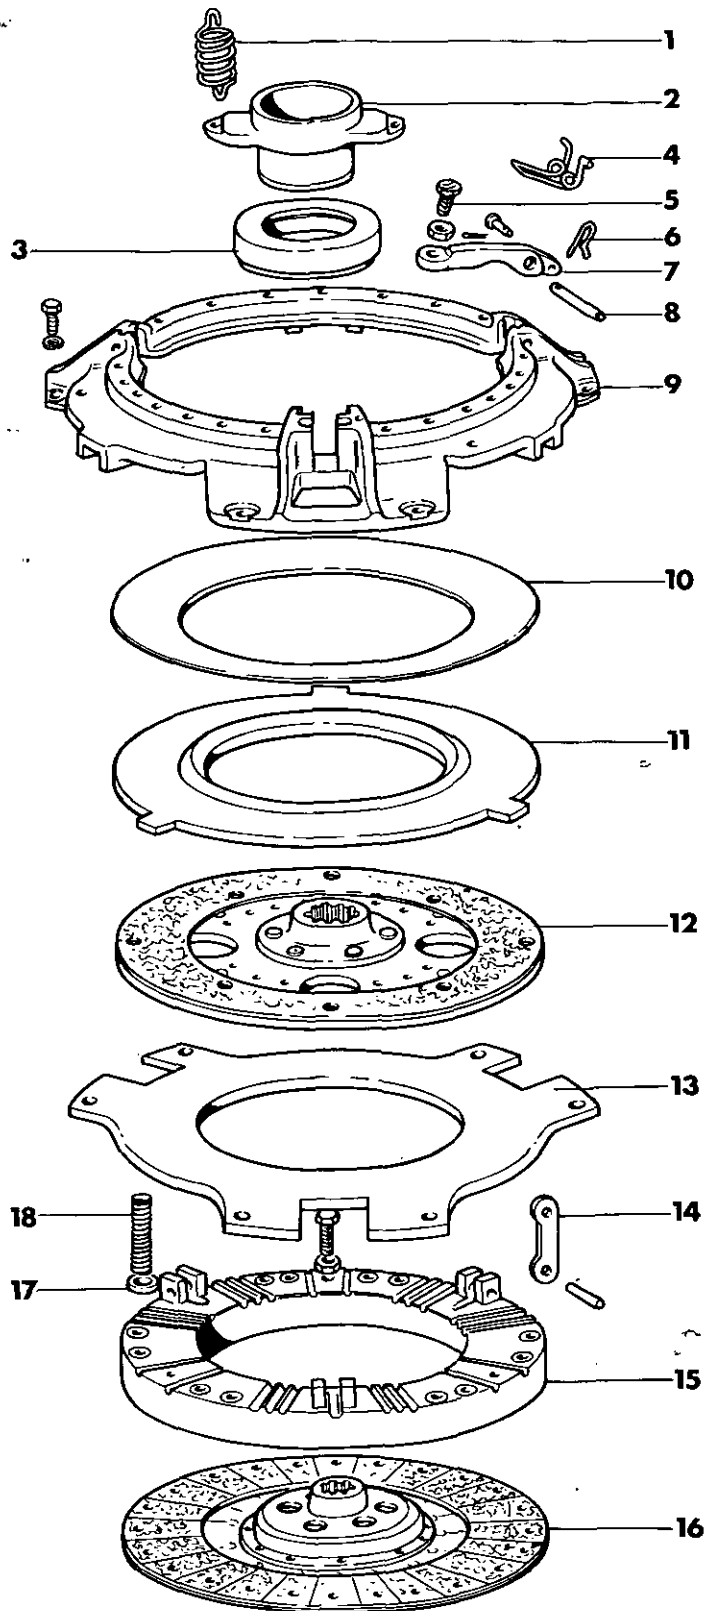


FIG. 1

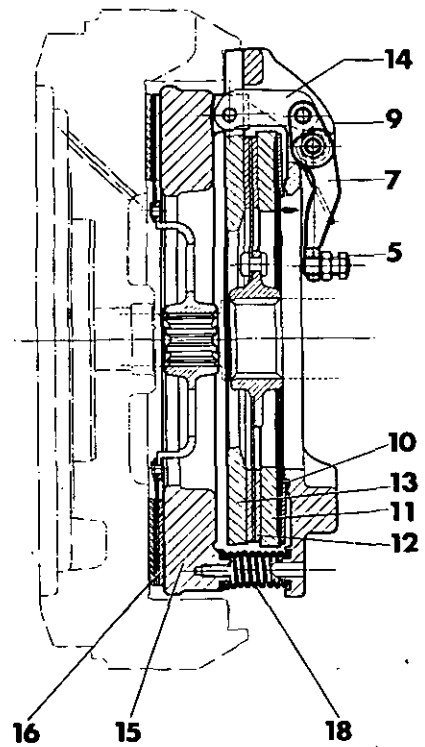


FIG. 2

DUAL CLUTCH

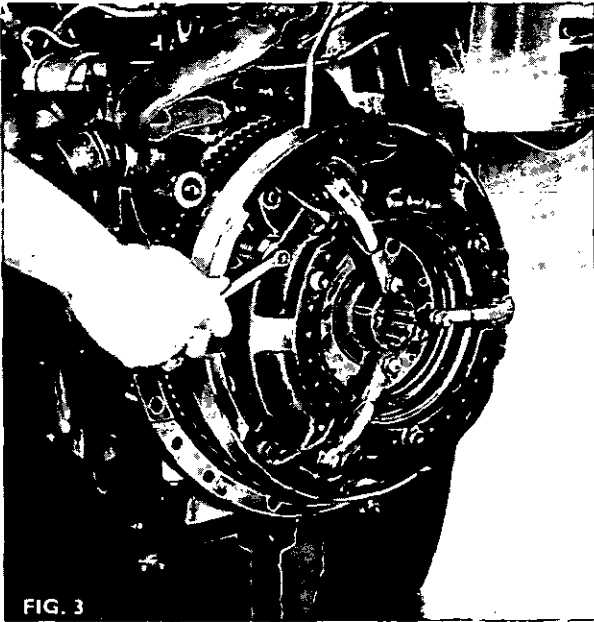


FIG. 3

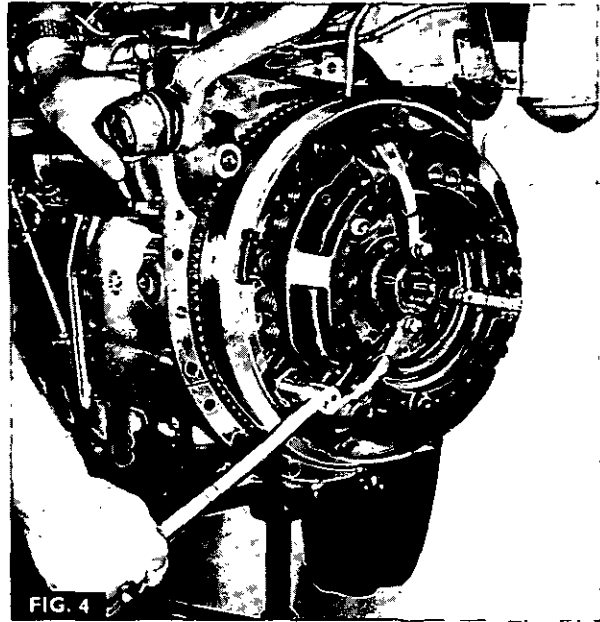


FIG. 4

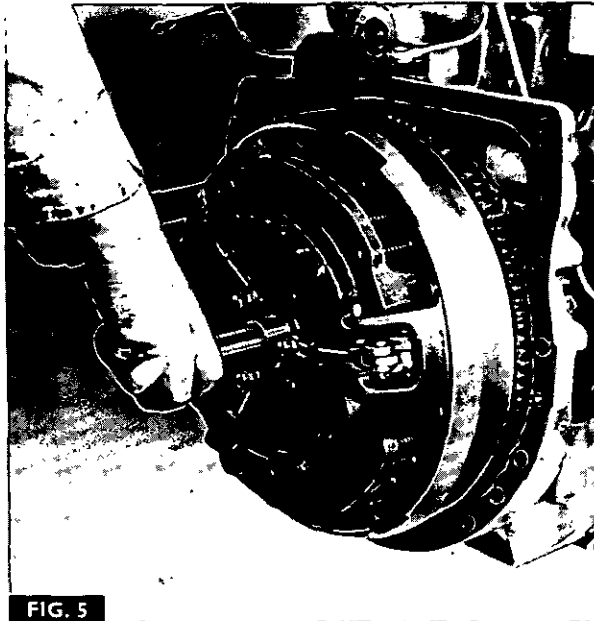


FIG. 5

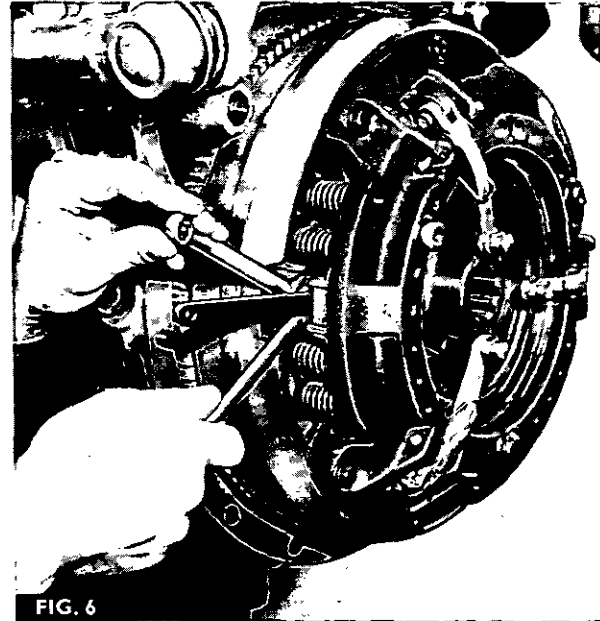


FIG. 6

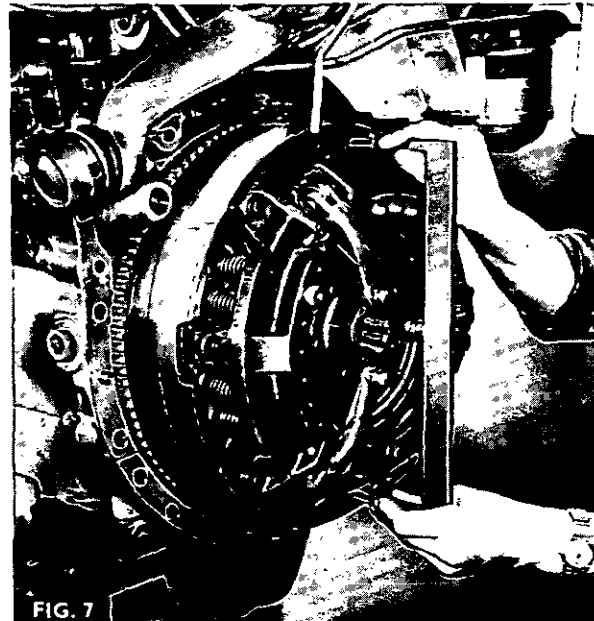


FIG. 7

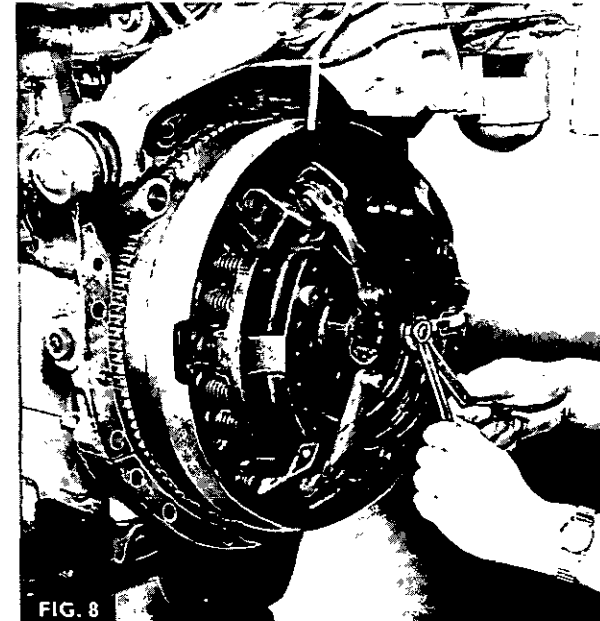


FIG. 8

**Reassembly.**

1. If necessary, refit the links (7 and 14) to the main pressure plate (15).
2. Aligning the marks, refit the false flywheel (13), new p.t.o. friction disc (12) p.t.o. pressure plate (11) and Belleville spring (10).
3. Fit twelve new fibre washers (17) then fit the springs (18) and finally the cover plate (9) locating the links (7) through the slots in the cover plate.
4. Fig 10. Place the cover assembly on the press, refit the bar and compress the springs until the springs (4) and pins (8) can be refitted. Secure the pins (8) with the retaining clips (6).
5. Compress the springs fully and refit the three  $\frac{1}{4}$  UNC slave bolts.
6. Remove the cover assembly from the press then refit the cover assembly to the tractor, as stated in operation 4A-01-02, using a new friction disc (16).

**RELEASE BEARING, CARRIER, FORK AND SHAFT**

Removal and Refitment

4A-03-05

**Removal**

1. Split the tractor between the engine and transmission as stated in Part 3.
2. Release the two springs securing the release bearing carrier, and slide the carrier and bearing assembly off the input shaft retainer.
3. Drive out the carrier from the release bearing, only if either is being replaced.
4. Release the locking wire and remove the two locking setscrews from the release fork.
5. Slacken off the clamp bolt on the clutch pedal lever and remove the fork and shaft.

Examine the bearing, carrier, shaft and fork for wear or damage and replace if necessary.

**Refitment.**

1. Refit the shaft and fork, secure with the two locking setscrews and lockwire.
2. Lubricate the release bearing, carrier and input housing with Mobilgrease Super.
3. Press the release bearing onto the carrier, slide the carrier on to the input shaft retainer and secure with the two springs.
4. Connect the rear half of the tractor to the engine as stated in Part 3.
5. Adjust the clutch pedal clearance, as stated in item 8 and 9 of refitment, operation 4A-01-02.

DUAL CLUTCH

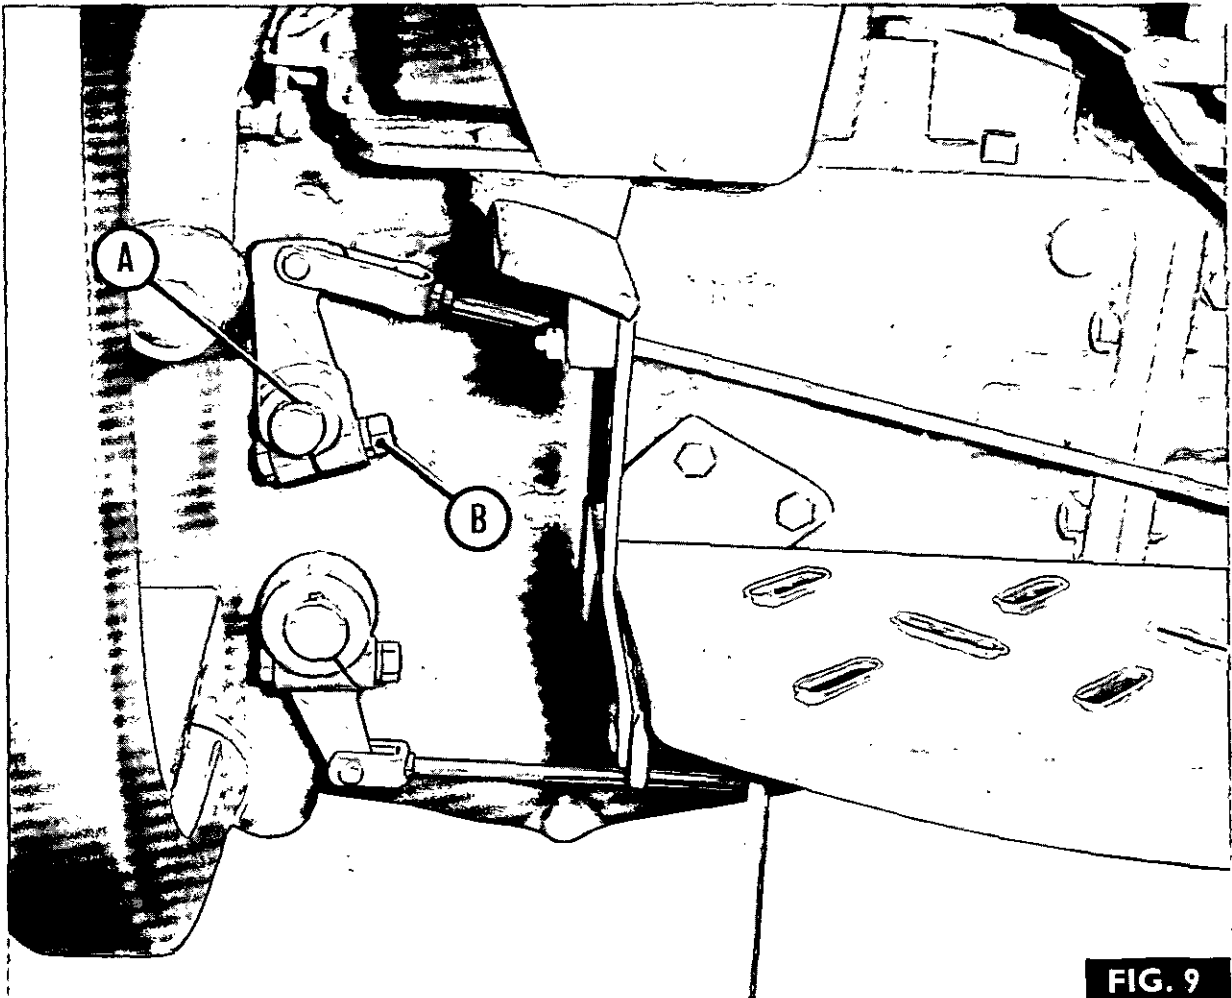


FIG. 9

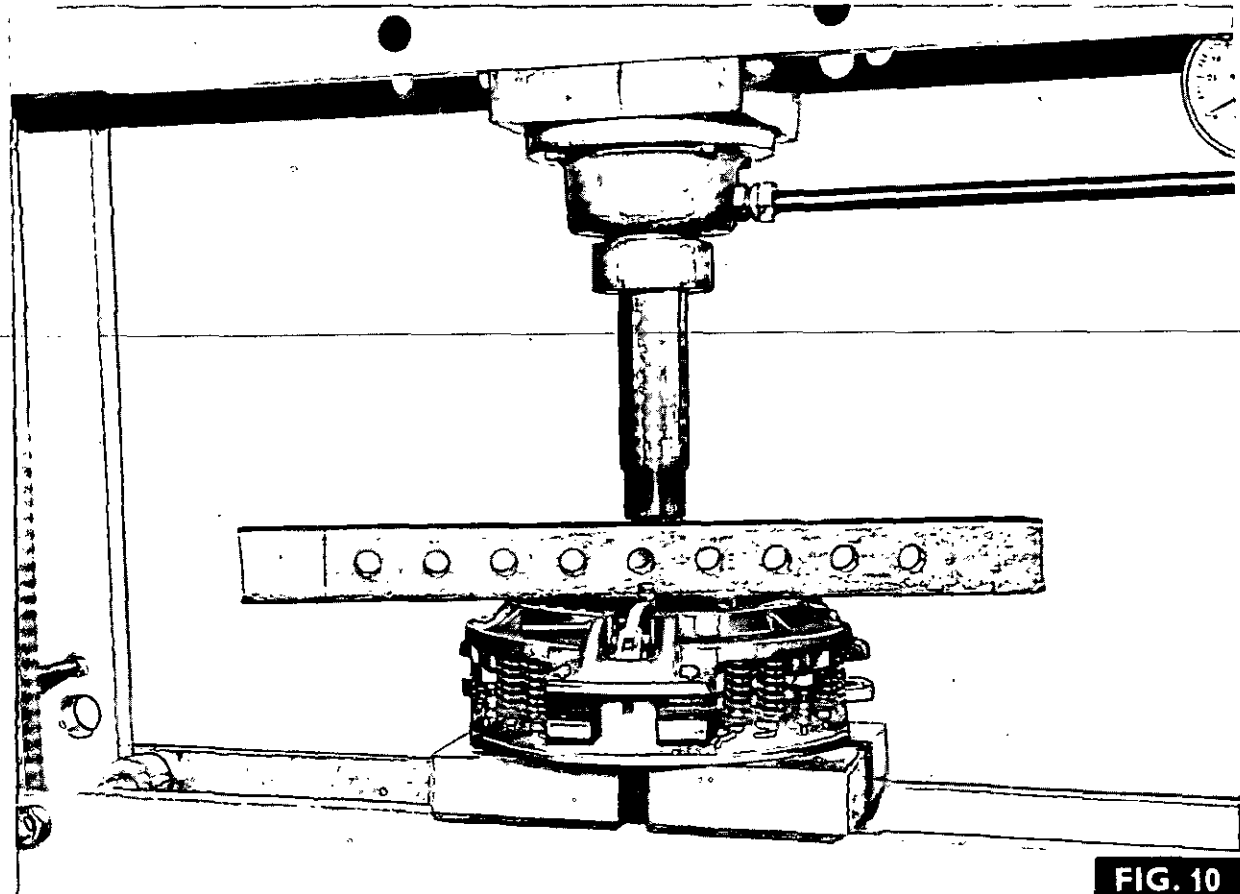


FIG. 10

## MULTI-POWER TRANSMISSION

## Part 4 Section B

| Operation<br>No. | Table of Contents  | Page<br>No. |
|------------------|--|-------------|
|                  | GENERAL  | 01          |
|                  | OPERATION  | 02          |
| 4B-01-02         | SHIFTER RAIL MECHANISM<br>Removal and Refitment                              | 02          |
| 4B-02-02         | TRANSMISSION EPICYCLIC<br>Removal and Refitment                              | 02          |
| 4B-03-05         | INPUT SHAFT HOUSING AND P.T.O. INPUT SHAFT<br>Removal and Refitment          | 05          |
| 4B-04-05         | P.T.O. DRIVE SHAFT FRONT BEARING<br>Removal and Refitment                    | 05          |
| 4B-05-06         | MAIN INPUT SHAFT<br>Removal and Refitment                                    | 06          |
| 4B-06-06         | FIRST/REVERSE GEAR, SECOND/THIRD GEAR AND MAINSHAFT<br>Removal and Refitment | 06          |
| 4B-07-09         | LAYSHAFT AND LAYSHAFT GEAR<br>Removal and Refitment                          | 09          |
| 4B-08-09         | REVERSE GEAR<br>Removal and Refitment  | 09          |
| 4B-09-09         | MULTI-POWER CLUTCH UNIT<br>Servicing   | 09          |
| 4B-10-10         | MULTI-POWER SPOOL VALVE<br>Servicing   | 10          |
| 4B-11-10         | TRANSMISSION CASE<br>Removal and Refitment or Complete Gearbox Overhaul      | 10          |
| 4B-12-18         | GEAR SHIFT LEVER<br>Removal and Refitment                                    | 18          |
| 4B-13-18         | HIGH/LOW SHIFT LEVER<br>Removal and Refitment                                | 18          |

## GENERAL

Figures 1 and 2. Multi-Power transmission provides twelve forward gears and four reverse gears. This is achieved by combining with the standard transmission, low driving (57) and driven (95) constant mesh gears, operated by a free-wheel coupler (94), and high driving (52), and driven (92) constant mesh gears operated by a multi-plate hydraulic clutch (43). By driving the countershaft (98) with either of these two pairs of gears, an alternative speed for each gear becomes available.

To provide Multi-Power, the following components are added to the standard transmission; a pair of constant mesh gears, free-wheel unit (94), multi-plate clutch (43), oil pump, oil control valve and shift mechanism (30).

The high driving gear (52), runs on a bush on the main input shaft (57), next to the low driving gear (54). The front end of the high driving gear (52) is splined to engage the clutch disc splines. The three clutch discs, plates, piston and return springs are held



## MULTI-POWER TRANSMISSION

into the clutch housing (43) by a retainer plate and snap ring. The three clutch plates are splined into the clutch housing, and the housing (43) is splined to the main input shaft (54).

The high driven gear (92) is splined to the countershaft (98) and is retained by a snap ring. The low driven gear (95) runs on a bush on the countershaft, next to the high driven gear (92). A spring loaded coupler (94) is fitted between the driven gears and operates on a helical spline on the countershaft (98). The coupler is spring loaded towards the low driven gear (95), and the teeth on the rear face of the coupler engage similar teeth on the front face of the low driven gear (95).

The oil pump supplies oil to the control valve for operation of the clutch (43). The control valve is fitted to the main drive retainer (34) and directs oil to the clutch or returns oil into the transmission housing. When the shift lever is in the high position, oil is directed from the control valve through drillings in the retainer (34), input shafts and clutch housing to the clutch piston. When the shift lever is in the low position, oil is returned from the control valve into the transmission housing. The Multi-Power shift lever is fitted to the instrument panel and mechanical linkage connects the shift lever to the oil control valve. Multi-Power high or low can be selected whilst the tractor is moving and in any gear. The gear levers and reduction unit are identical to those used for the eight speed transmission.

### OPERATION

#### Shift Lever in Low

Oil is pumped through the control valve and back into the transmission housing. The drive is transmitted to the countershaft (98) through the low constant mesh gears (57, 95), and the free wheel coupler (94). The coupler is forced into engagement with the low driven gear (95) by its spring and the thrust exerted by the helical splines. When the coupler is in this engaged (low) position, no engine braking is available. If engine braking is required, move the Multi-Power shift lever to high.

#### Shift Lever in High

Oil is pumped to the control valve and is then directed through drillings to the clutch (43) which engages the high driving gear (52). The higher ratio of the high gears increases the speed of the countershaft (98). This speed increase exerts an opposite thrust on the helical splines of the coupler (94), which overcomes spring pressure and disengages the coupler from the low driven gear (95), so allowing the low driven gear to free-wheel.

### SHIFTER RAIL MECHANISM

#### Removal and Refitment

4B-01-02

Special Tools Required: 270 Rail Trolley.

#### Removal

1. Split the tractor between the gearbox and centre housing as stated in Part 3.
2. Remove the gearbox top cover, in unit with the instrument panel, as stated in Part 3.
3. Fig 3. Release the locking wire from the 1st/rev. and 2nd/3rd shift rails (8, 10), and from the rear end of the HIGH/LOW shift rail (5).

Issue 1

4. Fig 4. Remove the locking peg (3) from the HIGH/LOW shift fork (6), detach the fork and coupler (77).
5. Remove the gear lever stop plate (11) and interlock pin (14), secured by two bolts (13) and spring washers (12).
6. Lift out the three shift rail springs (1), and plungers (2).
7. Remove the locking pegs (3) from the 1st/rev. and 2nd/3rd shift forks (7, 9).
8. Slide the 1st/rev. and 2nd/3rd shift rails (8, 10), rearwards out of the transmission housing. Lift out the 1st/rev. and 2nd/3rd shift forks (7, 9).
9. Release the locking wire and remove the locking peg (3) from the HIGH/LOW shift selector (4).
10. Slide the HIGH/LOW shift rail (5), rearwards out of the transmission housing. Lift out the HIGH/LOW shift selector (4).

#### Refitment

1. Fit the HIGH/LOW shift rail (5), sliding the HIGH/LOW shift selector (4), onto the rail and secure to the rail with locking peg (3). Wire lock the peg to the rail.
2. Locate the 1st/rev. and 2nd/3rd shift forks (7, 9), to their respective grooves in the mainshaft gears. The two forks are identical.
3. Assemble the 1st/rev. and 2nd/3rd shift rails (8, 10), with interlock pin grooves facing each other, to the forks, and secure each fork with a locking peg (3). Wire lock the pegs to the rails. The shorter, 2nd/3rd shift rail (8) is fitted to the L.H. side.
4. Locate the HIGH/LOW shift fork (6), to the groove in the coupler (77). Assemble the coupler into the planet pinion carrier assembly (69), simultaneously sliding the fork (6), onto the HIGH/LOW shift rail (5).
5. Secure the HIGH/LOW shift fork (6), to its rail with the locking peg (3).
6. Wire lock the peg to the rail.
7. Fit the interlock pin (14), to the stop plate (11), and secure the stop plate with two bolts (13), and spring washers (12).
8. Fit the three plungers (2), pointed end downwards, and the three springs (1).
9. Refit the gearbox top cover and instrument panel assembly as stated in Part 3.

**NOTE – BOTH GEAR LEVERS AND THE GEAR SELECTOR DOGS MUST BE PLACED IN NEUTRAL.**

10. Reconnect the transmission to the centre housing, as stated in Part 3.

### TRANSMISSION EPICYCLIC

#### Removal and Refitment

4B-02-02

#### Figure 4

Special Tools Required: 270 Rail Trolley

#### Removal

1. Split the tractor between the transmission and the centre housing.
2. Remove the locking wire and peg from the HIGH/LOW shifter fork, then remove the fork and coupler.

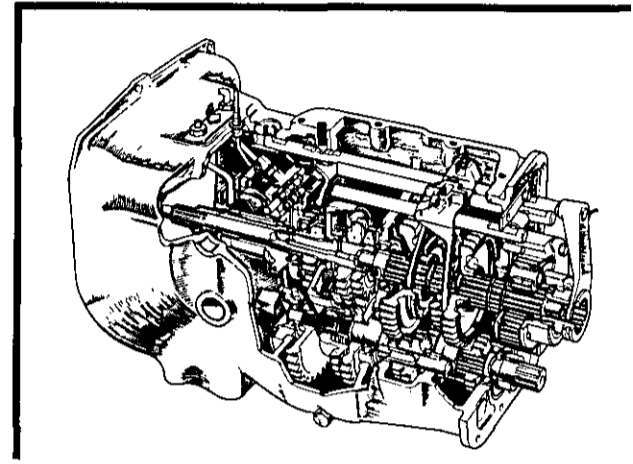
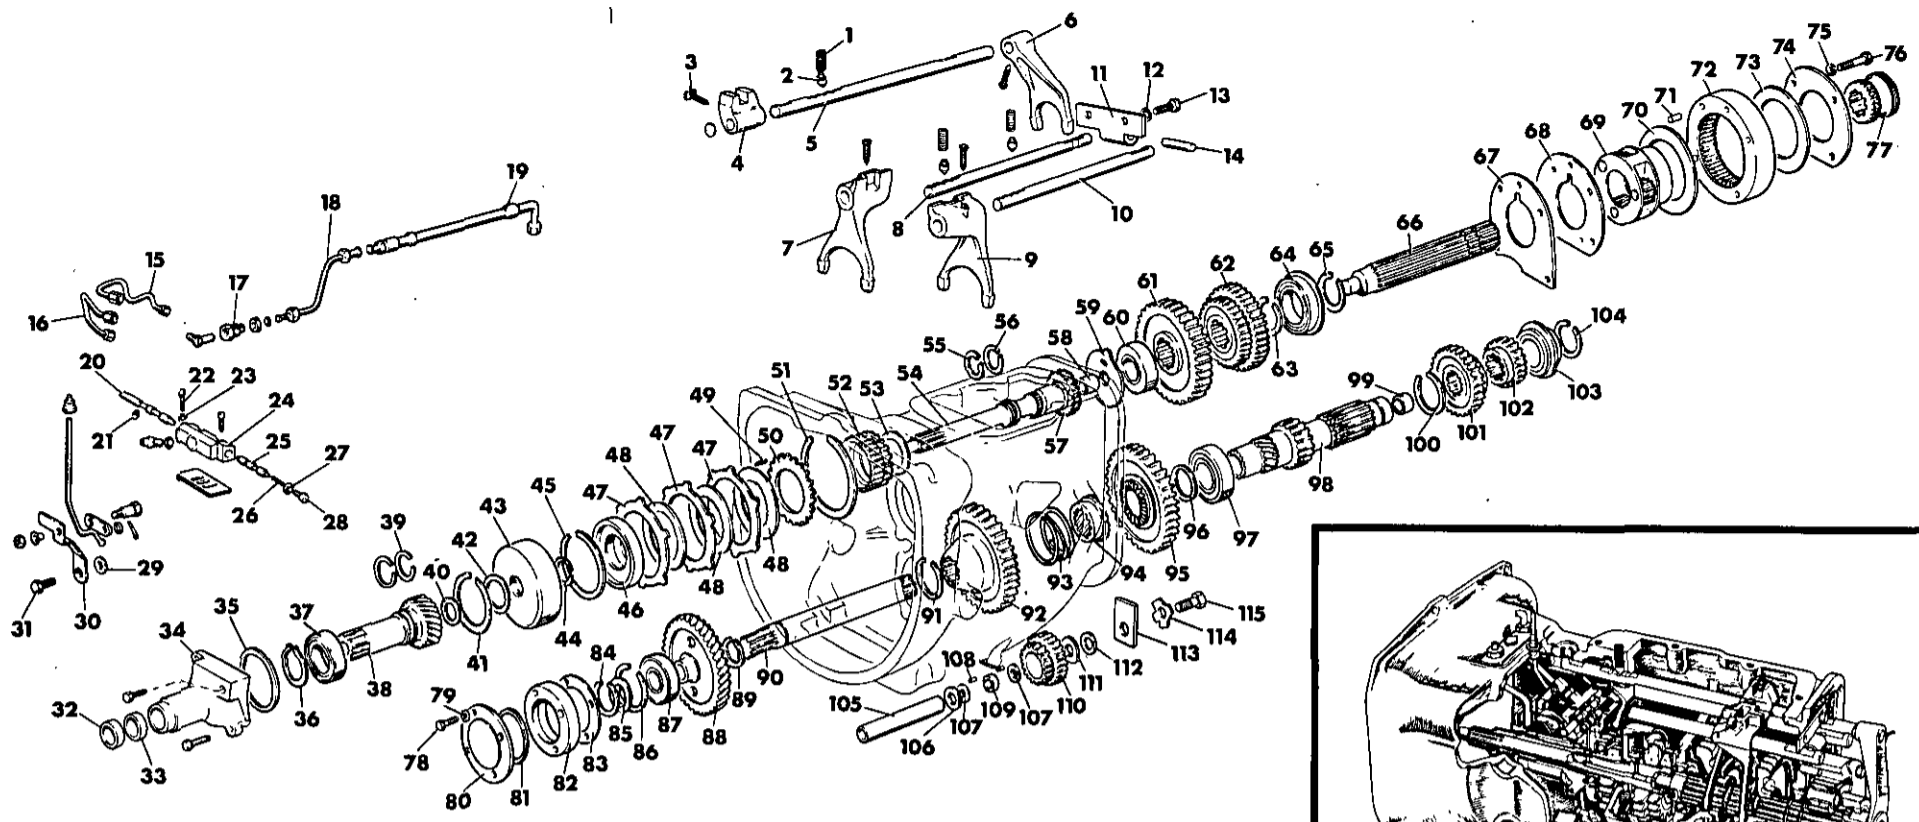


FIG. 2

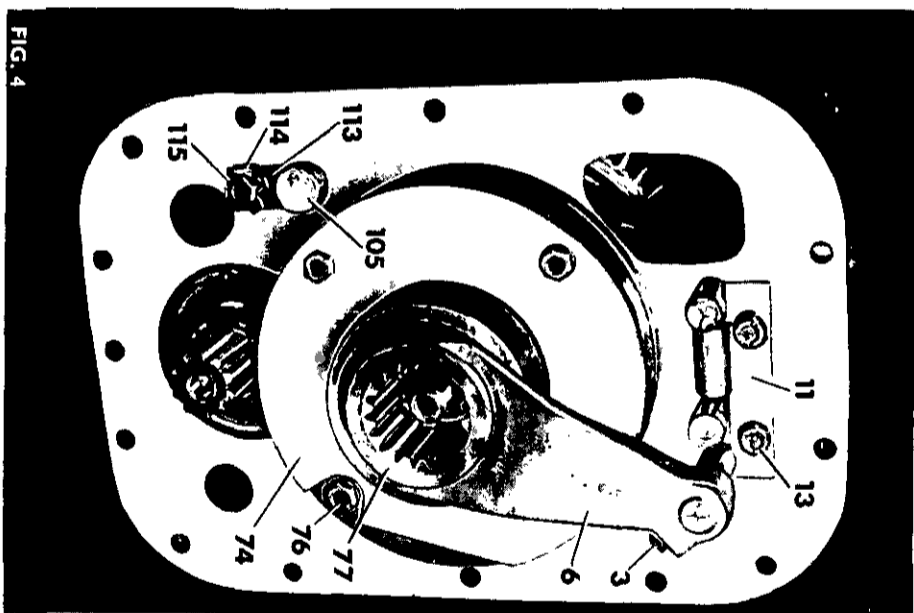


FIG. 4

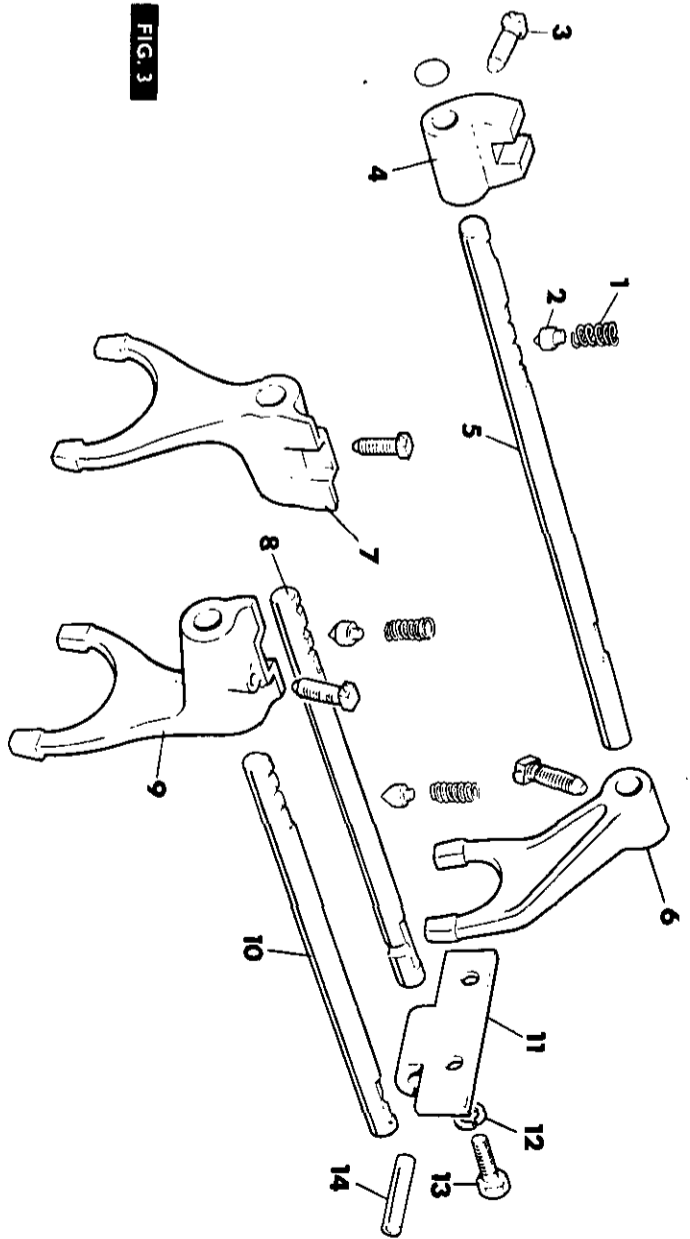


FIG. 3

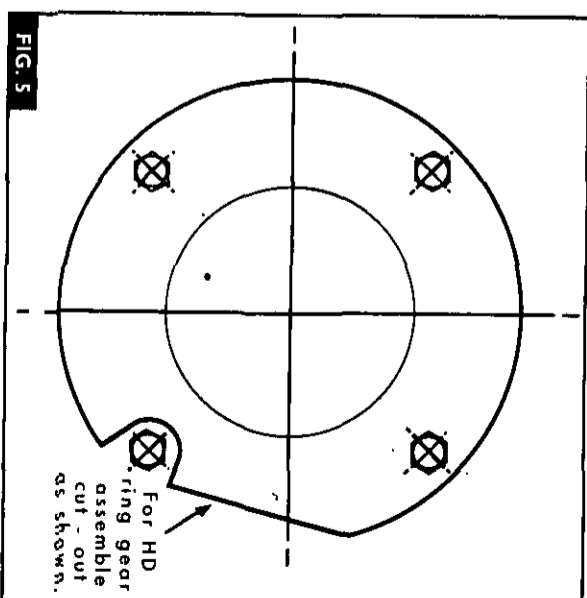


FIG. 5

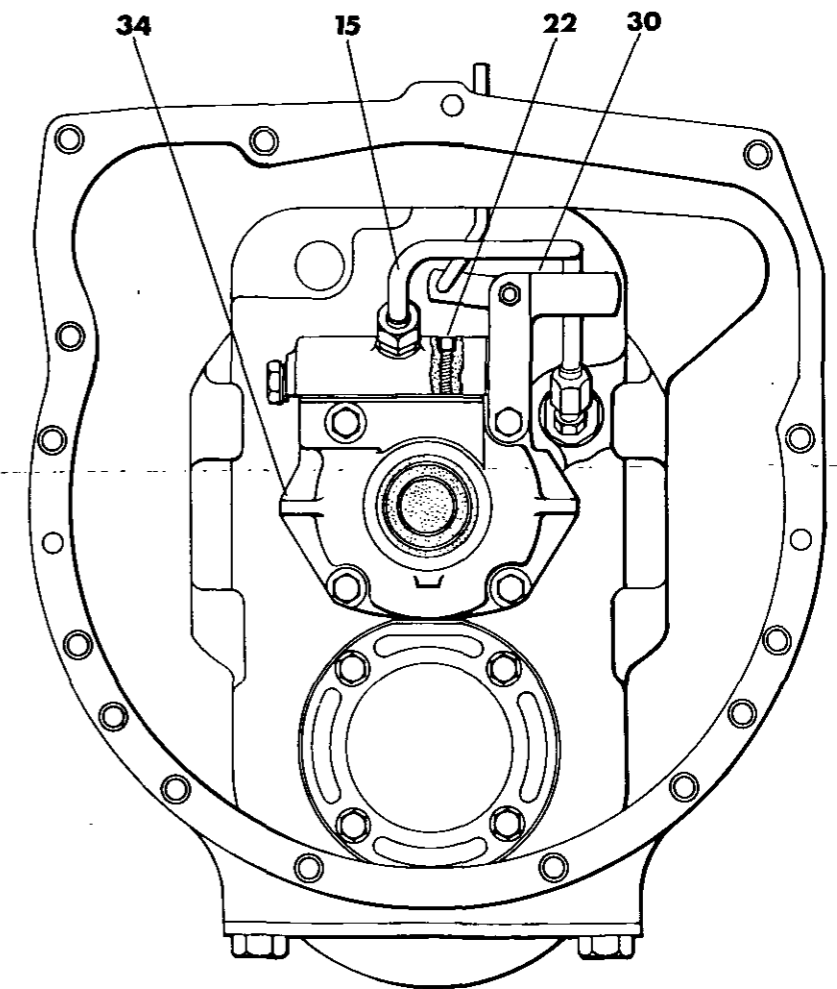
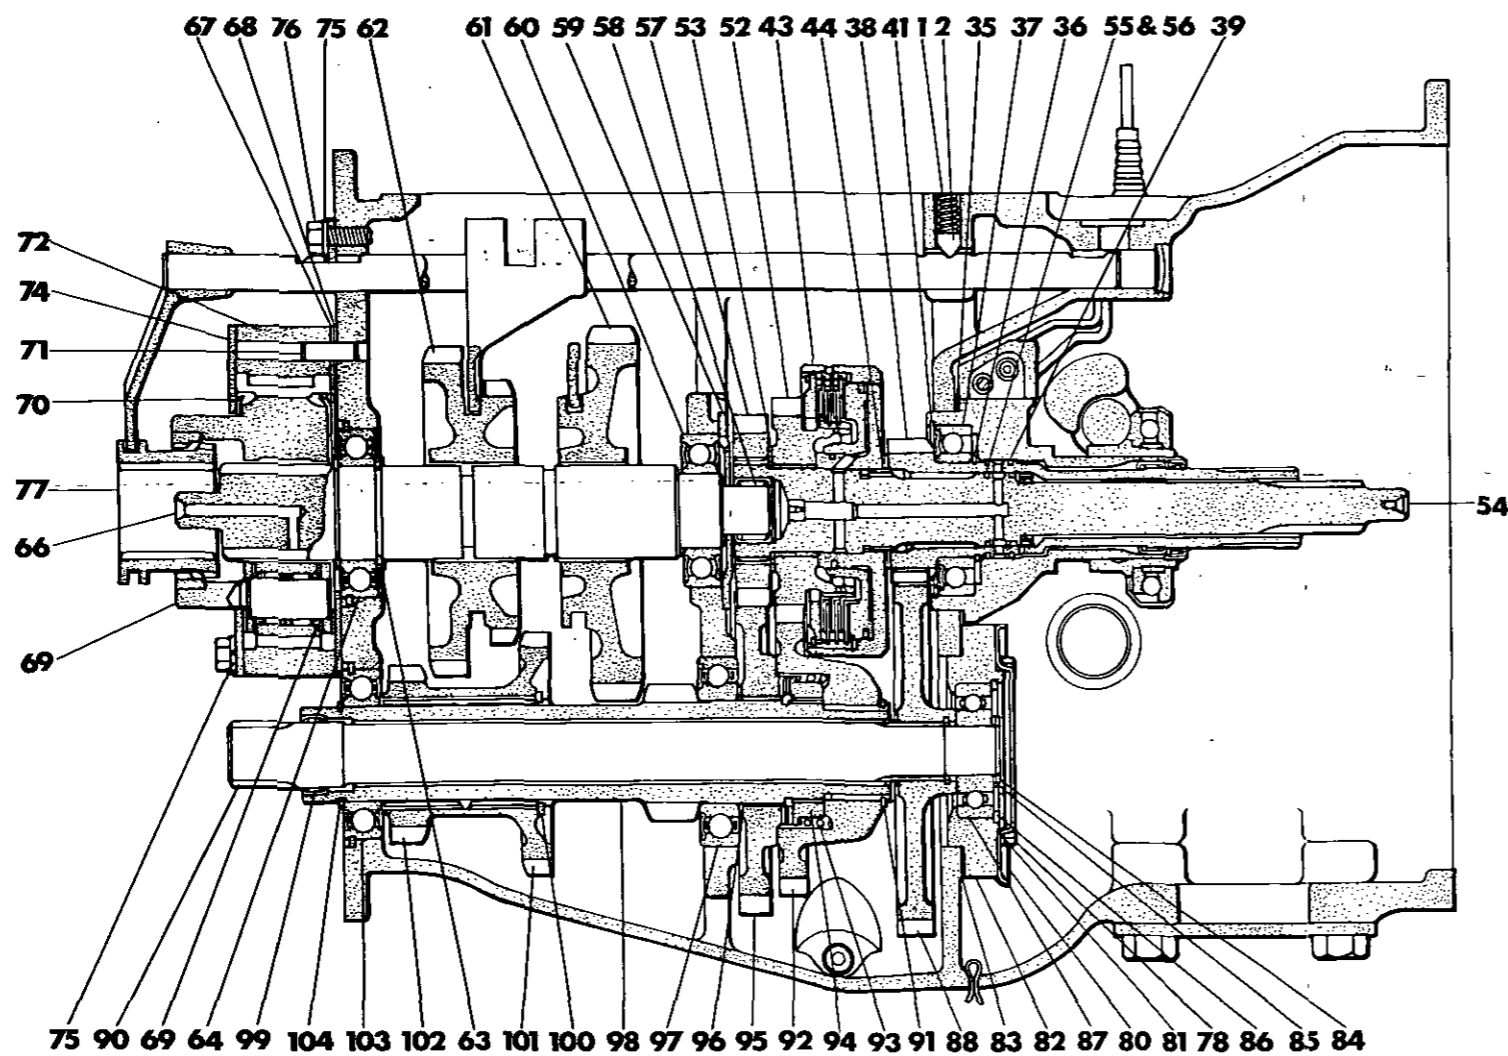
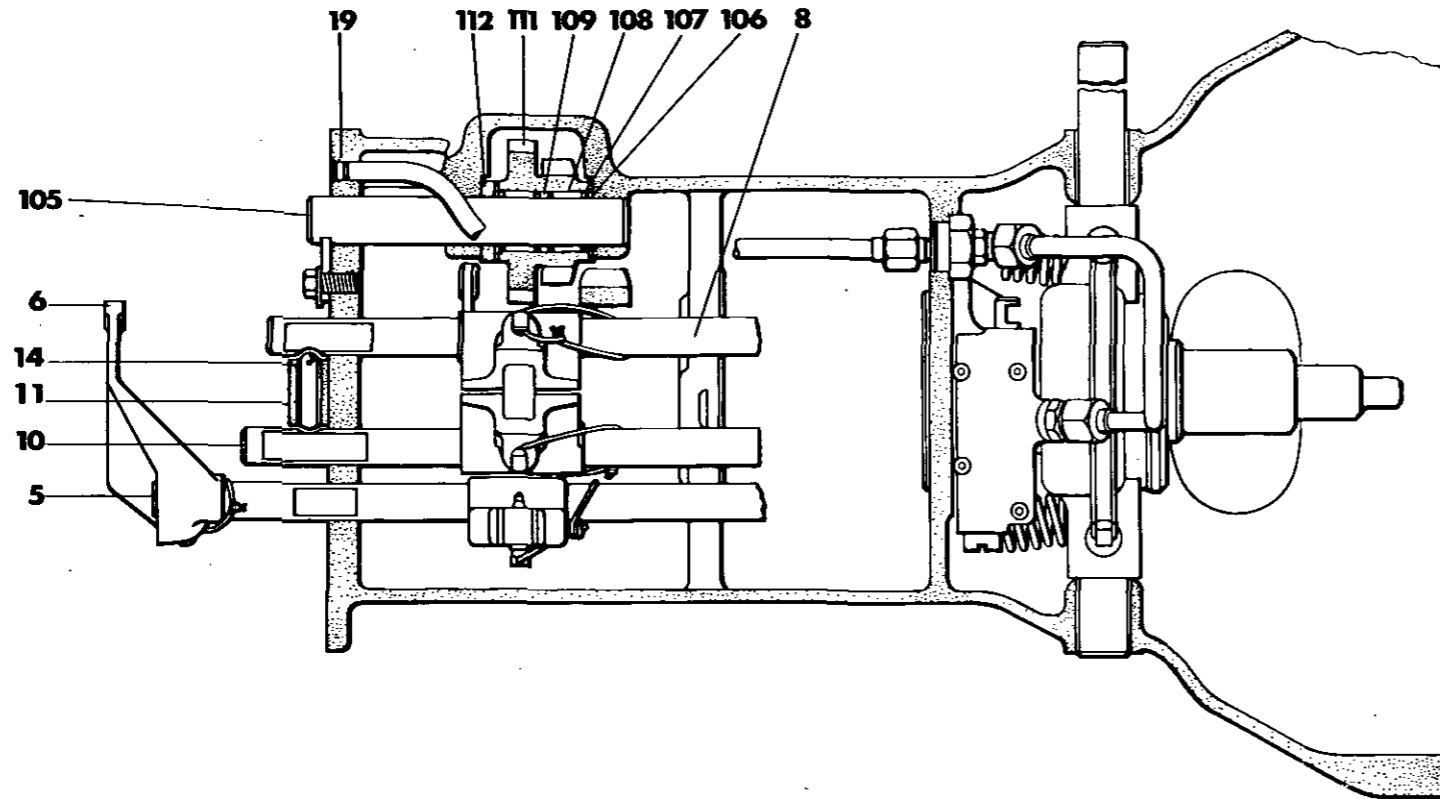


FIG. 1

## MULTI-POWER TRANSMISSION

3. Figure 4. Remove the four bolts (76) securing the transmission epicyclic unit, then remove the complete assembly.

**Refitment**

1. Figure 4. Refit the backplate (67) and the shims (68) to the dowels (71) on the ring gear (72), then locate the dowels in the holes in the transmission case. Fit the thrust washers (70 and 73) to the planetary pinion carrier (69) and locate the carrier in the ring gear. Refit the cover plate (74), as shown in Fig 5. Fit the four bolts (76) and tighten them progressively and evenly to a torque of 4,9 kg-m (35 lb ft).

**NOTE – OMIT LOCKWASHER FROM LOWER LEFT HAND BOLT.**

2. Refit the coupler and HIGH/LOW shifter fork, then refit the locking peg and locking wire.
3. Reconnect the transmission to the centre housing.

**INPUT SHAFT HOUSING AND P.T.O. INPUT SHAFT****Removal and Refitment**

4B-03-05

Special Tools Required: 270 Rail Trolley  
MF 177 Seal Protector  
MF 255B Oil Seal Replacer  
MF 256A Oil Seal Replacer  
MF 315 Needle Roller Bearing  
Removal and Refitting Tool.

**Removal.**

1. Remove the clutch release mechanism, as stated in operation 4A-03-05.
2. Fig 6. Remove the R.H. upper bolt (31) securing the Multi-Power shift linkage bracket (30) to the input housing, then remove the linkage by pulling the shifter rod downwards through the rubber bung in the top of the transmission case.
3. Disconnect the pipe (15) from the spool valve.

**NOTE – IF THE TRACTOR IS FITTED WITH A LOW CAPACITY PUMP, THE COMPLETE PIPE MUST BE REMOVED (15 AND 16, FIG 6).**

4. Remove the three remaining bolts (31) securing the input housing to the transmission case.
5. Fig 7. Withdraw the input housing (34), complete with the p.t.o. input shaft (38) from the transmission case.
6. Remove the four Allen screws (22) securing the spool valve (24) to the input housing.
7. Fig 8. Remove the large internal circlip (41) from the rear end of the input housing, then push the p.t.o. input shaft (38) out of the housing, complete with its bearing (37).
8. Lever the inner seal (40) out of the input shaft.
9. Carefully lever the front oil seal (32) from the front of the input housing with a screwdriver.
10. Fig 9A. Drive the needle roller bearing (33) out of the housing using special tool MF 315, as shown.
11. If the rear bearing (37) needs servicing remove the two rings (39) and the circlip (36) then press off the bearing.
12. Remove the 'O' ring (35) from the input housing.

Examine the bearings (33 and 37), the rings (39) and the input shaft gear teeth for signs of wear or damage and replace any defective components.

Always fit new seals (32 and 40) a new 'O' ring (35); also if possible, fit new circlip and snap ring (36 and 41).

**Refitment**

1. If necessary, press the bearing (37) on to the input shaft (38) (with the shield towards the gear teeth) and secure it with the circlip (36).
2. Fig 9B. Using special tool MF 315 drive the needle roller bearing (33) into the input housing.
3. Fig 10. Fit the new inner oil seal (40) to special tool MF 256A, then drive the seal fully into place.
4. Fig 11. Assemble special tool MF 255B, then slide the oil seal (32) (metal face first) on to the tool.
5. Remove the cone from the front of tool MF 255B.
6. Refit the two rings (39) to the input shaft (38), ensuring that the interlocking ends of the rings are properly engaged.
7. Slide the p.t.o. input shaft (38) into the housing, securing it with the large snap ring (41).
8. Carefully slide the special tool MF 255B on to the p.t.o. input shaft, then drive the seal (32) fully into place.
9. Refit the spool valve (24) to the input housing with the four Allen screws (22) and lockwashers.
10. Fit a new 'O' ring (35) to the rear spigot of the input housing.
11. Fit the seal protector MF 177 on the front of the main input shaft (54), then carefully slide the input housing assembly into place.
12. Fig 6. Refit three bolts (31), but not the R.H. upper bolt.

**NOTE – THE BOLT THREADS MUST BE COATED WITH HYLOMAR SQ32M SEALING COMPOUND.**

13. Reconnect the pipe (15) to the spool valve; OR, if the tractor is fitted with a low capacity pump, refit the complete pipe (15 and 16).
14. Push the Multi-Power shifter rod upwards through the rubber boot in the top of the transmission case, then locate and secure the shift linkage bracket (30) to the input housing, with the R.H. upper bolt.

**NOTE – COAT THE BOLT THREAD WITH HYLOMAR SQ32M SEALING COMPOUND.**

15. Refit the clutch release mechanism, as stated in operation 4A-03-05.

**P.T.O. DRIVESHAFT FRONT BEARING****Removal and Refitment**

4B-04-05

Special Tools Required:

270 Rail Trolley  
MF 218A P.t.o. Driveshaft puller  
Two 3/8 UNC x 75 mm (3 in) Bolts

**MULTI-POWER TRANSMISSION****Removal**

1. Split the tractor between the engine and gearbox.
2. Figure 12. Remove the bolt, nut and lockwasher (A) securing the left brake cross shaft lever. Remove the lever and key (B) from the shaft.
3. Withdraw the shaft, complete with pedals from the right hand side of the transmission housing.
4. Remove the four bolts (78) securing the cover plate (80).
5. Figure 13. Remove the circlip (84) and the thrust washer (85).
6. Screw two  $\frac{3}{8}$  UNC x 75 mm (3 in) bolts into the tapped holes in the bearing housing (82). Progressively and evenly tighten the bolts until the housing is extracted.
7. Remove the 'O' ring (81) from the bearing housing.
8. If the bearing (87) needs servicing, remove the circlip (86) and press out the bearing (87).

When refitting, always fit a new 'O' ring (81) and gasket (83), also fitting new circlips (84 and 86), if possible.

**Refitment**

1. Refit the p.t.o. driveshaft front bearing (87) to its housing (82) and secure it with the circlip (86).
2. Refit the housing (82) together with a new gasket (83) into the transmission case.
3. Pull the p.t.o. driveshaft (90) into its bearing (87) by using special tool MF 218A.
4. Figure 13. Secure the p.t.o. driveshaft with the thrust washer (84) and the circlip (85).
5. Using a new 'O' ring (81) refit the front cover plate (80).

**NOTE – WHEN REFITTING THE COVER PLATE AND THE BOLTS (78) USE SEALING COMPOUND 'HYLOMAR COMPOUND SQ 32M' TO SEAL THE PLATE AND BOLT THREADS.**

6. Refit the brake pedal and cross shaft assembly to the transmission case, from the right hand side.
7. Figure 12. Refit the lever and key to the brake cross shaft, then re-tighten the nut and bolt.
8. Reconnect the gearbox.

**MAIN INPUT SHAFT****Removal and Refitment**

4B-05-06

**Removal**

1. Remove the mainshaft, as stated in operation 4B-06-06.
2. Fig 14. Remove the tab located spacer (59), from the rear of the main input shaft.
3. Drive the main input shaft (54) rearwards out of the gearbox, removing the thrust washer (42) Multi-Power clutch (43) centre thrust washer (53) and the main drive pinion (57) as the shaft is withdrawn through them.
4. Remove the input overdrive pinion (52) from the Multi-Power clutch.
5. Remove the two rings (55 and 56) from the main input shaft.
6. If necessary, remove the needle roller bearing (58) from the rear end of the main input shaft.

Issue 1

**Examination.**

Check the condition of all components for wear, scoring, chipping, or any other damage. Any defective components must be replaced.

On reassembly, always fit new thrust washers (42 and 53) and new sealing rings (55 and 56).

**Reassembly.**

1. Fig 14. If necessary, fit a new needle roller bearing (58) to the rear of the main input shaft.
2. Fit the two new sealing rings (55 and 56) to their grooves in the main input shaft.
3. Refit the input overdrive gear (52) to the Multi-Power clutch.
4. Fit the main input shaft (54) into the gearbox from the rear, locating the main input gear (57) and thrust washer (53), then the clutch and overdrive assembly, locating the main input gear and the clutch on their relevant splines.
5. Refit the front thrust washer (42) on the splines, with the steel face towards the clutch.
6. Refit the tab located spacer (59) with its convex face towards the main input shaft and locating the tab in the centre web of the gear box.
7. Refit the mainshaft, as stated in operation 4B-06-06.

**FIRST/REVERSE GEAR, SECOND/THIRD GEAR AND MAINSHAFT****Removal and Refitment**

4B-06-06

Special Tools Required: MF200 Hand Press  
MF200-25 Adapter.

**Removal.**

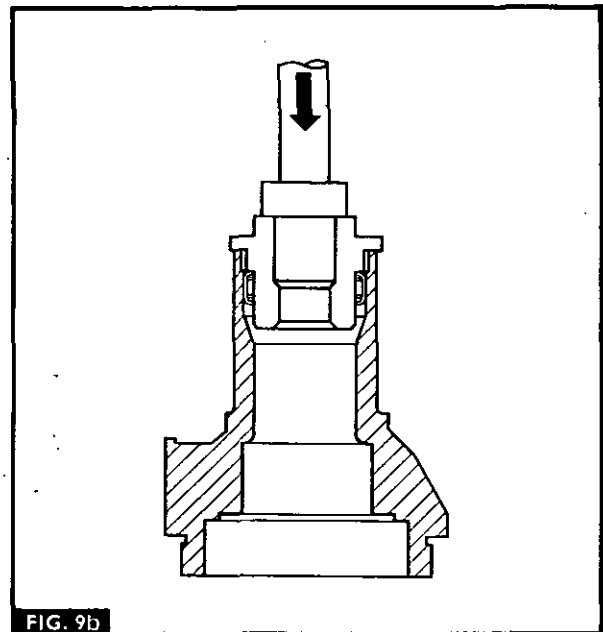
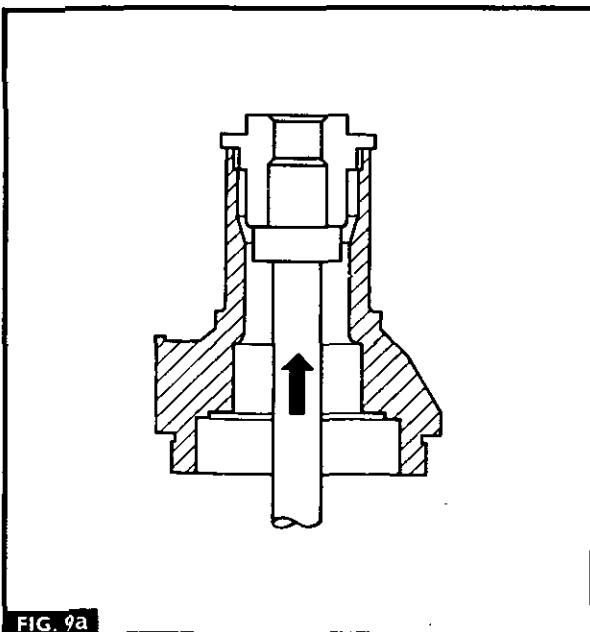
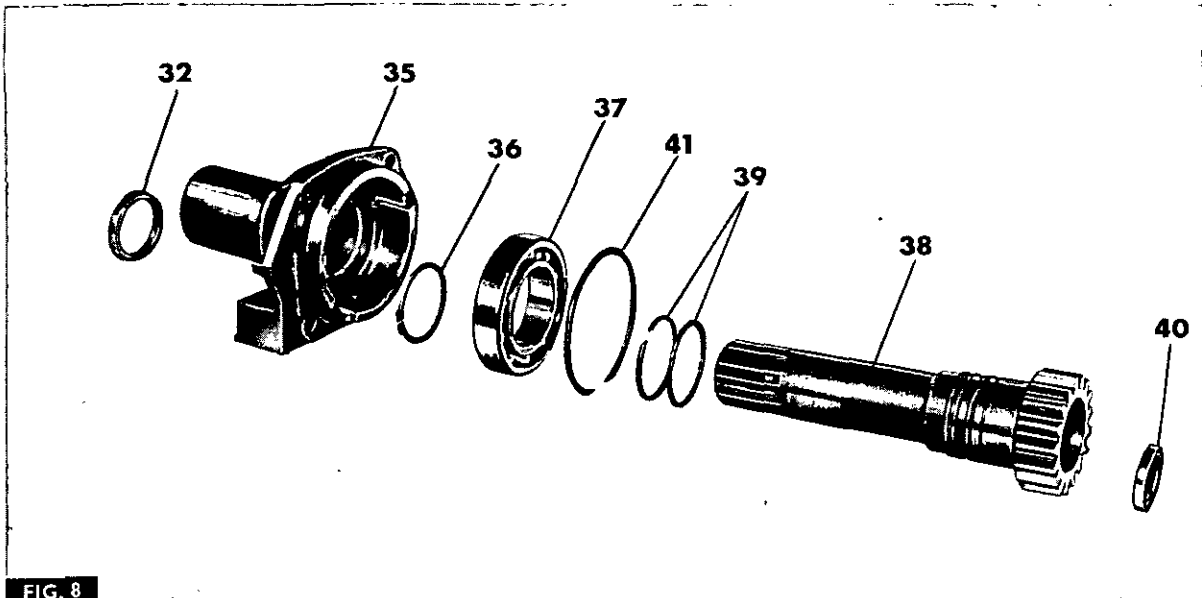
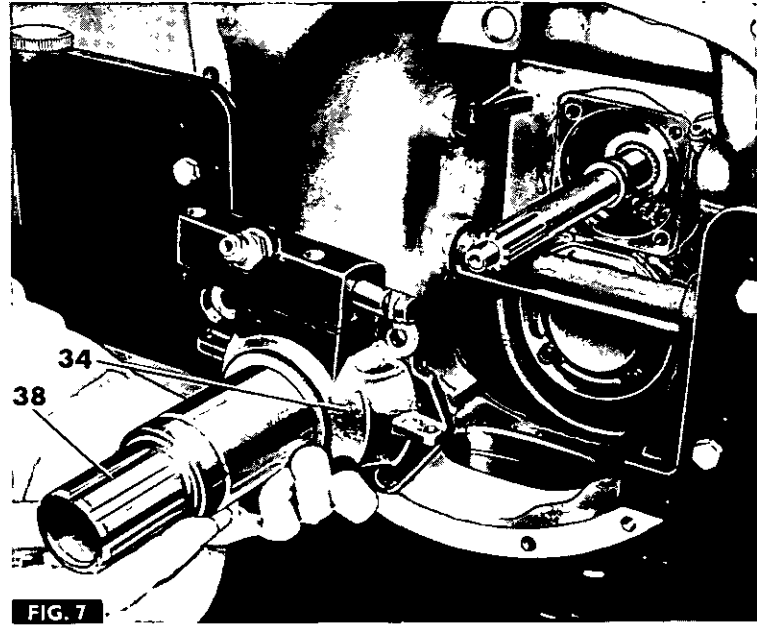
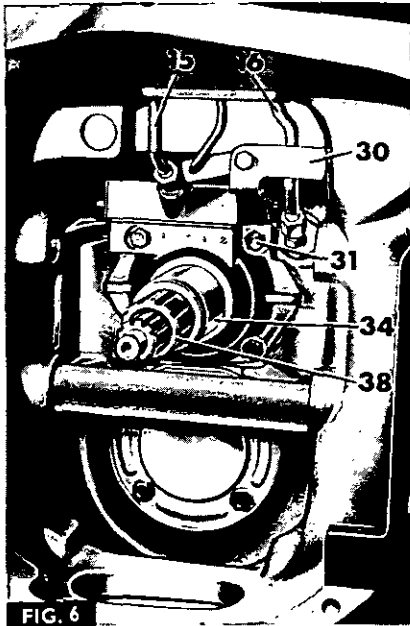
1. Remove the shifter rail mechanism, as stated in operation 4B-01-02.
2. Remove the transmission epicyclic unit, as stated in operation 4B-02-02.
3. Fig 15. Pull the mainshaft (66) rearwards to release the mainshaft from bearing (60) from the centre web in the gearbox.
4. Tilt the mainshaft upwards and drive off the bearing.
5. Withdraw the mainshaft rearwards and slide off the first/reverse gear (61) and the second/third gear (62).
6. Fig 16. Remove the circlip (63) from the mainshaft, then press off the bearing (64) using hand press MF 200 with the MF 200-25 adapter. Remove the rear circlip (65).

**WARNING – DO NOT ATTEMPT TO PRESS THE BEARING OFF THE REAR END OF THE MAINSHAFT. AS THE GEAR TEETH ARE OF A LARGER DIAMETER THAN THE SHAFT SPLINES.**

**Refitment.**

1. Refit the rear snap ring (65) to the mainshaft (66), then press on the bearing (64) using Hand Press MF 200 and adapter MF 200-25. Refit the second snap ring (63).
2. Refit the mainshaft front bearing (60) to its web in the gearbox.
3. Slide the mainshaft into the gearbox from the rear, locating the second/third gear (62) and the first/reverse gear (61) on the splines.

MULTI-POWER TRANSMISSION



MULTI-POWER TRANSMISSION

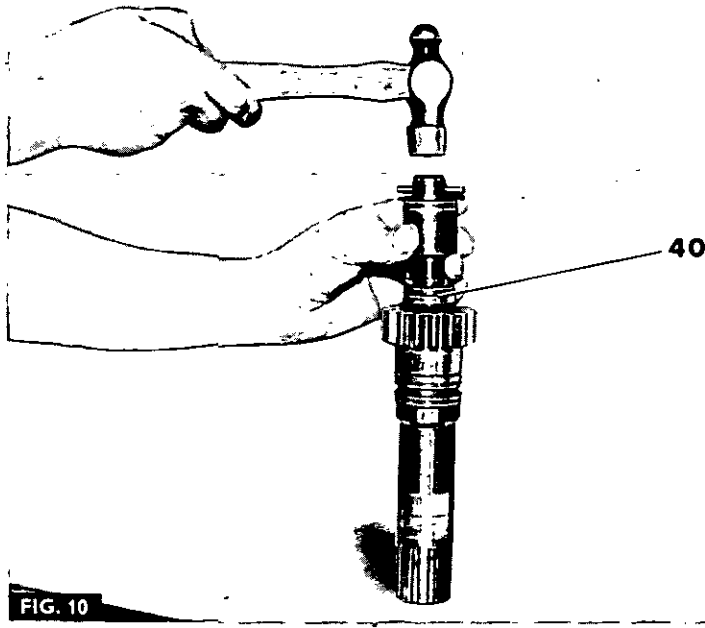


FIG. 10



FIG. 11

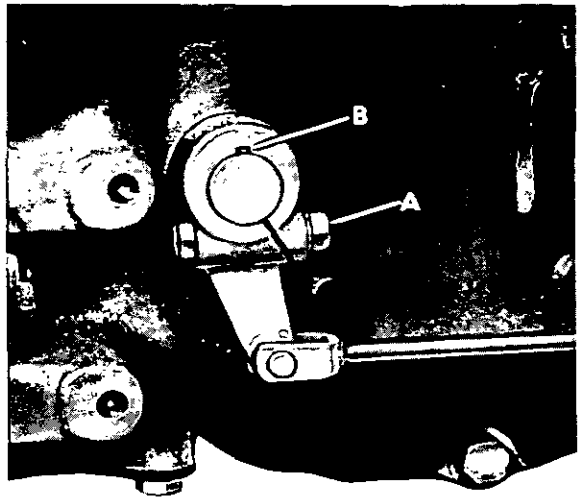


FIG. 12

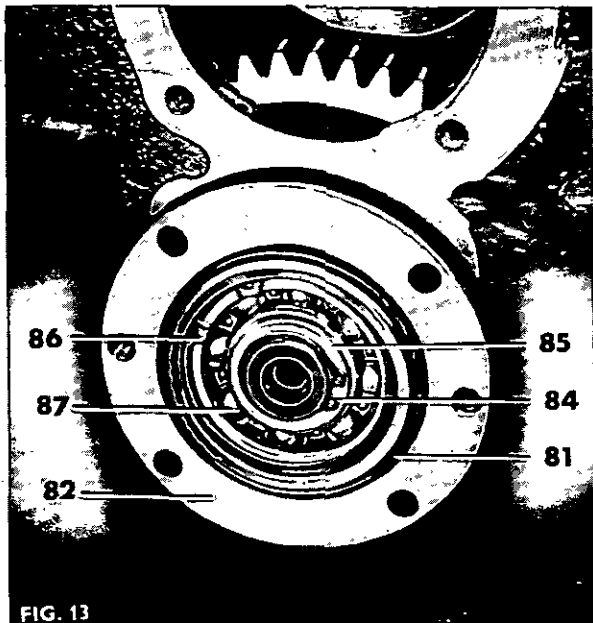


FIG. 13

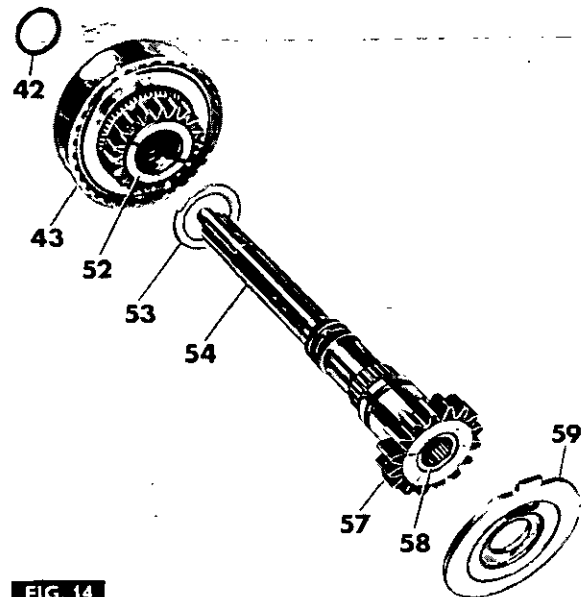


FIG. 14

## MULTI-POWER TRANSMISSION

4. Drive the mainshaft forwards, fully locating it in the front bearing (60) and the needle roller bearing in the rear end of the main input shaft.
5. Refit the transmission epicyclic unit, as stated in operation 4B-02-02.
6. Refit the shifter rail mechanism, as stated in operation 4B-01-02.

## LAYSHAFT AND LAYSHAFT GEAR

**Removal and Refitment.** 4B-07-09

**Removal.**

1. Remove the main input shaft, as stated in operation 4B-05-06
2. Remove the p.t.o. driveshaft front bearing, as stated in operation 4B-04-05.
3. Remove the p.t.o. Driveshaft (90) by withdrawing it rearwards, then lift out the p.t.o. constant mesh gear (88).
4. Remove the rear snap ring (104) from the rear end of the layshaft.
5. Fig 17. Drive the layshaft forwards, as shown, then move the snap ring (100) on to the unsplined portion of the layshaft.
6. Remove the snap ring (91) from the front end of the layshaft.
7. Fig 18. Drive the layshaft forwards, removing the overdrive layshaft gear (92), spring (93) coupler (94) main drive layshaft gear (95) and thrust washer (96).
8. Locating the layshaft rear bearing (103) in the gearbox, drive the layshaft forwards out of the gearbox, complete with the centre bearing (97).
9. Remove the second (102) and third speed (101) layshaft gears from the transmission case.
10. If necessary, remove the circlip (100) from the layshaft, press off the bearing (97), using Hand Press MF 200 and adapter MF 200-25, and remove the layshaft rear bearing (103) from the gearbox case.

**Examination.**

Check the condition of all components for wear, scoring, chipping or other damage, particularly the following:

- All gear teeth
- The coupler splines and teeth
- The main input gear coupler teeth.
- The coupler spring.

The coupler spring should have a free length of 47,5 mm (1.87 in), a compressed length of 16,5 mm (0.65 in) and a maximum load of 10,2 kg (22.5 lb) when compressed. Any defective components must be replaced. When reassembling, if possible, always use new snap rings (91, 100 and 104) and a new thrust washer (96).

**Refitment**

1. Fig 18. If necessary, press the centre bearing (97) on to the layshaft.
2. Fit a new snap ring (100) on to the layshaft, temporarily placing it on the unsplined portion of the shaft, adjacent to the first gear teeth.
3. Slide the layshaft into the gearbox from the front, locating the third (101) and second speed (102) gears on the splines.
4. Push the layshaft rearwards sufficiently far to permit fitment of the new thrust washer (96) the main input gear (95), the coupler (94), spring (93) and overdrive gear (92), then refit the front snap ring (91).

5. Pull the layshaft forwards to permit fitment of the snap ring (100) in the groove adjacent to the third speed gear (101).
6. Refit the layshaft rear bearing (103) then drive the layshaft fully rearwards and refit the rear snap ring (104). Ensure that the rear bearing is fully located. The layshaft is shown fully assembled in Fig 19.
7. Refit the p.t.o. constant mesh gear (88) into the transmission case, then refit the p.t.o. driveshaft (90).
8. Refit the p.t.o. driveshaft front bearing, as stated in operation 4B-04-05.
9. Refit the main input shaft as stated in operation 4B-05-06.

## REVERSE GEAR

**Removal and Refitment.** 4B-08-09

**Removal**

1. Remove the mainshaft as stated in operation 4B-06-06.
2. Figure 4 Release the tabwasher (114), then remove the bolt (115) and plate (113).
3. Using a dummy shaft to prevent the needle rollers from falling into the transmission case remove the reverse gear cluster (110) thrust washers (106 and 111) and distance piece (112).

**Refitment**

1. Using petroleum jelly refit the two sets of needle rollers (108) with a spacer (109) between the rows and a retaining ring (107) at each end. A smear of petroleum jelly can be used to make the thrust washers (106 and 111) and the distance piece (112) adhere to the end face of the gear cluster.
2. Insert the dummy shaft to the reverse gear cluster.
3. Figure 19. Refit the gear cluster assembly to the transmission case, then insert the shaft (105) from the rear and push out the dummy shaft.
4. Figure 4. Refit the plate (113) a new tabwasher (114) and the bolt (115) Bend up the tabwasher. The assembled gear cluster is shown in Fig 19.
5. Refit main shaft as stated in operation 4B-06-06.

## MULTI-POWER CLUTCH UNIT SERVICING.

**Removal.** 4B-09-09

1. Remove the clutch unit, by removing the main input shaft, as stated in operation 4B-05-06.
2. Fig 20. Place the clutch assembly on a flat surface, push down the retainer plate (50) and remove the snap ring (51).
3. Remove the retainer plate (50), three friction discs (48), three interplates (47) and the six return springs (49).
4. Slide the piston (46) out of the clutch housing (43).
5. If necessary, remove the piston ring (45) from the piston.



**MULTI-POWER TRANSMISSION****Examination.**

Check the condition of all components for signs of wear, scoring, damage, distortion or overheating. Check the friction plates (48) for the following dimensional tolerances:

Thickness 2,41 to 2,59 mm (0.095 to 0.102 in)

Maximum Height (permissible distortion) 2,92 mm (0.115 in)

Groove Depth 0,38, to 0,63 mm (0.015 to 0.025 in)

Check the interplates (47) as follows:

Thickness 1,67 to 1,75 mm (0.66 to 0.69 in)

Maximum Dish 0,25 mm (0.010 in)

Maximum Height (permissible distortion) 2,21 mm (0.0875 in)

Check the six coil springs (49) as follows:

Free Length 17,8 mm (0.70 in)

Working Length 12,7 mm (0.50 in)

Load at Working Length 2,98 to 3,64 kg (6.57 to 8.03 lb).

Replace any worn or damaged components, as required.

**Reassembly.**

1. If necessary, refit the piston ring (45) to the piston.
2. Fig 21. Compressing the piston rings, as shown, refit the piston to the housing
3. Fig 22. Fit one interplate (47) to the clutch housing, with the lugs on the interplate located in the housing splines immediately to the right of the six holes in the housing.
4. Fig 22. Fit the six springs (49) as shown, placing them on the interplate lugs.
5. Fig 23. Refit the three friction plates and the remaining two interplates alternately, locating the lugs on each interplate one spline further to the right of one previously fitted.

**NOTE:** – THE SPRINGS MUST ONLY CONTACT THE FIRST INTERPLATE.

6. Fig 24. Refit the retainer plate (50) and the snap ring (51).
7. Refit the Multi-Power clutch and refit the main input shaft, as stated in operation 4B-05-06.
8. Test the assembled Multi-Power system, as stated in Part 7B.

**MULTI-POWER SPOOL VALVE SERVICING.****Removal.**

4B-10-10

1. Remove the input housing and p.t.o. input shaft, as stated in items 1 to 6 of operation 4B-03-05.
2. Remove the four Allen screws (22) securing the spool valve (24) to the input housing.
3. Remove the old gasket from the top face of the input housing, or the underside of the spool valve block.
4. Fig 25. Withdraw the actuating spool (20) from the spool block (24).

5. Remove the screw (28) from the end of the spool block, then withdraw the spring (26) and the spool (25).

Examine the spools (20 and 25) and the spool block (24) for scoring, pitting and wear and replace if necessary.

**Refitment.**

1. Place the spool (25) into the spool block (24), then the spring (26) and secure with a new washer (27) and screw (28).
2. Place the adjusting spool (20) with a new seal (21) into the spool block.
3. Fit a new gasket into position on the spool block and refit the block to the input housing.
4. Secure the spool block with the four Allen screws (22).
5. Refit the input housing as stated in operation 4B-03-05.

**TRANSMISSION CASE****Removal and Refitment  
or Complete Gearbox Overhaul**

4B-11-10

**Special Tools Required:**

MF 177 Seal Protector  
MF 200 Hand Press  
MF 200-25 Adapter  
MF 218A P.t.o. Driveshaft Puller  
MF 255B Oil Seal Protector  
No. 270 Rail Trolley  
2 ½ UNC x 75 mm (3 in) Bolts

**Disassembly**

1. Remove the clutch release mechanism, as stated in operation 4A-03-05.
2. Split the tractor between the gearbox and centre housing as stated in Part 3.
3. Remove the gearbox top cover, in unit with the instrument panel, as stated in Part 3.
4. Fig 3. Release the locking wire from the 1st/rev. and 2nd/3rd shift rails (8, 10), and from the rear end of the HIGH/LOW shift rail (5).
5. Fig 4. Remove the locking peg (3) from the HIGH/LOW shift fork (6), detach the fork (6) and coupler (77).
6. Remove the gear lever stop plate (11) and interlock pin (14), secured by two bolts (13) and spring washers (12).
7. Lift out the three shift rail springs (1), and plungers (2).
8. Remove the locking pegs (3) from the 1st/rev. and 2nd/3rd shift forks (8, 10).
9. Slide the 1st/rev. and 2nd/3rd shift rails (8, 10), rearwards out of the transmission housing. Lift out the 1st/rev. and 2nd/3rd shift forks (7, 9).
11. Release the locking wire and remove the locking peg (3) from the HIGH/LOW shift selector (4).
12. Slide the HIGH/LOW shift rail (5), rearwards out of the transmission housing. Lift out the HIGH/LOW SHIFT SELECTOR (4).

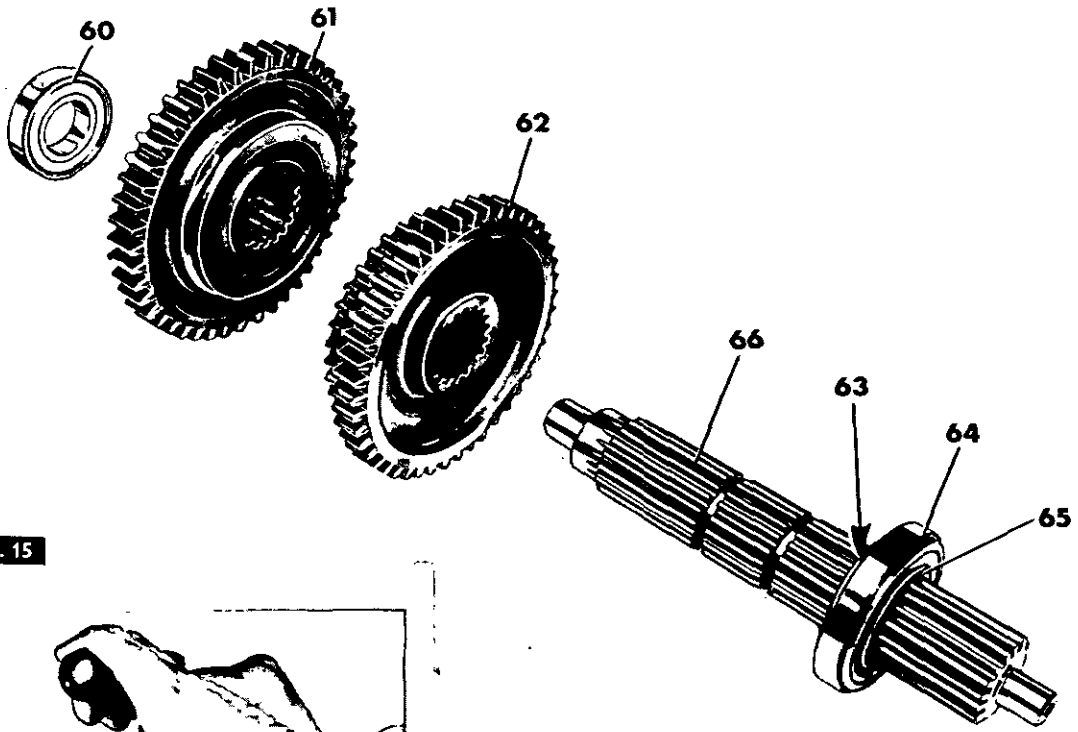


FIG. 15

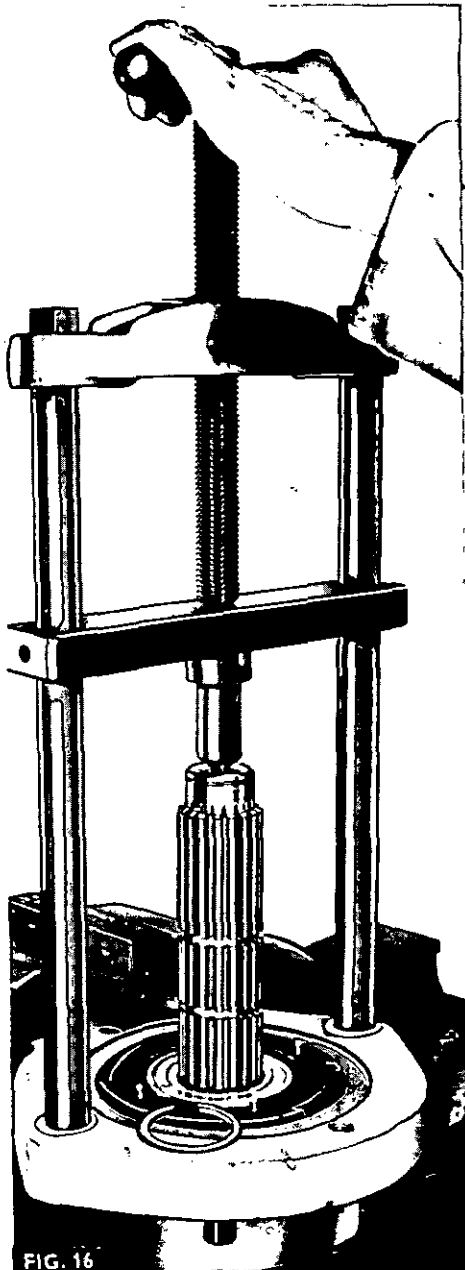


FIG. 16

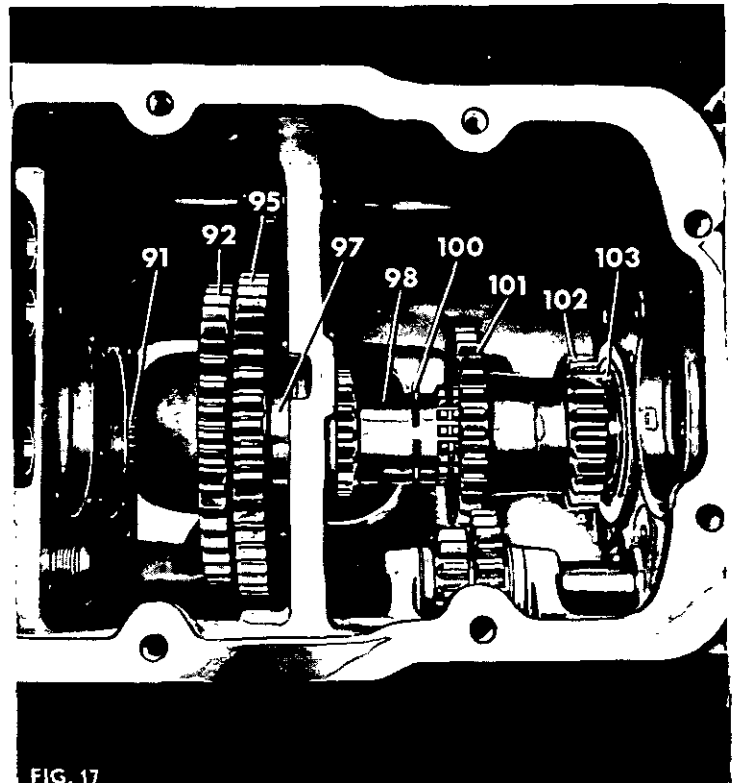


FIG. 17

MULTI-POWER TRANSMISSION

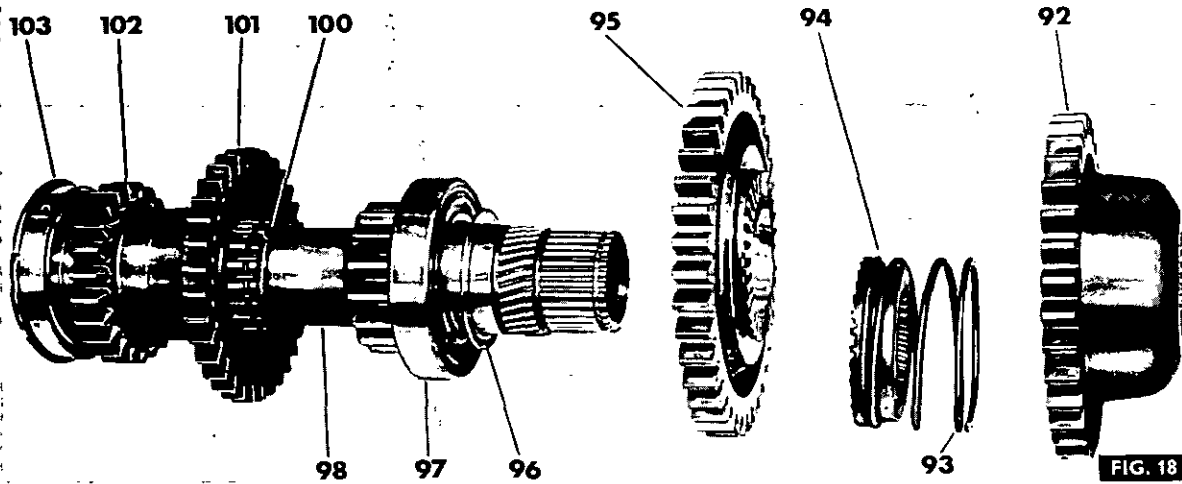


FIG. 18

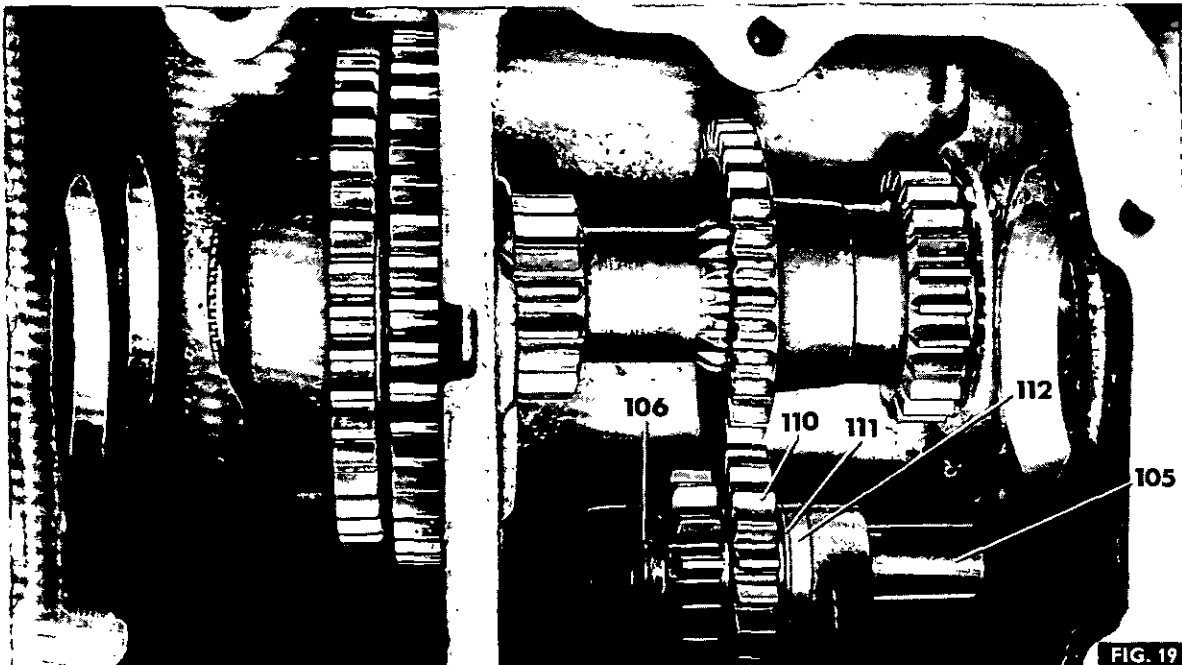


FIG. 19

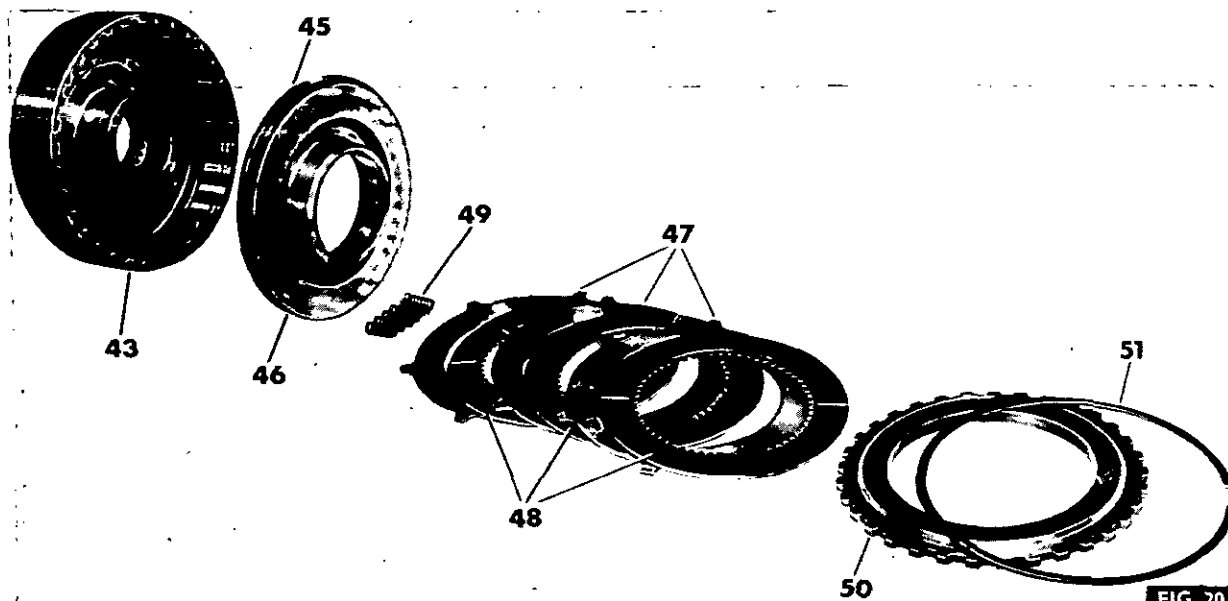


FIG. 20

## MULTI-POWER TRANSMISSION

13. Figure 4. Remove the four bolts (76) securing the transmission epicyclic unit, then remove the complete assembly.
14. Fig 6. Remove the R.H. upper bolt (31) securing the Multi-Power shift linkage bracket (30) to the input housing, then remove the linkage by pulling the shifter rod downwards through the rubber bung in the top of the transmission case.
15. Disconnect the pipe (15) from the spool valve.

**NOTE – IF THE TRACTOR IS FITTED WITH A LOW CAPACITY PUMP, THE COMPLETE PIPE MUST BE REMOVED (15 AND 16, FIG 6).**

16. Remove the three remaining bolts (31) securing the input housing to the transmission case.
17. Fig 7. Withdraw the input housing (34), complete with the p.t.o. input shaft (38) from the transmission case.
18. Remove the four Allen screws (22) securing the spool valve (24) to the input housing.
19. Fig 8. Remove the large internal circlip (41) from the rear end of the input housing, then push the p.t.o. input shaft (38) out of the housing, complete with its bearing (37).
20. Lever the inner seal (40) out of the input shaft.
21. Carefully lever the front oil seal (32) from the front of the input housing with a screwdriver.
22. Fig 9A. Drive the needle roller bearing (33) out of the housing using special tool MF 315, as shown.
23. If the rear bearing (37) needs servicing remove the two rings (39) and the circlip (36) then press off the bearing.
24. Remove the 'O' ring (35) from the input housing.
25. Figure 12. Remove the bolt, nut and lockwasher (A) securing the left brake cross shaft lever. Remove the lever and key (B) from the shaft.
26. Withdraw the shaft, complete with pedals from the right hand side of the transmission housing.
27. Remove the four bolts (78) securing the cover plate (80).
28. Figure 13. Remove the circlip (84) and the thrust washer (85).
29. Screw two  $\frac{3}{8}$  UNC x 75 mm (3 in) bolts into the tapped holes in the bearing housing (82).
30. Progressively and evenly tighten the bolts until the housing is extracted.
31. Remove the 'O' ring (81) from the bearing housing.
32. If the bearing (87) needs servicing, remove the circlip (86) and press out the bearing (87).
33. Fig 15. Pull the mainshaft (66) rearwards to release the mainshaft front bearing (60) from the centre web in the gearbox.
34. Tilt the mainshaft upwards and drive off the bearing.
35. Withdraw the mainshaft rearwards and slide off the first/reverse gear (61) and the second/third gear (62).
36. Fig 16. Remove the circlip (63) from the mainshaft, then press off the bearing (64) using hand press MF 200 with the MF 200-25 adapter. Remove the rear circlip (65).

**WARNING – DO NOT ATTEMPT TO PRESS THE BEARING OFF THE REAR END OF THE MAINSHAFT. AS THE GEAR TEETH ARE OF A LARGER DIAMETER THAN THE SHAFT SPLINES.**

37. Fig 14. Remove the tab located spacer (59), from the rear of the main input shaft.
38. Drive the main input shaft (54) rearwards out of the gearbox, removing the thrust washer (42) Multi-Power clutch (43) centre thrust washer (53) and the main drive pinion (57) as the shaft is withdrawn through them.
39. Remove the input overdrive pinion (52) from the Multi-Power clutch.
40. Remove the two rings (55 and 56) from the main input shaft.
41. If necessary, remove the needle roller bearing (58) from the rear end of the main input shaft.
42. Remove the p.t.o. Driveshaft (90) by withdrawing it rearwards, then lift out the p.t.o. constant mesh gear (88).
43. Remove the rear snap ring (104) from the rear end of the layshaft.
44. Fig 17. Drive the layshaft forwards, as shown, then move the snap ring (100) on to the unsplined portion of the layshaft.
45. Remove the snap ring (91) from the front end of the layshaft.
46. Fig 18. Drive the layshaft forwards, removing the overdrive layshaft gear (92), spring (93) coupler (94) main drive layshaft gear (95) and thrust washer (96).
47. Locating the layshaft rear bearing (103) in the gearbox, drive the layshaft forwards out of the gearbox, complete with the centre bearing (97).
48. Remove the second (102) and third speed (101) layshaft gears from the transmission case.
49. If necessary, remove the circlip (100) from the layshaft, press off the bearing (97), using Hand Press MF 200 and adapter MF 200-25, and remove the layshaft rear bearing (103) from the gearbox case.
50. Fig 20. Place the clutch assembly on a flat surface, push down the retainer plate (50) and remove the snap ring (51).
51. Remove the retainer plate (50), three friction discs (48), three interplates (47) and the six return springs (49).
52. Slide the piston (46) out of the clutch housing (43).
53. If necessary, remove the piston ring (45) from the piston.
54. Figure 4 Release the tabwasher (114), then remove the bolt (115) and plate (113).
55. Using a dummy shaft to prevent the needle rollers from falling into the transmission case, remove the reverse gear cluster (110) thrust washers (106 and 111) and distance piece (73).
56. Remove the old gasket from the top face of the input housing, or the underside of the spool valve block.
57. Fig 25. Withdraw the actuating spool (20) from the spool block (24).
58. Remove the screw (28) from the end of the spool block, then withdraw the spring (26) and the spool (25).

## MULTI-POWER TRANSMISSION

### Examination.

Check the condition of all components for signs of wear, scoring, damage, distortion or overheating.

The coupler spring should have a free length of 47,5 mm (1.87 in), a compressed length of 16,5 mm (0.65 in) and a maximum load of 10,2 kg (22.5 lb) when compressed. Any defective components must be replaced. When reassembling, if possible, always use new snap rings (91, 100 and 104) and a new thrust washer (96).

Check the friction plates (48) for the following dimensional tolerances:

Thickness 2,41 to 2,59 mm (0.095 to 0.102 in)

Maximum Height (permissible distortion) 2,92 mm (0.115 in)

Groove Depth 0,38, to 0,63 mm (0.015 to 0.025 in)

Check the interplates (47) as follows:

Thickness 1,67 to 1,75 mm (0.66 to 0.69 in)

Maximum Dish 0,25 mm (0.010 in)

Maximum Height (permissible distortion) 2,21 mm (0.0875 in)

Check the six coil springs (49) as follows:

Free Length 17,8 mm (0.70 in)

Working Length 12,7 mm (0.50 in)

Load at Working Length 2,98 to 3,64 kg (6.57 to 8.03 lb).

Replace any worn or damaged components, as required.

On reassembly, always fit new thrust washers (42 and 53) and new sealing rings (55 and 56).

Examine the bearings (33 and 37), the rings (39) and the input shaft gear teeth for signs of wear or damage and replace any defective components.

Always fit new seals (32 and 40) a new 'O' ring (35); also if possible, fit new circlip and snap ring (36 and 41).

Before fitting, lubricate all seals with petroleum jelly.

When refitting, always fit a new 'O' ring (81) and gasket (83), also fitting new circlips (84 and 86), if possible.

Examine the spools (20 and 25) and the spool block (24) for scoring, pitting and wear and replace if necessary.

### Refitment

- Using petroleum jelly refit the two sets of needle rollers (108) with a spacer (109) between the rows and a retaining ring (107) at each end. A smear of petroleum jelly can be used to make the thrust washers (106 and 111) and the distance piece (112) adhere to the end face of the gear cluster (110).
- Insert the dummy shaft in the reverse gear cluster.
- Figure 19. Refit the gear cluster assembly to the transmission case, then insert the shaft (105) from the rear and push out the dummy shaft.
- Figure 4. Refit the plate (113) a new tabwasher (114) and the bolt (115). Bend up the tabwasher. The assembled gear cluster is shown in Fig 19.

- Fig 18. If necessary, press the centre bearing (97) on to the layshaft (98).
- Fit a new snap ring (100) on to the layshaft, temporarily placing it on the unsplined portion of the shaft, adjacent to the first gear teeth.
- Slide the layshaft into the gearbox from the front, locating the third (101) and second speed (102) gears on the splines.
- Push the layshaft rearwards sufficiently far to permit fitment of the new thrust washer (96) the main input gear (95), the coupler (94), spring (93) and overdrive gear (92), then refit the front snap ring (91).
- Pull the layshaft forwards to permit fitment of the snap ring (100) in the groove adjacent to the third speed gear (101).
- Refit the layshaft rear bearing (103) then drive the layshaft fully rearwards and refit the rear snap ring (104). Ensure that the rear bearing is fully located. The layshaft is shown fully assembled in Fig 19.
- Refit the p.t.o. constant mesh gear (88) into the transmission case, then refit the p.t.o. driveshaft (90).
- If necessary, refit the piston ring (45) to the piston (46).
- Fig 21. Compressing the piston rings, as shown, refit the piston to the housing (43).
- Fig 22. Fit one interplate (47) to the clutch housing, with the lugs on the interplate located in the housing splines immediately to the right of the six holes in the housing.
- Fig 22. Fit the six springs (49) as shown, placing them on the interplate lugs.
- Fig 23. Refit the three friction plates (48) and the remaining two interplates alternately, locating the lugs on each interplate one spline further to the right of one previously fitted.

**NOTE: – THE SPRINGS MUST ONLY CONTACT THE FIRST INTERPLATE.**

- Fig 24. Refit the retainer plate (50) and the snap ring (51).
- Fig 14. If necessary, fit a new needle roller bearing (58) to the rear the main input shaft.
- Fit the two new sealing rings (55 and 56) to their grooves in the main input shaft (54).
- Refit the input overdrive gear (52) to the Multi-Power clutch.
- Fit the main input shaft (54) into the gearbox from the rear, locating the main input gear (57) and thrust washer (53), then the clutch and overdrive assembly, locating the main input gear and the clutch on their relevant splines.
- Refit the front thrust washer (42) on the splines, with the steel face towards the clutch.
- Refit the tab located spacer (59) with its convex face towards the main input shaft and locating the tab in the centre web of the gear box.
- Refit the rear snap ring (65) to the mainshaft (66), then press on the bearing (64) using Hand Press MF 200 and adapter MF 200-25. Refit the second snap ring (63).
- Refit the mainshaft front bearing (60) to its web in the gearbox.



FIG. 21

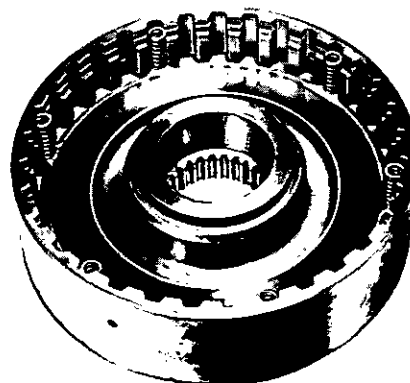


FIG. 22

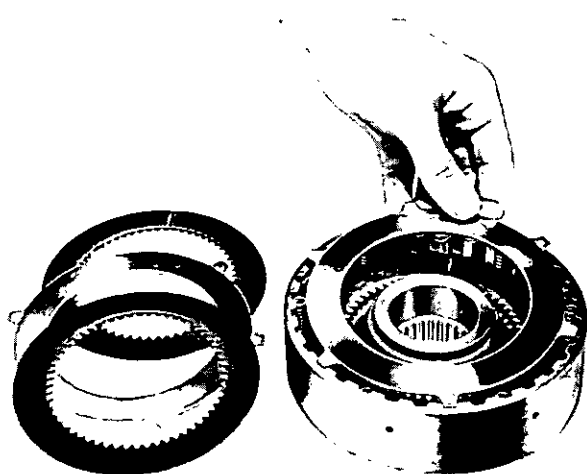


FIG. 23

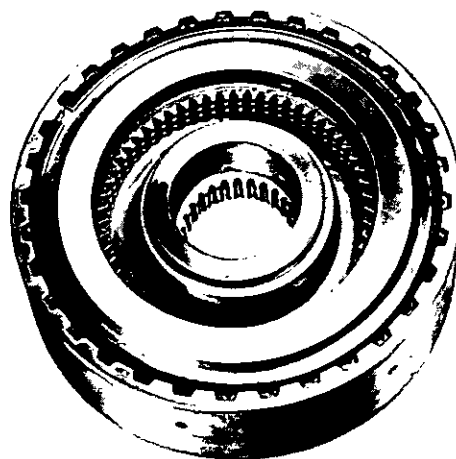


FIG. 24

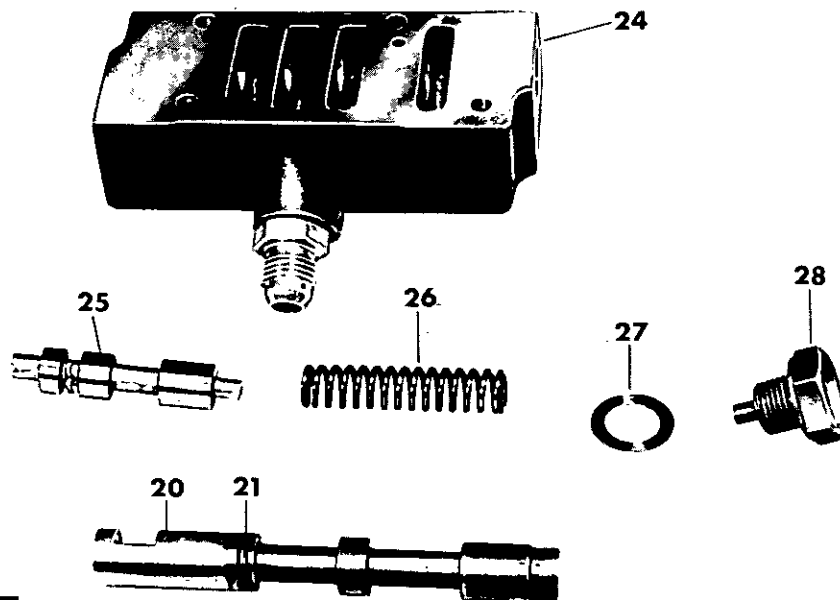


FIG. 25

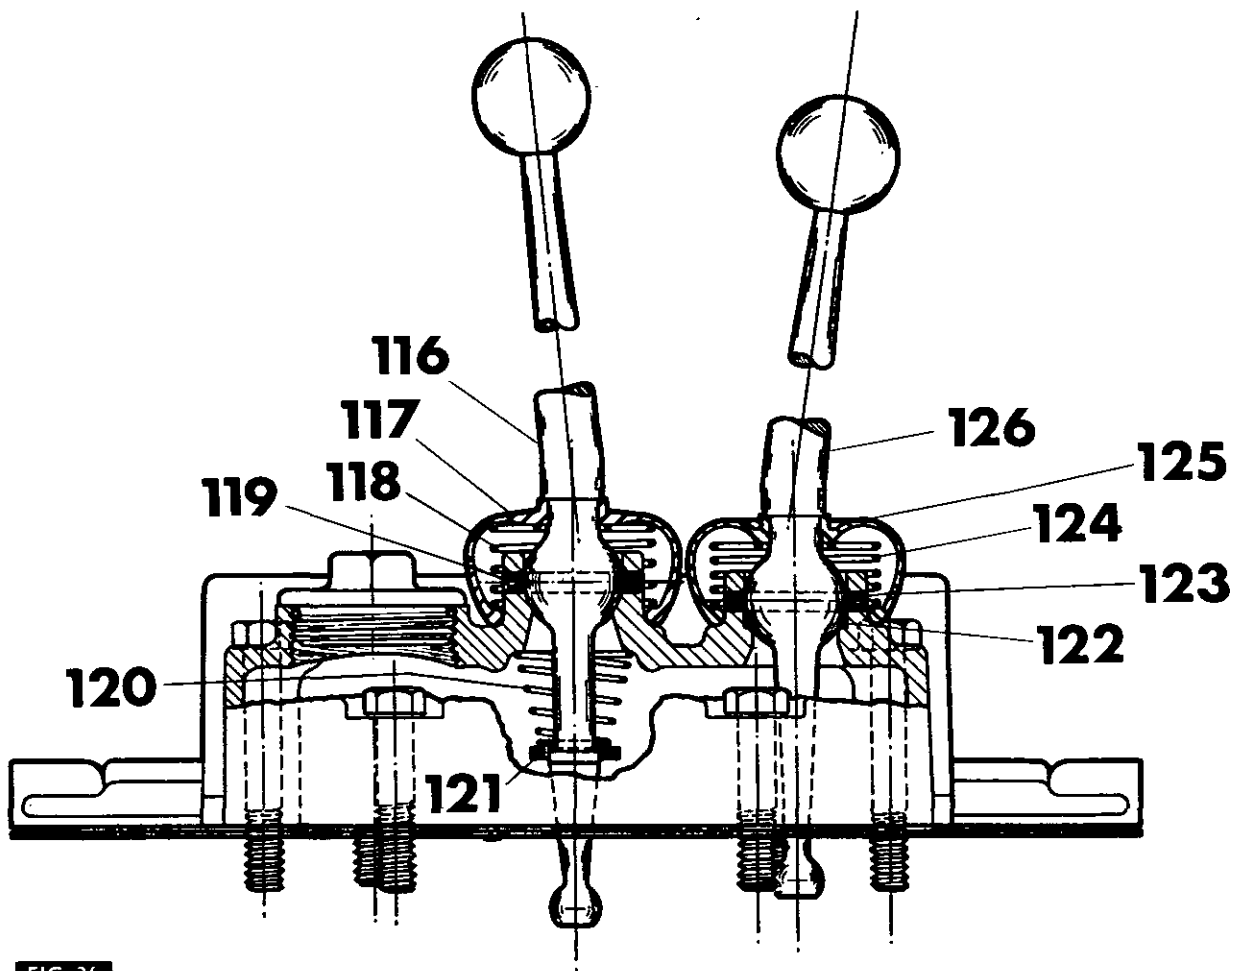


FIG. 26

## MULTI-POWER TRANSMISSION

26. Slide the mainshaft into the gearbox from the rear, locating the second/third gear (62) and the first/reverse gear (61) on the splines.
27. Drive the mainshaft forwards, fully locating it in the front bearing (60) and the needle roller bearing in the rear end of the main input shaft.
28. Refit the p.t.o. driveshaft front bearing (87) to its housing (82) and secure it with the circlip (86).
29. Refit the housing (82) together with a new gasket (83) into the transmission case.
30. Pull the p.t.o. driveshaft (90) into its bearing (87) by using special tool MF 218A.
31. Figure 13. Secure the p.t.o. driveshaft with the thrust washer (84) and the circlip (85).
32. Using a new 'O' ring (81) refit the front cover plate (80).

**NOTE – WHEN REFITTING THE COVER PLATE AND THE BOLTS (78) USE SEALING COMPOUND 'HYLOMAR COMPOUND SQ 32M' TO SEAL THE PLATE AND BOLT THREADS.**

33. Refit the brake pedal and cross shaft assembly to the transmission case, from the right hand side.
34. Figure 12. Refit the lever and key to the brake cross shaft, then re-tighten the nut and bolt.
35. Place the spool (25) in the spool block (24), then the spring (26) and secure with a new washer (27) and screw (28).
36. Place the adjusting spool (20) with a new seal (21) into the spool block.
37. Fit a new gasket into position on the spool block and refit the block to the input housing.
38. Secure the spool block with the four Allen screws (22) and spring washers (23).
39. If necessary, press the bearing (37) on to the input shaft (38) (with the shield towards the gear teeth) and secure it with the circlip (36).
40. Fig 9B. Using special tool MF 315 drive the needle roller bearing (33) into the input housing.
41. Fig 10. Fit the new inner oil seal (40) to special tool MF 256A, then drive the seal fully into place.
42. Fig 11. Assemble special tool MF 255B, then slide the oil seal (32) (metal face first) on to the tool.
43. Remove the cone from the front of tool MF 255B.
44. Refit the two rings (39) to the input shaft (38), ensuring that the interlocking ends of the rings are properly engaged.
45. Slide the p.t.o. input shaft (38) into the housing, securing it with the large snap ring (41).
46. Carefully slide the special tool MF 255B on to the p.t.o. input shaft, then drive the seal (32) fully into place.
47. Fit a new 'O' ring (35) to the rear spigot of the input housing.
48. Fit the seal protector MF 177 on the front of the main input shaft (54), then carefully slide the input housing assembly into place.

49. Fig 6. Refit three bolts (31), but not the R.H. upper bolt.

**NOTE – THE BOLT THREADS MUST BE COATED WITH HYLOMAR SQ32M SEALING COMPOUND.**

50. Reconnect the pipe (15) to the spool valve; OR, if the tractor is fitted with a low capacity pump, refit the complete pipe (15 and 16).
51. Push the Multi-Power shifter rod upwards through the rubber boot in the top of the transmission case, then locate and secure the shift linkage bracket (30) to the input housing, with the R.H. upper bolt.

**NOTE – COAT THE BOLT THREAD WITH HYLOMAR SQ32M SEALING COMPOUND.**

52. Figure 4. Refit the backplate (67) and the shims (68) to the dowels (71) on the ring gear (72), then locate the dowels in the holes in the transmission case. Fit the thrust washers (70 and 73) to the planetary pinion carrier (69) and locate the carrier in the ring gear. Refit the cover plate (74), as shown in Fig 5. Fit the four bolts (76) and tighten them progressively and evenly to a torque of 4,9 kg-m (35 lb ft).

**NOTE – OMIT LOCKWASHER (75) FROM LOWER LEFT HAND BOLT.**

53. Fit the HIGH/LOW shift rail (5), sliding the HIGH/LOW shift selector (4), onto the rail and secure to the rail with locking peg (3). Wire lock the peg to the rail.
54. Locate the 1st/rev. and 2nd/3rd shift forks (7, 9), to their respective grooves in the mainshaft gears. The two forks are identical.
55. Assemble the 1st/rev. and 2nd/3rd shift rails (8, 10), with interlock pin grooves facing each other, to the forks, and secure each fork with a locking peg (3). Wire lock the pegs to the rails. The shorter, 2nd/3rd shift rail (10) is fitted to the L.H. side.
56. Locate the HIGH/LOW shift fork (6), to the groove in the coupler (77). Assemble the coupler into the planet pinion carrier assembly (69), simultaneously sliding the fork (6), onto the HIGH/LOW shift rail (5).
57. Secure the HIGH/LOW shift fork (6), to its rail with the locking peg (3).
58. Wire lock the peg to the rail.
59. Fit the interlock pin (14), to the stop plate (11) and secure the stop plate with two bolts (13), and spring washers (12).
60. Fit the three plungers (2), pointed end downwards, and the three springs (1).
61. Refit the gearbox top cover and instrument panel assembly as stated in Part 3.

**NOTE – BOTH GEAR LEVERS AND THE GEAR SELECTOR DOGS MUST BE PLACED IN NEUTRAL.**

62. Reconnect the transmission to the centre housing, as stated in Part 3.



**MULTI-POWER TRANSMISSION**

**GEAR SHIFT LEVER**

**Removal and Refitment** 4B-12-18

Figure 26.

1. Remove the steering box.
2. Remove the eight bolts securing the shift lever support and battery platform to the transmission housing. Lift the support and platform up off the transmission housing.
3. Release the spring retaining seat (120) from the lower end of the gear lever (116), and detach the seat and spring (120).
4. Remove the gear lever rubber cover (117) and spring (118) fitted under the cover.
5. Drive out the pin (119) securing the gear lever (116) to its housing.

6. Lift out the gear lever (116).
7. Refitment is a reversal of the removing procedure.

**HIGH/LOW SHIFT LEVER**

**Removal and Refitment** 4B-13-18

Figure 26

1. Remove the rubber cover (125) and spring (124), fitted under the cover.
2. Drive out the pin (123) securing the lever (126) to its housing.
3. Lift out the lever (126) and 'O' ring (122).
4. Refitment is a reversal of the removing procedure.

## 8 SPEED TRANSMISSION

## Part 4 Section C

| Operation<br>No. | Table of Contents  | Page<br>No. |
|------------------|--|-------------|
|                  | GENERAL  | 01          |
| 4C-01-02         | SHIFTER RAIL MECHANISM<br>Removal and Refitment                                    | 02<br>02    |
| 4C-02-07         | TRANSMISSION EPICYCLIC<br>Removal and Refitment                                    | 07<br>07    |
| 4C-03-07         | CLUTCH RELEASE MECHANISM<br>Removal and Refitment                                  | 07<br>07    |
| 4C-04-07         | INPUT SHAFT HOUSING AND P.T.O. INPUT SHAFT<br>Removal and Refitment                | 07<br>07    |
| 4C-05-08         | P.T.O. DRIVESHAFT FRONT BEARING<br>Removal and Refitment                           | 08<br>08    |
| 4C-06-08         | MAIN INPUT SHAFT<br>Removal and Refitment  | 08<br>08    |
| 4C-07-08         | THIRD GEAR (MAINSHAFT)<br>Removal and Refitment                                    | 08<br>08    |
| 4C-08-09         | FIRST, SECOND, FOURTH GEAR, OR MAINSHAFT<br>Removal and Refitment                  | 09<br>09    |
| 4C-09-09         | LAYSHAFT AND LAYSHAFT GEAR<br>Removal and Refitment                                | 09<br>09    |
| 4C-10-09         | REVERSE GEAR CLUSTER<br>Removal and Refitment                                      | 09<br>09    |
| 4C-11-10         | TRANSMISSION CASE<br>REMOVAL AND REFITMENT OR<br>COMPLETE OVERHAUL OF TRANSMISSION | 10<br>10    |
| 4C-12-14         | GEARSHIFT LEVER<br>Removal and Refitment   | 14<br>14    |
| 4C-13-14         | HIGH/LOW SHIFT LEVER<br>Removal and Refitment                                      | 14<br>14    |

**GENERAL**

The transmission has four forward gears and one reverse gear which are doubled by a planetary reduction unit to give eight forward and two reverse

gears.

All gear teeth are of involute, straight cut spur type. Where movement of the gears is required, to change ratio, the gears slide on a splined shaft.

## 8 SPEED TRANSMISSION

### PRINCIPLE OF OPERATION

Figure 1 and 2

#### The Gearbox

The tractor engine drives a clutch with divided drive. Each plate is splined on to a separate gearbox shaft. Drive is transmitted to:

- The p.t.o. input shaft (15), which is hollow and has gear teeth on its rear end.
- The main drive input shaft (18) which runs inside the p.t.o input shaft has gear teeth on its rear end and is spigot located in the front end of the mainshaft (25).

#### Layshaft and P.T.O. Shaft

Rotation of the p.t.o. input shaft (15), drives the p.t.o. constant mesh gear (52) which is splined on to the p.t.o. drive shaft (53). When the main input shaft (18) rotates, the drive is transmitted to the constant mesh gear (55) which is splined on to the layshaft (58). The layshaft, which is hollow and externally splined, has 15 gear teeth machined on its outside diameter to provide the first gear layshaft pinion. It is supported on two ball races located in the centre web and rear wall of the transmission case. Mounted on the layshaft are three other gears, (56, 61 and 62) with 28, 33 and 23 teeth, which are third, fourth and second gears respectively. None of the layshaft gears are free to move along the shaft, being retained, either by abutment with other gears, bearings or snap rings.

#### Mainshaft

The mainshaft (25) is externally splined, has gear teeth at its rear end and has a bore at its front end to accept the spigot on the main input shaft and its needle roller bearing (24). Mounted on the mainshaft are three gears (one being a compound gear having two sets of teeth): When viewed from the front of the gearbox, these gears have 41 teeth (20); 45 teeth (26) and 36/46 teeth (27) to mesh with the layshaft gears and give third, first, fourth and second gears respectively. The mainshaft gears are moved into and out of mesh by selector forks (86, 88 and 92), the gears sliding on the mainshaft splines.

The engine speed is reduced by the selected gear ratio (variable reduction) and by the input constant mesh gears (fixed reduction).

#### Reverse Gear Cluster

Reverse gear is achieved by the engagement of a compound gear cluster (71) with 13/21 teeth. The 21 tooth half of the gear is in constant mesh with the fourth gear pinion (33 teeth) on the layshaft. The 45 tooth first gear pinion on the mainshaft is moved into, or out of mesh with the 13 tooth portion of the reverse gear cluster.

The reverse gear, by acting as an idler gear between the layshaft and the mainshaft drive, reverses the rotation of the mainshaft, epicyclic unit and the final drive.

#### Epicyclic Unit

The basic four forward and one reverse gears are doubled by the epicyclic unit mounted on the rear end of the transmission case. The epicyclic unit comprises a ring gear (34), inside which run three planetary pinions mounted in a carrier (36). The

planetary pinions are driven by gear teeth on the end of the mainshaft (25) which acts as the sun gear. When the mainshaft rotates, the planetary pinions also rotate, but being meshed with the teeth on the inside of the ring gear the rotational speed of the carrier is reduced by a ratio of 4 : 1.

To transmit the drive from the epicyclic unit to the rear axle, a driveshaft is connected by the coupler (39), either directly to the gearbox mainshaft (HIGH range), or to the planetary pinion carrier (36) (LOW range).

Movement of the dual range selector lever actuates the rod attached to the selector fork (95) which moves the coupler (39) into, or out of mesh with either the end of the mainshaft (25) or the planetary pinion carrier (36). Between the two engaged (HIGH or LOW range) positions, there is a neutral position, where the coupler splines are disengaged from both the mainshaft and the planetary pinion carrier.

### SHIFTER RAIL MECHANISM

#### Removal and Refitment

4C-01-02

Figure 3

Special Tools Required: 270 Rail Trolley

#### Removal

- Split the tractor between the gearbox and the centre housing.
- Remove the gearbox top cover, in unit with the instrument panel.
- Figure 5. Remove the two bolts (78) securing the interlock mechanism. Lift off the locking ball carrier (80) and the two plates (83 and 84). Store the balls carefully.
- Cut the locking wire and remove the shifter rails.

#### Refitment

- Refit the third speed selector rod (89), fitting first the engagement dog (90), then the selector fork (88), engaging the selector fork in the third speed sliding gear (20).
- Rotate the rod until the engagement dog locking pin can be fitted. Tighten the locking pin and secure it with locking wire.
- Rotate the rod to bring the engagement dog to the top, then fit the locking pin and locking wire to the selector fork (88).
- Slide the interlock cross peg (81) into the third speed selector rod.
- Refit the first/reverse and the second/fourth gear selector rods and forks (86, 87, 91 and 92), engaging the forks in the gears. Refit the locking pegs (85) and the locking wires.
- Figure 4. Refit the HIGH/LOW selector rod assembly (92 and 95) engaging the selector fork (95) in the coupler (39) and locating the coupler in the end of the planetary pinion carrier (36).
- Figure 3. Refit the locking peg and locking wire to the HIGH/LOW engagement dog (94).
- Refit the stop plate (84), the plain plate (83), the locking ball carrier (80) and the locking balls (82), securing them with the two bolts and spring washers (78 and 79), tightened to a torque of 4.9 kg/m (35 lb ft).



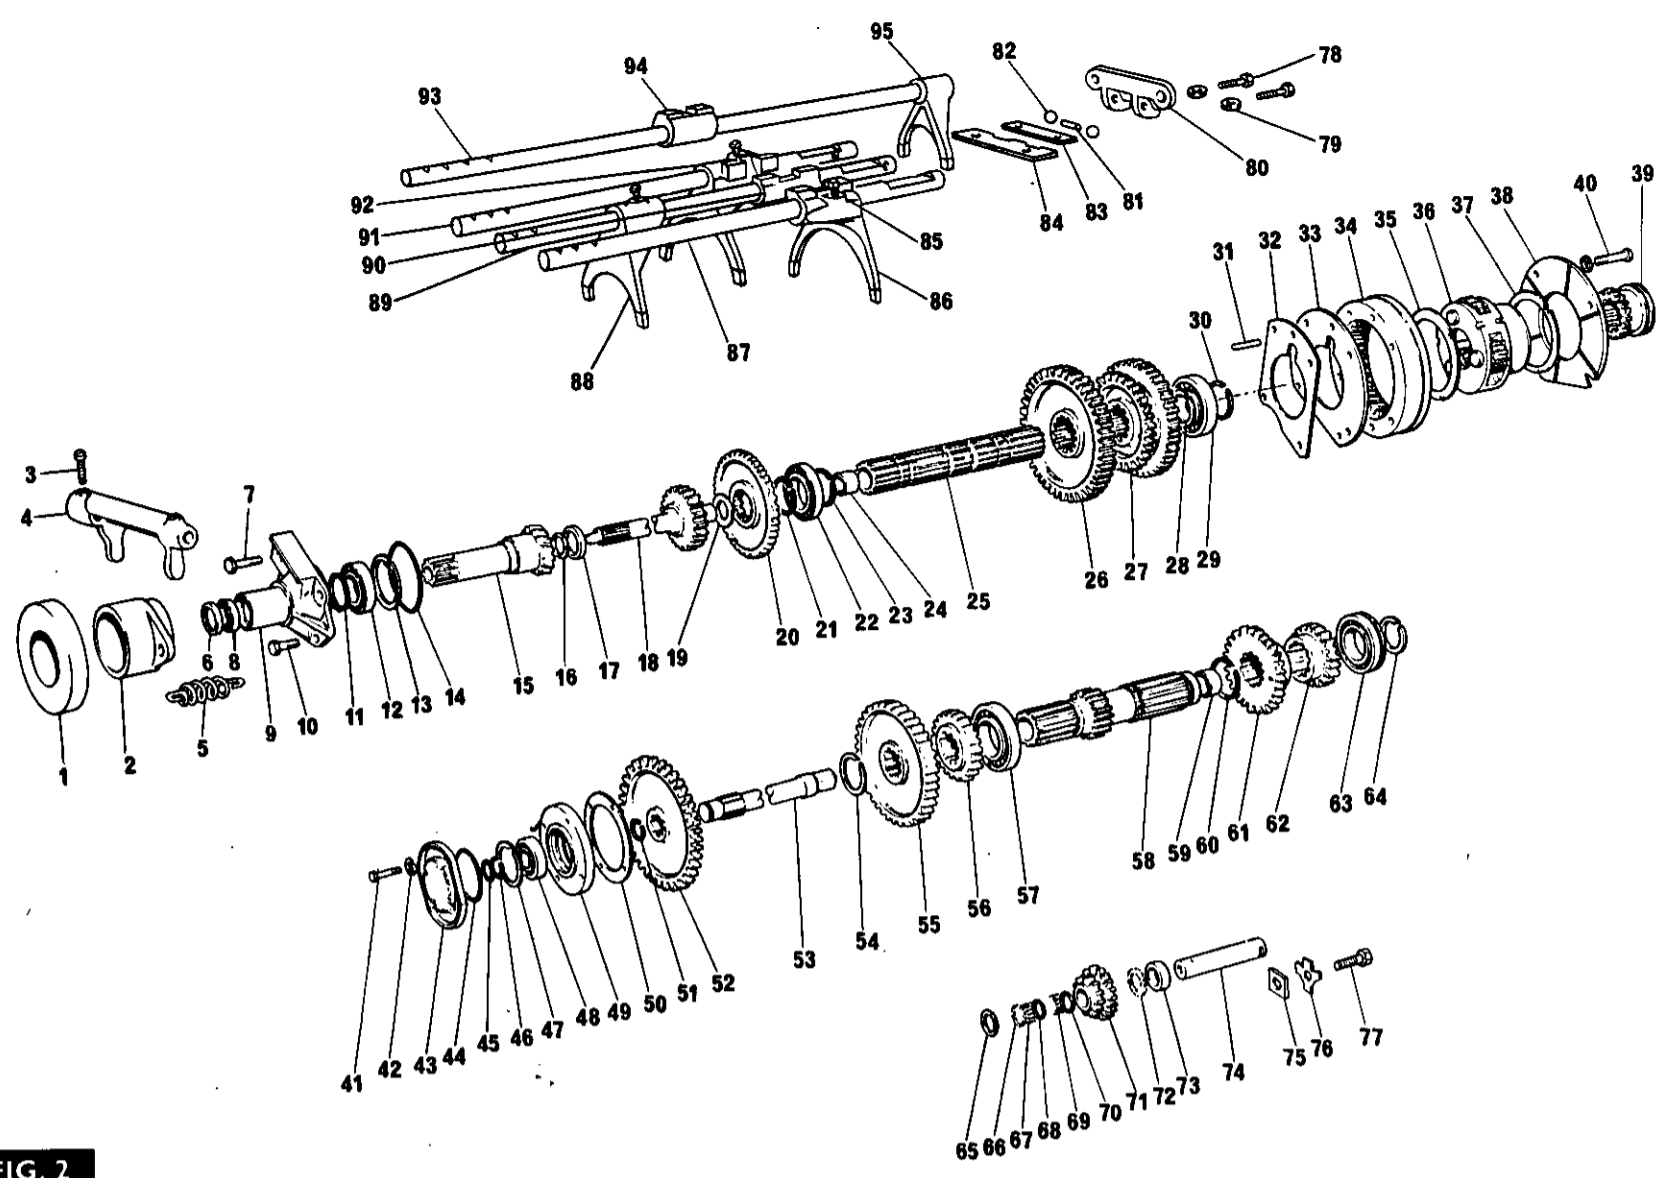


FIG. 2

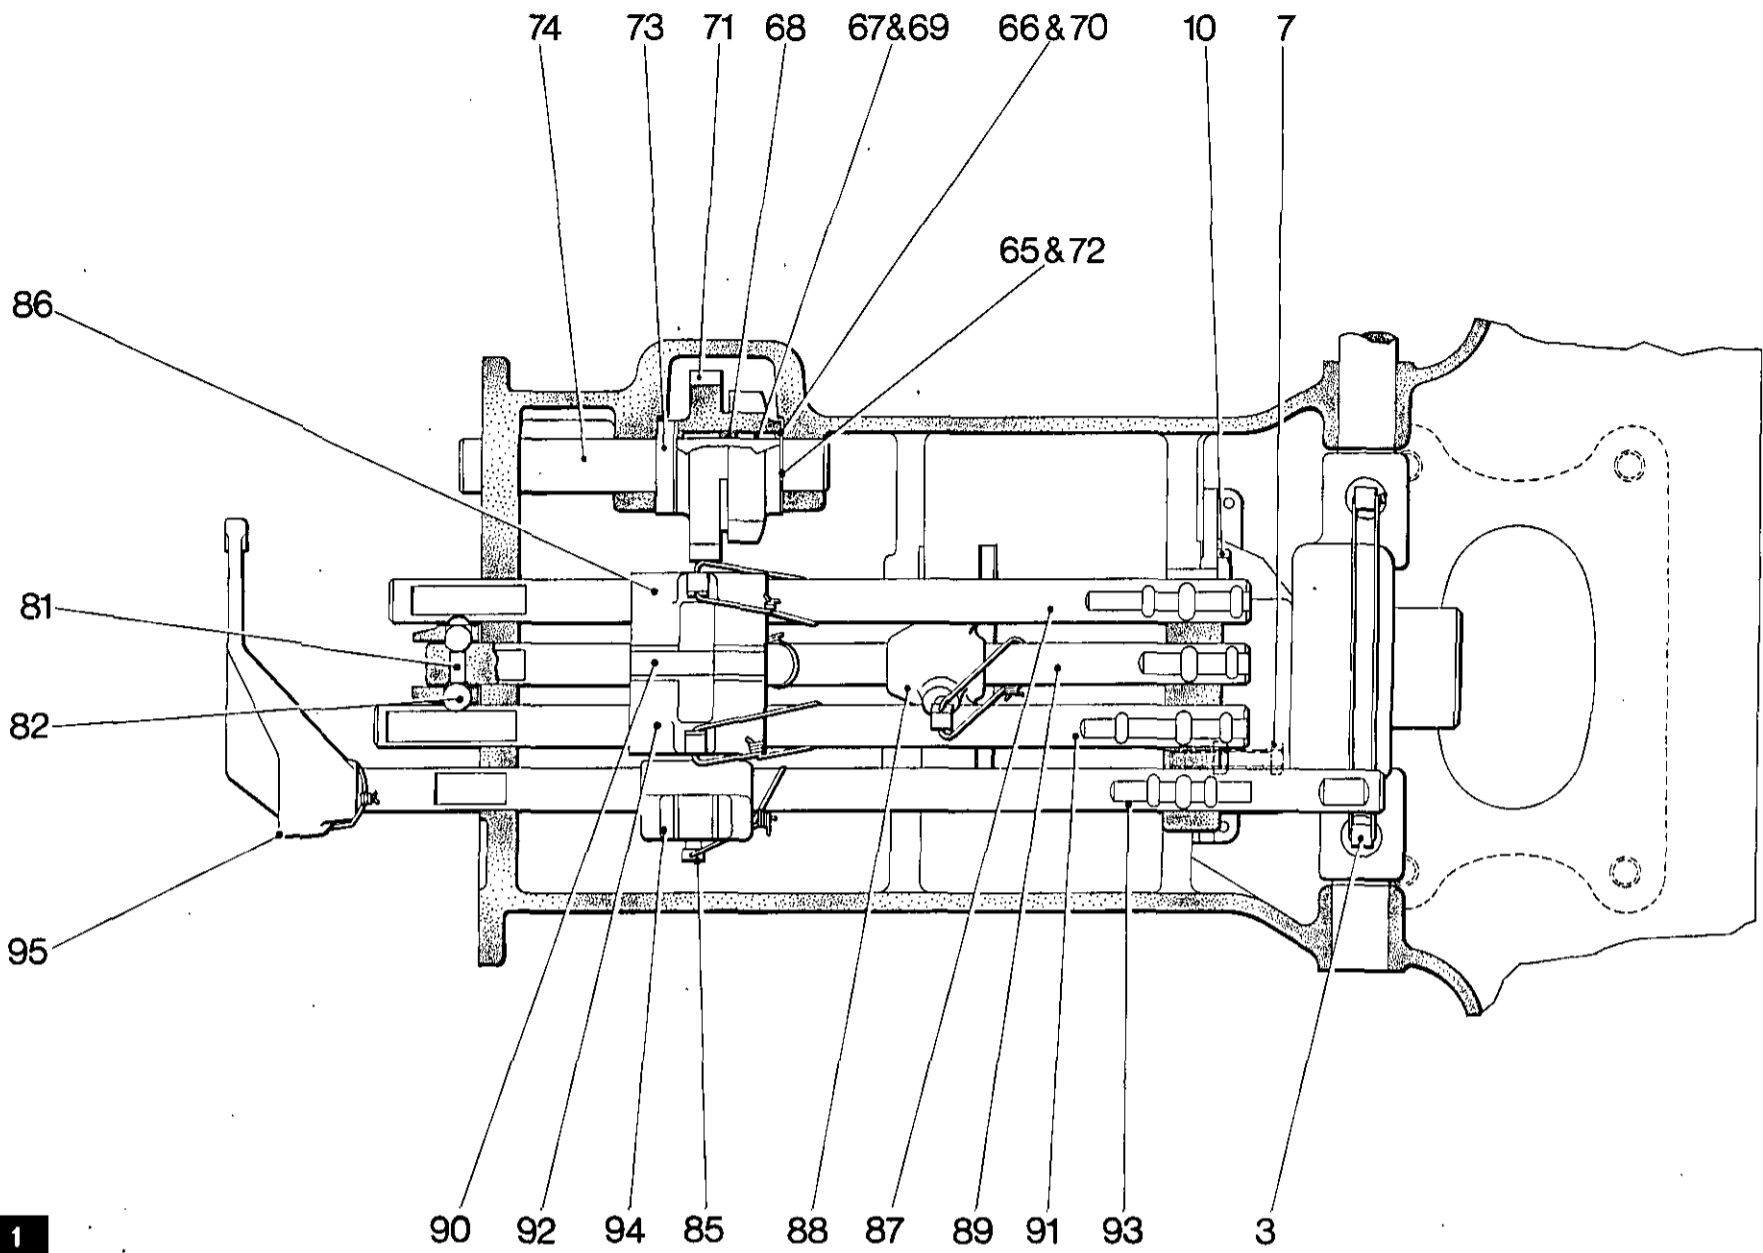

**FIG. 1**

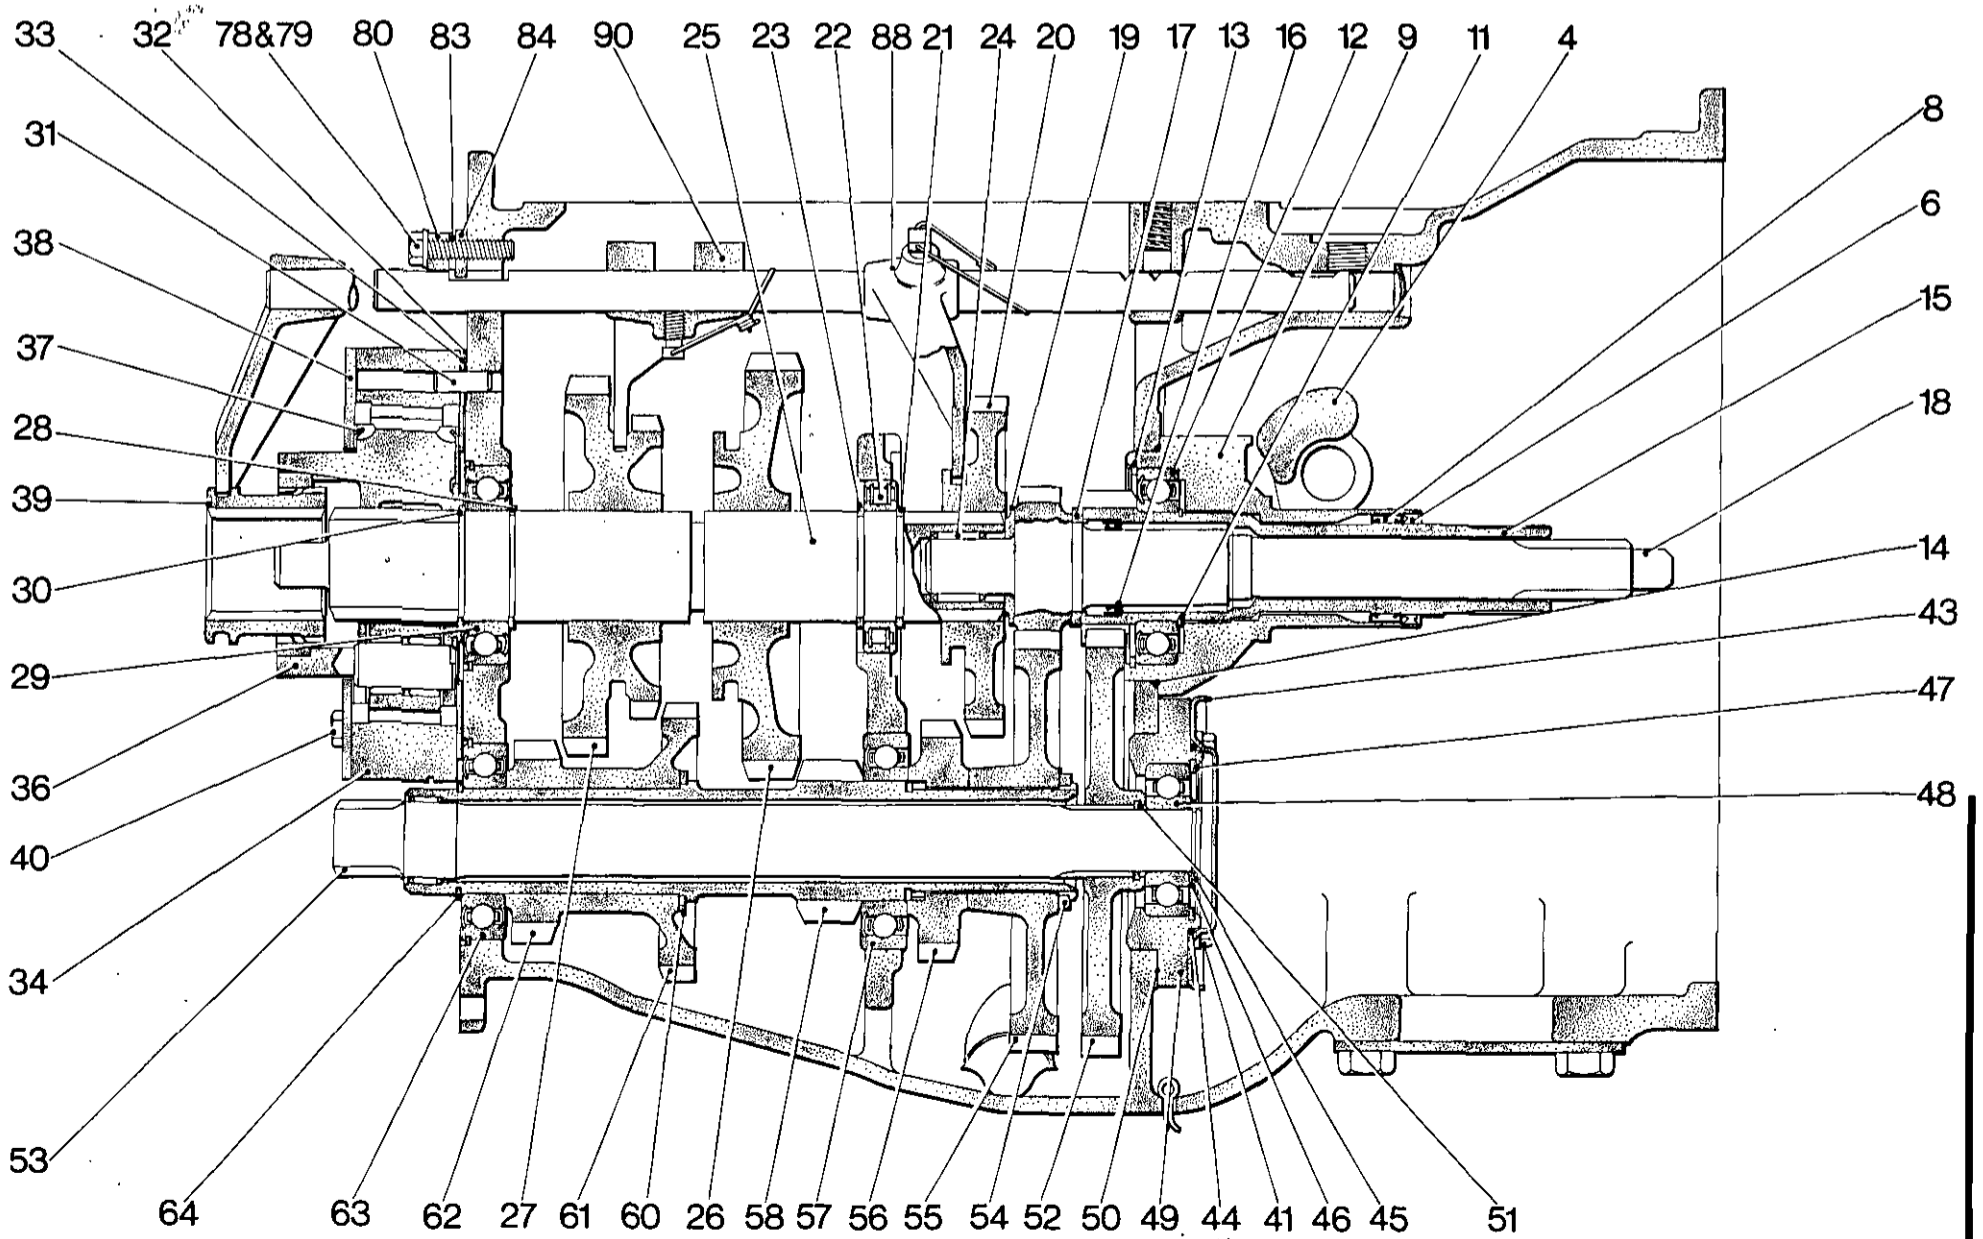

**FIG. 1**

8 SPEED TRANSMISSION

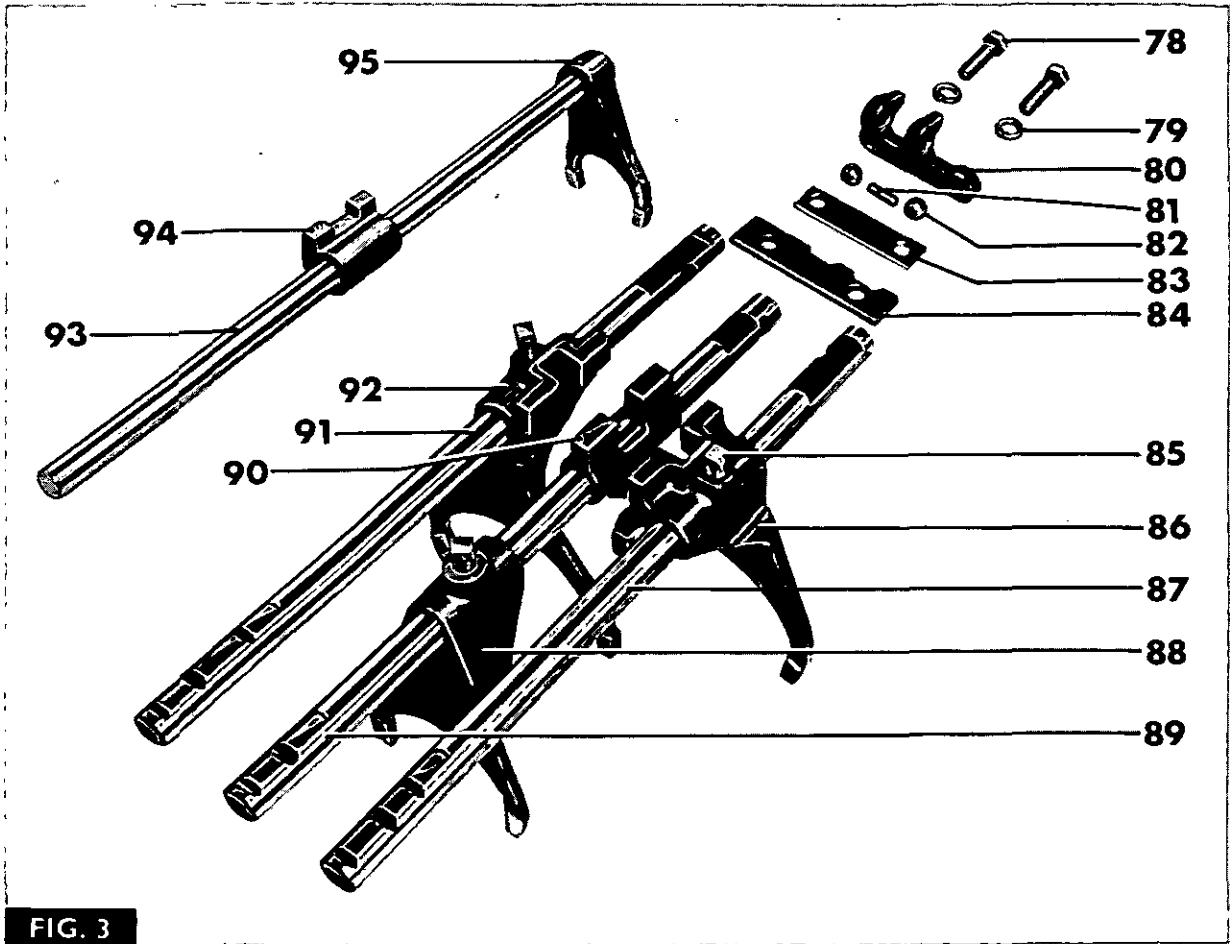


FIG. 3


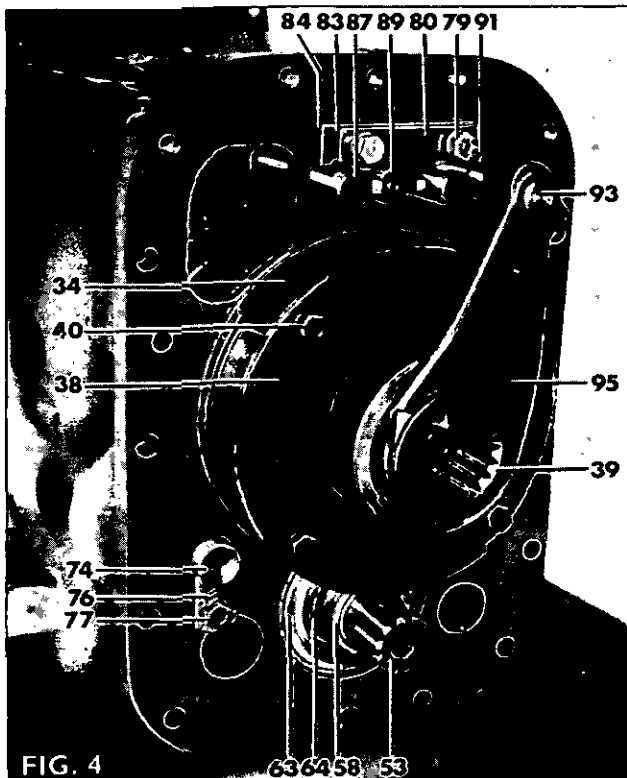


FIG. 4

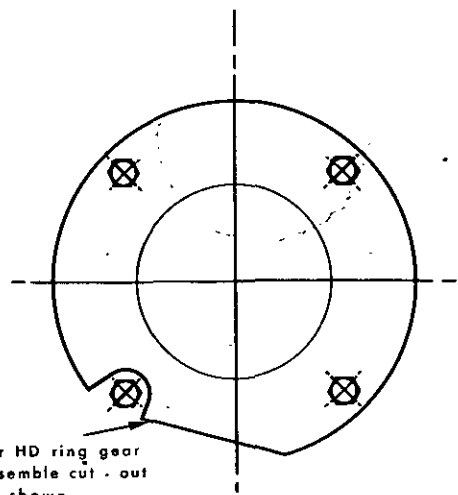636458 53



For HD ring gear  
assemble cut - out  
as shown.

FIG. 5

8 SPEED TRANSMISSION

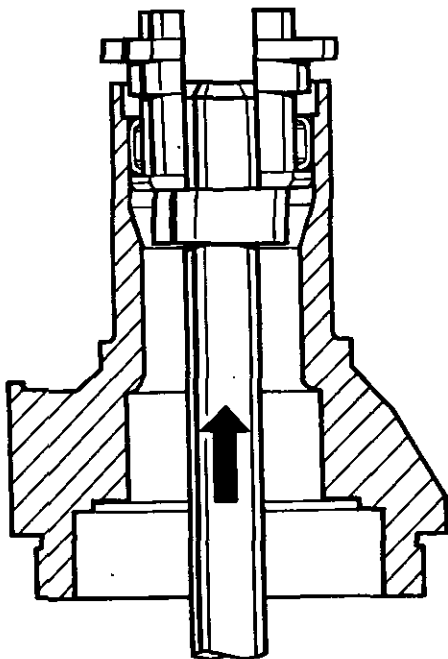
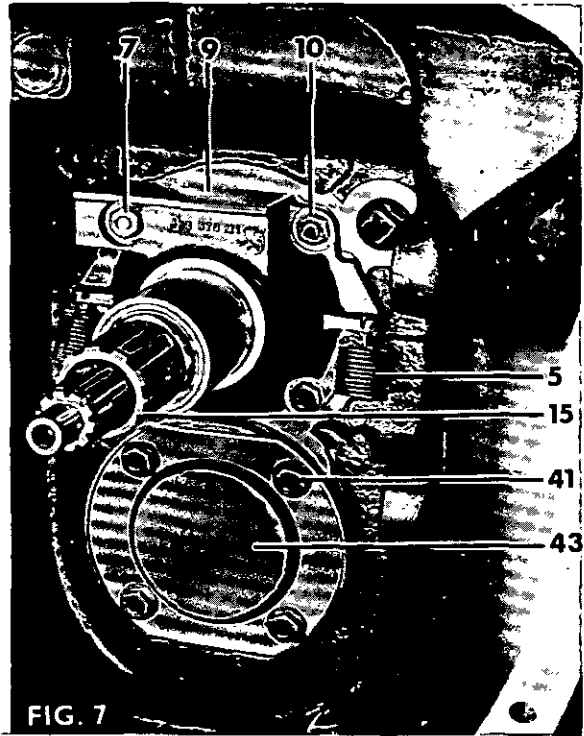
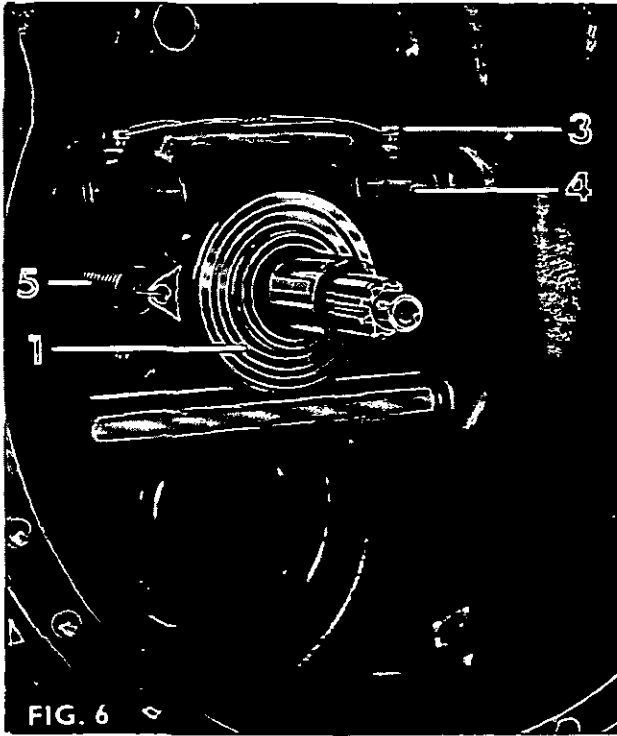


FIG. 8 a

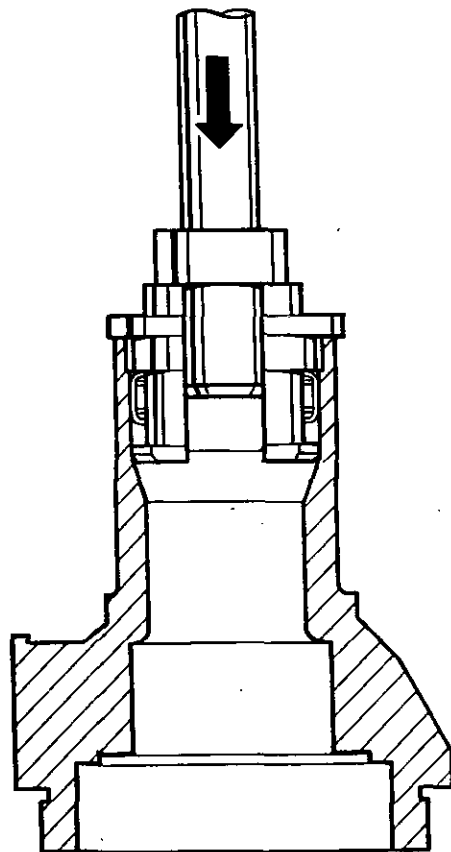


FIG. 8 b

## 8 SPEED TRANSMISSION

9. Refit the gearbox top cover and instrument panel assembly.

**NOTE – BOTH GEAR LEVERS, AND THE GEAR SELECTOR DOGS SHOULD BE PLACED IN NEUTRAL.**

10. Reconnect the centre housing to the gearbox.

**TRANSMISSION EPICYCLIC**

**Removal and Refitment** 4C-02-07

Figure 4

Special Tools Required: 270 Rail Trolley

**Removal**

1. Split the tractor between the transmission and the centre housing.
2. Remove the locking wire and peg from the HIGH/LOW shifter fork, then remove the fork and coupler.
3. Figure 4. Remove the four bolts (40) securing the transmission epicyclic unit, then remove the complete assembly.

**Refitment**

1. Figure 4. Refit the backplate (33) and the shims (32) to the dowels (31) on the ring gear (34), then locate the dowels in the holes in the transmission case. Fit the thrust washers (35 and 37) to the planetary pinion carrier (36) and locate the carrier in the ring gear. Refit the cover plate (38), as shown in Fig. 5. Fit the four bolts (40) and tighten them progressively and evenly to a torque of 4.9 kg/m (35 lb ft).

**NOTE – OMIT LOCKWASHER FROM LOWER LEFT HAND BOLT.**

2. Refit the coupler and HIGH/LOW shifter fork, then refit the locking peg and locking wire.
3. Reconnect the transmission to the centre housing.

**CLUTCH RELEASE MECHANISM**

**Removal and Refitment** 4C-03-07

Figure 6

Special Tools Required: 270 Rail Trolley

**Removal**

1. Split the tractor between the engine and transmission.
2. Figure 6. Remove the two springs (5) securing the release bearing carrier, then slide the carrier and release bearing (1) off the input shaft retainer housing.
3. Cut the locking wire and remove the two locking pegs (3) from the clutch release fork (4). Remove the clutch release shafts and fork.

**Refitment**

1. Figure 3. Refit the clutch release shafts and the clutch release fork (4) refitting the locking pegs (3) and the locking wire.
2. Lubricate the splines of the input shafts and the clutch release bearing carrier bore with special grease Mobilgrease Super.

3. Slide the clutch release bearing (1) and carrier (2) on to the input housing, and refit the two return springs (5).

4. Ensure that all gears are in neutral, then reconnect the engine to the transmission.

**INPUT SHAFT AND P.T.O. INPUT SHAFT**

**Removal and Refitment** 4C-04-07

Figures 7, 8A & 8B

Special Tools Required: 270 Rail Trolley

MF 177 Seal Protector

MF 255B Oil Seal Replacer

MF 256A Oil Seal Replacer

MF 315 Needle Roller Bearing Removal and Refitting Tool

**Removal**

1. Remove the clutch release mechanism as stated in operation 4C-03-07
2. Figure 7. Remove the four bolts (7 and 10) and withdraw the input shaft retainer housing (9), complete with the p.t.o. input shaft (15).
3. Remove the large internal circlip (13) from the rear end of the input housing (9), then push the p.t.o. input housing (15) out of the housing, complete with its bearing (12).
4. Lever the inner seal (16) from the input shaft.
5. Carefully lever the front oil seal (6) from the front of the input housing (9) with a screwdriver.
6. Figure 8A. Using special tool MF 315, drive the needle roller bearing (8) out of the input housing.
7. If the bearing needs servicing, remove the external circlip (11) from the input shaft, then press off the bearing (12).

**Refitment**

1. If necessary, press the bearing (12) on to the front of the p.t.o. input shaft (15) and secure it with the circlip (11).
2. Figure 8B. Refit the needle roller bearing (8) to the input housing (9) using special tool MF 315 as shown.
3. Fit a new front oil seal (6) to the input housing, using special tool MF 255B. Lubricate the oil seal and the needle roller bearing with petroleum jelly.
4. Fit a new oil seal (16) to the p.t.o. input shaft (15), using special tool MF 256A. Lubricate the seal with petroleum jelly.
5. Carefully insert the p.t.o. input shaft (15) into the housing (9). Push the bearing (12) fully into place and secure it with the large internal circlip (13).
6. Place the seal protector MF 177 on the front of the main input shaft (18).
7. Fit a new 'O' ring (14) on to the rear spigot of the input retainer housing (9), then carefully feed the input housing (9) over the seal protector and locate the input housing in the front of the transmission case.
8. Figure 7. Refit the four bolts (7 and 10) using 'Hylomar Compound SQ 32M' to seal the threads.



**8 SPEED TRANSMISSION****P.T.O. DRIVESHAFT FRONT BEARING****Removal and Refitment** 4C-05-08

**Special Tools Required:** 270 Rail Trolley  
Two  $\frac{3}{8}$  UNC x 75 mm (3 in)  
Bolts.  
MF 218A P.t.o. Drive shaft  
Puller.

**Removal**

1. Split the tractor between the engine and gearbox.
2. Figure 9. Remove the bolt, nut and lockwasher (A) securing the left brake cross shaft lever. Remove the lever and key (B) from the shaft.
3. Withdraw the shaft, complete with pedals from the right hand side of the transmission housing.
4. Remove the four bolts (41) securing the cover plate (43).

**NOTE - IF THE 'O' RING (44) IS CAUSING LEAKAGE, PROCEED NO FURTHER.**

5. Figure 10. Remove the circlip (45) and the thrust washer (46).
6. Screw two  $\frac{3}{8}$  UNC x 75 mm (3 in) bolts into the tapped holes in the bearing housing (49). Progressively and evenly tighten the bolts until the housing is extracted.
7. Remove the 'O' ring (44) from the bearing housing.
8. If the bearing (48) needs servicing, remove the circlip (47) and press out the bearing (48).

**Refitment**

1. Refit the p.t.o. driveshaft front bearing (48) to its housing (49) and secure it with the circlip (47).
2. Figure 10. Refit the housing (49) together with a new gasket (50) into the transmission case as shown.
3. Pull the p.t.o. driveshaft into its bearing (48) by using special tool MF 218A.
4. Figure 10. Secure the p.t.o. driveshaft with the thrust washer (46) and the circlip (45).
5. Using a new 'O' ring (44), refit the front cover plate (43) as shown in Fig. 7.

**NOTE - WHEN REFITTING THE COVER PLATE AND THE BOLTS (41) USE SEALING COMPOUND 'HYLOMAR COMPOUND SQ 32M' TO SEAL THE PLATE AND BOLT THREADS.**

6. Refit the brake pedal and cross shaft assembly to the transmission case, from the right hand side.
7. Figure 9. Refit the lever and key to the brake cross shaft, then re-tighten the nut and bolt.
8. Reconnect the gearbox.

**MAIN INPUT SHAFT****Removal and Refitment** 4C-06-08

**Special Tools Required:** MF 218A P.t.o. Driveshaft  
Puller

**Removal**

1. Remove the clutch release mechanism as stated in operation 4C-03-07
2. Remove the input housing and p.t.o. input shaft as stated in operation 4C-04-07

3. Remove the shifter rail mechanism as stated in operation 4C-01-02
4. Remove the p.t.o. driveshaft front bearing cover (43) as stated in operations 1 to 4 of operation 4C-05-08
5. Figure 4. Withdraw the p.t.o. drive shaft (53) from the rear end of the layshaft, thus allowing the p.t.o. constant mesh gear to drop into the transmission case.
6. Remove the main input shaft (18) complete with the thrust washers (17 and 19) and lift the p.t.o. constant mesh gear (52) from the transmission case. Remove the lockring (51) from the constant mesh gear only if necessary.

**Refitment**

1. Lower the p.t.o. constant mesh gear (52) into the transmission case but do not yet fit the p.t.o. driveshaft (53).
2. Insert the main input shaft (18), complete with its thrust washers (17 and 19) into the transmission case, locating the shaft spigot in the needle roller bearing (24) located in the end of the mainshaft. Engage the input shaft gear teeth with those of the constant mesh gear (55).
3. Refit the p.t.o. driveshaft (53) from the rear, locating the p.t.o. constant mesh gear on the splines and then pull the end of the shaft through the bearing (48) using special tool MF 218A.
4. Figure 4. Secure the p.t.o. driveshaft with the thrust washer (46) and the circlip (45).
5. Using a new 'O' ring (44), refit the front cover plate (43) as shown in Fig. 10.

**NOTE - WHEN REFITTING THE COVER PLATE AND THE BOLTS (41) USE SEALING COMPOUND 'HYLOMAR COMPOUND SQ 32M' TO SEAL THE PLATE AND THE BOLT THREADS.**

6. Refit the brake pedal and cross shaft assembly to the transmission case, from the right-hand side.
7. Figure 4. Refit the lever and key to the brake cross shaft, then re-tighten the nut and bolt.
8. Refit the shifter rail mechanism as stated in operation 4C-01-02
9. Refit the input housing and p.t.o. input shaft assembly as stated in operation 4C-04-07
10. Refit the clutch release mechanism as stated in operation 4C-03-07

**THIRD GEAR (MAINSHAFT)****Removal and Refitment** 4C-07-08**Removal**

1. Remove the shifter rail mechanism as stated in operation 4C-01-02.
2. Remove the transmission epicyclic unit as stated in operation 4C-02-07
3. Remove the clutch release mechanism as stated in operation 4C-03-07
4. Remove the input housing as stated in operation 4C-04-07
5. Remove the main input shaft as stated in operation 4C-06-08
6. Using a soft faced drift, drive the mainshaft (25) rearwards to permit removal of the third gear pinion (20).

## 8 SPEED TRANSMISSION

**Refitment**

1. Drive the mainshaft forwards through the centre bearing, locating the third gear pinion (20) on the splines as the shaft emerges.
2. Refit the main input shaft as stated in operation 4C-06-08
3. Refit the input housing as stated in operation 4C-04-07
4. Refit the clutch release mechanism as stated in operation 4C-03-07
5. Refit the transmission epicyclic unit as stated in operation 4C-02-07
6. Refit the clutch release mechanism as stated in operation 4C-01-02

**FIRST, SECOND OR FOURTH GEAR OR MAINSHAFT****Removal and Refitment** 4C-08-09

Special Tools Required: MF 200 Hand Press  
MF 200-25 Adapter

**Removal**

1. Remove the third gear pinion as stated in operation 4C-07-08
2. Remove the snap ring (21), then drive the mainshaft through the centre bearing (22).
3. Remove the snap ring (23) and withdraw the main shaft rearwards, progressively removing the first/reverse pinion (26) and the second/fourth pinion (27).
4. Figure 11. Remove the circlip (28) from the mainshaft, then press off the bearing (29) using hand press MF 200 with the MF 200-25 adapter, then remove the circlip (30).

**WARNING** – DO NOT ATTEMPT TO PRESS THE BEARING OFF THE REAR END OF THE MAINSHAFT, AS THE GEAR TEETH ARE OF A LARGER DIAMETER THAN THE SHAFT SPLINES.

**Refitment**

1. Refit the mainshaft rear snap ring (30) from the front end, then press the bearing (29) on to the mainshaft (25) using press MF 200 (see figure 9). Refit the second snap ring (28).
2. Refit the mainshaft centre bearing (22) to the web in the transmission case.
3. Figure 12. Feed the mainshaft into the transmission case from the rear, progressively fitting the fourth/second compound sliding gear (27), the first/reverse sliding gear (26) and the snap ring (23). Insert the mainshaft through the centre bearing.
4. Refit the third gear pinion as stated in operation 4C-07-08

**LAYSHAFT AND LAYSHAFT GEAR****Removal and Refitment** 4C-09-09

Special Tools Required: MF 200 Hand Press  
MF 200-25 Adapter

**Removal**

1. Remove the mainshaft and gears as stated in operation 4C-07-08
2. Figure 4. Remove the snap ring (64) from the rear of the layshaft.

3. Figure 13. Tap the layshaft forwards to expose the snap ring (60), forward of the fourth gear pinion (61). Move the snap ring (60) forwards on to the unsplined portion of the layshaft.
4. Remove the snap ring (54) from the front of the layshaft, then tap the layshaft backwards until the constant mesh gear (55) and the third speed gear (56) can be removed.
5. Drive the layshaft forward out of the case, progressively removing the second and fourth gear pinions (62 and 61) from the transmission case.
6. Using the hand press MF 200 and the adapter MF 200-25, press the centre bearing (57) from the layshaft (58).

**Refitment**

1. Press the layshaft centre bearing (57) on to the layshaft (58) using MF 200 and MF 200-25.
2. Refit the snap ring (60) on to the layshaft (58) placing it temporarily on the unsplined portion of the shaft to the rear of the first gear teeth.
3. Feed the layshaft into the transmission case, from the front, progressively fitting the fourth gear pinion (61) and the second gear pinion (62). Push the layshaft rearwards to permit fitment of the third gear pinion (56) and the constant mesh gear (55).
4. Refit the snap ring (54) to secure the constant mesh gear (55) the third gear pinion (56) and the bearing (57).
5. Tap the layshaft forwards slightly to allow the snap ring (60) to be fitted to its groove adjacent to the second gear pinion (61).
6. Carefully drive the layshaft rearwards and fit the rear snap ring (64).
7. Refit the mainshaft as stated in operation 4C-07-08

**REVERSE GEAR CLUSTER****Removal and Refitment** 4C-10-09**Removal**

1. Remove the mainshaft as stated in operation 4C-07-08
2. Figure 4. Release the tabwasher (76), then remove the bolt (77).
3. Using a dummy shaft to prevent the needle rollers from falling into the transmission case, remove the reverse gear cluster (71) thrust washers (65 and 72) and distance piece (73).

**Refitment**

1. Using petroleum jelly refit the two sets of needle rollers (67 and 69), with a spacer (68) between the rows and a retaining ring (66 and 70) at each end. A smear of petroleum jelly can be used to make the thrust washers (65 and 72) and the distance piece (73) adhere to the end face of the gear cluster.
2. Insert the dummy shaft to the reverse gear cluster.
3. Figure 12. Refit the gear cluster assembly to the transmission case, then insert the shaft (74) from the rear and push out the dummy shaft.
4. Figure 4. Refit the plate (75), a new tabwasher (76) and the bolt (77). Bend up the tabwasher. The assembled gear cluster is shown in Fig. 13.

## 8 SPEED TRANSMISSION

TRANSMISSION CASE REMOVAL AND REFIT-  
MENT OR COMPLETE GEARBOX OVERHAUL

## Removal and Refitment

4C-11-10

Special Tools Required: MF 177 Seal Protector  
MF 200 Hand Press  
MF 200-25 Adapter  
MF 218A P.T.O. Shaft Puller  
MF 255B Oil Seal Replacer  
MF 256A Oil Seal Replacer  
MF 315 Needle Roller  
Bearing Remover/Refitting  
Tool V.L. Churchill 50 ton  
Hydraulic Press.  
(Alternative to MF 200)

## Disassembly

1. Drain the transmission oil.
2. Split the tractor at the engine.
3. Remove the steering box and instrument panel as an assembly.
4. Split the tractor at the centre housing.
5. Figure 6. Remove the two springs (5) securing the release bearing carrier, then slide the carrier and release bearing (1) off the input shaft retainer housing.
6. Cut the locking wire and remove the two locking pegs (3) from the clutch release fork (4). Remove the clutch release shafts and fork.
7. Figure 8. Remove the bolt, nut and lockwasher (A) securing the left brake cross shaft lever. Remove the lever and key (B) from the shaft.
8. Withdraw the shaft, complete with pedals from the right hand side of the transmission housing.
9. Figure 4. Remove the two bolts (78) securing the interlock mechanism. Lift off the locking ball carrier (80) and the two plates (83 and 84). Store the balls carefully.
10. Cut the locking wire and remove the shifter rails.
11. Figure 4. Remove the four bolts (40) securing the transmission epicyclic unit, then remove the complete assembly.
12. Figure 7. Remove the four bolts (7 and 10) and withdraw the input shaft retainer housing (9), complete with the p.t.o. input shaft (15).
13. Remove the four bolts (41) securing the cover plate (43).
14. Figure 9. Remove the circlip (45) and the thrust washer (46).
15. Screw two  $\frac{3}{8}$  UNC x 75 mm (3 in) bolts into the tapered holes in the bearing housing (49). Progressively and evenly tighten the bolts until the housing is extracted.
16. Remove the 'O' ring (44) from the bearing housing then remove the circlip (47) and press out the bearing (48).
17. Figure 4. Withdraw the p.t.o. drive shaft (53) from the rear end of the layshaft, thus allowing the p.t.o. constant mesh gear to drop into the transmission case.
18. Remove the main input shaft (18) complete with the thrust washers (17 and 19) and lift the p.t.o. constant mesh gear (52) from the transmission case. Remove the lockring (51) from the constant mesh gear.
19. Using a soft faced drift, drive the mainshaft (25) rearwards to permit removal of the third gear pinion (20).
20. Remove the snap ring (21), then drive the mainshaft through the centre bearing (22).
21. Remove the snap ring (23) and withdraw the main shaft rearwards, progressively removing the first/reverse pinion (26) and the second/fourth pinion (27).
22. Figure 4. Remove the snap ring (64) from the rear of the layshaft.
23. Figure 12. Tap the layshaft forwards to expose the snap ring (60), forward of the fourth gear pinion (61). Move the snap ring (60) forwards on to the unsplined portion of the layshaft.
24. Remove the snap ring (54) from the front of the layshaft, then tap the layshaft backwards until the constant mesh gear (55) and the third speed gear (56) can be removed.
25. Drive the layshaft forward out of the case, progressively removing the second and fourth gear pinions (62 and 61) from the transmission case.
26. Figure 4. Release the tabwasher (76), then remove the bolt (77).
27. Using a dummy shaft to prevent the needle rollers from falling into the transmission case, remove the reverse gear cluster, (71), thrust washers, (65 and 72) and distance piece (73).
28. Figure 10. Remove the circlip (28) from the mainshaft, then press off the bearing (29) using hand press MF 200 with the MF 200-25 adapter, then remove the circlip (30).





**WARNING - DO NOT ATTEMPT TO PRESS THE BEARING OFF THE REAR END OF THE MAINSHAFT, AS THE GEAR TEETH ARE OF A LARGER DIAMETER THAN THE SHAFT SPLINES!**

29. Using the hand press MF 200 and the adapter MF 200-25, press the centre bearing (57) from the layshaft (58).
30. Remove the large internal circlip (13) from the rear end of the input housing (9), then push the p.t.o. input housing (15) out of the housing, complete with its bearing (12).
31. Remove the external circlip (11) from the input shaft, then press off the bearing (12).
32. Lever the inner seal (16) from the input shaft.
33. Carefully lever the front oil seal (6) from the front of the input housing (9) with a screwdriver.
34. Figure 7A. Using special tool MF 315, drive the needle roller bearing (8) out of the input housing.
35. Tap the bearing (63) rearwards from the transmission case.

## Examination

After disassembly of the transmission, examine all the components for scoring, wear or chipping. Pay particular attention to the gear teeth, bearings needle rollers, gear selector forks, also shaft splines which are subject to wear from the sliding action of the gears.

All bearings should be washed in clean paraffin, blown dry, inspected for wear or scoring on the outer circumference and measured for fit in transmission case webbs. Maximum acceptable clearance is 0,033 mm (0.0013 in). Where clearance between bearing and bore exceeds this figure, Loctite Grade A or grade AV may be used to refit bearings into transmission case. After inspection, lubricate bearings with transmission oil.

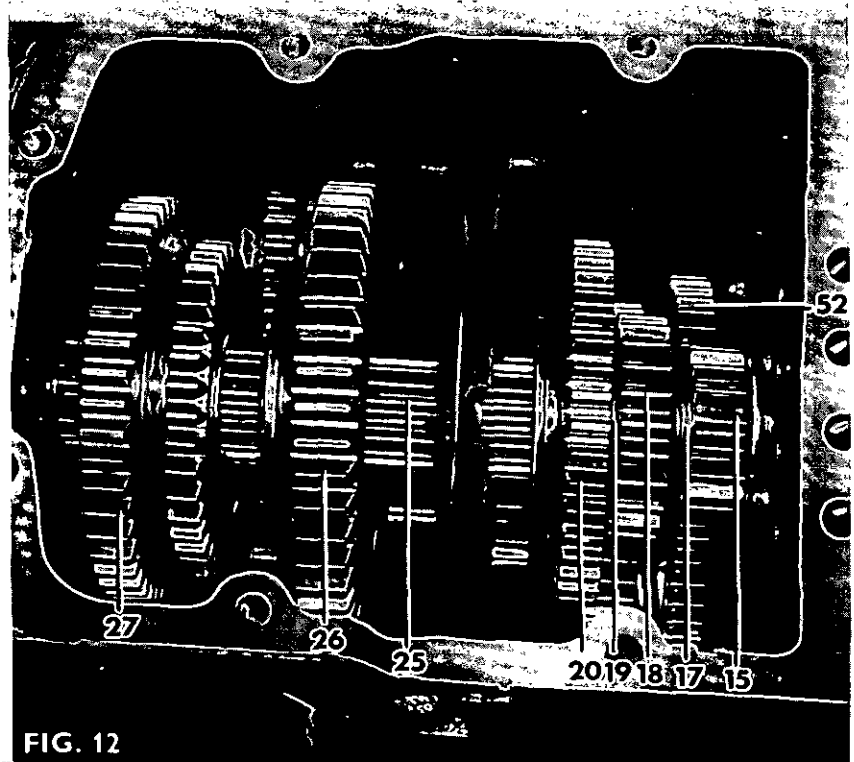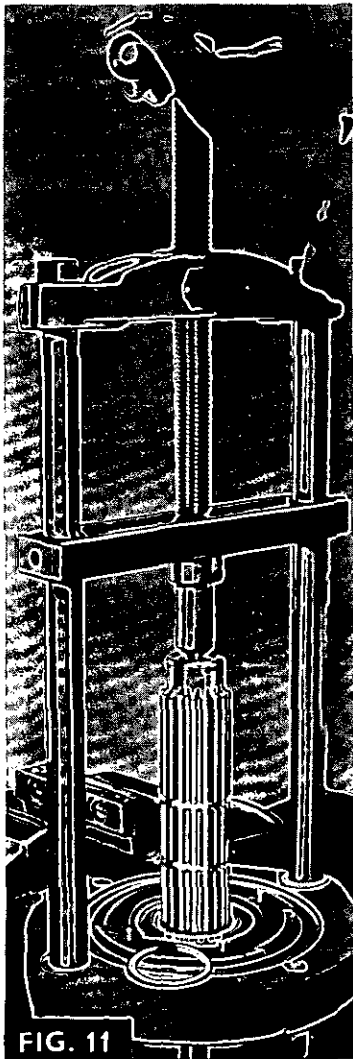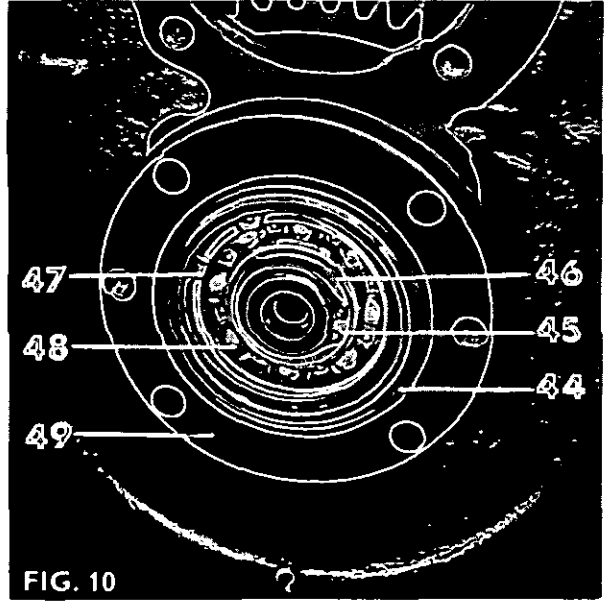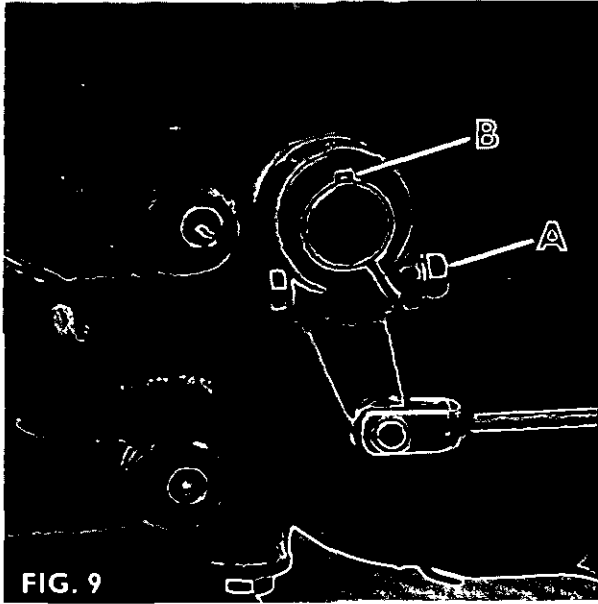

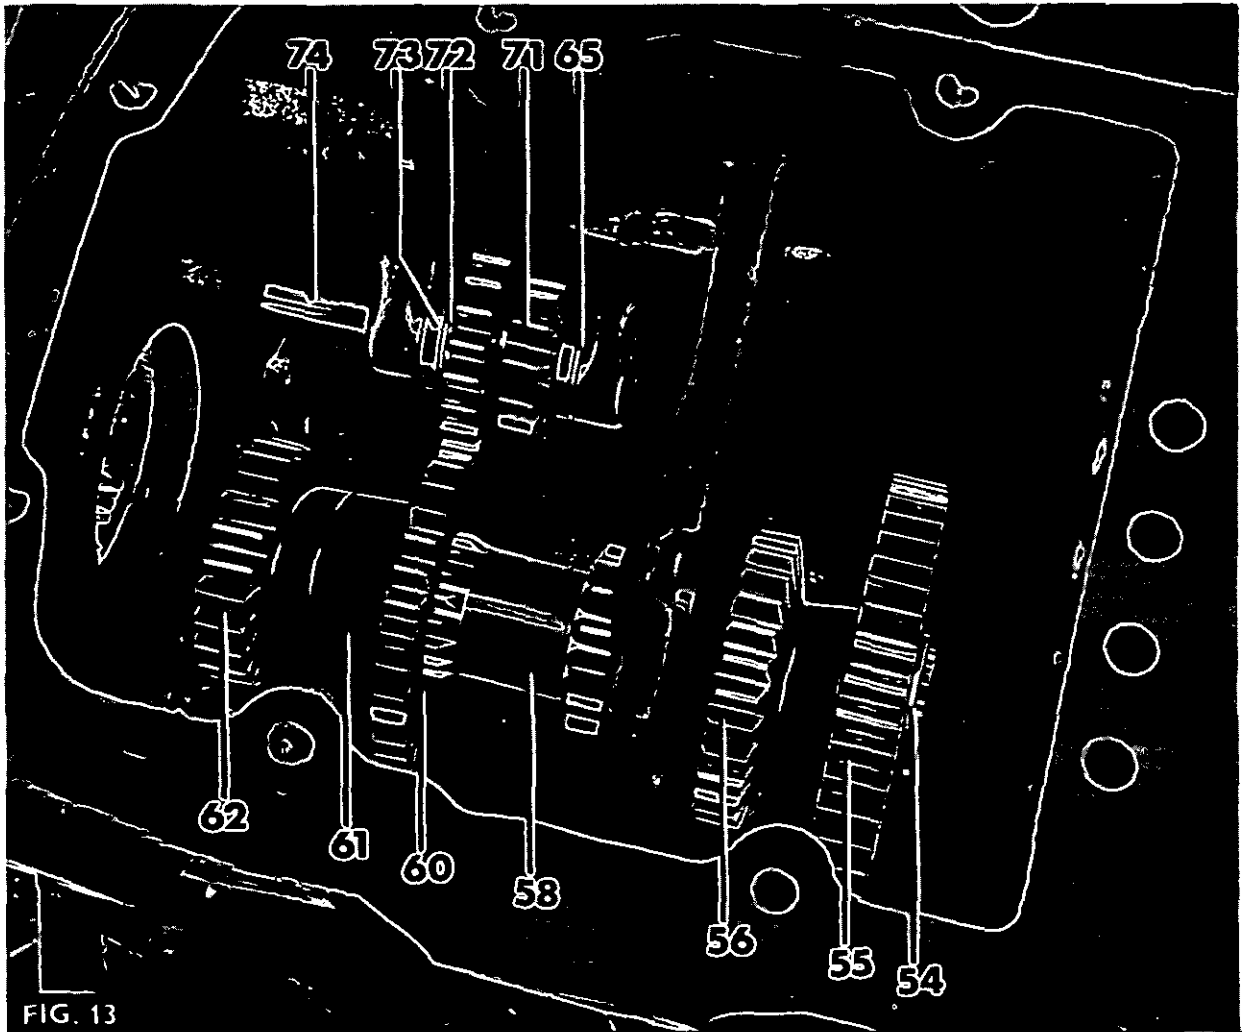


FIG. 13

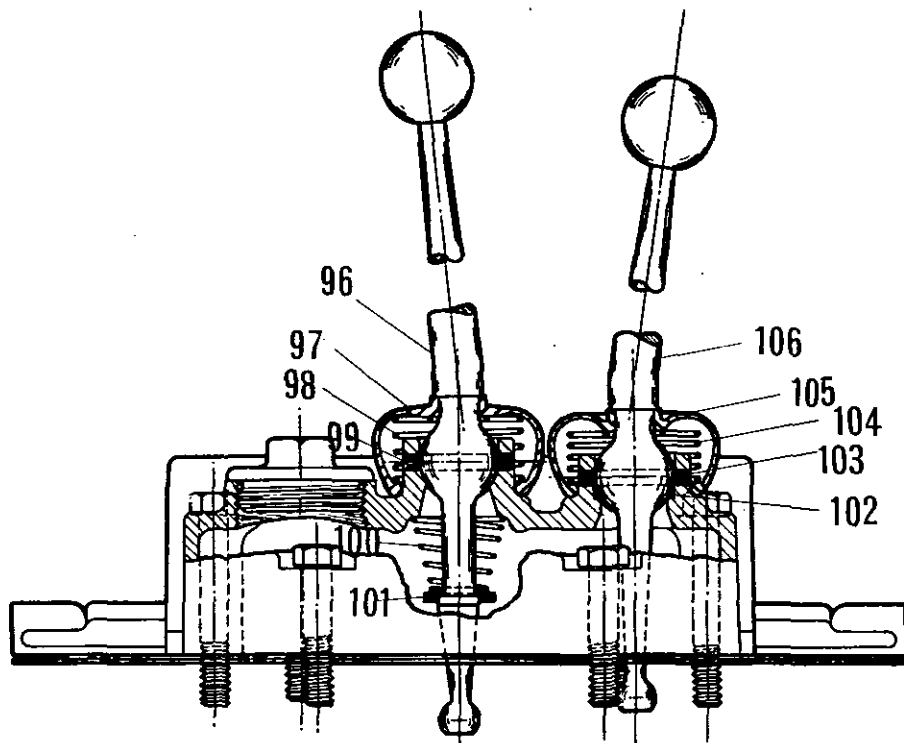


FIG. 14

## 8 SPEED TRANSMISSION

Any worn or damaged components should be replaced; also, a complete set of new gaskets, 'O' rings and a new tabwasher should be fitted.

**Reassembly**

**NOTE – USE ONLY PETROLEUM JELLY FOR REASSEMBLY PURPOSES – NEVER GREASE.**

1. Figure 7B. Refit the needle roller bearing (8) to the input housing (9) using special tool MF 315 as shown.
2. Fit a new front oil seal (6) to the input housing, using special tool MF 255B. Lubricate the oil seal and the needle roller bearing with petroleum jelly.
3. Fit a new oil seal (16) to the p.t.o input shaft (15), using special tool MF 256A. Lubricate the seal with petroleum jelly.
4. Press the bearing (12) on to the front of the p.t.o. input shaft (15) and secure it with the circlip (11).
5. Carefully insert the p.t.o. input shaft (15) into the housing (9). Push the bearing (12) fully into place and secure it with the large internal circlip (13).
6. Reassemble the reverse gear cluster as follows: Using petroleum jelly refit the two sets of needle rollers (67 and 69), with a spacer (68) between the rows and a retaining ring (66 and 70) at each end. A smear of petroleum jelly can be used to make the thrust washers (65 and 72) and the distance piece (73) adhere to the end face of the gear cluster.
7. Insert the dummy shaft to the reverse gear cluster.
8. Figure 12. Refit the gear cluster assembly to the transmission case, then insert the shaft (74) from the rear and push out the dummy shaft.
9. Figure 4. Refit the plate (75), a new tabwasher (76) and the bolt (77). Bend up the tabwasher. The assembled gear cluster is shown in Fig. 12.
10. Refit the layshaft rear bearing (63) to the transmission case.
11. Press the layshaft centre bearing (57) on to the layshaft (58) using MF 200 and MF 200-25.
12. Refit the snap ring (60) on to the layshaft (58) placing it temporarily on the unsplined portion of the shaft to the rear of the first gear teeth.
13. Feed the layshaft into the transmission case, from the front, progressively fitting the fourth gear pinion (61) and the second gear pinion (62). Push the layshaft rearwards to permit fitment of the third gear pinion (56) and the constant mesh gear (55).
14. Refit the snap ring (54) to secure the constant mesh gear (55) the third gear pinion (56) and the bearing (57).
15. Tap the layshaft forwards slightly to allow the snap ring (60) to be fitted to its groove adjacent to the second gear pinion (61).
16. Carefully drive the layshaft rearwards and fit the rear snap ring (64).
17. Refit the p.t.o. driveshaft front bearing (48) to its housing (49) and secure it with the circlip (47).
18. Figure 9. Refit the housing (49) together with a new gasket (50) into the transmission case as shown.
19. Refit the mainshaft rear snap ring (30) from the front end, then press the bearing (29) on to the mainshaft (25) using press MF 200 (see figure 10). Refit the second snap ring (28).
20. Refit the mainshaft centre bearing (22) to the web in the transmission case.
21. Figure 11. Feed the mainshaft into the transmission case from the rear, progressively fitting the fourth/second compound sliding gear (27), the first/reverse sliding gear (26) and the snap ring (23). Insert the mainshaft through the centre bearing.
22. As the mainshaft emerges through the bearing, refit the snap ring (21) and the third speed sliding gear (20).

**NOTE – ENSURE THAT THE SNAP RINGS (21 AND 23) ARE CORRECTLY LOCATED IN THEIR GROOVES.**

23. Lower the p.t.o. constant mesh gear (52) into the transmission case but do not yet fit the p.t.o. driveshaft (53).
24. Insert the main input shaft (18), complete with its thrust washers (17 and 19) into the transmission case, locating the shaft spigot in the needle roller bearing (24) located in the end of the mainshaft. Engage the input shaft gear teeth with those of the constant mesh gear (55).
25. Refit the p.t.o. driveshaft (53) from the rear, locating the p.t.o. constant mesh gear on the splines and then pull the end of the shaft through the bearing (48) using special tool MF 218A.
26. Figure 9. Secure the p.t.o. driveshaft with the thrust washer (46) and the circlip (45).
27. Using a new 'O' ring (44), refit the front cover plate (43) as shown in Fig. 7.

**NOTE – WHEN REFITTING THE COVER PLATE AND THE BOLTS (41) USE SEALING COMPOUND 'HYLOMAR COMPOUND SQ 32M' TO SEAL THE PLATE AND THE BOLT THREADS.**

28. Place the seal protector MF 177 on the front of the main input shaft (18).
29. Fit a new 'O' ring (14) on to the rear spigot of the input retainer housing (9), then carefully feed the input housing (9) over the seal protector and locate the input housing in the front of the transmission case.
30. Figure 7. Refit the four bolts (7 and 10) using 'Hylomar Compound SQ 32M' to seal the threads.
31. Figure 4. Refit the transmission epicyclic unit as follows:  
Refit the backplate (33) and the shims (32) to the dowels (31) on the ring gear (34), then locate the dowels in the holes in the transmission case. Fit the thrust washers (35 and 37) to the planetary pinion carrier (36) and locate the carrier in the ring gear. Refit the cover plate (38), as shown in figure 5A. Fit the four bolts (40) and tighten them progressively and evenly to a torque of 4.9 kg.m (35 lb ft).

## 8 SPEED TRANSMISSION

**NOTE - OMIT LOCKWASHER FROM LOWER LEFT HAND BOLT IRRESPECTIVE OF ITS ALIGNMENT WITH THE CUT-OUT IN COVER PLATE.**

32. Figure 3. Refit the third speed selector rod (89), fitting first the engagement dog (90), then the selector fork (88), engaging the selector fork in the third speed sliding gear (20).
33. Rotate the rod until the engagement dog locking pin can be fitted. Tighten the locking pin and secure it with locking wire.
34. Rotate the rod to bring the engagement dog to the top, then fit the locking pin and locking wire to the selector fork (88).
35. Slide the interlock cross peg (81) into the third speed selector rod.
36. Refit the first/reverse and the second/fourth gear selector rods and forks (86, 87, 91 and 92), engaging the forks in the gears. Refit the locking pegs (85) and the locking wires.
37. Figure 4. Refit the HIGH/LOW selector rod assembly (93 and 95) engaging the selector fork (95) in the coupler (39) and locating the coupler in the end of the planetary pinion carrier (36).
38. Figure 3. Refit the locking peg and locking wire to the HIGH/LOW engagement dog (94).
39. Refit the stop plate (84), the plain plate (83), the locking ball carrier (80) and the locking balls (82), securing them with the two bolts and spring washers (78 and 79), tightened to a torque of 4.9 kg/m (35 lb ft).
40. Refit the brake pedal and cross shaft assembly to the transmission case, from the right-hand side.
41. Figure 8. Refit the lever and key to the brake cross shaft, then re-tighten the nut and bolt.
42. Figure 6. Refit the clutch release shafts and the clutch release fork (4) refitting the locking pegs (3) and the locking wire.
43. Lubricate the splines of the input shafts and the clutch release bearing carrier bore with special grease Mobilgrease Super. Slide the clutch release bearing (1) and carrier (2) on to the input housing, and refit the two return springs (5).
44. Reconnect the transmission to the centre housing.
45. Ensure that all gears are in neutral, then reconnect the engine to the transmission.
46. Refill the transmission with a recommended oil to the correct level.
47. Test run the tractor in all gears, checking for quiet operation and ease of selection.

### GEAR SHIFT LEVER

#### Removal and Refitment

4C-12-14

Figure 14

1. Remove the steering box.
2. Remove the eight bolts securing the shift lever support and battery platform to the transmission housing. Lift the support and platform up off the transmission housing.
3. Release the spring retaining seat (101) from the lower end of the gear lever (96), and detach the seat and spring (100).
4. Remove the gear lever rubber cover (97) and spring (98) fitted under the cover.
5. Drive out the pin (99) securing the gear lever (96) to its housing.

6. Lift out the gear lever (96).
7. Refitment is a reversal of the removing procedure.

### HIGH/LOW SHIFT LEVER

#### Removal and Refitment

4C-13-14

Figure 14

1. Remove the rubber cover (105) and spring (104), fitted under the cover.
2. Drive out the pin (103) securing the lever (106) to its housing.
3. Lift out the lever (106) and 'O' ring (102).
4. Refitment is a reversal of the removing procedure.

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 5**

**Publication No. 1856 001 M1**

comprising

- A REAR AXLE AND BRAKES
- B POWER TAKE-OFF AND INDEPENDENT POWER TAKE-OFF



## REAR AXLE AND BRAKES

## Part 5 Section A

| Operation<br>No. | Table of Contents   | Page<br>No. |
|------------------|---|-------------|
|                  | GENERAL   | 02          |
| 5A-01-03         | REAR WHEEL STUD<br>Removal and Refitment  | 03          |
| 5A-02-03         | EPICYCLIC UNIT OUTER HOUSING AND RING GEAR<br>Removal and Refitment                 | 03          |
| 5A-03-03         | EPICYCLIC PLANET AND SUN GEAR<br>Servicing  | 03          |
| 5A-04-04         | EPICYCLIC UNIT<br>Servicing   | 04          |
| 5A-05-07         | EPICYCLIC PRE-LOAD<br>Checking Procedure  | 07          |
| 5A-06-07         | L.H. TRUMPET HOUSING<br>Removal and Refitment                                       | 07          |
| 5A-07-08         | R.H. TRUMPET HOUSING<br>Removal and Refitment                                       | 08          |
| 5A-08-08         | L.H. CARRIER PLATE<br>Removal and Refitment   | 08          |
| 5A-09-11         | R.H. CARRIER PLATE<br>Removal and Refitment   | 11          |
| 5A-10-11         | L.H. BRAKE ACTUATOR HOUSING<br>Removal and Refitment                                | 11          |
| 5A-11-11         | R.H. BRAKE ACTUATOR HOUSING AND<br>DIFFERENTIAL LOCK PEDAL<br>Removal and Refitment | 11          |
| 5A-12-12         | BRAKE ADJUSTMENT AND BALANCING<br>Procedure   | 12          |
| 5A-13-12         | L.H. BRAKE SERVICING<br>Removal and Refitment                                       | 12          |
| 5A-14-15         | R.H. BRAKE SERVICING<br>Removal and Refitment                                       | 15          |
| 5A-15-15         | DIFFERENTIAL LOCK ACTUATOR MECHANISM<br>Removal and Refitment                       | 15          |
| 5A-16-16         | DIFFERENTIAL LOCK ADJUSTMENT<br>Procedure   | 16          |

---

**REAR AXLE AND BRAKES**


---

|  |                      |    |
|--|----------------------|----|
| DIFFERENTIAL LOCK COUPLER CAP<br>Removal and Replacement | 5A-17-16             | 16 |
| DIFFERENTIAL<br>Pre-Load Checking and Adjustment         | 5A-18-16             | 16 |
| R.H. DIFFERENTIAL BEARING<br>Removal and Replacement     | 5A-19-17             | 17 |
| DIFFERENTIAL UNIT<br>Removal and Refitment               | 5A-20-17             | 17 |
| DIFFERENTIAL L.H. BEARING<br>Removal and Replacement     | 5A-21-17             | 17 |
| CROWNWHEEL<br>Removal and Replacement                    | 5A-22-18             | 18 |
| DIFFERENTIAL UNIT SERVICING<br>Procedure                 | 5A-23-18             | 18 |
| PINION ASSEMBLY<br>Removal and Refitment<br>Servicing    | 5A-24-21<br>5A-25-21 | 21 |
| REAR DRIVESHAFT<br>Servicing                             | 5A-26-22,            | 22 |
| FOOTBRAKE LINKAGE AND PEDALS<br>Removal and Refitment    | 5A-27-22             | 22 |
| PARKING LATCH<br>Servicing                               | 5A-28-22             | 22 |
| PARKING BRAKE AND LINKAGE<br>Removal and refitment       | 5A-29-22             | 22 |

**GENERAL**

The drive from the transmission mainshaft is transmitted through the rear drive shaft and shear tube to a spiral bevel driving pinion and crown wheel, then through the axle shafts and epicyclic reduction units to the rear wheel axles.

The driving pinion is supported in the centre housing by a straight roller pilot bearing and a pre-loaded housing assembly carrying two tapered roller bearings.

The crown wheel is attached to the split differential case, which is supported each side by a tapered roller bearing. The differential pinions run on a cross joint and thrust is taken by thrust washers behind the pinions.

The axle shaft inner ends are splined into differential gears and the outer ends which run on a bush in the epicyclic carrier, are splined into the sun gear in the epicyclic unit.

The wheel axles are splined into the epicyclic carrier which is driven by the sun gear and planetary pinions.

A differential lock is fitted to the R.H. axle housing. When the spring loaded pedal is pressed, a shaft engages a coupler with a coupling cap on the differential case, thus locking the differential.

This tractor is fitted with Girling multi-disc oil cooled brakes between the axle housings and the differential carrier plates adjacent at the centre housing.

The brakes are operated by two independently operated pedals located on the right of the transmission housing.

The right pedal operates the right hand brake and the left pedal operates the left hand brake, to assist turning.

For highway use the brakes are used together by operating an interlocking latch which joins the two brake pedals.

When only single brakes are supplied on the tractor the parking brake (if fitted) also actuates these disc brakes.

Pressure on the brake pedal brings an actuating assembly in contact with two rotating middle (friction) discs splined to each axle shaft, these in turn contact fixed friction faces provided in the axle housing and in the differential carrier plate fitted between the centre and axle housings. The mechanism of each brake consists of two cast iron actuating discs, held together by tension springs and separated by steel balls located in inclined seats. Pressure on the brake pedal, by pulling on the operating rod, rotates one actuating disc relative to the other, and the steel balls ride up their inclined seats and so spread the actuating discs apart. These come into contact with the rotating (friction) discs, which are splined to the shaft being braked. The actuating assembly will move slightly in the direction of rotation until the torque ear of one actuating disc comes into contact with a shaft in the housing. The other actuating disc tends to rotate further increasing the angular displacement between the discs, and assisting the braking action. When the operating pull is released, the tension springs cause the discs to return to their normal position.

Dual brake tractors are fitted with disc brakes at the inner end of the two rear axle shafts and have an additional and entirely separate mechanical braking system comprising two brake assemblies mounted at the outer ends of the rear axle housings. These secondary brakes are Girling 14 in x 2 in. two shoes, double acting floating cam, full servo brakes.

**REAR AXLE AND BRAKES****REAR WHEEL STUD****Removal and Replacement** 5A-01-03**Removal**

1. Jack up the tractor under the trumpet housing adjacent to the wheel being serviced.
2. Remove the rear wheel.
3. Drive out the stud (9) to be replaced, using a suitable drift and hammer.

Examine the stud hole, the other studs and the wheel discs for signs of fretting or damage.

**Replacement**

1. Fit a new stud to the hole in the wheel axle (7) and tap the stud gently to locate the splines.
2. Fit a new wheel nut with flat side against the axle to the stud and pull the stud through the wheel axle to its correct position. Remove the nut.
3. Refit the rear wheel and nuts then torque the nuts progressively and evenly to 27,5 kg-m (200 lb ft).
4. Remove the jack.

**EPICYCLIC UNIT OUTER HOUSING AND RING GEAR****Removal and Refitment** 5A-02-03

Special Tools Required: Torque Wrench

**Removal**

1. Apply the parking brake.
2. Jack up the tractor under the trumpet housing to be serviced.
3. Remove the rear wheel.
4. Fig. 2. Drain the oil from the rear axle epicyclic unit.
5. Scribe a mark on the outer housing (12) ring gear (16) and trumpet housing to facilitate reassembly.
6. Remove the nuts and bolts (2) securing the epicyclic unit to the trumpet housing.
7. Withdraw the epicyclic unit, complete with the ring gear (16) from the trumpet housing. Do not withdraw the axle shaft (21).
8. Remove the ring gear (16) and the two cork gaskets (15).

Clean the recesses in which the ring gear spigots are located and check that there is no burr or deformity which could cause leakage.

**Refitment**

1. Fit a new cork gasket (15) to the recesses in the trumpet housing and the outer housing.
2. Fit the ring gear (16) to the outer housing (12) aligning the scribe marks and ensuring that the ring gear is fitted the correct way round, with the ring gear teeth in full engagement.

**NOTE – IF THE RING GEAR IS INCORRECTLY FITTED, THE GEAR TEETH WILL BE ONLY PARTIALLY ENGAGED AND SEVERE DAMAGE CAN OCCUR.**

3. Refit the outer housing and ring gear assembly to the trumpet housing, with the oil drain hole at the bottom and the scribe marks aligned.
4. Refit the nuts and bolts to the epicyclic unit, then tighten the bolts, progressively and evenly, to a torque of 7,5 kg-m (55 lb ft).

5. Refit the drain plug (14) to the epicyclic unit, then refill with one of the recommended oils.
6. Refit the rear wheel and nuts, then torque the nuts, progressively and evenly to 27,5 kg-m (200 lb ft).
7. Remove the jack.

**EPICYCLIC PLANET AND SUN GEAR****Servicing** 5A-03-03Special Tools Required:  $\frac{5}{16}$  UNF BOLT**Removal**

1. Remove the outer housing assembly as stated in Operation 5A-02-03
2. Fig. 3. If only the sun gear is to be serviced, remove only the planet gear (3) located in the large aperture in the hub (13). To remove a planet gear, drive out the roll pin (1) from the epicyclic hub, then fit a  $\frac{5}{16}$  UNF bolt to the tapped hole in the planet gear shaft.
3. Carefully withdraw the shaft (5) endeavouring not to dislodge the needle rollers (4). Remove the  $\frac{5}{16}$  UNF bolt.
4. Fig. 4. Remove the thrust washers (6) and the planet gear (3).
5. Repeat operations 2, 3 and 4 only if the epicyclic hub is to be completely overhauled.
6. Fig. 5. Withdraw the sun gear (17) through the wide aperture in the hub (13).

Examine the following for signs of wear, damage, scoring, pitting or chipping:

- Planet gears (3)
- Sun gear (17)
- Planet gear shafts (5)
- Needle rollers (4)
- Thrust washers (6)
- All bores and splines

Replace any components which are worn or damaged.

**Reassembly**

1. Fig. 6. Refit the sun gear (17) through the wide aperture in the epicyclic hub (13).
2. Using petroleum jelly, refit the needle rollers (4) to the planet gear (3) then carefully place the gear and the lower thrust washer (6) in the hub.

**NOTE – THERE ARE 58 NEEDLE ROLLERS PER PLANET GEAR (TWO ROWS OF 29, PLUS A SPACER RING). THE THRUST WASHERS FITTED TO THE WIDEST APERTURE IN THE CARRIER ARE DIFFERENT IN SHAPE, AND LONGER THAN THE THRUST WASHERS FITTED TO THE OTHER TWO APERTURES IN THE CARRIER. THE SHORTER, POINTED THRUST WASHERS MUST NEVER BE FITTED TO THE WIDEST OF THE THREE APERTURES IN THE CARRIER.**

3. Carefully refit the upper thrust washer (6) then refit the planet gear shaft (5) to the hub with the roll pin holes aligned.
4. If all planet gears have been removed, repeat operations 2 and 3.
5. Fit new roll pin(s) (1).
6. Refit the outer housing assembly as stated in operation 5A-02-03.

## REAR AXLE AND BRAKES

### EPICYCLIC UNIT

Servicing

5A-04-04

Special Tools Required: MF26A Wrench  
 MF200 Hand Press  
 MF200-2/1 Adapter  
 MF200-3/3 Plug  
 MF200-24 Adapter  
 MF256A Extractor  
 MF266B Wheel Axle and  
 MF 1105 Puller  
 MF 1105-11 Adapter  
 Bearing Replacer  
 550 Universal Handle  
 50 Ton Hydraulic Press

#### Disassembly

1. Remove the epicyclic unit from the trumpet housing, as stated in operation 5A-03-03.
2. Remove the planet gears and the sun gear as stated in operation 5A-02-03.
3. Fig. 6. Pull the bearing cone (19) off the epicyclic hub (13) using hand press MF200 with the adapter MF200-24 as shown.
4. Fit the plug, MF200-3/3 to the bearing bush (18) and tap the bush into the cavity inside the hub (13). Remove the bush and plug from the hub.
5. Fig. 7. Place the dismantled wheel on the workshop floor with the convex face of the wheel disc facing upwards, then fit the hub and outer housing assembly onto the disc as shown. Secure the hub to the wheel with two wheel nuts.
6. Fig. 7. Fit the special tools MF256A and MF26A to the hub, then extract the hub from the outer housing.
7. Fig. 8. Remove the two half rings (11) from the groove in the wheel axle (7) then press the wheel axle out of the outer housing (12) using hand press MF200 and adapter MF200-2/1 as shown. Lift out the bearing cone (10).
8. Tap out the outer seal (8) from the outer housing, then tap out the bearing cup (10).
9. Having ensured that the parking brake is fully applied and that the transmission oil is no higher than NORMAL on the dipstick, carefully withdraw the axle shaft (21).
10. Fig. 9. Using pry-bars as shown, lever the epicyclic inner bearing cup (19) out of the trumpet housing.

11. Fig. 10. Pull the inner oil seal (20) out of the trumpet housing using special tool MF 1105 and adapter MF 1105-11, as shown.

Examine the following components for signs of wear, damage, scoring, pitting or chipping:

Planet gears (3)  
 Sun gear (17)  
 Needle rollers (4)  
 Planet gear shafts (5)  
 Thrust washers (6)  
 All bores and splines  
 All bearings and bushes

Any components which are worn or damaged must be replaced. All seals, gaskets or bushes must be replaced.

#### Reassembly

1. Drive the bearing cup (10) into the outer housing ensuring that the cup is fully seated.
2. Drive a new outer seal (8) into the outer housing (12) with the metal face OUTWARDS and 2 mm (0.080 in) proud of the housing.
3. Carefully insert the wheel axle (7) through the outer seal (8) then drive the bearing cone (10) fully onto the wheel axle, seating the rollers in the cup.
4. Fig. 11. Using a No. 0 half ring (see the table below) and feeler gauges, as shown, measure the clearance between the bearing cone and the half ring. If there is no clearance, the No. 0 half rings should be used. However, if the clearance is measurable, select a pair of half rings, using the procedure outlined below, to give a clearance of 0,00 to 0,025 mm (0.000 to 0.001 in).
5. Fig. 12. To select the required snap ring:
  - a) Using a micrometer as shown, measure the thickness of the No. 0 half ring (this may vary by up to 0,05 mm (0.002 in) and can affect selection.
  - b) Add this half ring thickness to the feeler gauge measurement.
  - c) Select a pair of half rings of similar thickness to the result of calculation 'b'.
6. Fit the two half rings to the grooves in the wheel axle, ensuring that both halves are fully seated.
7. Fig. 13. Drive a new bearing bush (18) into the epicyclic hub using the 550 handle and tool MF266B as shown.

| Half Ring + Feeler Gap |                 | Half Ring Thickness |                 | Part No.   | Identification No. |
|------------------------|-----------------|---------------------|-----------------|------------|--------------------|
| mm                     | ins             | mm                  | ins             |            |                    |
| 5,92<br>5,94           | 0.233<br>0.234  | 5,84<br>5,89        | 0.230<br>0.232  | 882 601 M1 | 0                  |
| 5,95<br>5,99           | 0.2341<br>0.236 | 5,90<br>5,94        | 0.2321<br>0.234 | 882 602 M1 | 1                  |
| 6,00<br>6,04           | 0.2361<br>0.238 | 5,95<br>5,99        | 0.2341<br>0.236 | 882 603 M1 | 2                  |
| 6,05<br>6,09           | 0.2381<br>0.240 | 6,00<br>6,04        | 0.2361<br>0.238 | 882 604 M1 | 3                  |

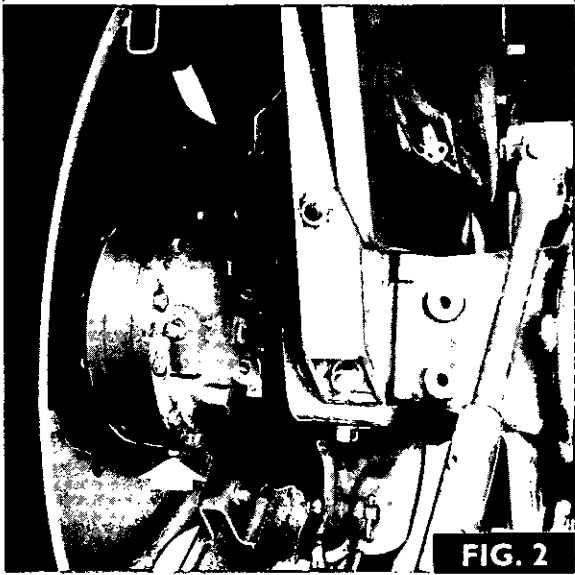


FIG. 2

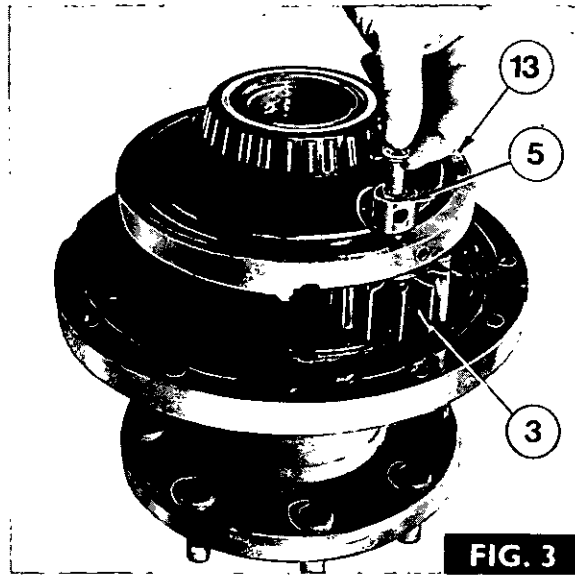


FIG. 3

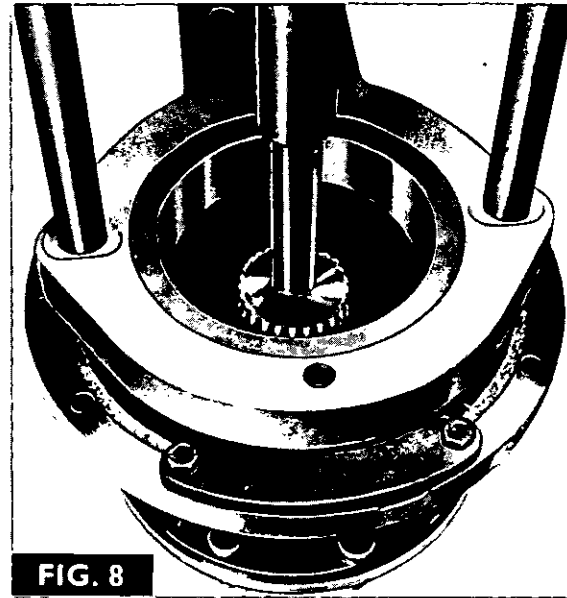


FIG. 8

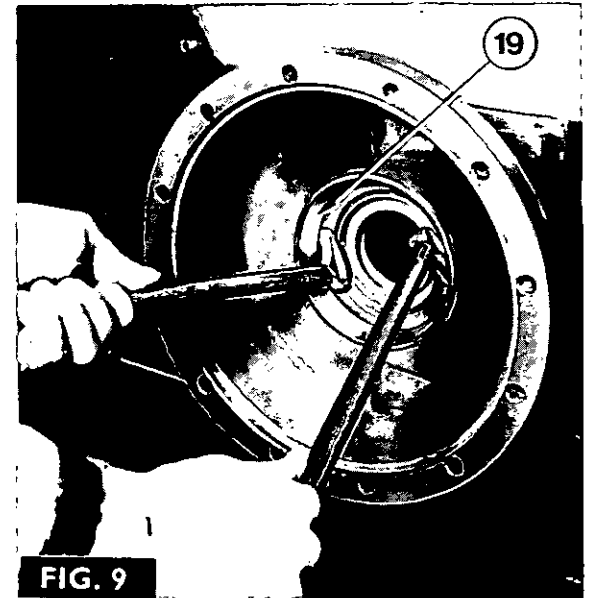


FIG. 9

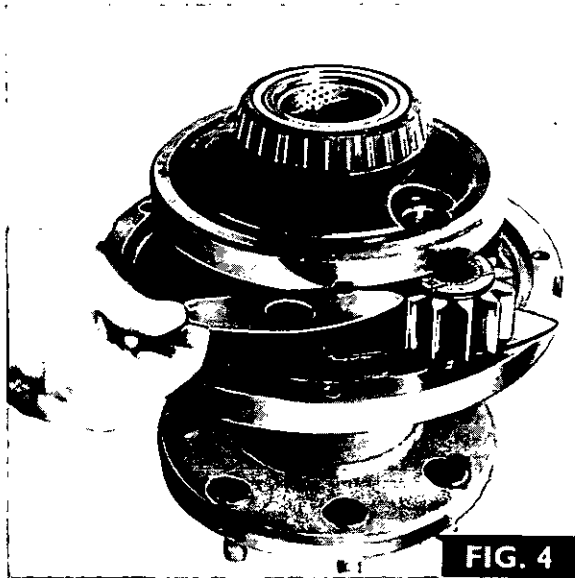


FIG. 4

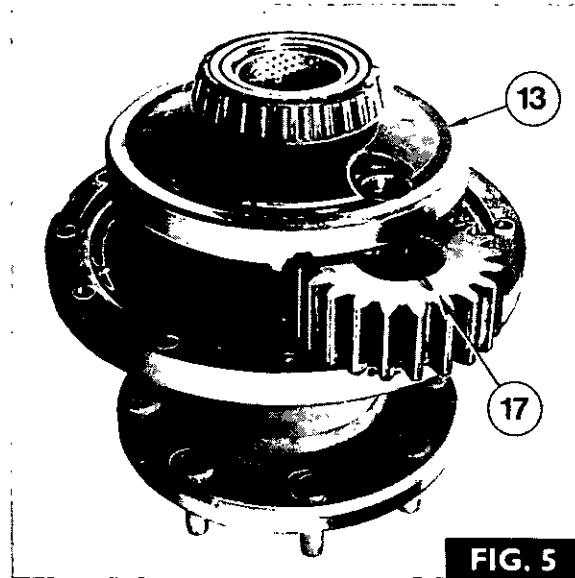


FIG. 5

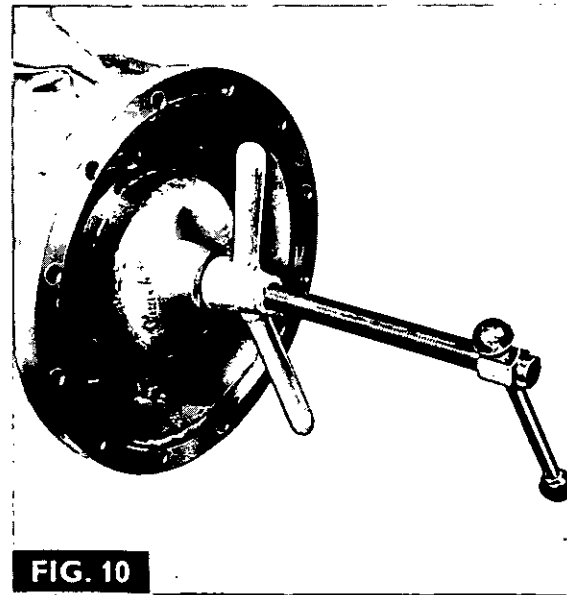


FIG. 10



FIG. 11

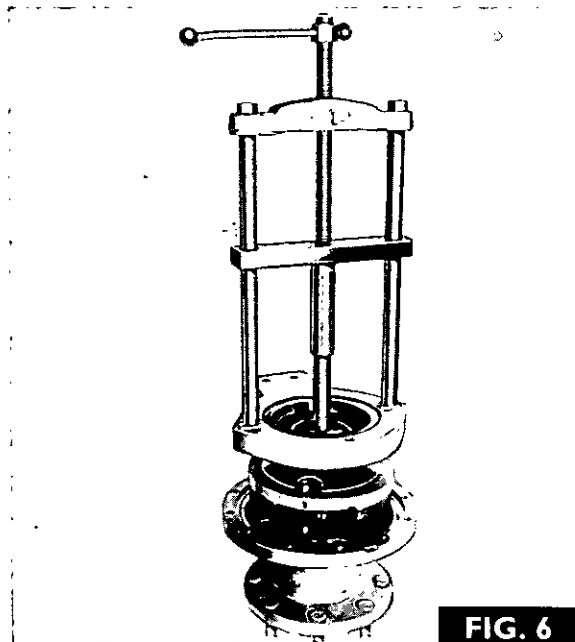


FIG. 6

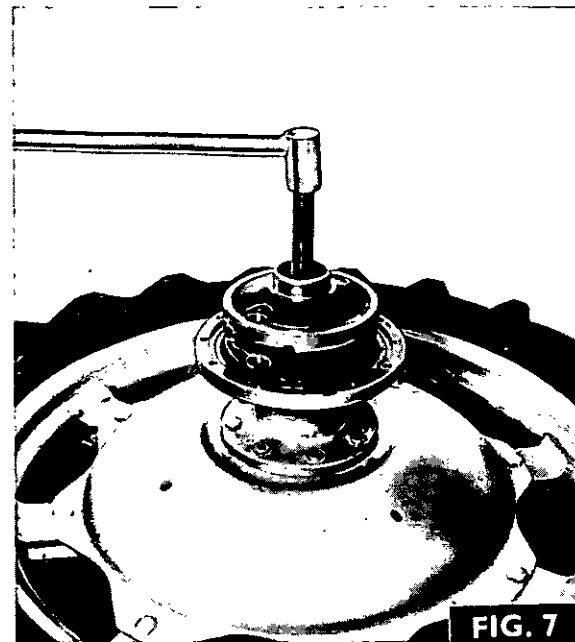


FIG. 7

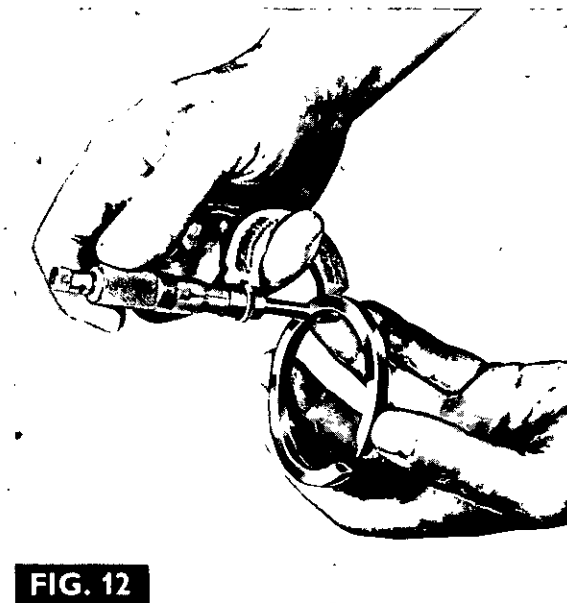


FIG. 12

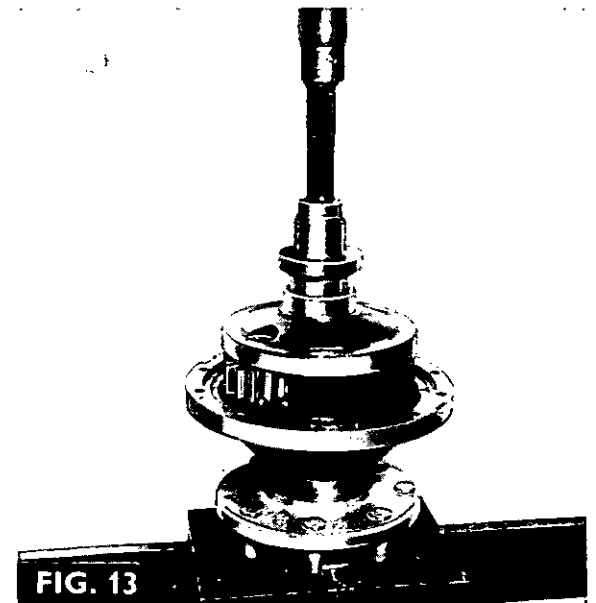


FIG. 13

REAR AXLE AND BRAKES

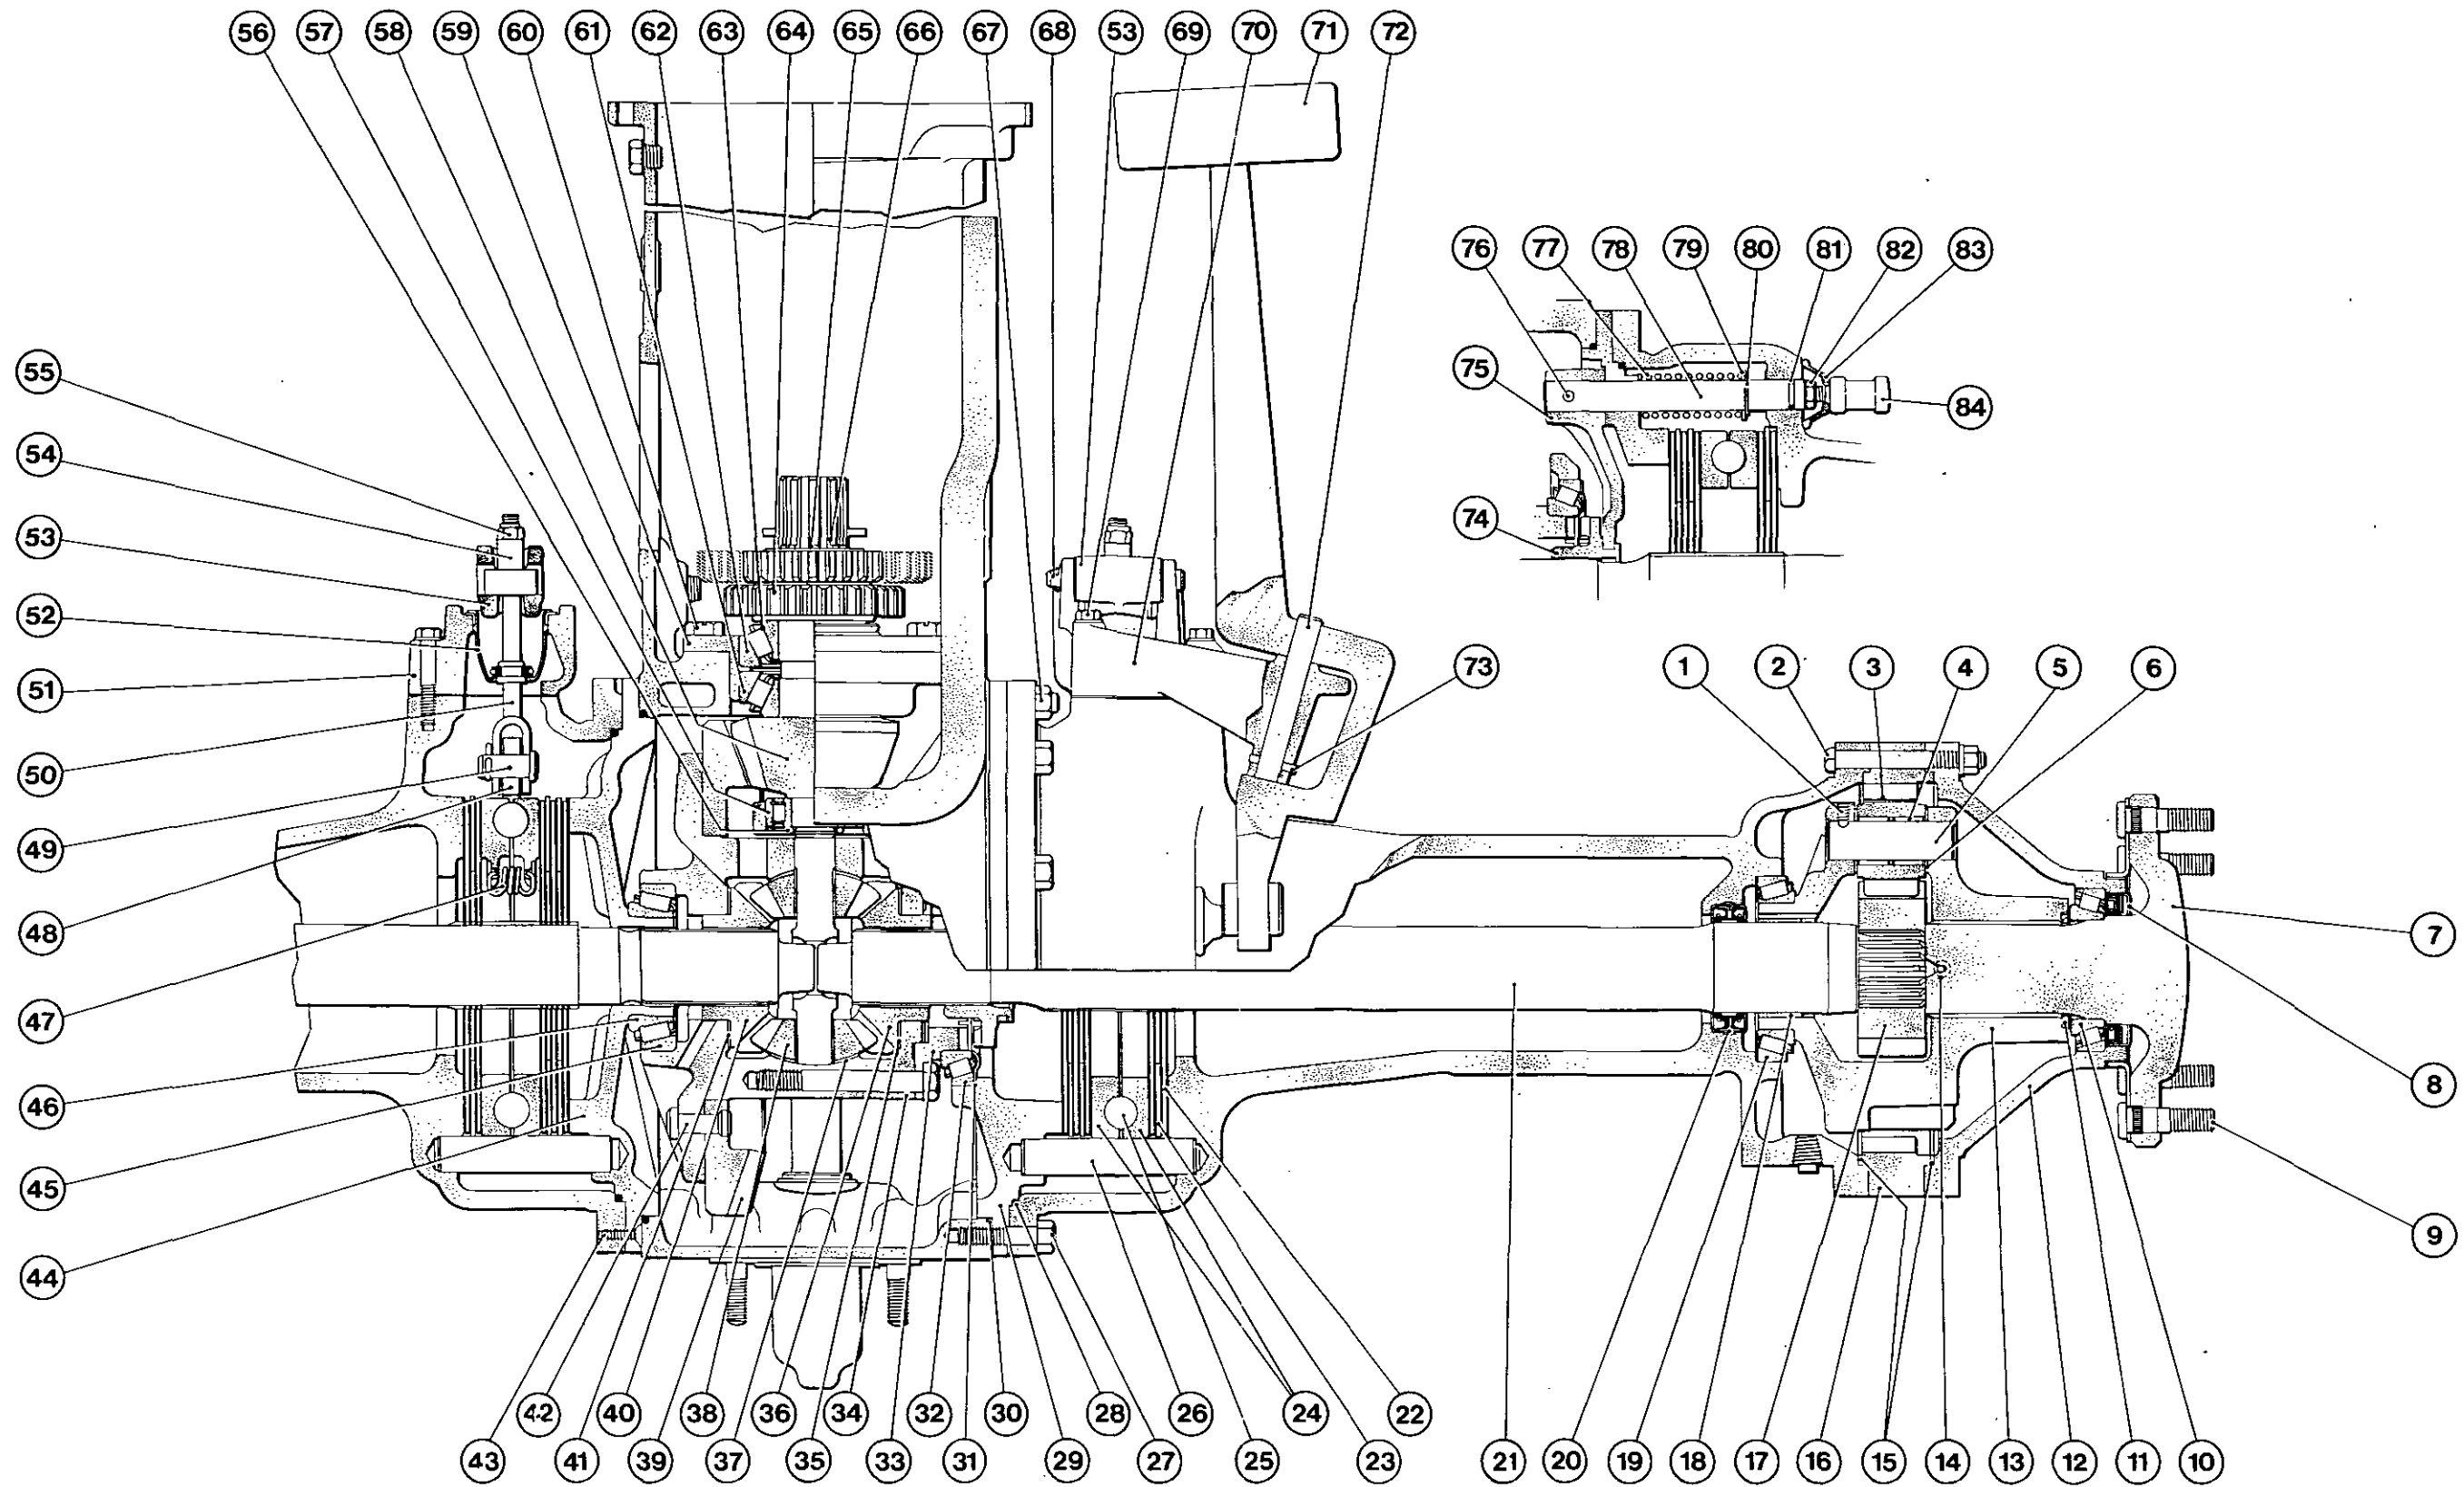


FIG. 1

## REAR AXLE AND BRAKES

8. Fig. 14. Drive the bearing cone (19) onto the spigot on the epicyclic hub, using the 550 handle and tool MF266B as shown.
9. Reassemble the planet gears and the sun gear in the epicyclic hub as stated in operation 5A-03-03.
10. Fig. 15. Using the 550 handle, tool MF266B and a hydraulic press, drive the epicyclic hub onto the wheel axle as shown.
11. Fig. 16. Apply a thin coating of 'Well Seal' to the bore of the trumpet housing, then fit a new oil seal (20) using special tool MF 1105 and the 550 handle as shown.
12. Before refitting the inner bearing cup (19) check the epicyclic pre-load as stated in operation 5A-05-07.
13. Refit the ring gear and outer housing assembly as stated in operation 5A-02-03.

### EPICYCLIC PRE-LOAD

5A-05-07

Special Tools Required: MF267A Pre-load checking tool (or MF267)

#### Procedure

1. Remove the outer housing and the ring gear, as stated in operation 5A-02-03
2. Remove the cork gaskets (15) from both the ring gear and the outer housing, then thoroughly clean the mating faces.
3. Fig. 17. Bolt the ring gear to the outer housing, using four of the bolts normally used to secure the epicyclic unit, in conjunction with four wheel nuts and equally spaced around the ring gear, as shown.

**NOTE** – ENSURE THAT THE RING GEAR IS FITTED THE CORRECT WAY ROUND, WITH FULL TOOTH ENGAGEMENT.

- The transmission oil level should be NORMAL.
4. Fig. 9. Lever the inner bearing cup (19) out of the trumpet housing, using pry-bars, as shown. Remove the old shims.
  5. Place the bearing cup on the spigot in the centre of special tool MF267A. Do not fit the shims.
  6. Fig. 17. Place the epicyclic unit on MF267A, then measure the gap using two feeler gauges. Note the clearance (which must be equal for both sides) then select a shim or shims from the table below:

| Gap Measured by Feeler Gauges<br>(Both Sides) |                | Shim Thickness<br>Required |       |
|---|----------------|----------------------------|-------|
| mm  | ins            | mm                         | ins   |
| 0,025 to 0,13                                 | 0.001 to 0.005 | 0,76                       | 0.030 |
| 0,15 to 0,25                                  | 0.006 to 0.010 | 0,64                       | 0.025 |
| 0,28 to 0,38                                  | 0.011 to 0.015 | 0,51                       | 0.020 |
| 0,41 to 0,51                                  | 0.016 to 0.020 | 0,38                       | 0.015 |
| 0,53 to 0,64                                  | 0.021 to 0.025 | 0,25                       | 0.010 |
| 0,66 to 0,76                                  | 0.026 to 0.030 | 0,13                       | 0.005 |
| 0,79 to 0,89                                  | 0.031 to 0.035 | 0                          | 0     |

The shims are available as follows:

| Shim Thickness |       | Part No.   |
|----------------|-------|------------|
| mm             | ins   |            |
| 0,13           | 0.005 | 894 757 M1 |
| 0,25           | 0.010 | 894 758 M1 |
| 0,38           | 0.015 | 894 759 M1 |

7. Fit the selected shims to the trumpet housing, then drive the bearing cup (19) fully into position.
8. Remove the four bolts securing the ring gear to the outer housing, then refit the ring gear and outer housing, using new cork gaskets, as stated in operation 5A-02-03.

### L.H. TRUMPET HOUSING

#### Removal and Refitment

5A-06-07

Special Tools Required: 270 Rail Trolley

#### Removal

1. Drain the transmission oil.
2. Release the L.H. lift rod at the knuckle.
3. Release the L.H. check chain at the check chain anchor bracket.
4. Jack up the tractor.
5. Remove the L.H. rear wheel.
6. Support the tractor on the 270 rail trolley.
7. Release the brake pull rods and the return spring.
8. Remove the three nuts, bolts and spring washers securing the front edge of the L.H. fender to the footplate.
9. Release the fender light wiring.
10. Remove the rear L.H. footplate mounting bracket.
11. Place a trolley jack under the centre of the trumpet housing, just supporting the housing.
12. Remove all of the nuts (67) and bolts (27) securing the trumpet housing to the centre housing.
13. Fig. 18. Withdraw the trumpet housing on the trolley jack, complete with the fender and the lower link, supporting the differential unit as the trumpet housing is withdrawn.
14. Remove the 'O' ring (30) from the flange on the carrier plate (44).

**REAR AXLE AND BRAKES****Refitment**

1. Fit a new 'O' ring (30) to the flange on the carrier plate (44) using petroleum jelly.
2. Fig. 18. Supporting the trumpet housing, fender and lower link assembly on the trolley jack, manoeuvre the trumpet housing into position, locating the axle shaft splines in the differential unit and the studs through their holes in the trumpet housing.
3. Refit the nuts and bolts securing the trumpet housing to the centre housing. Do not forget to refit the tab for the brake return spring.
4. Remove the 270 rail trolley.
5. Refit the rear L.H. footplate mounting bracket.
6. Refit the three nuts, bolts and spring washers securing the front edge of the L.H. fender to the footplate.
7. Reconnect the brake pull rods and the return spring.
8. Reconnect the light wiring.
9. Refit the L.H. rear wheel and nuts, then torque the nuts progressively and evenly to 27,5 kg-m (200 lb ft).
10. Remove the trolley jack.
11. Reconnect the L.H. lift rod at the knuckle.
12. Reconnect the check chain to the check chain anchor bracket.
13. Refill the transmission with a recommended oil.

**NOTE** - THE FULL QUANTITY AS STATED IN THE SPECIFICATION WILL NOT BE REQUIRED, AS APPROXIMATELY 2,5 LITRES (4 IMP. PTS) WILL BE TRAPPED BY THE CARRIER PLATES IN THE TRUMPET HOUSINGS. THEREFORE, UNLESS THESE HAVE BEEN EMPTIED, A REDUCED QUANTITY WILL BE REQUIRED.

14. Adjust and balance the brakes as stated in operation 5A-12-12.

**R.H. TRUMPET HOUSING****Removal and Refitment**

5A-07-08

Special Tools Required: 270 Rail Trolley

**Removal**

1. Drain the transmission oil.
2. Release the levelling box at the knuckle.
3. Release the R.H. check chain at the check chain anchor bracket.
4. Jack up the tractor.
5. Remove the R.H. rear wheel.
6. Locate the 270 rail trolley under the centre housing.
7. Release the brake pull rods and the return spring.
8. Remove the three nuts, bolts and spring washers securing the front edge of the R.H. fender to the footplate.
9. Release the fender light wiring.
10. Remove the rear R.H. footplate mounting bracket.
11. Place a trolley jack under the centre of the trumpet housing, just supporting the housing.
12. Remove all of the nuts (67) and bolts (27) securing the trumpet housing to the centre housing.

13. Fig. 19. Withdraw the trumpet housing on the jack, complete with the fender and the lower link.
14. Remove the 'O' ring (30) from the flange on the carrier plate (29).

**Refitment**

1. Fit a new 'O' ring (30) to the flange on the carrier plate (29) using petroleum jelly.
2. Fig. 19. Supporting the trumpet housing, fender and lower link assembly on the trolley jack, manoeuvre the trumpet housing into position, locating the axle shaft splines in the differential unit and the studs through their holes in the trumpet housing.
3. Refit the nuts and bolts securing the trumpet housing to the centre housing. Do not forget to fit the tabs for the light wiring and the brake return spring.
4. Remove the 270 rail trolley.
5. Refit the rear R.H. footplate mounting bracket.
6. Refit the three nuts, bolts and spring washers securing the front edge of the R.H. fender to the footplate.
7. Reconnect the brake pull rods and the brake return spring.
8. Reconnect the light wiring.
9. Refit the R.H. rear wheel and nuts, then torque the nuts, progressively and evenly, to 27,5 kg-m (200 lb ft).
10. Remove the trolley jack.
11. Reconnect the levelling box at the knuckle.
12. Reconnect the check chain to the check chain anchor bracket.
13. Refill the transmission with a recommended oil.

**NOTE** - THE FULL QUANTITY, AS STATED IN THE SPECIFICATION, WILL NOT BE REQUIRED, AS APPROXIMATELY 2,5 LITRES (4 IMP. PTS) OF OIL WILL BE TRAPPED BY THE CARRIER PLATES IN THE TRUMPET HOUSINGS. THEREFORE, UNLESS THESE HAVE BEEN EMPTIED, A REDUCED QUANTITY WILL BE REQUIRED.

14. Adjust and balance the brakes as stated in operation 5A-12-12.

**L.H. CARRIER PLATE****Removal and Refitment**

5A-08-08

**Removal**

1. Remove the trumpet housing, as stated in operation 5A-06-07.
2. Manoeuvre the trumpet housing, lower link and fender assembly off the trolley jack and stand the trumpet housing on end.
3. Remove the two countersunk screws (43) securing the carrier plate (44) to the trumpet housing.
4. Withdraw the carrier plate from the trumpet housing.

**WARNING** - DO NOT USE SCREWDRIVERS OR PRY-BARS TO FREE THE CARRIER PLATE.

5. Remove the inner 'O' ring (28) from the trumpet housing.



REAR AXLE AND BRAKES

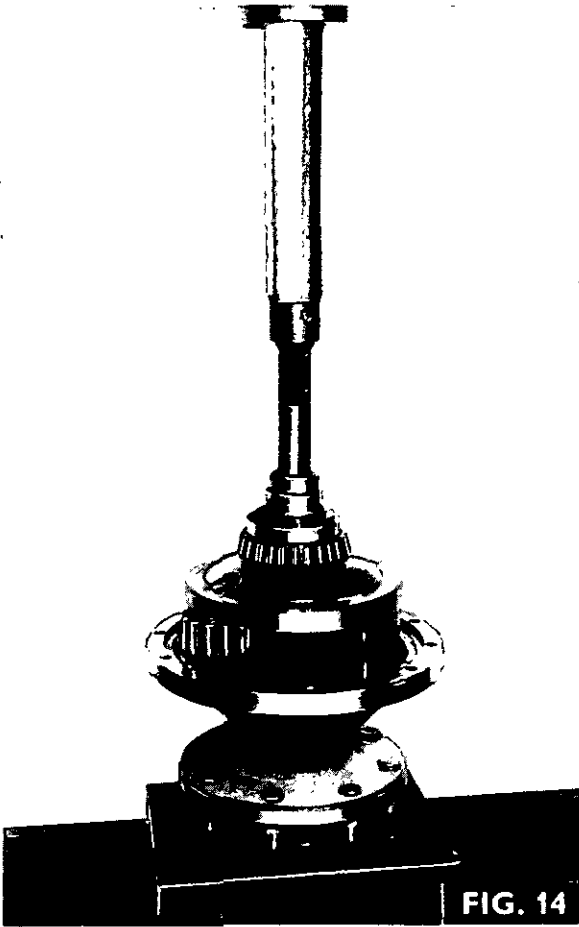


FIG. 14

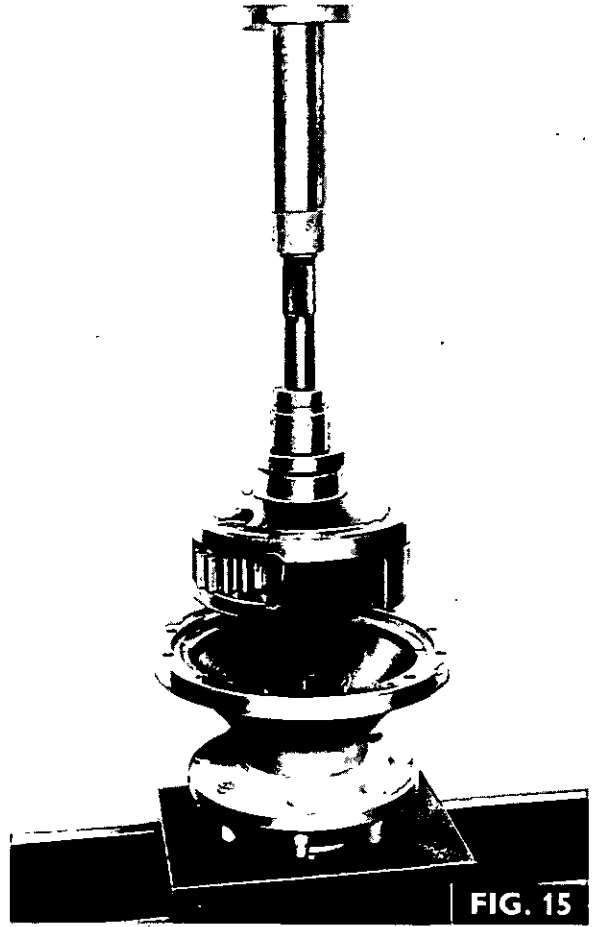


FIG. 15

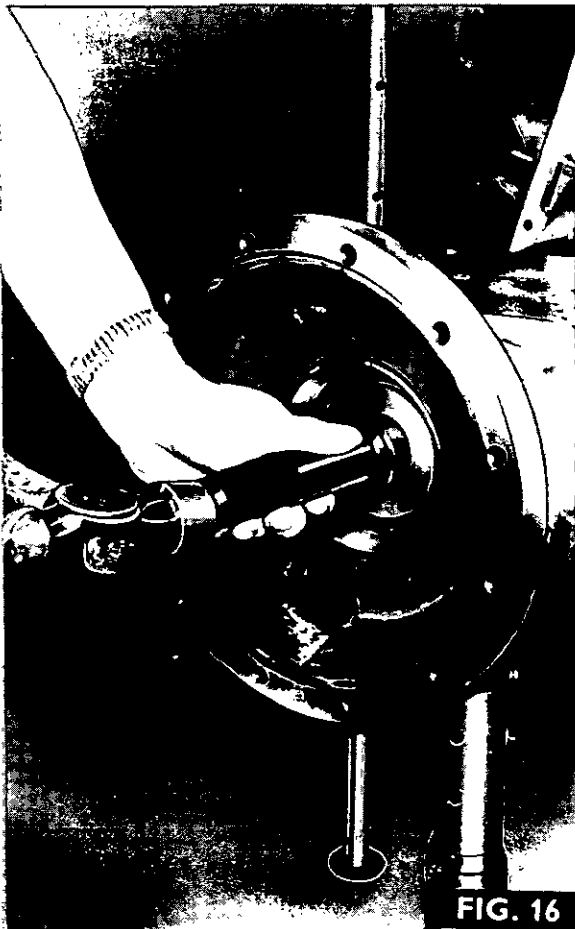


FIG. 16

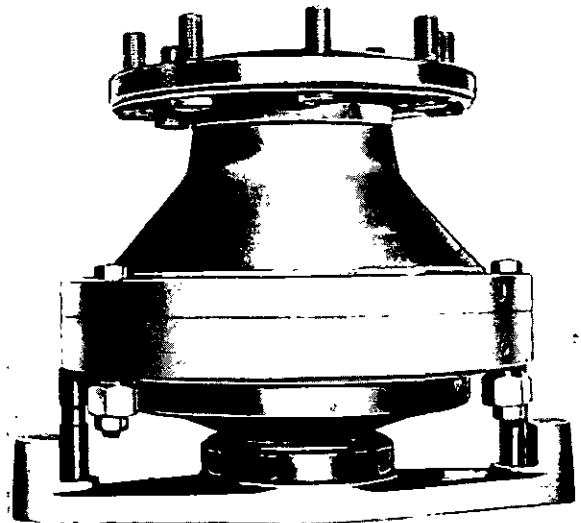


FIG. 17

REAR AXLE AND BRAKES



FIG. 18

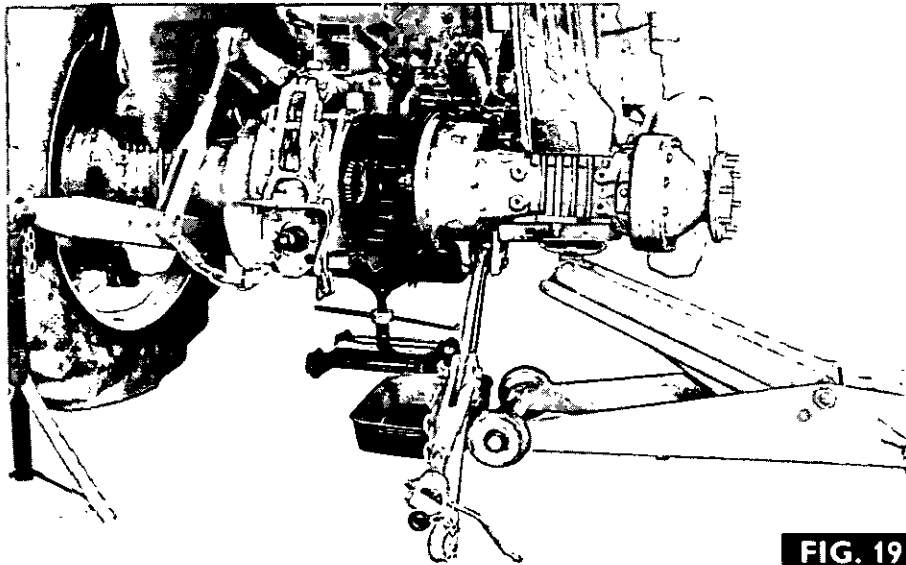


FIG. 19



FIG. 20

## REAR AXLE AND BRAKES

### Refitment

1. Carefully place a new 'O' ring (28) in the recess in the trumpet housing using petroleum jelly – DO NOT attempt to fit this 'O' ring to the carrier plate.
2. Carefully slide the carrier plate (44) over the axle shaft and fully locate it in the trumpet housing, taking care not to displace the 'O' ring.
3. Refit the two countersunk screws (43) fully tightening them.
4. Fig. 18. Manoeuvre the trumpet housing on to the trolley jack, as shown.
5. Refit the trumpet housing as stated in operation 5A-06-07.

### R.H. CARRIER PLATE

#### Removal and Refitment 5A-09-11

#### Removal

1. Remove the trumpet housing, as stated in operation 5A-07-08.
2. Manoeuvre the trumpet housing off the trolley jack and stand the trumpet housing on end.
3. Fig. 20. Using a suitable punch, drive the roll pin (76) out of the coupler fork (75) and shaft (78) as shown.
4. Remove the two countersunk screws (43) securing the carrier plate to the trumpet housing.
5. Carefully withdraw the carrier plate, complete with the differential lock coupler fork (75) and coupler (74).

**WARNING – DO NOT USE SCREWDRIVERS OR PRY-BARS TO FREE THE CARRIER PLATE.**

6. Remove the inner 'O' ring (28) from the trumpet housing.

#### Refitment

1. Carefully place a new 'O' ring (28) in the recess in the trumpet housing using petroleum jelly – DO NOT attempt to fit the 'O' ring to the carrier plate.
2. Assemble the differential lock coupler (74) and coupler fork (75) to the carrier plate (29) then slide the assembly on to the axle shaft, locating the splines in the coupler on the axle shaft and the coupler fork on its shaft.
3. Fig. 20. Refit the two countersunk screws loosely, then align the holes in the coupler fork and shaft and drive in a new roll pin (76) with the split in the roll pin uppermost.
4. Fully tighten the two countersunk screws, securing each with a centre punch mark.
5. Fig. 19. Manoeuvre the trumpet housing assembly on to the trolley jack as shown.
6. Refit the trumpet housing, as stated in operation 5A-07-08.

### L.H. BRAKE ACTUATOR HOUSING

#### Removal and Refitment 5A-10-11

#### Removal

1. Drain the transmission oil to the MIN mark on the dipstick.
2. Disconnect the brake pull rods.

3. Remove the brake return spring.
4. Fig. 21. Remove the brake adjusting nut (55) and spacer (54).
5. Remove the three bolts (69) securing the actuator housing (51) to the trumpet housing, then lift off the housing.
6. Tap out the rubber boot (52).
7. Only if necessary, remove the brake pull lever (53) by removing the split pin and pushing out the pivot shaft (68).

Examine the condition of the joint faces on the actuator housing and the trumpet housings for damage. Clean both surfaces and remove any burrs.

#### Reassembly

1. If necessary refit the brake pull lever (53) refitting the pivot shaft and securing the assembly using a new split pin.
2. Fit a new rubber boot (52) into the actuator housing, preferably using a hydraulic press.
- 3.
4. Manoeuvre the housing into position, taking care not to damage the new gasket, inserting the actuator rod into the rubber boot, then fit the three bolts and spring washers.

**NOTE – THE BOLTS ARE OF VARYING LENGTH ACCORDING TO THEIR POSITION ON THE CASTING.**

5. Fig. 22. Push the rubber boot inwards until the lips slip over the step in the actuator rod as shown.

**NOTE – DO NOT DISPLACE THE GARTER SPRING.**

6. Fig. 21. Refit the brake adjusting nut (55) and spacer (54).
7. Reconnect the brake pull rods and the return spring.
8. Refill the transmission with a recommended oil to the correct level.
9. Adjust and balance the brakes as stated in operation 5A-12-12.

### R.H. BRAKE ACTUATOR HOUSING AND DIFFERENTIAL LOCK PEDAL

#### Removal and Refitment 5A-11-11

#### Removal

1. Drain the transmission oil to the 'MIN' mark on the dipstick.
2. Disconnect the brake pull rods.
3. Remove the brake return spring.
4. Remove the brake adjusting nut (55) and spacer (54).
5. Remove the three bolts (69) and spring washers securing the actuator housing (70) to the trumpet housing, then manoeuvre the actuator housing, complete with the differential lock pedal (71) clear of the tractor.
6. Tap out the rubber boot (52).

**NOTE – DO NOT REMOVE THE DIFFERENTIAL LOCK PEDAL, OR THE BRAKE PULL LEVER, UNLESS THESE ARE TO BE SERVICED.**

**REAR AXLE AND BRAKES**

7. If necessary, remove the differential lock pedal (71) by driving out the pin (73) then pushing out the pivot shaft (72) and lifting the pedal clear.
8. The brake pull lever (53) can be removed, if required, by removing the split pin securing the pivot shaft (68), then pushing out the shaft and removing the lever.

Examine the joint faces of the actuator housing and the trumpet housing for damage, then thoroughly clean both faces, removing any burrs or pieces of old gasket.

**Refitment**

1. If necessary, refit the brake pull lever (53) refitting the pivot shaft (68) and securing the assembly with a new split pin.
2. If necessary, refit the differential lock pedal (71) by refitting the pedal and pivot shaft (72) then securing the shaft, using a new locking pin (73).
3. Carefully fit a new rubber boot (52) preferably using a hydraulic press.
4. Smear the actuator rod with petroleum jelly.
5. Manoeuvre the housing into position, taking care not to damage the new gasket and inserting the actuator rod into the rubber boot. Refit the three bolts (69) and spring washers.

**NOTE — THESE THREE BOLTS VARY IN LENGTH ACCORDING TO THE SECTION WIDTH OF THE CASTING.**

6. Fig. 22. Push the rubber boot inwards until the lips slip over the step in the actuator rod, as shown. Do not displace the garter spring.
7. Re-engage the differential lock pedal in its actuator rod, and adjust the differential lock, as stated in operation 5A-16-16.
8. Refit the brake adjuster nut (55) and spacer (54).
9. Reconnect the brake pull rods and refit the return spring.
10. Refill the transmission with a recommended oil.
11. Adjust and balance the brakes as stated in operation 5A-12-12.

**BRAKE ADJUSTMENT AND BALANCING**

5A-12-12.

Procedure is as follows:

1. Jack up the tractor until both rear wheels are clear of the ground.
2. Disengage the brake return springs and release the parking brake.
3. Measure the height of the R.H. pedal from the stepboard, then apply a load of approximately 4,5 kg (10 lb). The correct free travel is 67 mm (2 7/8 in).
4. Fig. 21. Adjust the nut (55) if necessary, clockwise to reduce the travel, or anticlockwise to increase it.
5. After correctly setting the free travel of the R.H. pedal, adjust the L.H. pedal to match for height and check that the latch will engage freely.
6. Remove the jack, then road test the tractor, with the pedals locked together, checking for binding, or pulling to one side.

**L.H. BRAKE SERVICING****Removal and Refitment**

5A-13-12

**Removal**

1. Remove the L.H. trumpet housing, as stated in operation 5A-06-07
2. Manoeuvre the trumpet housing, lower link and fender assembly off the trolley jack and stand it on end.
3. Remove the brake adjusting nut (55) and spacer (54).
4. Remove the three bolts (69) securing the brake actuator housing, then withdraw the actuator housing (51).
5. Tap the rubber boot (52) out of the actuator housing.
6. Remove the carrier plate, as stated in operation 5A-08-08.
7. Remove the brake components, marking them as they are withdrawn to facilitate reassembly. The order of removal is: first friction plate (22); first interplate (23); second friction plate (22); second interplate (23); third friction plate (22); actuator unit (24); fourth friction plate (22); third interplate (23); fifth friction plate (22).
8. If necessary, remove the brake stop rod (26) from the housing.
9. Only if necessary, disassemble the actuator unit, by releasing the four springs (47) then removing the actuator rod (50) and links (48).

**Examination**

Check the following components:

**Friction Plates:** these have a minimum groove depth per face of 0,3 mm (0.012 in) when new. If the friction plates show signs of wear (i.e. the grooves are starting to disappear) the plates must be replaced.

**Interplates:** the interplates can usually be refitted, unless they are badly scored, or worn more than 0,13 mm (0.005 in) per face. They should, however, be replaced when the friction plates are renewed.

Check the brake plates for signs of severe overheating, or distortion.

**NOTE — NEVER ATTEMPT TO RECLAIM FRICTION PLATES, OR INTERPLATES BY LAPPING OR GRINDING.**

Check the faces of the actuator plates for severe scoring and replace them if necessary. The actuator plates do not normally wear to any appreciable extent and can usually be refitted.

Thoroughly clean out the brake housing and remove any burrs or pieces of old gasket from the actuator housing and trumpet housing.

**Refitment**

1. If necessary, reassemble the actuator units, fitting the balls (25) and springs (47) then refitting the links (48) and the actuator rod (50).
2. Refit the brake stop rod (26) to its hole in the trumpet housing.
3. Dip each friction plate, interplate and actuator unit in clean transmission oil before refitting them into the housing. **THIS IS MOST IMPORTANT.**

REAR AXLE AND BRAKES

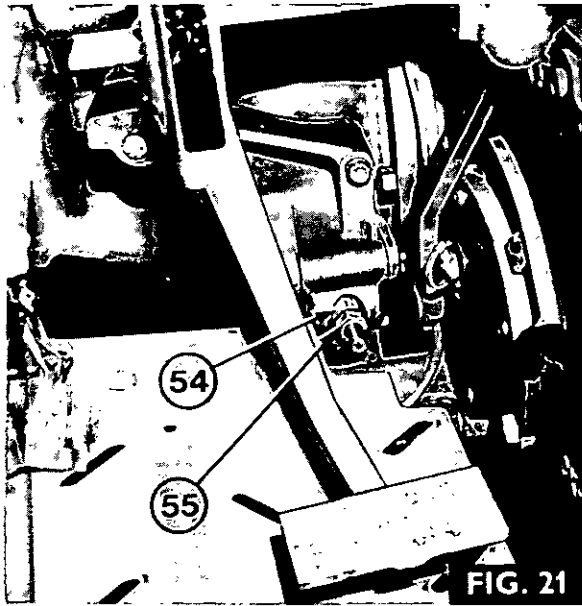


FIG. 21

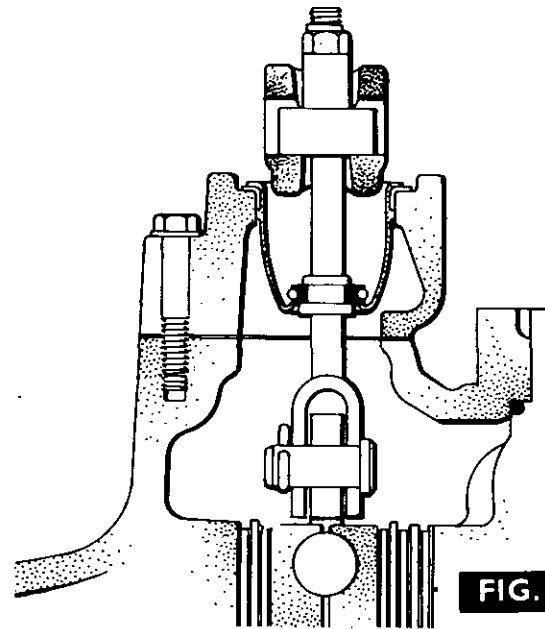


FIG. 22

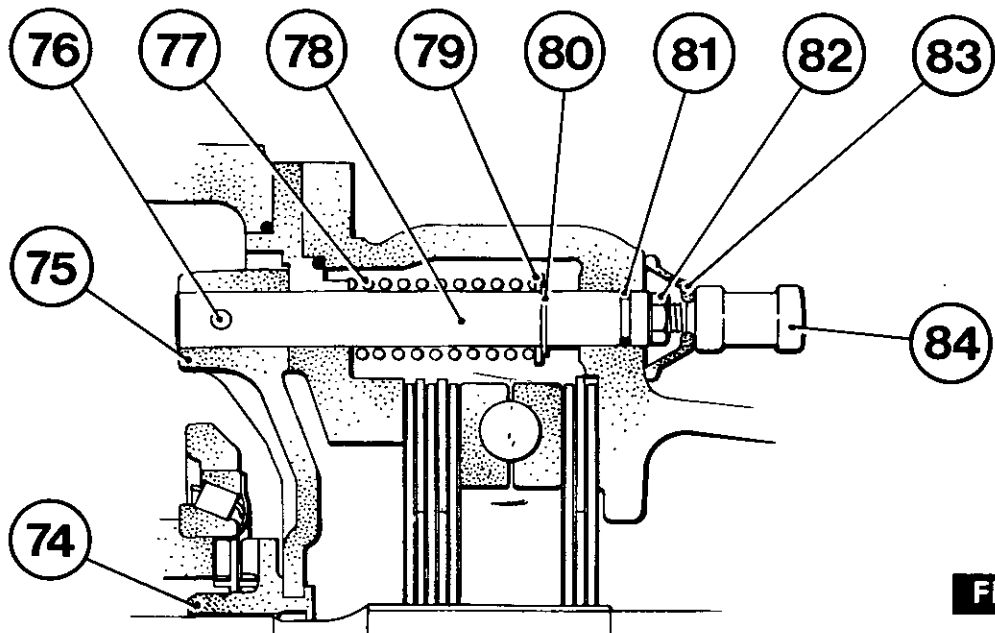


FIG. 23


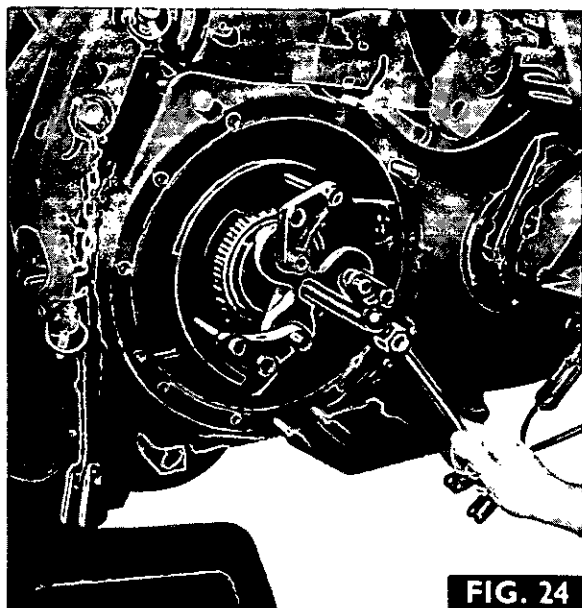
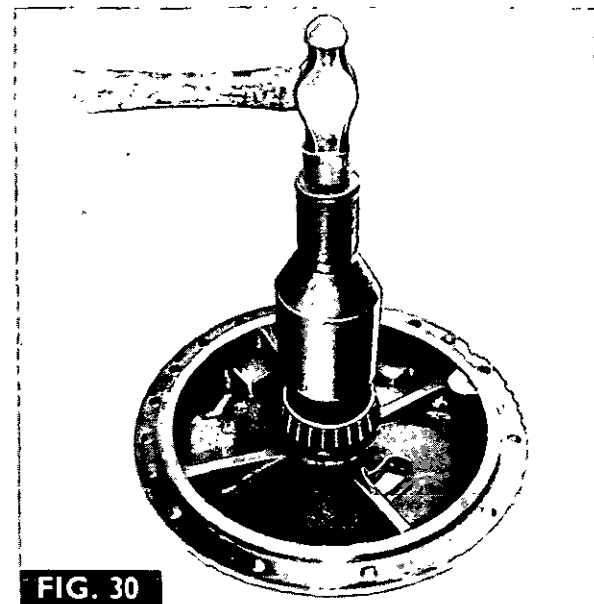
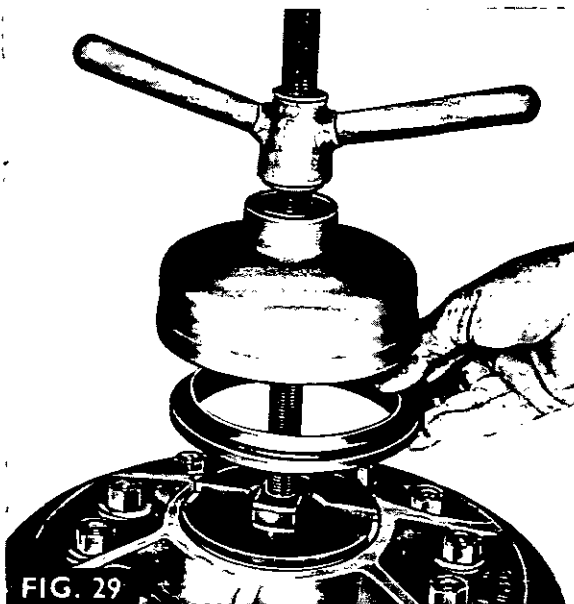
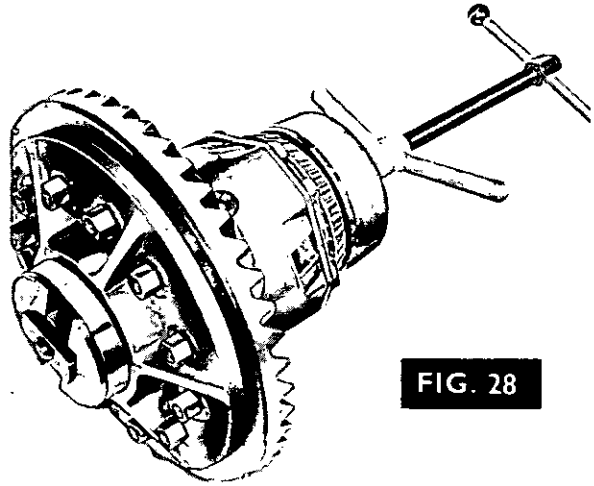
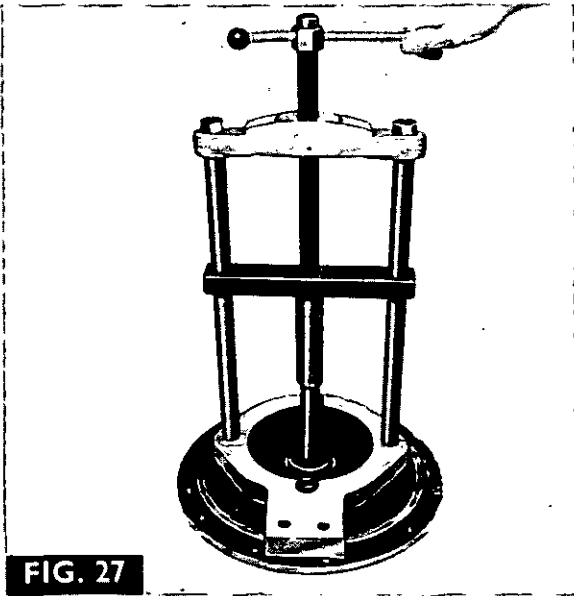
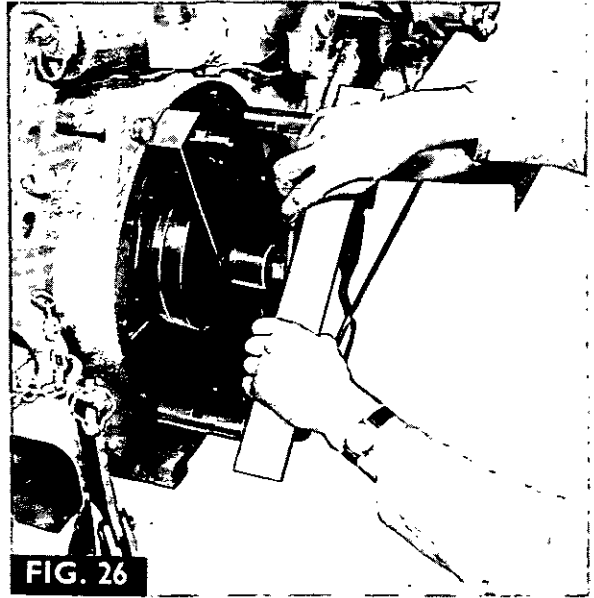


FIG. 24

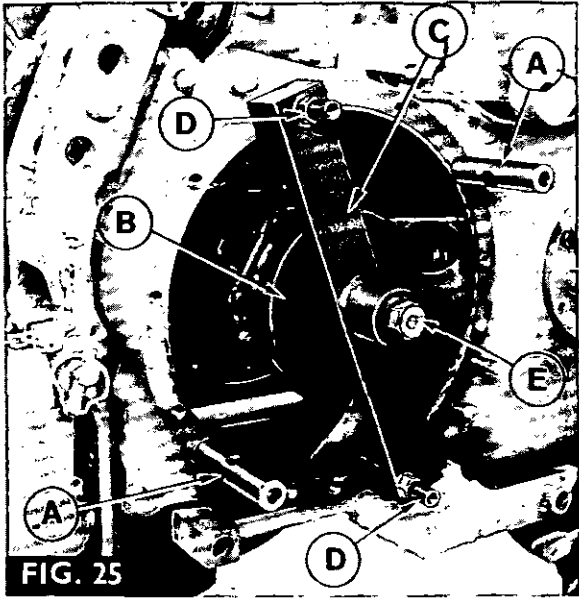REAR AXLE AND BRAKES



## REAR AXLE AND BRAKES

4. Refit the brake components in the following order: fifth friction plate; third interplate; fourth friction plate; actuator unit; third friction plate; second interplate; second friction plate; first interplate and first friction plate.
5. Refit the carrier plate as stated in operation 5A-08-08.
6. Fit a new rubber boot (52) to the actuator housing (51) preferably using a hydraulic press.
7. Refit the actuator housing to the trumpet housing, using a new gasket and locating the actuator rod (50) through the rubber boot. Refit the three bolts and spring washers.

**NOTE – THE BOLTS ARE OF VARYING LENGTH ACCORDING TO THE CASTING SECTION THICKNESS.**

8. Fig. 22. Push the rubber boot inwards until the lips of the boot locate over the step on the actuator rod as shown. Do not displace the garter spring.
9. Refit the brake adjusting nut and spacer.
10. Fig. 18. Manoeuvre the trumpet housing on to the trolley jack as shown.
11. Refit the trumpet housing as stated in operation 5A-06-07.

### R.H. BRAKE SERVICING

#### Removal and Refitment

5A-14-15

#### Removal

1. Remove the R.H. trumpet housing as stated in operation 5A-07-08.
2. Fig. 19. Manoeuvre the trumpet housing, fender and lower link assembly off the trolley jack and stand it on end as shown.
3. Fig 21. Remove the brake adjusting nut (55) and spacer (54).
4. Remove the three bolts (69) securing the brake actuator housing (70) then withdraw the actuator housing, complete with the differential lock pedal assembly.
5. Tap the rubber boot (52) out of the actuator housing.
6. Remove the carrier plate, as stated in operation 5A-0
7. Remove the brake components, marking them, as they are withdrawn to facilitate reassembly. The order of removal is: first friction plate (22); first interplate (23); second friction plate (22); second interplate (23); third friction plate (22); actuator unit (24); fourth friction plate (22); third interplate (23); fifth friction plate (22).
8. If necessary, remove the brake stop rod (26) from the housing.
9. Only if necessary, disassemble the actuator unit, by releasing the four springs (47) then removing the actuator rod (50) and links (48).

#### Examination

Check the following components:

Friction plates: these have a minimum groove depth per face of 0.3 mm (0.012 in) when new. If the friction plates show signs of wear, (i.e. the grooves are starting to disappear) the plates must be replaced.

Interplates: the interplates can usually be refitted, unless they are badly scored, or worn more than 0.13

mm (0.005 in) per face. They should, however, be replaced, when the friction discs are renewed. Check the brake plates for signs of severe overheating or distortion.

**NOTE – NEVER ATTEMPT TO RECLAIM FRICTION PLATES, OR INTERPLATES BY LAPPING, OR GRINDING.**

Check the faces of the actuator plates for severe scoring and replace them if necessary. The actuator plates do not normally wear to any appreciable extent and can usually be refitted.

Thoroughly clean out the brake housing and remove any burrs or pieces of old gasket from the actuator housing and trumpet housing.

#### Refitment

1. If necessary, reassemble the actuator units, fitting the balls (25) and springs (47) then refitting the links and actuator rod.
2. Refit the brake stop rod (26) to its hole in the trumpet housing.
3. Dip each friction plate, interplate and actuator unit in clean transmission oil before refitting them into the housing. **THIS IS MOST IMPORTANT.**
4. Refit the brake components in the following order: fifth friction plate; third interplate; fourth friction plate; actuator unit; third friction plate; second interplate; second friction plate; first interplate and first friction plate.
5. Refit the carrier plate, as stated in operation 5A-09-11.
6. Carefully fit a new rubber boot (52) into the actuator housing (70), preferably using a hydraulic press.
7. Smear the actuator rod with petroleum jelly.
8. Refit the actuator housing to the trumpet housing, using a new gasket and locating the actuator rod through the rubber boot. Refit the three bolts and spring washers.

**NOTE – THE BOLTS ARE OF VARYING LENGTH ACCORDING TO THE CASTING SECTION THICKNESS.**

9. Fig. 22. Push the rubber boot inwards until the lips of the boot locate over the step in the actuator rod as shown. Do not displace the garter spring.
10. Refit the brake adjusting nut and spacer.
11. Fig. 19. Manoeuvre the trumpet housing on to the trolley jack as shown.
12. Refit the trumpet housing as stated in operation 5A-07-08.

### DIFFERENTIAL LOCK ACTUATOR MECHANISM

#### Removal and Refitment

5A-15-15

#### Removal

1. Remove the R.H. trumpet housing, as stated in operation 5A-07-08.
2. Fig. 19. Manoeuvre the trumpet housing, fender and lower link assembly off the trolley jack and stand it on end, as shown.

**REAR AXLE AND BRAKES**

3. Fig. 23. Lift up the rubber seal (83) and release the locknut (82) securing the actuator fork (84) to the shaft (78) then rotate the fork out of engagement with the pedal (71). Fully unscrew the fork from the shaft, complete with its locknut and rubber seal.
4. Remove the carrier plate, as stated in operation 5A-09-11
5. Push the shaft (78) upwards and withdraw it from the trumpet housing, complete with the spring (77) washer (79) circlip (80) and 'O' ring (81).

Examine the shaft for wear or scoring and ensure that it will slide freely, but without undue free play. Clean and degrease the threads in the end of the shaft and on the actuator fork.

**Refitment**

1. Fit a new 'O' ring (81) to the shaft (78). If the shaft has been renewed, also fit a new circlip (80) and washer (79).
2. Slide the shaft into the housing taking care not to damage the 'O' ring. Refit the spring.
3. Refit the carrier plate, as stated in operation 5A-09-11.
4. Refit the trumpet housing as stated in operation 5A-07-08.
5. Apply a small quantity of either Loctite Grade 'A' or 'AV', or Casco 'ML15' to the threads of the actuator fork (84) then screw the fork fully into the shaft. Unscrew the actuator fork until it will engage the end of the differential lock pedal, when the pedal is fully raised. Fully tighten the locknut and push the rubber seal into place.

**DIFFERENTIAL LOCK ADJUSTMENT 5A-16-16**

1. Fig. 23. Lift up the rubber seal (83) covering the actuator fork locknut (82). Slacken the locknut, then rotate the fork (84) out of engagement with the pedal (71). Fully unscrew the fork from the shaft (77) complete with its locknut and seal.
2. Clean and degrease the threads of the actuator fork and the shaft.
3. Apply a small quantity of either Loctite Grade 'A' or 'AV', or Casco 'ML15' to the threads of the actuator fork, then screw the actuator fully into the shaft. Unscrew the actuator fork (84) until it will engage the end of the differential lock pedal, when the pedal is fully raised. Fully tighten the locknut and push the rubber seal into place.

**DIFFERENTIAL LOCK COUPLER CAP****Removal and Replacement 5A-17-16**

Special Tools Required: 555 Universal Puller  
MF 555-2A/1 Puller Adapter  
MF 257 Bearing Driver

**Removal**

1. Remove the R.H. trumpet housing, as stated in operation 5A-07.
2. Fig. 24. Fit special puller 555 and adapter MF 555-2A/1 to the differential bearing cone (32) then pull off the cone.
3. Remove the eight bolts securing the cap (33) to the differential case (34) then carefully prise the cap off the case, taking care not to release the case which will allow the differential components to fall out of the case.

**Replacement**

1. Fit the new differential coupler cap (33) in place then refit the eight bolts loosely.
2. Progressively and evenly retighten the bolts, using diagonal selection to a final torque of 11,5 kg-m (80 lb-ft).
3. Drive the bearing cone (32) on to the coupler cap using special tool MF 257.
4. Refit the R.H. trumpet housing as stated in operation 5A-07-08.

**DIFFERENTIAL****Pre-Load Checking and Adjustment 5A-18-16**

Special Tools Required: MF245D

**NOTE** – THIS CHECK MUST BE CARRIED OUT WHENEVER THE DIFFERENTIAL UNIT IS DISASSEMBLED, OR IF THE BEARINGS HAVE BEEN REPLACED.

Procedure is as follows:

1. Remove the R.H. trumpet housing, as stated in operation 5A-07-08.
2. Fig. 20. Using a suitable punch, drive out the roll pin securing the coupler fork to the shaft, as shown.
3. Remove the two countersunk screws securing the carrier plate to the trumpet housing.
4. Carefully withdraw the carrier plate, complete with the coupler fork and coupler. Remove the inner 'O' ring

**WARNING** – DO NOT USE SCREWDRIVERS OR PRY-BARS TO FREE THE CARRIER PLATE.

5. Drive the bearing cup (32) out of the carrier plate (29) and remove the chip shield (31).
6. Fig. 25. Screw the two setting blocks (A) on to two centre housing studs as shown. Remove one stud from an adjacent location to permit fitment of the upper block.
7. Remove another stud from the centre housing and refit it in the tapped hole adjacent to the long pin.
8. Place the bearing cup on the bearing cone, fit the centraliser (B) and then place the clamp bar (C) in position, securing it with the two tube nuts (D).



## REAR AXLE AND BRAKES

9. Torque the clamp bar nut (E) to 2,77 kg-m (20 lb ft), turning the differential unit by use of a lever, but keeping the bearing cup and cone stationary, to fully centralise the end seat of both bearings.
10. Fig. 26. Place the straight edge in position, as shown, then measure the gap between the straight edge and the end of the centraliser pin, using feeler gauges to determine the thickness of chip shield required. The gap measured, directly indicates the required shield which should be selected from the table shown below:

| Feeler Gap<br>(Equals Shield Thickness) |              | Means of<br>Identification | Part No.   |
|---|--------------|----------------------------|------------|
| mm                                      | ins          |                            |            |
| 0,74 to 0,79                            | 0.29 to 0.31 | NO DOTS                    | 187 689 M1 |
| 0,86 to 0,91                            | 0,34 to 0.36 | ONE DOT                    | 892 173 M1 |
| 0,99 to 1,04                            | 0.39 to 0.41 | TWO DOTS                   | 892 172 M1 |
| 1,12 to 1,17                            | 0.44 to 0.46 | THREE DOTS                 | 892 171 M1 |
| 1,25 to 1,30                            | 0.49 to 0.51 | FOUR DOTS                  | 892 170 M1 |

11. Remove the tube nuts (D), clamp bar (C), centraliser (B) and the setting blocks (A), then refit the two studs to their original holes.
12. Place the new chip shield (31) in the carrier plate (29) with the 'dished' face towards the differential, then drive the bearing cup (32) fully into position in the carrier plate.
13. Refit the carrier plate, as stated in operation 5A-09-11.
14. Refit the trumpet housing, as stated in operation 5A-07-08.

### R.H. DIFFERENTIAL BEARING

**Removal and Replacement** 5A-19-17

Special Tools Required: 555 Universal Puller  
MF 555-2A/1 Puller Adapter  
MF 257 Bearing Driver

With the differential unit fitted:

#### Removal

1. Remove the R.H. trumpet housing, as stated in operation 5A-07-08.
2. Fig. 24. Fit the puller No.555 and adapter MF 555-2A/1 to the differential as shown, then pull off the bearing cone (32).
3. Remove the carrier plate and drive out the bearing cup, as stated in items 2 to 5 of operation 5A-18-15.

#### Replacement

1. Drive the new bearing cone (32) on to the differential lock coupler cap using special tool MF 257.
2. Check the bearing pre-load, as stated in items 6 to 14 of operation 5A-18-16, but using a new bearing cup.
3. Refit the R.H. trumpet housing, as stated in operation 5A-07-08.

### DIFFERENTIAL UNIT

**Removal and Refitment** -20-17

#### Removal

1. Remove the L.H. trumpet housing, as stated in operation 5A-06-07.
2. Insert a suitable bar into the differential case assembly, then manoeuvre the differential assembly out of the centre housing.

**WARNING** - THE DIFFERENTIAL UNIT IS HEAVY AND AWKWARD TO HANDLE. TAKE CARE WHEN BOTH REMOVING AND REFITTING.

#### Refitting

1. Manoeuvre the differential assembly back into the centre housing, engaging the splines of the differential unit in those of the R.H. axle shaft.
2. Refit the L.H. trumpet housing, as stated in operation 5A-06-07.
3. If for any reason, any of the components of the differential unit have been replaced, check the differential pre-load, as stated in operation 5A-18-16.

### DIFFERENTIAL L.H. BEARING

**Removal and Replacement** 5A-21-17

Special Tools Required: MF200 Hand Press  
MF200-3 Adapter  
MF197 Bearing Driver  
MF197-2 Adapter  
MF1105 Universal Puller  
MF1105-2A/1 Adapter  
MF1105-2A/4 Adapter

#### Removal

1. Remove the differential, as stated in operation 5A-20-17.
2. Remove the carrier plate, as stated in operation 5A-08-08.
3. Fig. 27. Assemble the hand press MF200 with the adapter MF200-3, as shown, then pull off the bearing cone (46).
4. Fig. 28. Assemble the puller MF1105 with the adapters MF1105-2A/1 and MF1105-2A/4 as shown, then pull out the bearing cup (45).

#### Replacement

1. Fig. 29 Assemble the puller MF1105 and adapter MF1105-2A/1 and MF1105-2A/4 with a new bearing cup (45), as shown, then pull the new cup into the differential unit.
2. Fit the adapter MF197-2 to the bore of the carrier plate.
3. Fig. 30. Slide the new bearing cone on to MF197-2, then drive it fully on to the carrier plate using a hammer and driver MF197.
4. Refit the differential unit, as stated in operation 5A-20-17.
5. Check the differential pre-load, as stated in operation 5A-18-16.

**REAR AXLE AND BRAKES****CROWNWHEEL****Removal and Replacement**

5A-22-18

Special Tools Required: MF9A Holder  
MF10 Adapter  
MF258 Holder  
Epoxy Resin Bonding Kit  
1852 913M91.  
Torque Wrench

**Removal**

1. Remove the differential gears as stated in operation 5A-23-18.
2. Place the differential unit on the bench with teeth facing downwards, then carefully centre punch the head of each rivet (42) centrally.
3. Using a 13 mm (½ in) diameter drill, very carefully drill through each rivet head until the rivet heads become detached from the shanks.
4. Drive the rivets out of the differential case and the crownwheel, then drive off the crownwheel.

**Replacement**

1. Inspect the mating faces of the differential case and the new crownwheel, ensuring that they are perfectly flat.
2. Fit the adapter and holder MF9A and MF10 on to the bench, then fit the L.H. differential case in place, with the crownwheel mating face upwards.
3. Thoroughly degrease the crownwheel, L.H. differential case, differential bolts and nuts with trichlorethylene, before attempting assembly.
4. Before attempting assembly, have all the bolts and nuts, a torque wrench, a correct size socket and either Loctite Grade AV, or Casco ML15 ready for use immediately the crownwheel and differential case are joined.
5. Open the epoxy resin kit 1852 913M91. Its contents are:
  - One jar containing 10 ml of resin. This jar is also used as a mixing vessel.
  - One jar containing 5 ml of hardener.
  - One glass stirring rod.
  - One brush.
6. Pour the hardener into the resin jar then mix the two elements thoroughly with the glass rod.
7. Apply an even coating of adhesive to both mating faces.
8. Carefully fit the crownwheel to the differential case.

**NOTE** – THESE TWO COMPONENTS ARE AN INTERFERENCE FIT AND MUST, THEREFORE, HAVE THEIR BOLT HOLES ACCURATELY ALIGNED BEFORE FITTING THE TWO COMPONENTS TOGETHER.

9. Fit the twelve bolts with their heads nearest the crownwheel teeth, then apply two drops of either Loctite Grade AV, or Casco ML15 to the first thread of each bolt.
10. Refit the differential components, as stated in operation 5A-23-18.
11. Fit the nuts and torque them progressively and evenly to 15,5 kg-m (120 lb ft).

**NOTE** – OPERATIONS 7 TO 10 MUST BE COMPLETED WITHIN 30 MINUTES OF MIXING THE RESIN AND HARDENER.

12. Finally cure the resin bonding by subjecting the crownwheel and differential case assembly to uniform heating at one of the temperatures listed below, for the required length of time.
  - 120°C (245°F) for a minimum of 1 hour
  - or 40°C (105°F) for a minimum of 12 hours
  - or 30°C (85°F) for a minimum of 16 hours
  - or 20°C (68°F) for a minimum of 24 hours
13. Refit the differential unit, as stated in operation 5A-18-16.

**DIFFERENTIAL UNIT SERVICING** 5A-23-18

Special Tools Required: MF9A Holder  
MF10 Bench Adapter  
MF258 Holder

1. Remove the differential unit, as stated in operation 5A-18-16.
2. Fit the bench adapter MF10 to the bench then fit the holder MF9A to it.
3. Fig. 31. Place the differential on the adapter as shown, then remove the eight bolts securing the R.H. case and the differential lock coupler cap (33).
4. Remove the coupler cap from the R.H. case, and remove the case.
5. Fig. 32. Lift out the L.H. differential gear (40) with its thrust washers (41) cross joint and pinions assembly (38), with their thrustwashers (37) then finally remove the remaining differential gear (36).

**Examination**

Examine all differential components, particularly gears, thrust washers and shafts, for scoring, chipping or wear.

Any component showing signs of wear should be renewed.

**NOTE** – IF ANY ONE OF THE SPIDER GEARS IS WORN, A FULL SET OF FOUR NEW GEARS SHOULD BE FITTED. IN SUCH CIRCUMSTANCES, DIFFERENTIAL GEARS MAY ALSO NEED REPLACING.

**Reassembly**

1. Fig. 32. Refit the R.H. differential gear (36) and thrust washer (35) into the differential case followed by the cross joint and pinion assembly (38) then finally the remaining differential gear (40) and thrust washer (41).
2. Fig. 33. Refit the R.H. differential case (34) with the markings aligned, as shown, then fit the differential lock coupler (33).
3. Refit the eight bolts and torque them to 11,5 kg-m (85 lb-ft).
4. Refit the differential unit as stated in operation 5A-18-16.

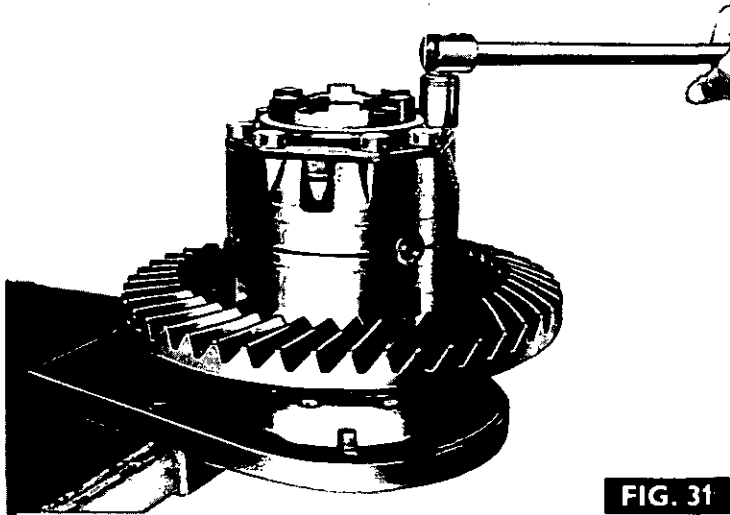


FIG. 31

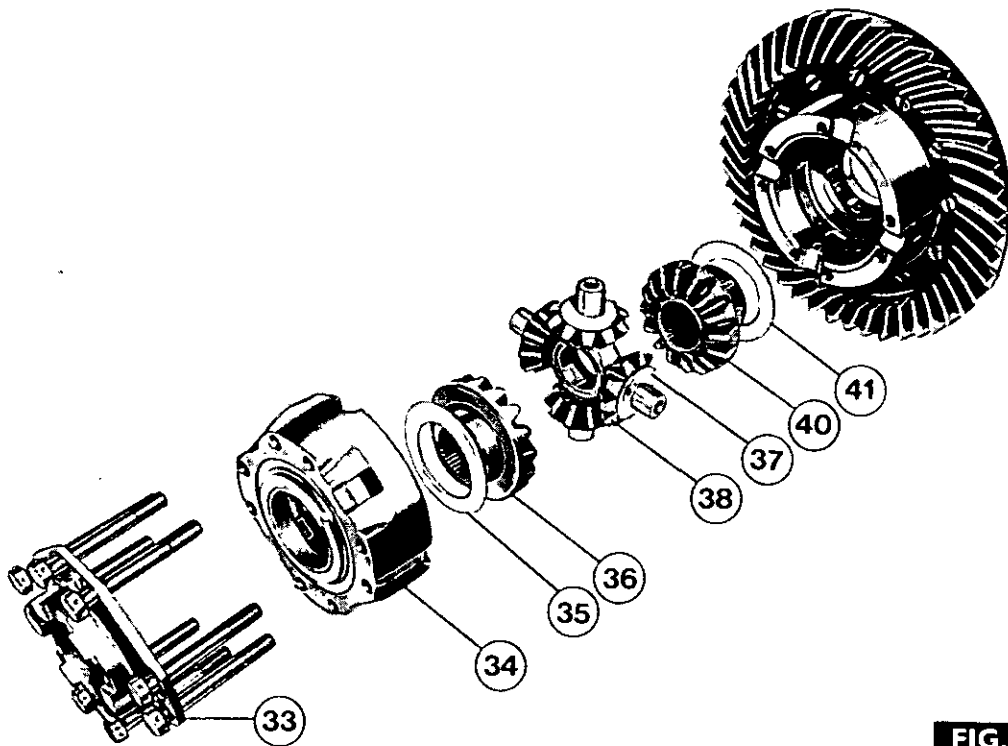


FIG. 32

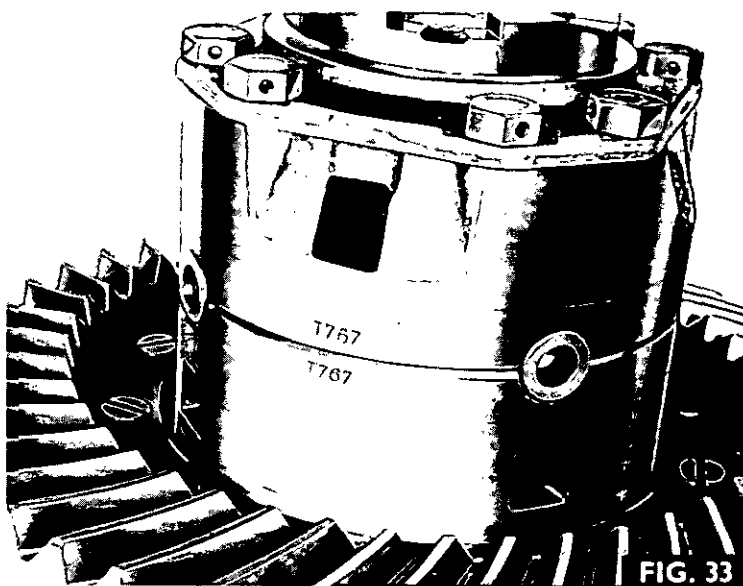


FIG. 33

REAR AXLE AND BRAKES

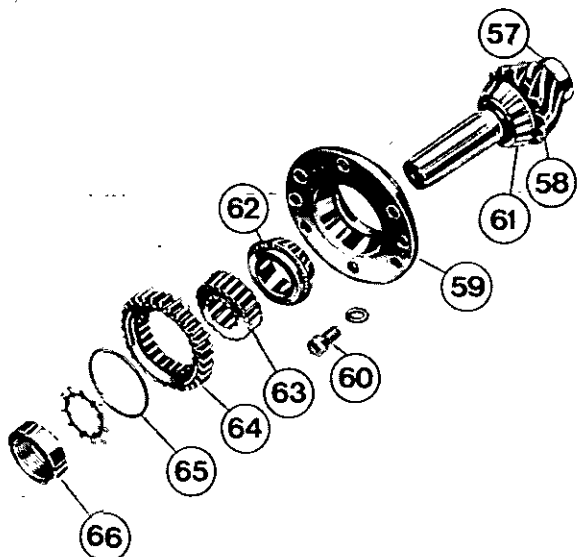


FIG. 34

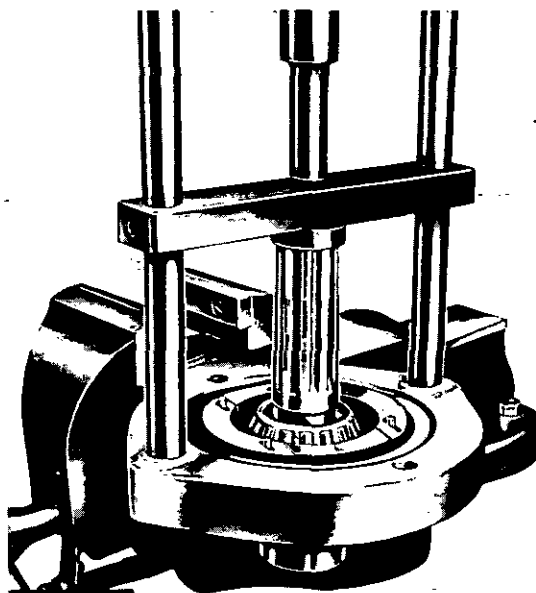


FIG. 35

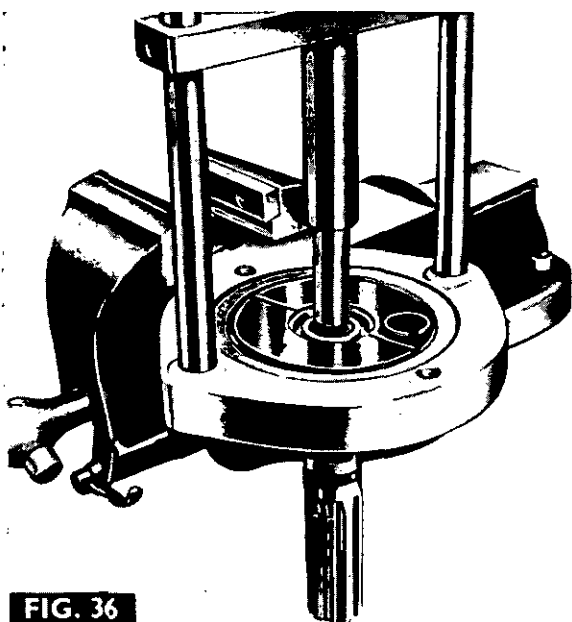


FIG. 36

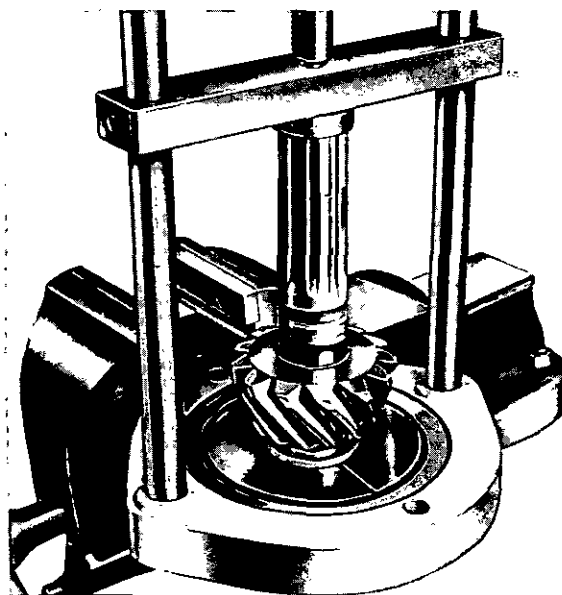


FIG. 37

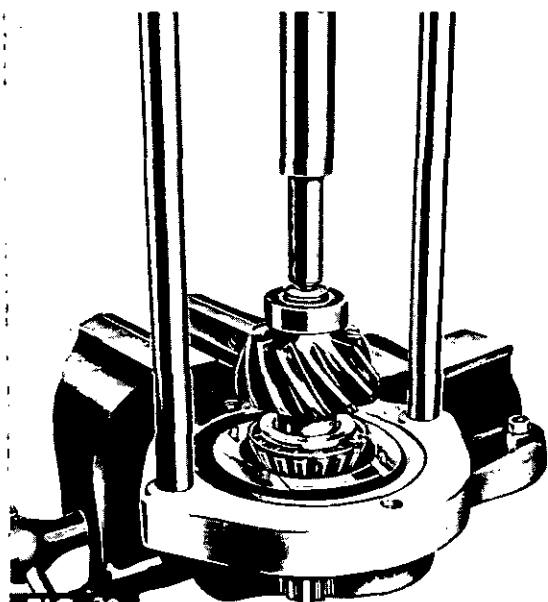


FIG. 38

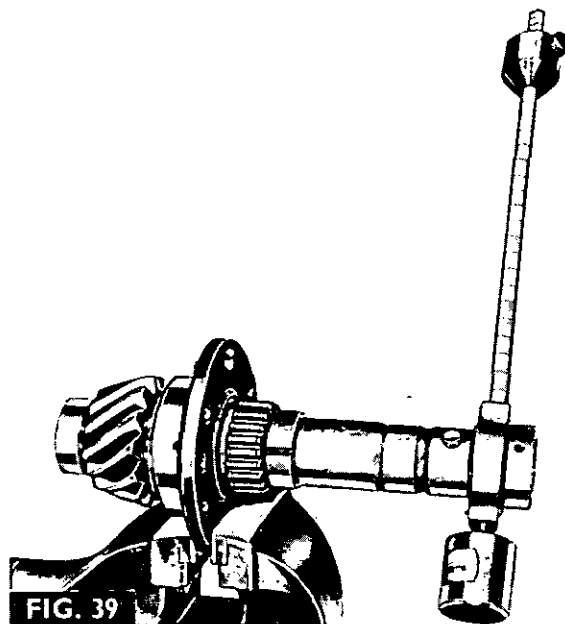


FIG. 39

**REAR AXLE AND BRAKES****PINION ASSEMBLY****Removal and Refitment**

5A-24-21

**Removal**

1. Remove the hydraulic lift cover and the hydraulic pump(s), as stated in Part 7A.
2. Fig. 34. Release the snap ring (65), securing the ground speed gear (64) to the splined hub, then slide off the gear.
3. Remove the six bolts (60) and spring washers securing the pinion housing (59).
4. Screw two of the bolts into the two tapped holes in the housing, then extract the pinion housing assembly.

**Refitment**

1. Fit the pinion assembly into the centre housing, aligning the locating pin, before pressing the housing into place.
2. Secure the housing with six bolts and spring washers tightened to a torque of 11 kg.m (80 lb.ft).
3. Locate the ground speed gear (64) (with the boss at the rear) then refit the snap ring (65).
4. Refit the ground speed gear to the front of the p.t.o. shaft.
5. Refit the hydraulic pump(s) and the hydraulic lift cover as stated in Part 7A.

**PINION ASSEMBLY SERVICING**

5A-25-21

Special Tools Required: 3150 'C' Spanner,  
 CP4030 Pre-load Gauge  
 MF 200 Hand Press  
 MF 200-23 Adapter  
 MF 200-25 Adapter

**Removal**

1. Remove the pinion assembly, as stated in operation 5A-24-21.
2. Fig. 34. Hold the pinion in a soft faced vice, release the tab washer, then unscrew the locking ring (60) using the 3150 'C' spanner. Remove the splined hub and pull off the housing (59) complete with the front bearing cone (62).
3. Fig. 35. Fit the pinion to the MF 200 hand press with adapters MF 200-23 and MF 200-25, then press off the bearing (61).
4. Remove the snap ring securing the pilot bearing (57) to the pinion.

5. Fig. 36. Fit the pinion to the MF 200 Hand press, using adapter MF 200-23, then press off the pilot bearing.

**EXAMINATION****Examine the following:**

Pinion teeth and splines  
 All bearings and cones  
 Gear teeth

All of the above components must be checked for wearing, chipping or scoring.

Any component which shows signs of wear must be replaced (i.e. both the cup and cone for taper roller bearings).

**NOTE -**

1. IF THE PINION IS DAMAGED, THE CROWN-WHEEL MUST ALSO BE REPLACED AS THESE ARE ONLY SUPPLIED IN MATCHED SETS.
2. THE TAPER ROLLER BEARINGS (61 and 62) ARE SERVICED AS A PAIR, ASSEMBLED WITH THE HOUSING (59). NEW SNAP RINGS AND A NEW TAB WASHER SHOULD ALWAYS BE FITTED.

**Reassembly**

1. Fig. 37. Using the MF 200 hand press and adapter MF 200-23, press the pilot bearing (57) on to the pinion.
2. Secure the pilot bearing with a new snap ring.
3. Fig. 38. Using the MF 200 hand press and adapters MF 200-23 and MF 200-25, press the bearing (61) on to the pinion.
4. Locate the pinion in its housing (59), then fit the front bearing cone (62), the splined hub (63) a new tab washer and the locking ring (66).
5. Fig. 39. Hold the housing in a soft faced vice, then assemble the CP4030 pre-load gauge as shown. Adjust the pre-load gauge to 0,23 kg.m (1.67 lb.ft - 20 lb.ins).
6. Fig. 40. Tighten the locking ring (66) using the 3150 'C' spanner, simultaneously tapping the pinion to centralise the bearing. When the pre-load is correctly set, the weight on the gauge should just fall freely under its own weight.
7. Secure the locking ring with the tab washer.
8. Refit the pinion assembly to the centre housing, as stated in operation 5A-24-21

**REAR AXLE AND BRAKES****REAR DRIVESHAFT SERVICING** 5A-26-22

Special Tools Required: MF 202A Needle Roller Bearing Puller  
MF 203A Needle Roller Bearing Driver  
550 Universal Handle

**Removal**

1. Remove the lift cover as stated in Part 7A.
2. Remove the split pin from the shear tube, then remove the shear tube.
3. Remove the rear drive shaft.
4. Fig. 41. Locate the end of the bearing remover tool MF 202A underneath the bearing cage, inside the bore of the rear drive shaft.
5. Extract the bearing and remove the spring and plunger.

Examine the rear drive shaft for wear or damage and fit a new needle roller bearing.

**Replacement**

1. Refit the spring and plunger.
2. Fig. 42. Position the new needle roller bearing squarely over its bore in the rear driveshaft.
3. Place the bearing depth control collar (part of MF 203A) on the end of the driveshaft, over the bearing.
4. Drive in the needle roller bearing using MF 203A and the 550 handle, as shown until the tool contacts the depth control collar.
5. Refit the rear drive shaft.
6. Refit the shear tube, then fit a new split pin to give 0.40 to 2.50 mm (0.015 to 0.100 in) end float.
7. Refit the lift cover, as stated in Part 7A.

**FOOTBRAKE LINKAGE AND PEDALS****Removal and Refitment** 5A-27-22**Removal**

1. Release the brake return springs.
2. Fig. 43. Remove the split pin (87) and the clevis pin (86) securing the brake rod to the R.H. pedal (93).
3. Remove the split pin and cotter pin securing the L.H. brake rod to the cross shaft arm (101).
4. Remove the split pin (91) and the clevis pin securing the brake rod (90) to the R.H. brake lever.
5. Repeat item 4 for the L.H. brake lever pull rod.
6. Remove the snap ring (104), and the washer (103), then slide the R.H. brake pedal off the cross shaft (105).
7. Slacken the pinch bolt securing the L.H. cross shaft arm (101), then pull off the arm.
8. Remove the Woodruff Key from the cross shaft, then push the cross shaft through the centre housing and remove it, complete with the L.H. brake pedal.
9. Remove the pinch bolt (107), nut and spring washer, securing the L.H. brake pedal (95) then slide the pedal off the shaft. Remove the Woodruff Key.
10. To remove the locking latch (109), remove the screw (110) and lift off the latch (109) and plate (108). To service the parking latch, see operation 5A-28-22.

Examine the cross shaft (105) and the R.H. pedal bush (85) for wear and replace, if necessary.

When re-assembling, fit new Woodruff Keys, a new snap ring (104) and new split pins (87 and 91).

**Refitment**

1. If necessary, press a new bush (85) into the R.H. brake pedal (93).
2. Fit a new Woodruff Key to the R.H. end of the cross shaft (105), then refit the L.H. brake pedal (95) and secure with the pinch bolt (107), and nut and a spring washer.
3. Slide the cross shaft through transmission case. Fit a new Woodruff Key, then refit the cross shaft arm (101) and secure it with a pinch bolt (102), nut and spring washer.
4. Re-assemble locking latch (109) and plate (108) to the R.H. brake pedal (93), refitting the screw (110) and self locking nut.
5. Slide the R.H. brake pedal on to the cross shaft, refit the washer (103) and securing it with the snap ring (104).
6. Refit the brake rods (90), connecting them to the pedals and the brake levers, refitting the clevis pins (86 and 92) and new split pins (87 and 91) on both sides of the tractor.

**NOTE** – IF THE BRAKE RODS ARE OF THE ADJUSTABLE TYPE, THEY MUST BE SET AT 825 mm (32½ in) BEFORE REFITMENT.

7. Adjust and balance the brakes, as stated in operation 5A-12-12.

**PARKING LATCH SERVICING** 5A-28-22

Fig. 43. The parking latch is secured to the L.H. brake pedal by a clevis pin and split pin (97). To disassemble the latch, remove the split pin and clevis pin. This then frees the latch (99), pawl (98) and spring (96). The sector (100) is secured to the transmission case by three bolts. Examine the pawl, pin and sector teeth for wear and replace as necessary.

When re-assembling the latch, re-tension the spring and fit a new split pin (97).

**PARKING BRAKE AND LINKAGE****Removal and refitment** 5A-29-22**Disassembly**

1. Fig. 44. Remove the split pin (126), washer, and clevis pin (132) from the lever to the rod (119), then remove the split pin (120) and clevis pin (118) and lift off the rod (119).
2. Remove the split pin (117) and clevis pin (116) securing the brake rod clevis (115), then remove the split pin (112) and clevis pin (111) securing the brake rod (113) to the brake lever.
3. Remove the circlip (138) from the pivot shaft (121), then remove the washer (137) and the pivot arm (135).
4. Repeat items 1 to 3 for the opposite side of the tractor, if necessary.
5. Remove the two bolts (129) securing the lever assembly (127) to the lift cover.
6. To disassemble the lever assembly, withdraw the taper pin (130), then pull the cross shaft (128) and lift off the lever (125).

**REAR AXLE AND BRAKES**

7. To remove the pawl (131), remove the split pin (133) and clevis pin (132), then disengage the pawl from the actuator (122).
8. Pull the actuator (122), spring (123) and the stop (124) from the lever.

Examine the pawl and teeth for wear, also the pivot arm bush (136) and replace any worn clevis pins. Fit new split pins on assembly, also a new taper pin (130).

**Reassembly**

1. Fit the spring (123) and spring stop (124) to the actuator (122), then feed the actuator into the lever (125) from the top.
2. Engage the pawl (131) in the end of the actuator rod, then refit the clevis pin (132), washer and a new split pin (126).
3. Slide the cross shaft (128) into the bracket (127) then fit the lever assembly and secure them with a new taper pin (130).
4. Bolt the bracket assembly to the lift cover with two bolts (129). Tighten the bolts to a torque of 9 kg.m (65 lb.ft).
5. If necessary, fit a new bush (136) to the pivot arm (135) then refit the pivot arm and washer (137) securing them with the circlip (138).
6. Refit the rod (119), securing it with the clevis pins (134 and 118) and new split pins (133 and 120).
7. Adjust the footbrakes, as stated in operation 5A-12-12.
8. Refit the brake rod (113) to the brake lever, securing it with the clevis pin (111) and a new split pin (112).
9. With the parking brake lever in the fully lowered position, slacken the locknut (114) and screw in the clevis adapter (115) until the clevis pin (116) can be just fitted, without movement of the brake lever. Re-tighten the locknut (114), then fit a new split pin (117).
10. Repeat operation 5, 6, 8 and 9 for the opposite side of the tractor.

REAR AXLE AND BRAKES

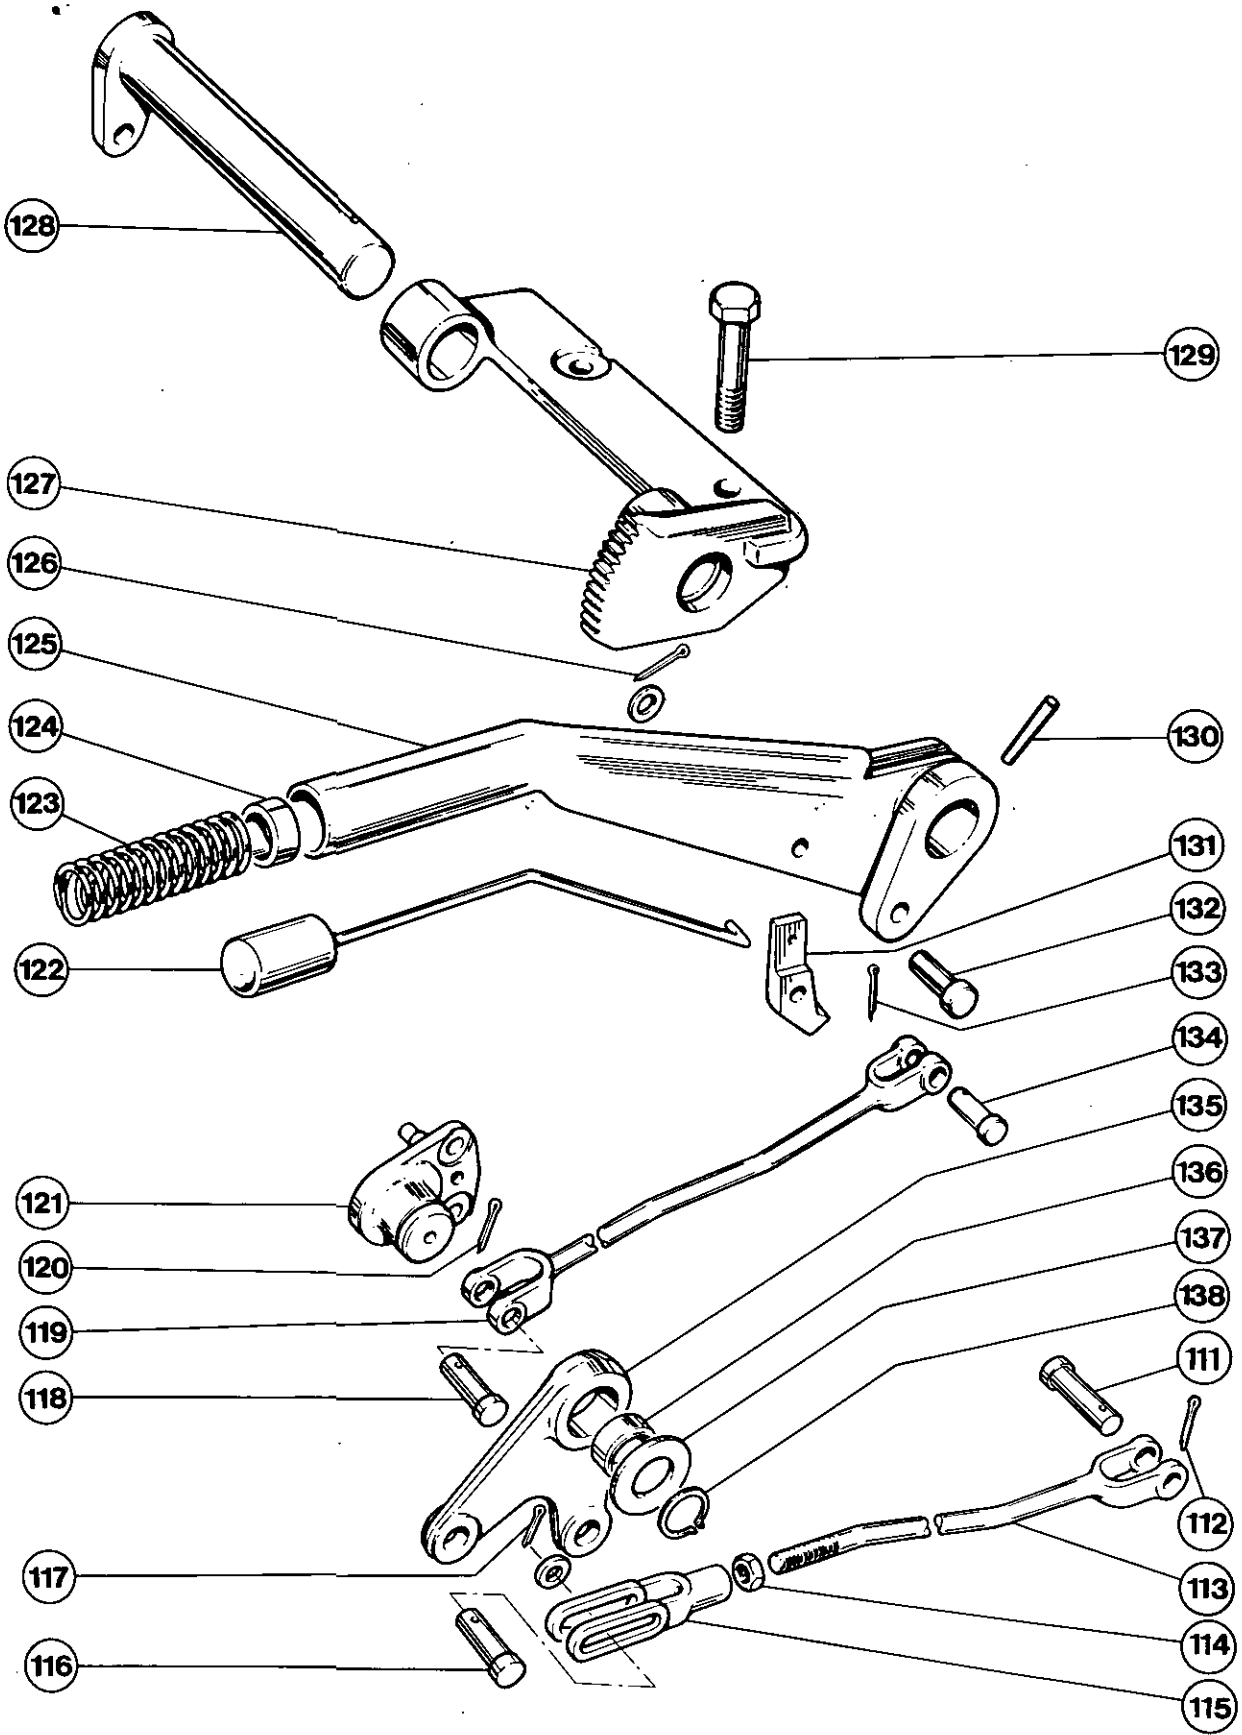


FIG. 44



REAR AXLE AND BRAKES

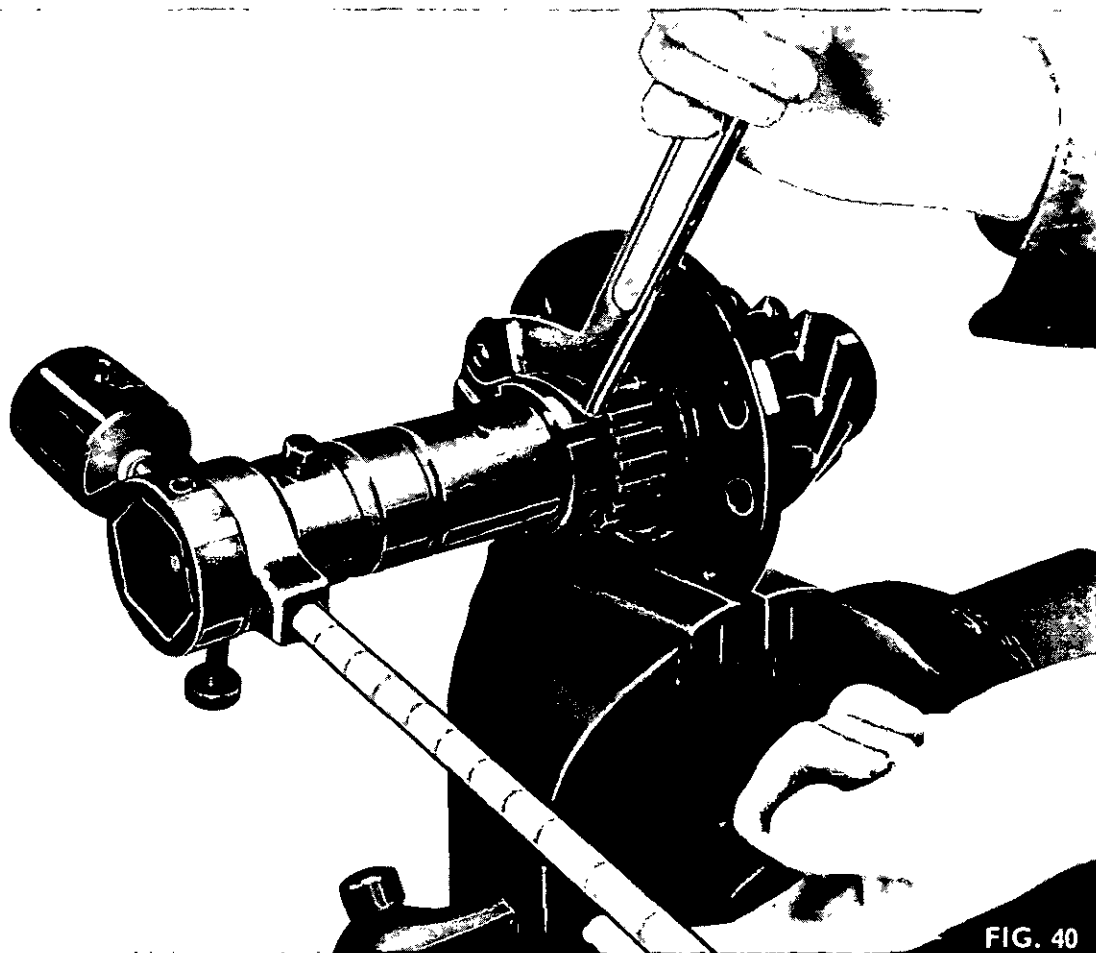


FIG. 40

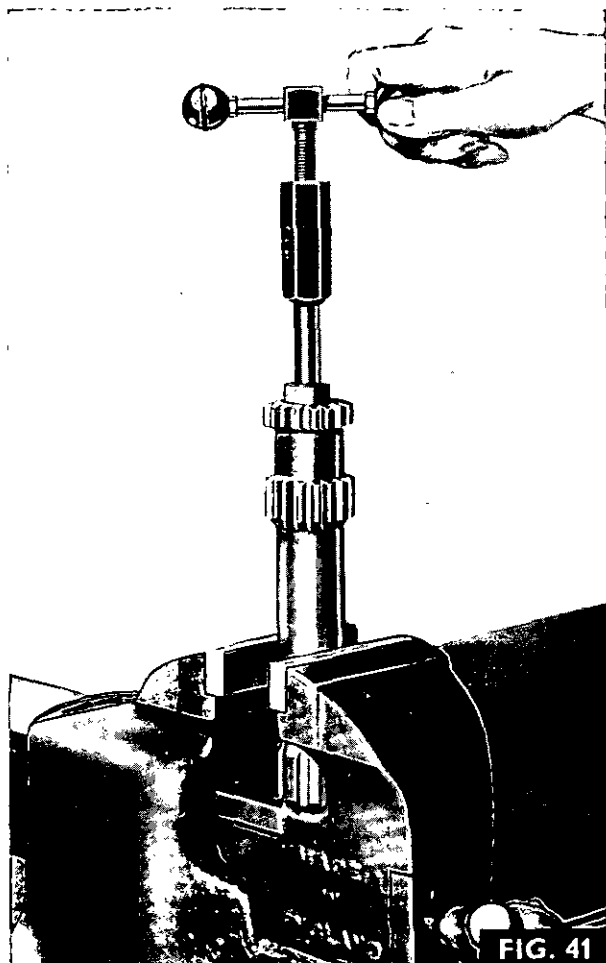


FIG. 41

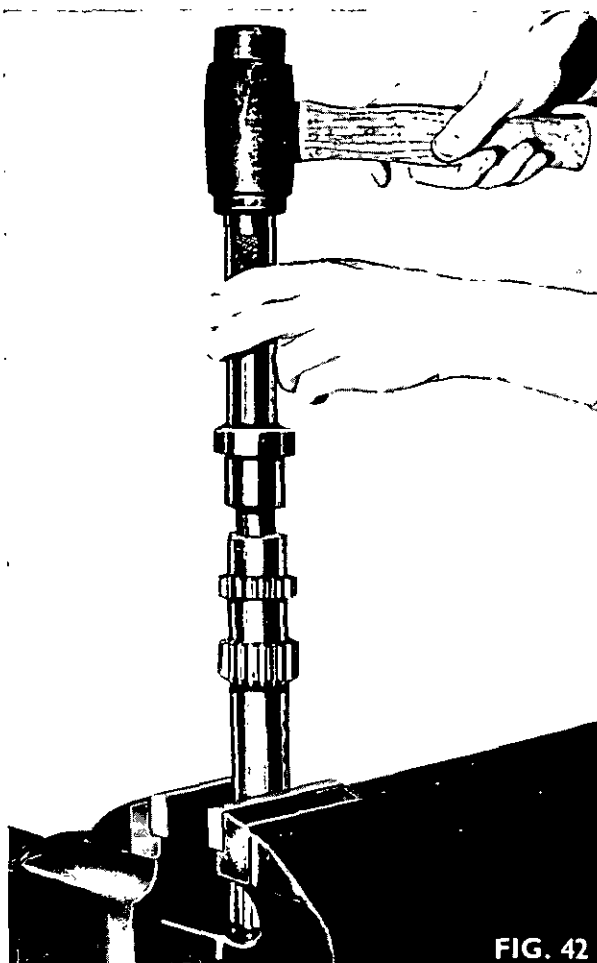


FIG. 42

REAR AXLE AND BRAKES

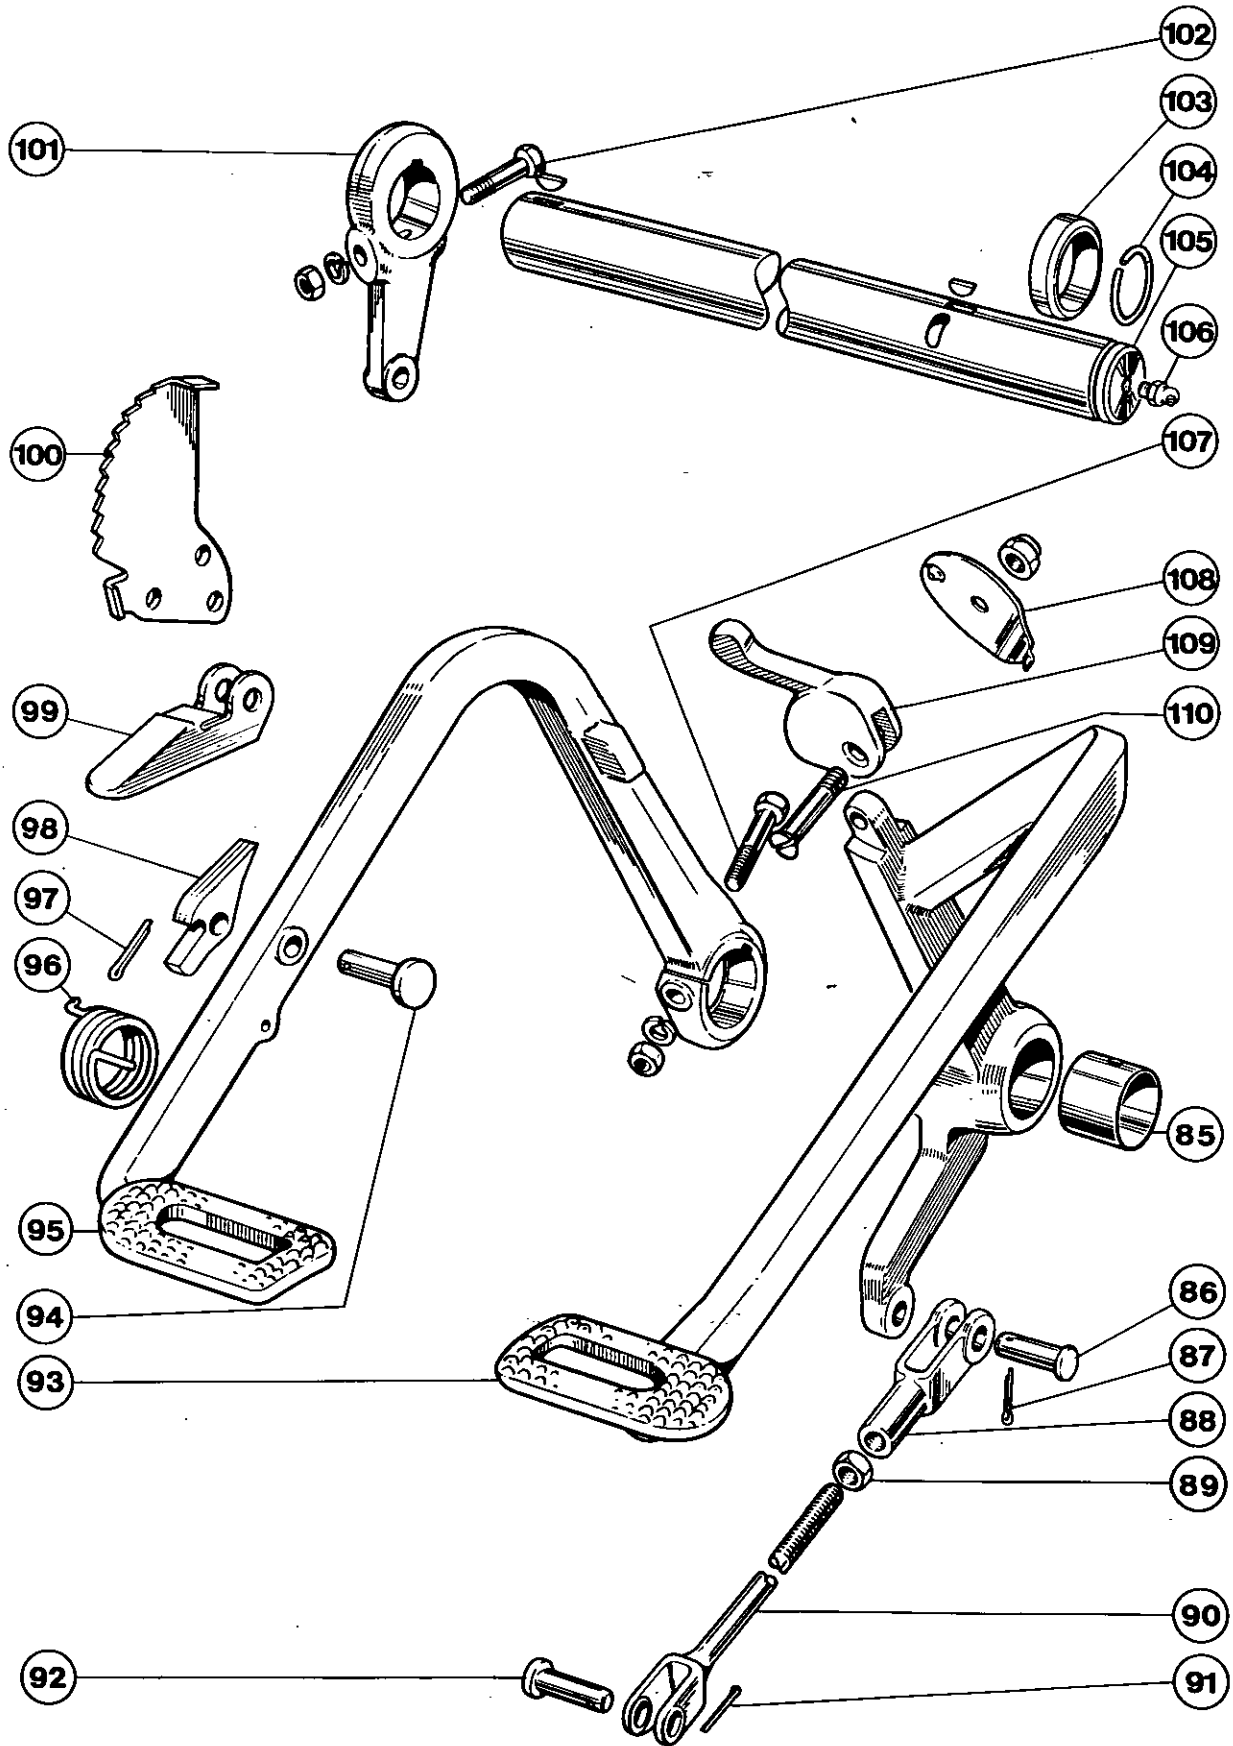


FIG. 43

## POWER TAKE-OFF

## Part 5 Section B

| Operation<br>No. | Table of Contents   | Page<br>No. |
|------------------|---|-------------|
|                  | GENERAL   | 01          |
| 5B-01-02         | POWER TAKE-OFF OIL SEAL<br>Removal and Replacement              | 02          |
| 5B-02-02         | POWER TAKE-OFF SHAFT<br>Removal and Refitment                   | 02          |
| 5B-03-02         | POWER TAKE-OFF REAR BEARING<br>Removal and Replacement          | 05          |
| 5B-04-05         | POWER TAKE-OFF NEEDLE ROLLER BEARING<br>Removal and Replacement | 05          |
| 5B-05-05         | GROUND SPEED GEAR BUSH<br>Removal and Replacement               | 05          |
| 5B-06-05         | POWER TAKE-OFF SIDE COVER<br>Removal and Refitment              | 06          |
| 5B-07-06         | POWER TAKE-OFF COVER UNIT<br>Disassembly and Reassembly         | 06          |

## GENERAL

Figures 1, 2, 3, 4, 5 & 6

The power take-off shaft projects from the rear of the tractor centre housing and has a 34.9 mm (1 3/8 in) (British Standard) spline with an annular groove for positive fixing of implement couplings.

A removable cap (16) protects the splines when the shaft (9) is not in use. The shaft itself is supported at the rear by a ball race (10) and at the front by a needle roller bearing (8). Double seals (12 & 14) exclude dirt from the bearing and retain lubricant in the centre housing. The power take-off is engaged by a lever (1) located on the Left Hand side of the centre housing, which selects either proportional engine speed or proportional ground speed.

Placing the lever in the neutral position (A, Figure 2), disconnects the p.t.o. drive. Proportional engine speed (B, Figure 2) is selected by pulling the lever

rearwards to engage the internal splines of the ground speed p.t.o. driven gear with the splines on the rear end of the hydraulic pump drive shaft. The p.t.o. shaft is then driven at 17/53 of the engine speed. The p.t.o. shaft is coupled behind the hydraulic pump shaft; the pump is therefore constant running and continues to operate even when the p.t.o. is disengaged. Proportional ground speed (C, Figure 2) is engaged by pushing the p.t.o. lever forwards towards the ground - thereby shifting the ground speed p.t.o. driven gear into mesh with the gear splined onto the rear axle driving pinion. The p.t.o. shaft speed is then directly related to the ground speed of the tractor, and the shaft revolves once for approximately every 483 mm (19 in) of travel by the rear wheels. If the tractor is reversed, the direction of rotation will also be reversed, and this must be remembered as the implement mechanism may be damaged if driven in reverse.

**POWER TAKE-OFF****Key to Fig. 1**

1. Roll Pin
2. Oil Seal
3. Shift Lever
4. Side Cover
5. Spring
6. Detent
7. Selector
8. Ground Speed Gear
9. Bush

10. Needle Roller Bearing
11. P.T.O. Shaft
12. Ball Race
13. Circlip
14. Seal
15. Housing
16. 'O' Ring
17. Cover
18. Cap
19. P.T.O. Shield

**P.T.O. SHAFT OIL SEAL****Removal and Replacement** 5B-01-01

Special Tools Required: MF 167 Seal Protector  
MF 168 Seal Remover/  
Replacer  
550 Universal Handle

**Removal**

1. Drain the centre housing of oil.
2. Remove the p.t.o. shield, cap, check chain mounting bracket and oil seal housing retainer plate.
3. Slide the oil seal and housing assembly off the p.t.o. shaft.
4. Remove the oil seal using tool MF 168 and 550 handle as shown in Figure 3.

**Replacement**

1. Replace the oil seal using tool MF 168 and 550 handle as shown in Figure 4.
2. Fit oil seal protector MF 167 over the rear end of the p.t.o. shaft and slide the oil seal assembly onto the shaft as shown in Figure 5. Remove the oil seal protector.
3. Replace the oil seal housing retainer plate (with cut-out facing downwards) and locate onto the two flats on the oil seal housing. Secure the plate.
4. Refit the check chain mounting bracket, p.t.o. cap and shield.
5. Refill the centre housing with recommended oil.

**P.T.O. SHAFT****Removal and Refitment** 5B-02-02

Special Tools Required: MF 167 Seal Protector

**Removal**

1. Drain the centre housing of oil.
2. Remove the p.t.o. shield secured by one bolt and spring washer.
3. Remove the p.t.o. cap.
4. Remove four nuts and spring washers securing the check chain mounting bracket, and release the bracket from the centre housing.
5. Remove the p.t.o. shaft oil seal housing retainer

6. plate, secured by two screws.
6. Withdraw the p.t.o. shaft from the centre housing, complete with oil seal assembly and bearing.

**Refitment**

1. Fit a new seal to the housing before reassembly.
2. Enter the p.t.o. shaft with its bearing into the centre housing and align the splines on the front end of the shaft into the ground speed p.t.o. driven gear.
3. Fit oil seal protector MF 167 over the rear end of the p.t.o. shaft and slide the oil seal assembly onto the shaft as shown in Figure 5. Remove the oil seal protector.
4. Replace the oil seal housing retainer plate (with cut-out facing downwards) and locate onto the two flats on the oil seal housing. Secure the plate with two screws.
5. Replace the check chain mounting bracket, p.t.o. cap and shield.
6. Refill the centre housing with recommended oil.

**P.T.O. SHAFT REAR BEARING****Removal and Replacement** 5B-03-02

Special Tools Required: MF 167 Seal Protector  
MF 200 Hand Press  
MF 200-25 Adaptor

**Removal**

1. Remove the p.t.o. shaft as stated in operation 5B-02-02
2. Slide the oil seal assembly off the p.t.o. shaft.
3. Remove the bearing retaining snap ring from the collar on the p.t.o. shaft.
4. Press off the bearing using multi-purpose bearing remover MF 200-25 as shown in Figure 6.
5. Examine the bearing and replace it if necessary.

**Replacement**

1. Press the bearing onto the p.t.o. shaft.
2. Refit the snap ring.
3. Refit the p.t.o. shaft and seal, as stated in operations 5B-01-02 and 5B-02-02, not forgetting to fit a new 'O' ring.

POWER TAKE-OFF

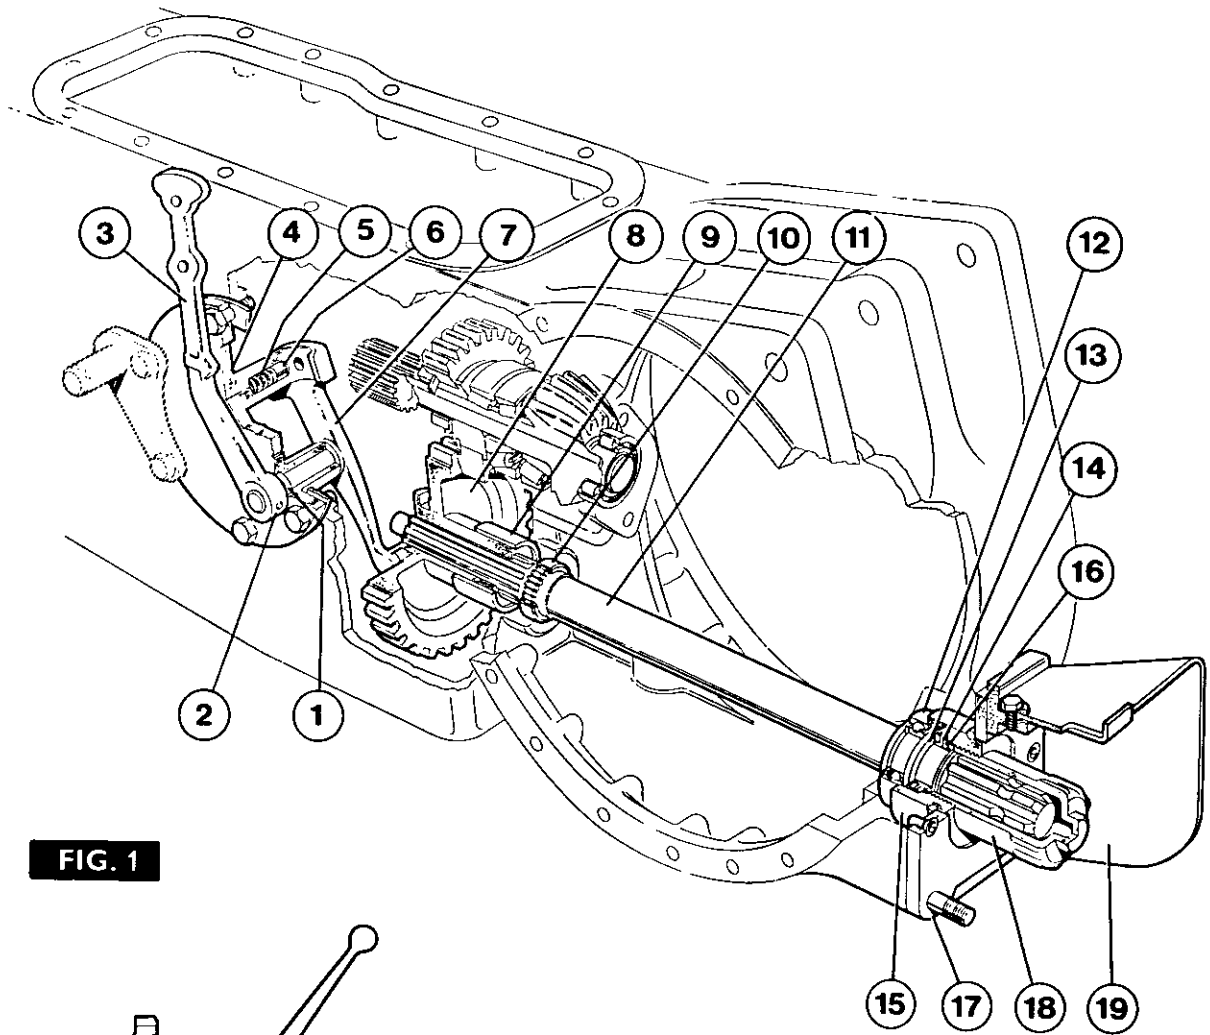


FIG. 1

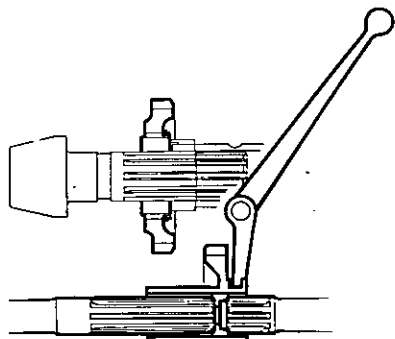


FIG. 2A

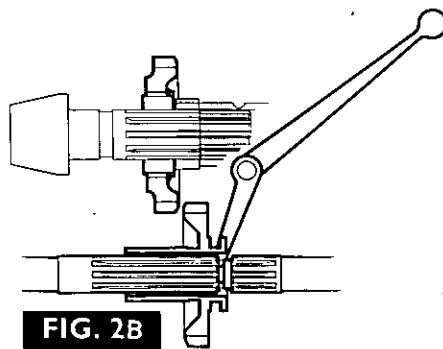


FIG. 2B

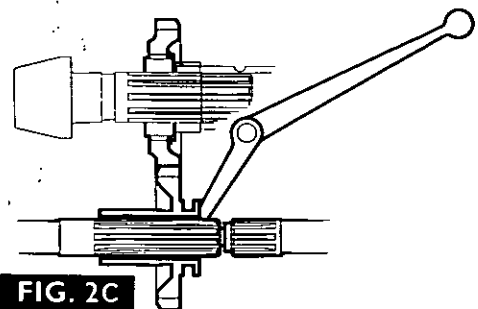


FIG. 2C

POWER TAKE-OFF

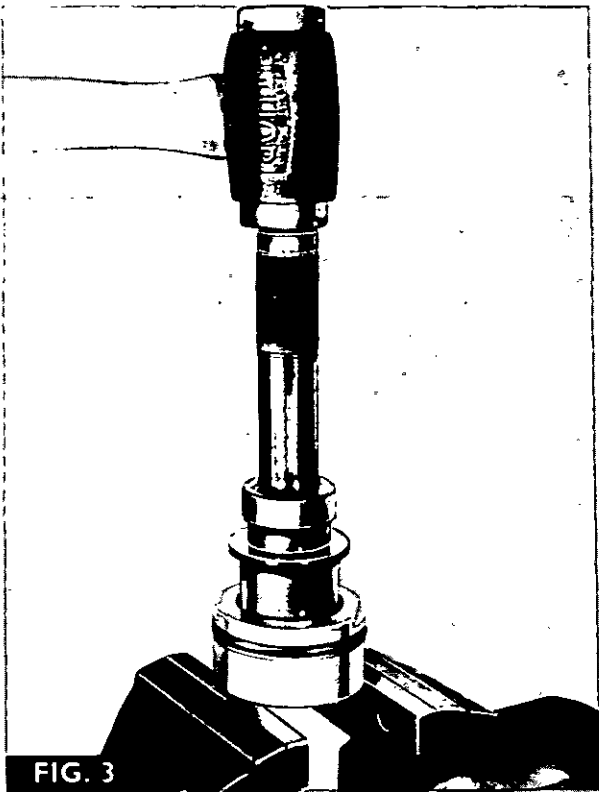


FIG. 3

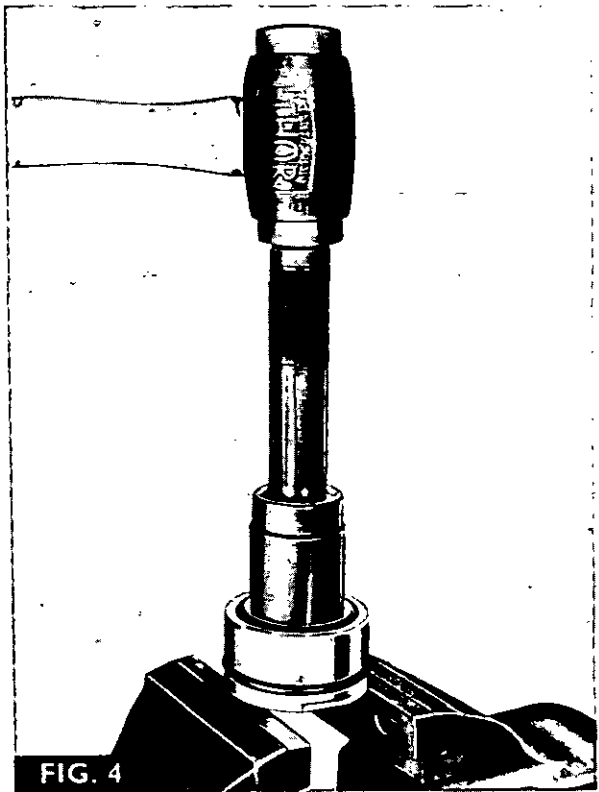


FIG. 4

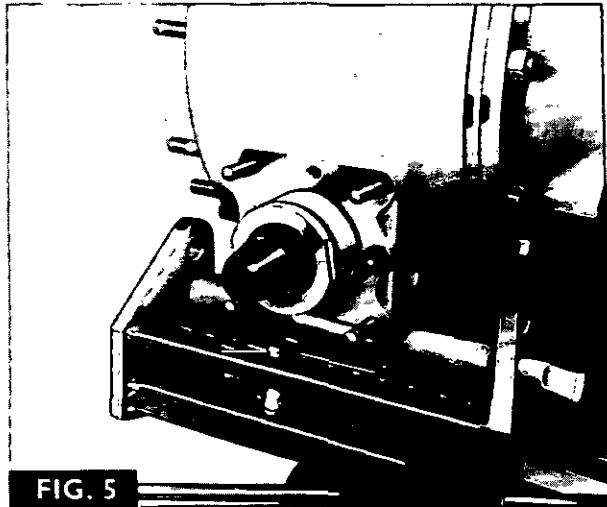


FIG. 5

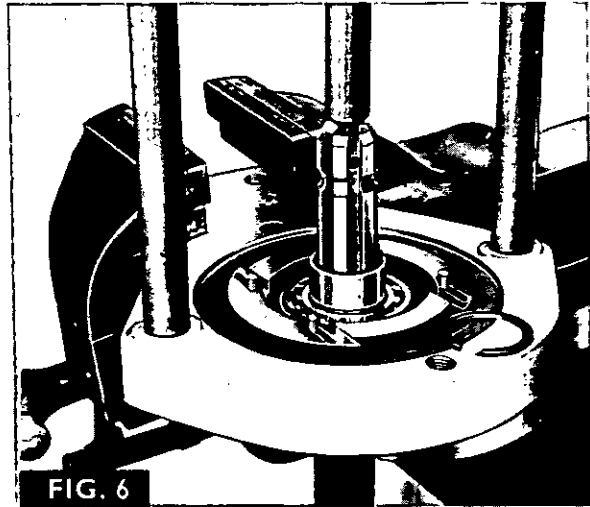


FIG. 6

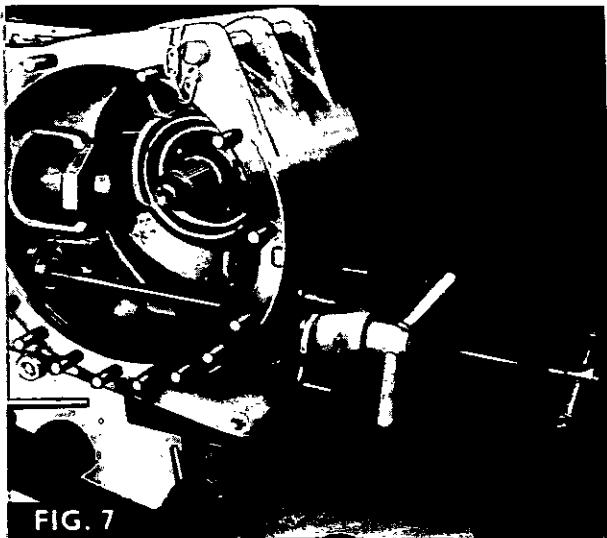


FIG. 7

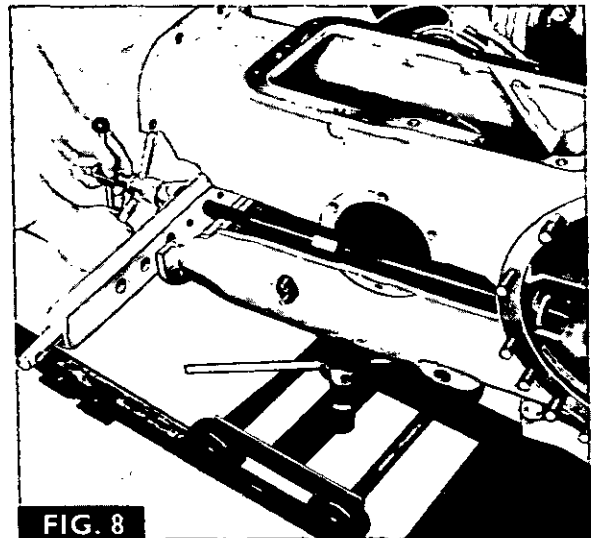


FIG. 8

**POWER TAKE-OFF****P.T.O. NEEDLE ROLLER BEARING****Removal and Replacement** 5B-04-05

Special Tools Required: MF 195-5/1 Adapters  
MF 195-5/2 Bar  
MF 195 Puller

**Removal**

1. Drain the centre housing of oil.
2. Remove the hydraulic lift cover as stated in Part 7, Section A.
3. Split the tractor at the centre housing.
4. Remove the hydraulic pumps as stated in Part 7, Section A.
5. Remove the p.t.o. side cover, then the ground speed p.t.o. driven gear.
6. Remove the Left Hand axle shaft housing assembly and the differential assembly.
7. Remove the p.t.o. shaft as stated in operation 5B-02-02
8. Assemble tool MF 195-5/1 to the needle roller bearing from the front. Fit tool MF 195 and bar MF 195-5/2 to the centre housing as shown in Figure 7, screw the bar into tool MF 195-5/1 and remove the bearing.
9. Examine the bearing and replace it if necessary.

**Replacement**

1. Position the new bearing squarely over its bore in the centre housing from the rear. Fit tool MF 195-5/1 into the bearing from the rear. Screw the bar tool MF 195-5/2 into tool MF 195-5/1 from the front and, using a suitable support for main tool MF 195, pull the bearing into its bore in the centre housing as shown in Figure 8.
2. Refit the p.t.o. shaft as stated in operation 5B-02-02
3. Refit the differential case assembly, and Left Hand axle shaft housing assembly.
4. Refit the ground speed p.t.o. driven gear and the p.t.o. cover plate and lever, locating the lever into its groove in the gear.
5. Refit the hydraulic pumps.
6. Refit the centre housing to the transmission.
7. Refit the hydraulic lift cover.
8. Refill the centre housing with recommended oil.

**GROUND SPEED GEAR BUSH****Removal and Replacement** 5B-05-05

Special Tools Required: MF 195-4/1 Adapter  
MF 195-5/2 Bar  
MF 195 Puller

**Removal**

1. Drain the oil from the centre housing.
2. Remove the hydraulic lift cover as stated in Part 7, Section A.
3. Split the tractor at the centre housing.
4. Remove the hydraulic pump(s) as stated in Part 7, Section A.
5. Remove the p.t.o. side cover and lever, then remove the ground speed p.t.o. driven gear.
6. Remove the Left Hand axle shaft housing assembly and the differential assembly.
7. Remove the p.t.o. shaft, as stated in operation 5B-02-02

8. Assemble the two adapters MF 195-4/1 into the bush.
9. Screw the tool bar portion MF 195-5/2 into the adapter MF 195-4/1 then, using a suitable support bar for MF 195, pull the bush out of the centre housing, as shown in Figure 9.

**Replacement**

1. Position the new bush squarely over its bore in the centre housing.
2. Assemble the adapter MF 195-4/1 into the bush.
3. Screw the tool bar portion MF 195-5/2 into the adapter MF 195-4/1 from the rear and pull the bush into the centre housing using puller MF 195 as shown in Fig. 10.
4. Refit the p.t.o. shaft, as stated in operation 5B-02-02,
5. Refit the differential assembly and the Left Hand axle housing.
6. Refit the ground speed p.t.o. driven gear and the p.t.o. side cover assembly, locating the lever in its groove in the gear.
7. Refit the hydraulic pumps.
8. Re-attach the centre housing to the transmission.
9. Refit the hydraulic lift cover.
10. Refill the centre housing with a recommended oil.

**P.T.O. SIDE COVER****Removal and Refitment** 5B-06-05

Special Tools Required: Torque Wrench

**Removal**

1. Drain about 9 litres (2 gallons) of oil from the centre housing.
2. Disconnect the two hoses from the side cover to the spool valve manifold at the two unions on the side cover (Multi-Power auxiliary hydraulic tractors only).
3. Remove the three socket head screws securing the internal manifold to the side cover (Multi-Power auxiliary hydraulic tractors only).
4. Remove the six bolts securing the side cover to the centre housing.
5. Manoeuvre the side cover, complete with its lever and selector out of the centre housing.

**Refitment**

1. Fit the side cover assembly into the centre housing, locating the selector in the groove in the ground speed driven gear.
2. Fit the six side cover securing bolts loosely, to permit alignment with the internal manifold (Multi-Power auxiliary hydraulic tractors only).
3. Fit the three socket head screws and secure the internal manifold (Multi-Power auxiliary hydraulic tractors only).
4. Tighten the six side cover bolts to a torque of 7.6 kg/m (55 lb ft).
5. Reconnect the hose from the tee-piece union on the spool valve to the rear union on the side cover (Multi-Power tractors only).
6. Reconnect the hose from right-angle union on the spool valve union to the front union on the side cover (Multi-Power auxiliary hydraulic tractors only).
7. Replenish the transmission with oil.

**POWER TAKE-OFF**

**NOTE** - THE ABOVE PROCEDURE ASSUMES THAT FOR MULTI-POWER TRACTORS THE LIFT COVER WILL HAVE BEEN REMOVED FOR OTHER WORK TO BE CARRIED OUT, AS THE INTERNAL MANIFOLD CANNOT EASILY BE ALIGNED WITH THE SIDE COVER, EVEN WHEN THE BOLTS ARE LEFT SLACK.

**P.T.O. SIDE COVER UNIT****Disassembly and Reassembly**

5B-07-06

Figure 11

**Disassembly**

1. Remove the p.t.o. side cover unit as stated in operation 5B-06-05

2. Drive out the roll pin (2) securing the shift lever (3) to the selector shaft (7).
3. Withdraw the selector shaft from the side cover (4) and remove the detent (6) and spring (5).
4. Remove the oil seal (1) from the side cover (4).

**Reassembly**

1. Fit a new oil seal (1) to the side cover (4).
2. Examine the detent spring (5) and replace it if necessary, then fit the spring and the detent (6) to the side cover.
3. Refit the selector shaft to the side cover taking care not to damage the oil seal.
4. Refit the flat washer, then the shift lever and secure the lever with a new roll pin.
5. Refit the side cover unit as stated in operation 5B-06-05



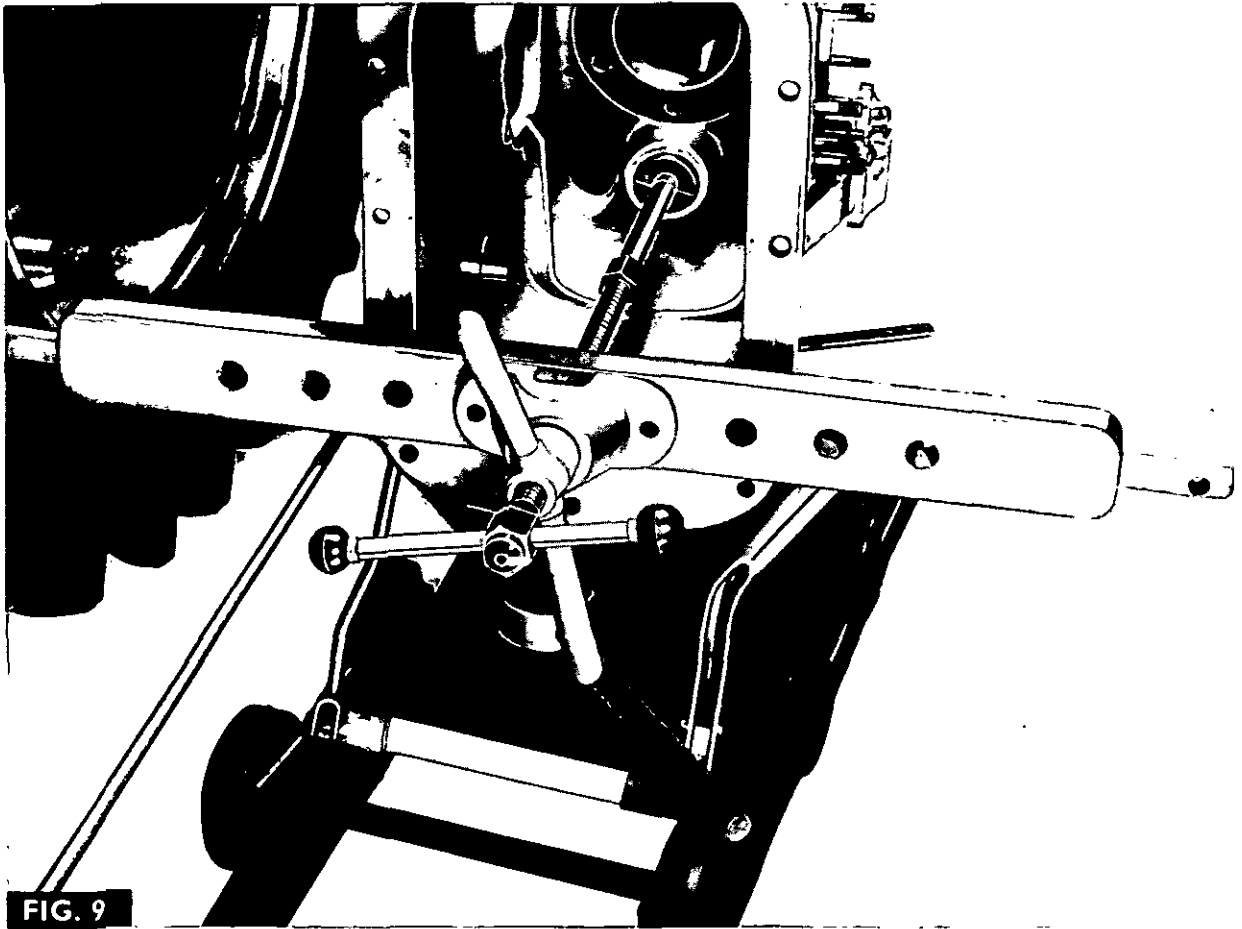


FIG. 9

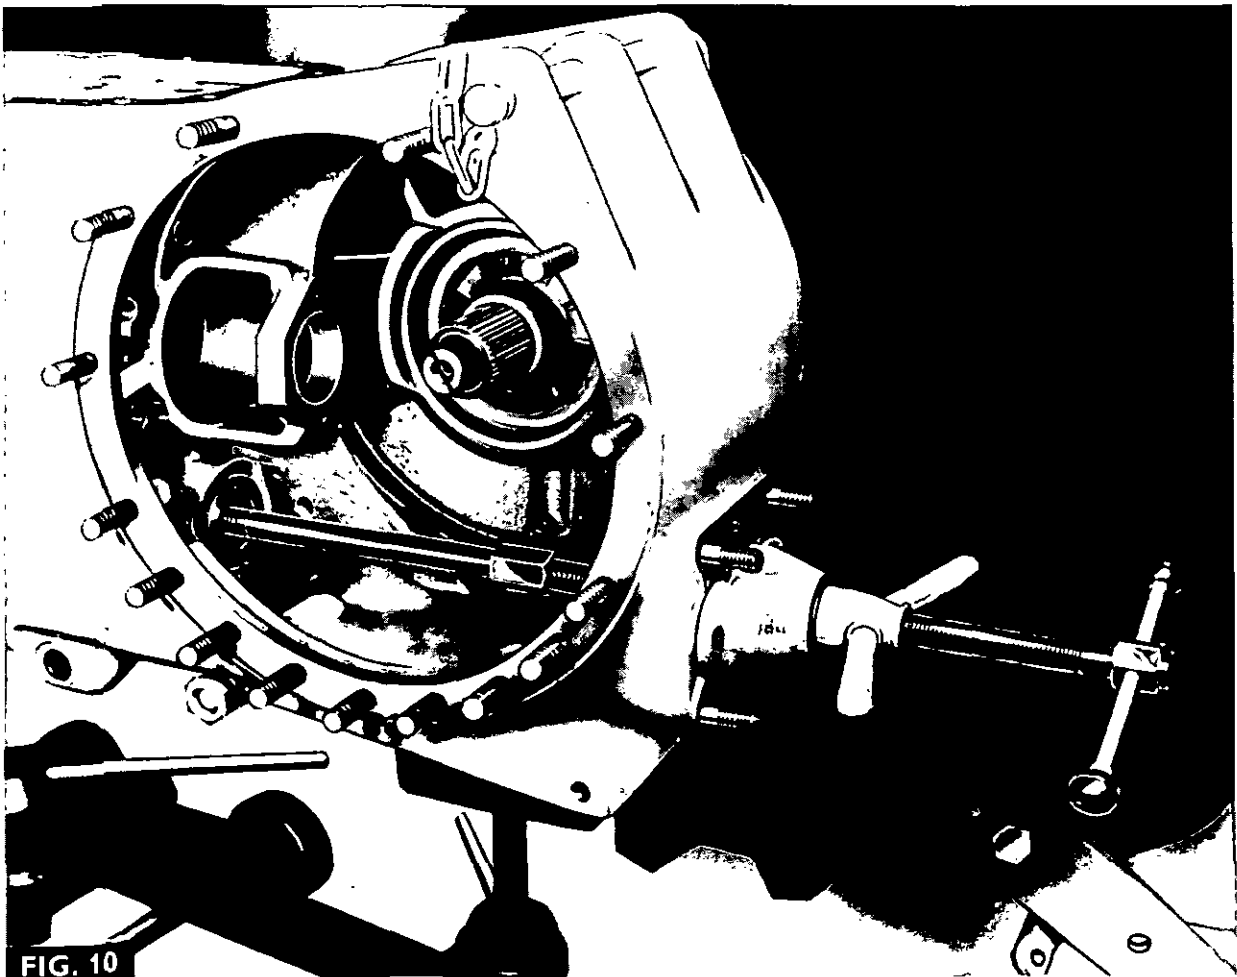


FIG. 10

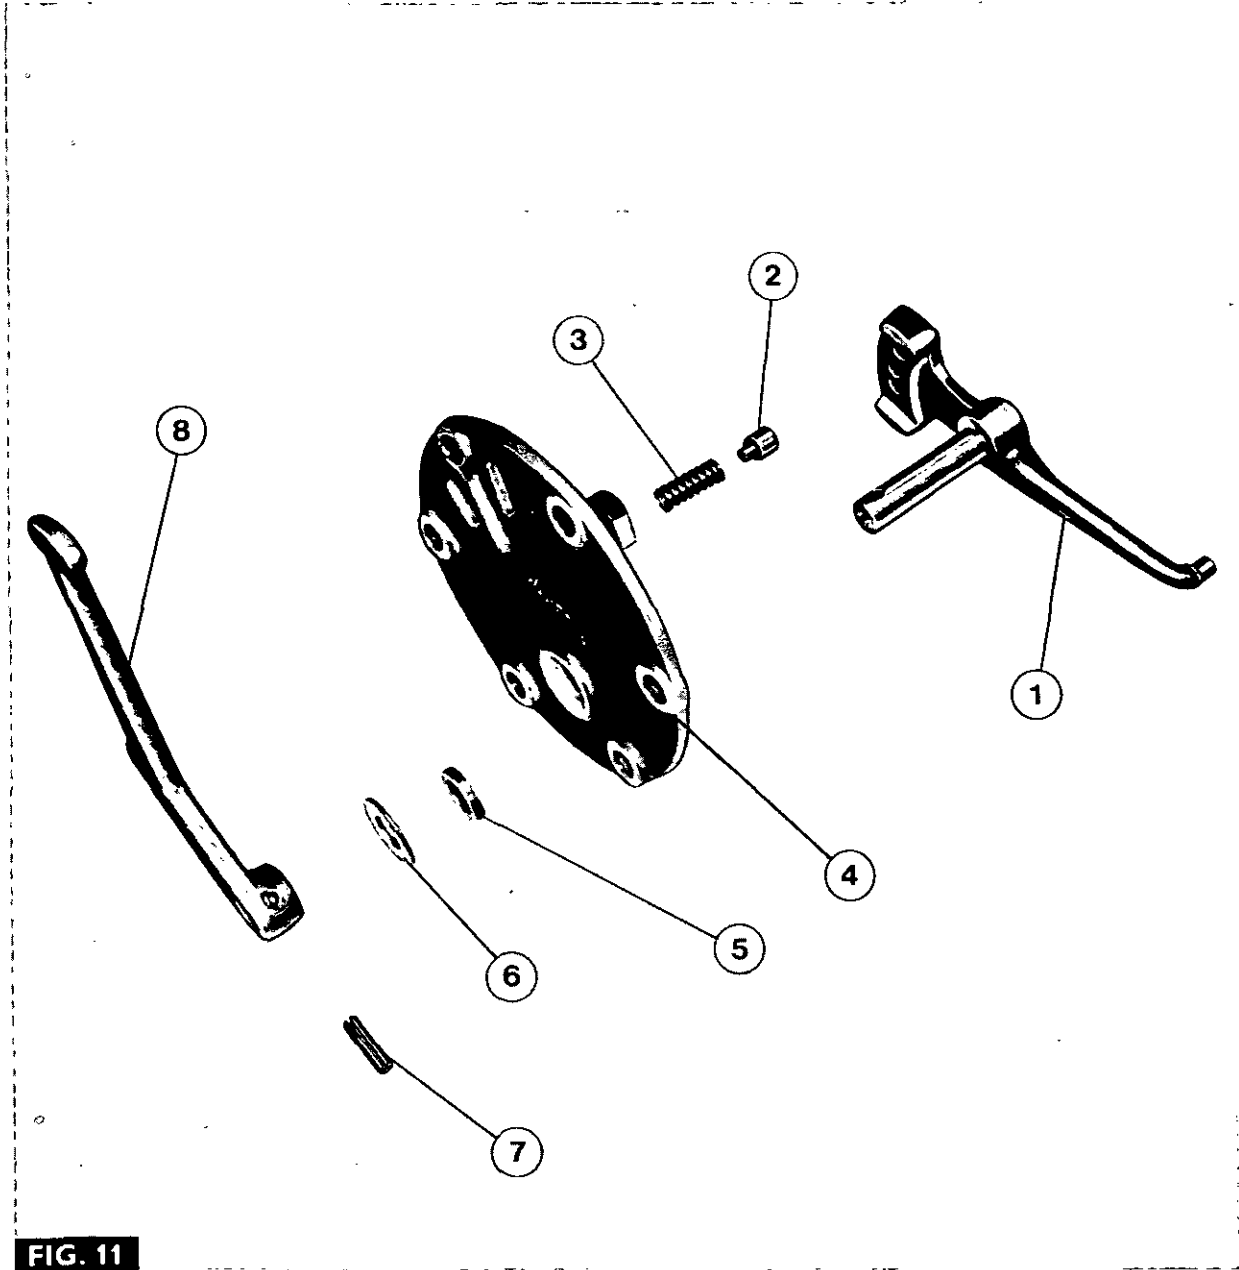


FIG. 11

## INDEPENDENT POWER TAKE-OFF

## Part 5 Section C

| Operation<br>No. | Table of Contents                             | Page<br>No. |
|------------------|---|-------------|
|                  | GENERAL                                       | 11          |
|                  | I.P.T.O. UNIT                                 | 12          |
| 5B-08-12         | Removal and Refitment                         |             |
| 5B-09-12         | Clutch Assembly Servicing                     |             |
| 5B-10-12         | Spool Valve Servicing                         |             |
|                  | P.T.O. SIDE COVER                             | 15          |
| 5B-11-15         | Removal and Refitment                         |             |
| 5B-12-15         | Servicing                                     |             |
|                  | P.T.O. SHAFT                                  | 16          |
| 5B-13-16         | Oil Seal Removal and Replacement              |             |
| 5B-14-16         | Shaft Removal and Refitment                   |             |
| 5B-15-16         | Rear Bearing Removal and Replacement          |             |
| 5B-16-16         | Needle Roller Bearing Removal and Replacement |             |
| 5B-17-17         | I.P.T.O. HYDRAULIC TEST                       | 17          |

**GENERAL**

The independent power take off system consists of a hydraulically actuated clutch whose engagement, or disengagement is controlled by a three position spool valve. The clutch drum is splined on to the rear end of the hydraulic lift pump camshaft and the friction plate hub is splined on to the front end of the p.t.o. shaft.

Hydraulic pressure is supplied by one of the low pressure outlet ports on the Multi-Power or Auxiliary pump at a minimum of 17,5 Kg/cm<sup>2</sup> (250 lb/in<sup>2</sup>). To maintain this minimum pressure, a special valve is incorporated in the outlet flow pipe in the Multi-Power circuit.

The clutch valve is operated by a hand lever on the left side of the centre housing.

## INDEPENDENT POWER TAKE-OFF

### I.P.T.O. UNIT

**Removal and Refitment** 5B-08-12  
**Special Tools Required:** See operation 7A-03-16  
 and 3A-05-03

#### Removal

1. Drain the transmission oil to the low mark on the dipstick.
2. Disconnect the two hoses (if fitted), from the unions on the side cover to the spool valve manifold, at the side cover.
3. Remove the lift cover as stated in operation 7A-03-16.
4. Split the tractor between the centre housing and the transmission as stated in operation 3A-05-03.
5. Remove the two banjo bolts and manifold (auxiliary hydraulic tractors without spool valves) or the two unions and nuts (auxiliary hydraulic tractors with spool valves) from the side cover.
6. Fig.12. Remove the pipe (1) (auxiliary hydraulic tractors only) by removing the snap ring securing the pipe to the side cover (6) and releasing the pipe at the auxiliary pump.
7. Remove the pipe (2) from the auxiliary pump and the i.p.t.o. spool valve (5).
8. Remove the return pipe (3) (auxiliary hydraulic tractors only) by removing the snap ring securing the pipe to the side cover.
9. Disconnect the pressure test pipe (4) at the spool valve (5).
10. Remove the six bolts securing the side cover to the centre housing.
11. Manoeuvre the side cover, complete with the lever (7), selector (8) and pipe (4) out of the centre housing.
12. Move the auxiliary pump, hydraulic pump and the i.p.t.o. unit forwards.
13. Withdraw the auxiliary pump and hydraulic pump as a complete assembly, then remove the i.p.t.o. unit.

#### Refitment

1. Place the i.p.t.o. unit in the centre housing and locate it on the p.t.o. shaft splines.
2. Position the auxiliary pump and hydraulic pump in the centre housing, locating the camshaft splines in the i.p.t.o. unit.
3. Refit the hydraulic pump securing dowels, with new 'O' rings, then locate the dowels in the hydraulic pump and secure with two nuts each side.
4. Position the side cover, with a new gasket, on the centre housing, locating the selector (8) in the spool (9) and the dowel pin in the spool valve (5).
5. Secure the side cover, rear footplate bracket and clutch pedal (if removed) with six bolts, tightened to a torque of 7,6 Kg-m (55 lb-ft).
6. Reconnect the pressure test pipe (4) to the spool valve (5).
7. Refit the return pipe (3) (auxiliary hydraulic tractors only), with a new sealing ring, to the side cover and secure with a new snap ring.
8. Refit the pipe (2) to the auxiliary pump and the i.p.t.o. spool valve (5).
9. Refit the pipe (1) (auxiliary hydraulic tractors only), with a new sealing ring, to the side cover and secure with a new snap ring, then fit the pipe to the auxiliary pump.

10. Refit the manifold (auxiliary hydraulic tractors without spool valves), with a new gasket, and secure with the two banjo bolts and new sealing rings. Tighten the banjo bolts to a torque of 5,5 kg-m (40 lb-ft).
11. Refit the two nuts and unions (auxiliary hydraulic tractors with spool valves) to the side cover. The right angle union must be fitted to the rear hole in the side cover.
12. Reconnect the centre housing to the transmission as stated in operation 3A-05-03.
13. Refit the lift cover as stated in operation 7A-03-16.
14. Reconnect the hose (if fitted), from the tee-piece union on the spool valve manifold, to the rear union on the side cover.
15. Reconnect the hose (if fitted), from the right angle union on the spool valve manifold, to the front union on the side cover.

**Clutch Assembly Servicing** 5B-09-12  
**Special Tools Required:** See operations 7A-03-16  
 and 3A-05-03

#### Disassembly

1. Remove the i.p.t.o. unit as stated in operation 5B-08-12.
2. Fig. 13. Remove the snap ring (10), thrust washer (11) and then the spool valve (5) from the clutch assembly.
3. Fig. 14. Remove the snap ring (19) and then lift out the clutch cover plate (18).
4. Remove the centre hub (13).
5. Remove the seven friction discs (17), springs (16) and pressure plates (15).
6. Invert the housing (12) and tap out the piston (14). If necessary remove the piston ring.

Examine all parts for scoring, wear or damage and replace if necessary. Always fit new snap rings.

#### Reassembly

1. If necessary, fit a new piston ring to the piston (14), then place the piston, boss uppermost, in the clutch housing (12).
2. Refit the centre hub (13) in the housing.
3. Fig. 15. Alternately assemble the seven pressure plates (15), friction discs (17) and springs (16) in the housing. To facilitate the refitting of all the discs, place suitable pins to compress the springs as shown.
4. Refit the cover plate (18) and secure with a new snap ring (19).
5. Remove the spring compressing pins.
6. Fig. 13. Refit the spool valve (5) to the clutch, then the thrustwasher (11) and secure with a new snap ring (10).
7. Refit the i.p.t.o. unit as stated in operation 5B-08-12.

**Spool Valve Servicing** 5B-10-12  
**Special Tools Required:** See operations 7A-03-16  
 and 3A-05-03

#### Disassembly

1. Remove the i.p.t.o. unit as stated in operation 5B-08-12.

INDEPENDENT POWER TAKE-OFF

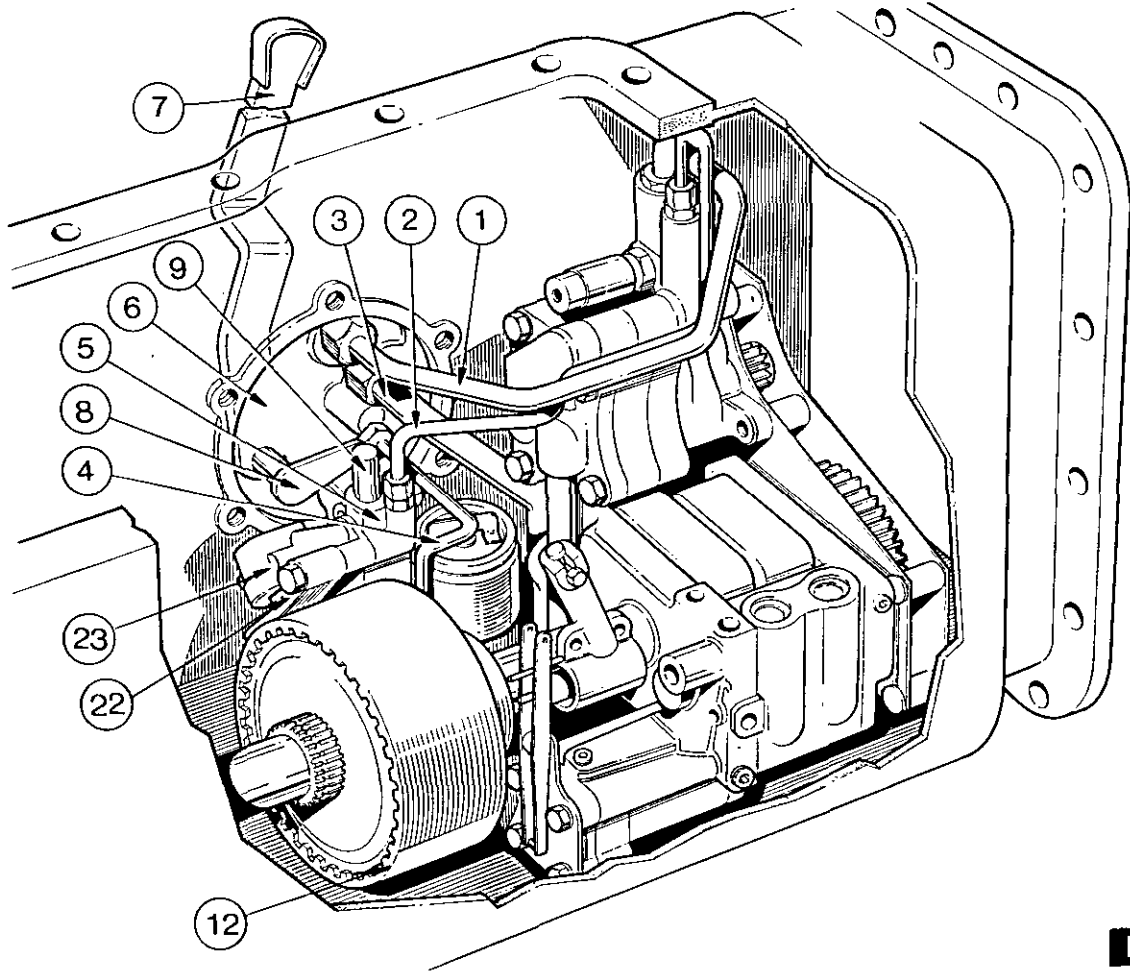


FIG. 12

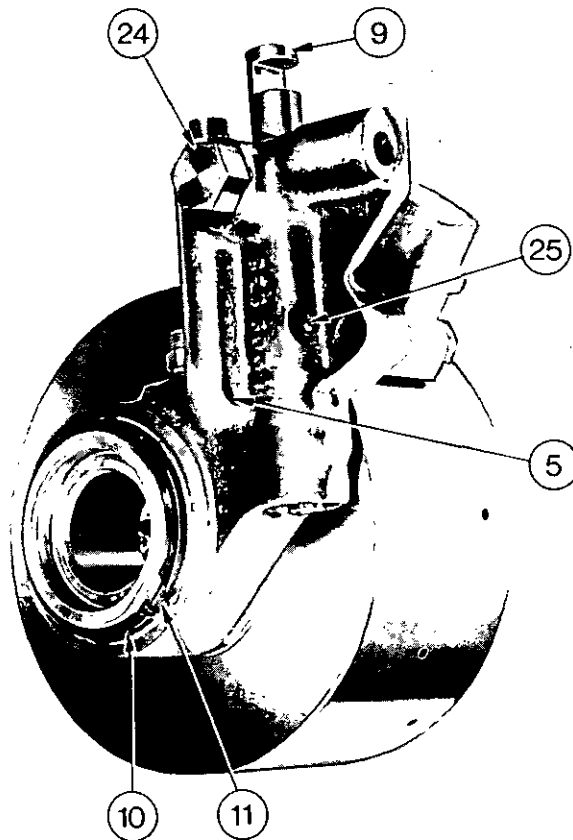


FIG. 13

INDEPENDENT POWER TAKE-OFF

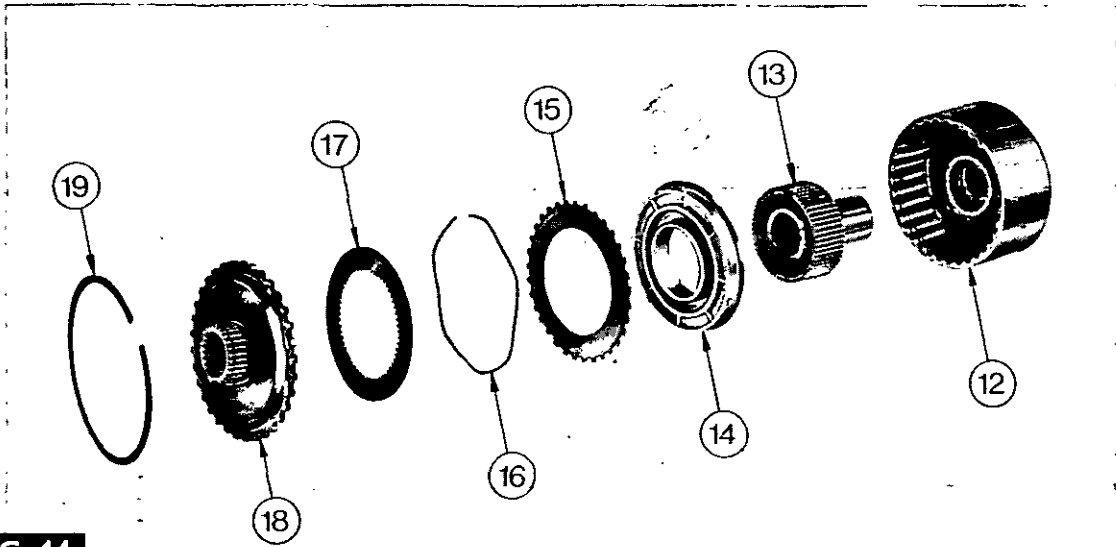


FIG. 14

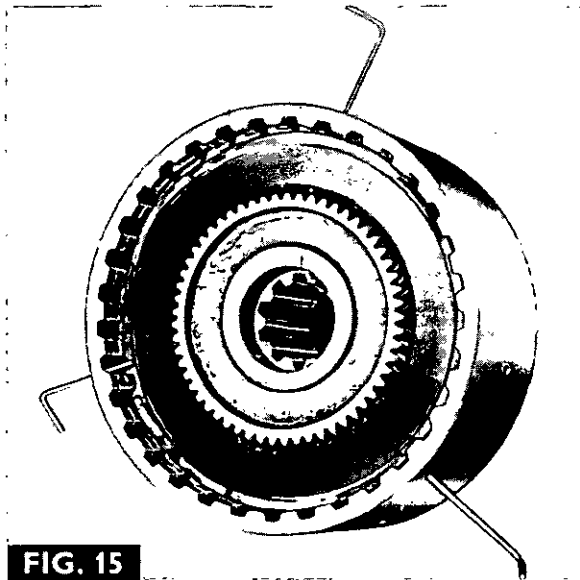


FIG. 15

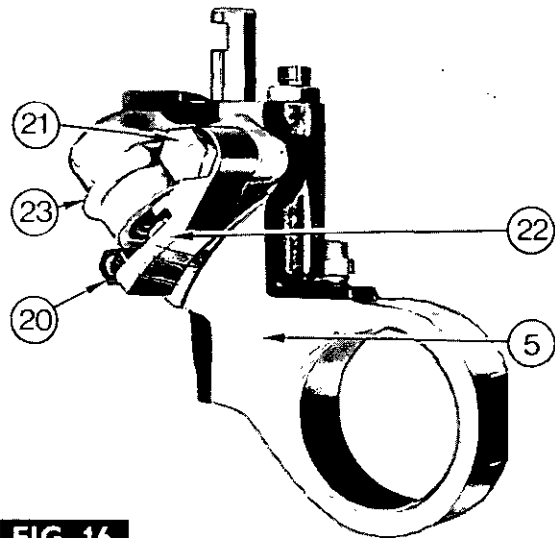


FIG. 16

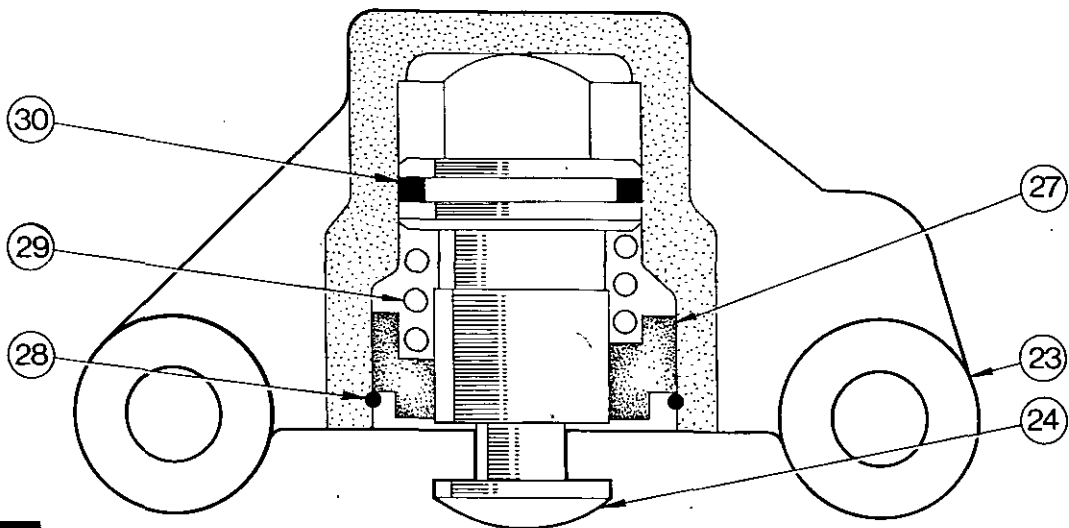


FIG. 17

## INDEPENDENT POWER TAKE-OFF

2. Fig.13. Remove the snap ring (10), thrust washer (11) and then the spool valve (5) from the clutch housing.
3. Fig.16. Remove the two bolts (20 and 21) securing the brake (22) and the brake housing (23) to the spool valve (5).
4. Fig.13. Remove the plug (24), spring and ball, then drive out the securing pin (25) and withdraw the spool (9) from the spool valve (5).
5. Fig.17. To service the brake assembly, remove the snap ring (28), guide (26), spring (29) and piston (27). Remove the 'O' ring (30) from the piston.

Examine all parts for scoring, wear or damage and replace if necessary. Always fit new 'O' rings and snap rings.

**Reassembly**

1. Fig.17. To reassemble the brake assembly, fit a new 'O' ring (30) on the piston (27) then refit the piston, spring (29), and guide (26) in the brake housing (23) and secure with a new snap ring (28).
2. Fig.13. Slide the spool (9) into the valve (5), then align the flat on the spool with the hole in the valve and fit a new securing pin (25).
3. Refit the ball, spring and plug (24).
4. Fig.16. Engage the brake (22) into the slot at the end of the piston (27 Fig. 6) then refit the brake and the brake housing (23) to the spool valve and secure with the two bolts (20 and 21).

**NOTE - BEFORE FULLY TIGHTENING THE BOLTS (20 and 21) ENSURE THAT THE BRAKE (22) IS FLUSH AGAINST THE BRAKE HOUSING (23).**

5. Fig.13. Refit the spool valve (5) to the clutch, then the thrust washer (11) and secure with a new snap ring (10).
6. Refit the i.p.t.o. unit as stated in operation 5B-08-12.

**P.T.O. SIDE COVER**

**Removal and Refitment** 5B-11-15  
Special Tools Required: See operation 7A-03-16

**Removal**

1. Drain the transmission oil to the low mark on the dipstick.
2. Disconnect the two hoses (if fitted), from the unions on the side cover to the spool valve manifold, at the side cover.
3. Remove the lift cover as stated in operation 7A-03-16.
4. Remove the two banjo bolts and manifold (auxiliary hydraulic tractors without spool valves) or the two unions and nuts (auxiliary hydraulics with spool valves) from the side cover.
5. Fig.12. Remove the two snap rings securing the two pipes (1 and 3) (auxiliary hydraulic tractors only) to the side cover and lift out the return pipe (3).

6. Disconnect the pressure test pipe (4) at the spool valve (5).
7. Remove the six bolts securing the side cover to the centre housing.
8. Manoeuvre the side cover, complete with the lever (7), selector (8) and pipe (4) out of the centre housing.

**Refitment**

1. Position the side cover, with a new gasket, on the centre housing, locating the selector (8) in the spool (9) and the dowel pin in the spool valve (5).
2. Secure the side cover, rear footplate bracket and clutch pedal (if removed) with six bolts, tightened to a torque of 7,6 Kg-m (55 lb-ft).
3. Reconnect the pressure test pipe (4) to the spool valve.
4. Refit the return pipe (3), then the delivery pipe (1) (auxiliary hydraulic tractors only), with new sealing rings, to the side cover and secure them with new snap rings.
5. Refit the manifold (auxiliary hydraulic tractors without spool valves), with a new gasket, and secure with two banjo bolts and new sealing rings. Tighten the banjo bolts to a torque of 5,5 Kg-m (40 lb-ft).
6. Refit the two nuts and unions (auxiliary hydraulic tractors with spool valves) to the side cover. The right angle union must be fitted to the rear hole in the side cover.
7. Refit the lift cover as stated in operation 7A-03-16.
8. Reconnect the hose (if fitted), from the tee-piece union on the spool valve manifold, to the rear union on the side cover.
9. Reconnect the hose (if fitted), from the right angle union on the spool valve manifold, to the front union on the side cover.

**Servicing** | 5B-12-15  
Special Tools Required: See operation 7A-03-16

**Disassembly**

1. Remove the p.t.o. side cover as stated in operation 5B-11-15.
2. Remove the nut securing the pressure test pipe and remove the pipe.
3. Drive out the roll pin securing the lever to the selector shaft.
4. Withdraw the selector shaft from the side cover and remove the detent and spring.
5. Remove the sealing ring from the selector shaft.

**Reassembly**

1. Examine the detent and spring and replace if necessary, then fit the spring and detent to the side cover.
2. Refit the selector shaft to the side cover, then fit a new sealing ring to the shaft.
3. Refit the lever and secure with a new roll pin.
4. Refit the pressure test pipe, with new sealing ring, to the side cover and secure with the nut.
5. Refit the p.t.o. side cover as stated in operation 5B-11-15.

**INDEPENDENT POWER TAKE-OFF****P.T.O. SHAFT****Oil Seal****Removal and Replacement** 5B-13-16

Special Tools Required: MF 167 Seal Protector  
MF 168 Seal Remover/  
Replacer  
550 Universal Handle

**Removal**

1. Drain the centre housing of oil.
2. Remove the pin from the control beam lower pivot.
3. Remove the p.t.o. shield, cap, check chain mounting bracket and oil seal housing retainer plate.
4. Slide the oil seal and housing assembly off the p.t.o. shaft.
5. Fig. 3. Remove the oil seal using tool MF 168 and 550 handle as shown.

**Replacement**

1. Fig. 4. Replace the oil seal using tool MF168 and 550 handle as shown.
2. Fig. 5. Fit oil seal protector MF 167 over the rear end of the p.t.o. shaft and slide the oil seal assembly onto the shaft as shown. Remove the oil seal protector.
3. Replace the oil seal housing retainer plate (with cut-out facing downwards) and locate onto the two flats on the oil seal housing.
4. Refit the check chain mounting bracket, p.t.o. cap, shield and control beam pin.
5. Refill the centre housing with recommended oil.

**Shaft Removal and Refitment**

5B-14-16

Special Tools Required: MF 167 Seal Protector  
MF 168 Seal Remover/Replacer  
550 Universal Handle

**Removal**

1. Drain the centre housing of oil.
2. Remove the pin from the control beam lower pivot.
3. Remove the p.t.o. shield secured by one bolt and spring washer.
4. Remove the p.t.o. cap.
5. Remove the four nuts, four spring washers, two spacers and two bolts securing the check chain mounting bracket, and remove the bracket from the centre housing.
6. Remove the p.t.o. shaft oil seal housing retainer plate.
7. Withdraw the p.t.o. shaft from the centre housing, complete with oil seal assembly and bearing.
8. Remove the oil as stated in operation 5B-13-16.

**Refitment**

1. Fit a new seal to the housing before reassembly as stated in operation 5B-13-16.
2. Enter the p.t.o. shaft with its bearing into the centre housing and align the splines on the front end of the shaft into the i.p.t.o. unit.
3. Fig. 5. Fit oil seal protector MF 167 over the rear end of the p.t.o. shaft and slide the oil seal assembly onto the shaft as shown. Remove the oil seal protector.

4. Replace the oil seal housing retainer plate (with cut-out facing downwards) and locate onto the two flats on the oil seal housing.
5. Replace the check chain mounting bracket, p.t.o. cap, shield and the control beam pin.
6. Refill the centre housing with recommended oil.

**Rear Bearing****Removal and Replacement** 5B-15-16

Special Tools Required: MF 167 Seal Protector  
MF 200 Hand Press  
MF 200-25 Adapter

**Removal**

1. Remove the p.t.o. shaft as stated in operation 5B-14-16
2. Slide the oil seal assembly off the p.t.o. shaft.
3. Remove the bearing retaining snap ring from the collar on the p.t.o. shaft.
4. Fig. 6. Press off the bearing using multi-purpose bearing remover MF 200-25 as shown.
5. Examine the bearing and replace if necessary.

**Replacement**

1. Press the bearing onto the p.t.o. shaft.
2. Refit the snap ring.
3. Refit the p.t.o. shaft and seal, as stated in operations 5B-13-16 and 5B-14-16 not forgetting to fit a new 'O' ring.

**Needle Roller Bearing****Removal and Replacement** 5B-16-16

Special Tools Required: See operations 7A-03-16  
and 3A-05-03  
MF 195 Puller  
MF 195-5 Adapters

**Removal**

1. Remove the i.p.t.o. unit as stated in operation 5B-08-12.
2. Remove the Left Hand axle shaft housing assembly and the differential assembly, as stated in operation 5A-20-17.
3. Remove the p.t.o. shaft as stated in operation 5B-14-16.
4. Fig. 7. Assemble tool MF 195-5/1 to the needle roller bearing from the front. Fit tool MF 195 and bar MF 195-5/2 to the centre housing as shown, screw the bar into tool MF 195-5/1 and remove the bearing.
5. Examine the bearing and replace it if necessary.

**Replacement**

1. Fig. 8. Position the new bearing squarely over its bore in the centre housing from the rear. Fit tool MF 195-5/1 into the bearing from the rear. Screw the bar tool MF 195-5/2 into tool MF 195-5/1 from the front and, using a suitable support for main tool MF 195, pull the bearing into its bore in the centre housing as shown.
2. Refit the p.t.o. shaft as stated in operation 5B-14-16.
3. Refit the differential case assembly, and Left Hand axle shaft housing assembly, as stated in operation 5A-20-17.
4. Refit the i.p.t.o. unit as stated in operation 5B-08-12.



---

**INDEPENDENT POWER TAKE-OFF**

---

**HYDRAULIC TEST**

When carrying out hydraulic tests, clean fresh oil, of the recommended grade must be used and should be warmed to a temperature of 50°C (120°F) by running under load, before testing. The use of either excessively hot, or cold oil can seriously affect the instrument readings.

**I.P.T.O. Pressure Test**

5B-17-17

Special Tools Required: MF 810 Gauge  
MF 810-6 Adapter.

1. Fig. 18. Remove the plug on the side cover and fit the adapter MF 810-6 and the MF 810 Gauge as shown.
2. Start the engine and select Multi-Power 'HIGH' and engage 'ENGINE P.T.O.' With the oil at the correct temperature the gauge should indicate the following minimum pressures,

|                     |  |
|---------------------|--|
| 550 engine rev/min  | 17,5 Kg/cm <sup>2</sup><br>(250 lb/in <sup>2</sup> ) |
| 2000 engine rev/min | 25,3 Kg/cm <sup>2</sup><br>(360 lb/in <sup>2</sup> ) |
3. Disengage p.t.o. and stop engine, remove the gauge and adapter and refit the plug in the side cover.

INDEPENDENT POWER TAKE-OFF

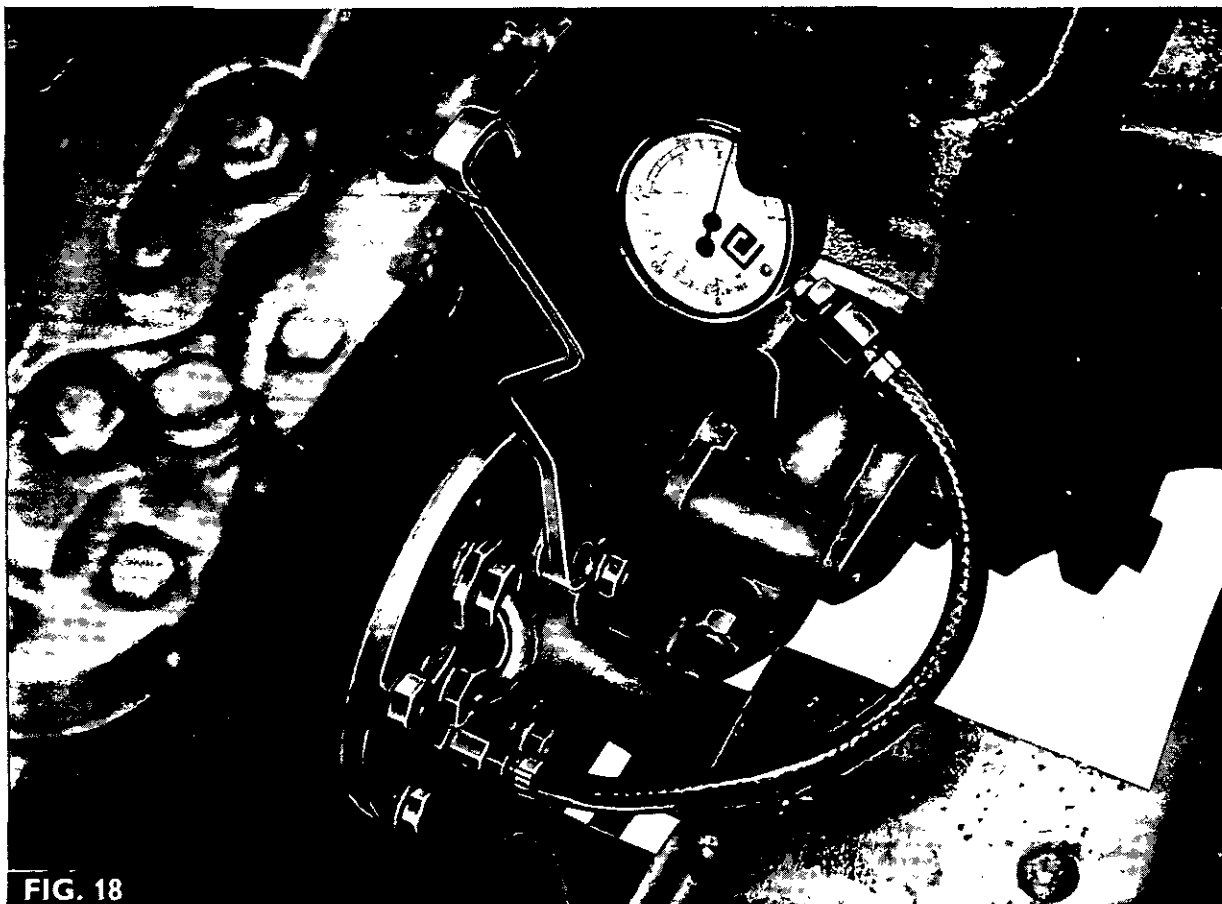


FIG. 18

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 6**

**Publication No. 1856 001 M1**

comprising

- A FRONT AXLE
- B WHEELS AND TYRES
- C STEERING

## FRONT AXLE

## Part 6 Section A

| Operation No. | Table of Contents                             | Page No. |
|---------------|---|----------|
|               | GENERAL                                       | 01       |
| 6A-01-02      | FRONT TRACK ADJUSTMENT                        | 02       |
| 6A-02-02      | TOE-IN ADJUSTMENT                             | 02       |
| 6A-03-02      | FRONT HUB SERVICING                           | 02       |
| 6A-04-02      | SPINDLE SHAFT<br>Removal and Refitment        | 02<br>02 |
| 6A-05-02      | SPINDLE HOUSING<br>Servicing                  | 02<br>02 |
| 6A-06-05      | CENTRE BEAM ASSEMBLY<br>Removal and Refitment | 05<br>05 |
| 6A-07-05      | Bush Removal and Replacement                  | 05       |

**GENERAL**

The front axle assembly consists of a centre beam and two outer axles. The centre beam pivots on a pin

which is secured to the front engine support. The outer axles can be bolted to the centre beam in alternative positions to provide front wheel track adjustment.

**FRONT AXLE****FRONT TRACK ADJUSTMENT** 6A-01-02

The front track is adjustable in 102 mm (4 in) steps, as shown in Fig. 2.

**Procedure**

1. Jack up the front of the tractor
2. Remove the three bolts and nuts securing each front axle outer arm to the centre beam and the set bolt securing the tie rod.
3. Fig. 2. Spread the outer arms and the telescopic tie rod to the required track setting.
4. Fig. 3. Obtain partial engagement of all bolts (18) and nuts (17).
5. Tighten all of the nuts to 25 kg-m (180 lb-ft) and then the bolts to 25 kg-m (180 lb-ft).
6. Refit the set bolt to the telescopic tie rod, but do not over tighten.

**TOE-IN ADJUSTMENT** 6A-02-02

1. Locate the tractor on firm level ground and place the front wheels in the straight ahead position.
2. Using a suitable track gauge, check the toe-in which should be 3,2 mm (  $\frac{1}{8}$  in).
3. If adjustment is required, slacken the bolts securing the ends of the L.H. tie rod and rotate the tie rod tube clockwise or anti-clockwise to increase or decrease toe-in as required.

**FRONT HUB SERVICING** 6A-03-02**Removal**

1. Jack up the tractor and remove the wheel.
2. Fig. 1. Remove the hub cap (3).
3. Straighten out and remove the split pin (4).
4. Remove the slotted nut (5) and tab located washer (6).
5. Lift the hub (8) complete with bearings (7, 9) and seal (10), from the axle spindle.
6. Remove the outer bearing cone (7) from the hub.
7. Drive out the inner bearing cone (9) from the hub, this will also remove the seal (10).
8. Drive out the bearing cups from the hub.

**Examination**

Thoroughly wash out the old grease or dirt from the hub components, using CLEAN paraffin. Check the condition of the hub, spindle and roller bearings. Any worn or damaged components should be replaced. Always fit a new seal (10) and split pin (4).

**Reassembly**

1. Refit the bearing cups into the hub.
2. Refit the inner bearing cone (9).
3. Refit the seal (10) with the flat face towards the centre of the hub, and tap the seal right into the recess in the hub.
4. Pack the hub  $\frac{1}{3}$  full with grease and position the hub on the axle spindle.

5. Refit the outer bearing cone (7), tab located washer (6) and slotted nut (5).
6. Tighten the slotted nut to 8,3 kg-m (60 lb-ft) and slacken off  $\frac{1}{2}$  to  $1\frac{1}{4}$  flats to give hub float.
7. Fit a new split pin (4).
8. Refit hub cap (3).
9. Grease the hub until grease exudes past the seal.
10. Refit the wheel.

**SPINDLE SHAFT****Removal and Refitment** 6A-04-02**Removal**

1. Jack up the tractor and remove hub as stated in operation 6A-02-02.
2. Fig. 4. Remove the nut (16) spring washer (15) and bolt (13) securing the spindle arm (14) and detach the arm from the spindle shaft.
3. Remove the key (19) and the seal (12) from the spindle shaft (20).
4. Lower the spindle shaft (20) and bearing (11) out of the housing.

**Examination**

Examine the spindle shaft (20) and the thrust bearing (11) for wear or damage. When reassembling, use a new seal (12) key (19) and replace the thrust bearing (11) if necessary.

**Refitment**

1. Fit the bearing (11) to the spindle (20) with the thrust face downwards.
2. Refit the spindle to the housing, then refit the new seal (12) and key (19).
3. Refit the arm (14), securing it with the bolt (13), lockwasher (15) and nut (16), tightening the nut to 13,5 kg-m (100 lb-ft).
4. Refit the hubs, as stated in operation 6A-02-02.

**SPINDLE HOUSING****Servicing** 6A-05-02

Special Tools Required: MF 263 Bush Remover  
MF 263-2 Adapter  
MF 264 Reamer Handle  
MF 264 Reamer  
550 Universal Handle

**Procedure**

1. Remove the spindle shaft as stated in operation 6A-03-02.
2. Fig. 5. Assemble the bush remover MF 263 and adapter MF 263-2/1, as shown.
3. Enter the adapter into the bush by turning the upper handle, then extract the bush by rotating the lower handle.
4. Invert the housing and similarly extract the other bush.
5. Fig. 6. Position the new bush squarely over the bore, as shown, then drive in the new bush, using the 550 handle and the adapter plug MF 263-2/2. Similarly drive in the other new bush
6. Fig. 7. Fit the reamer MF-264-1/1 to the handle MF 264 and ream the upper bush to size.

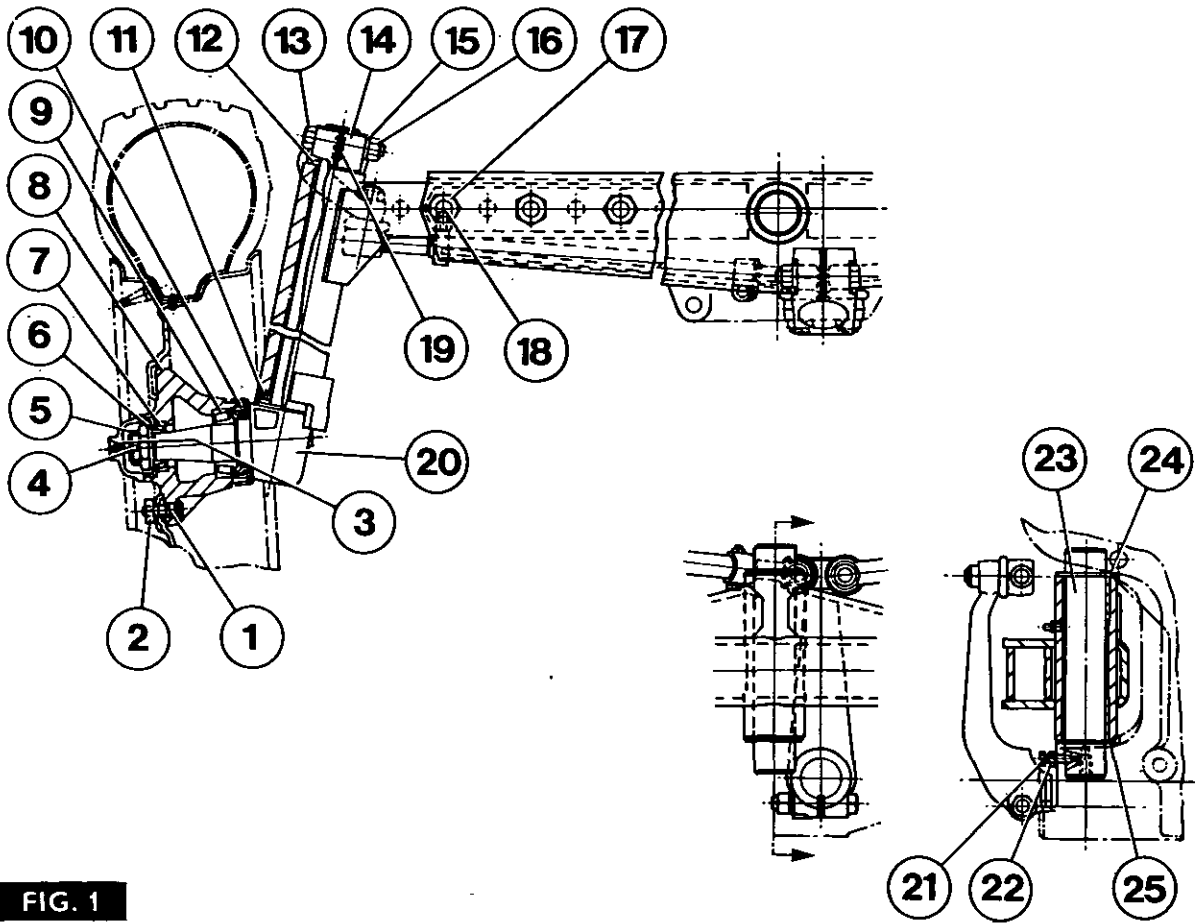


FIG. 1

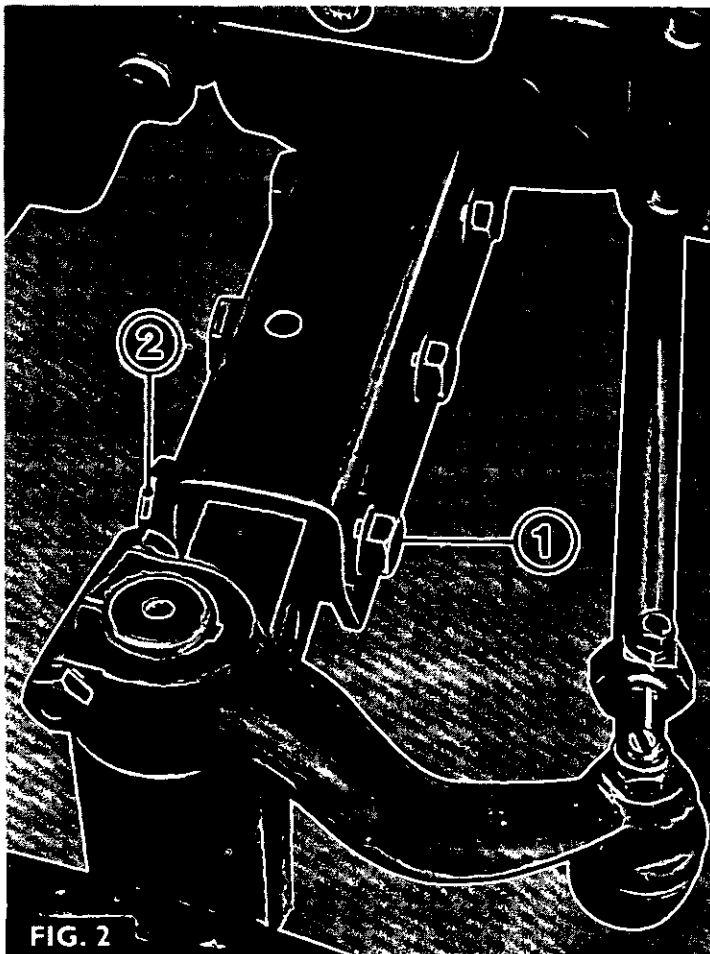


FIG. 2

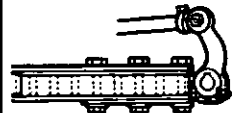



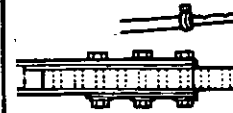
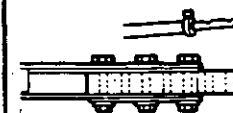
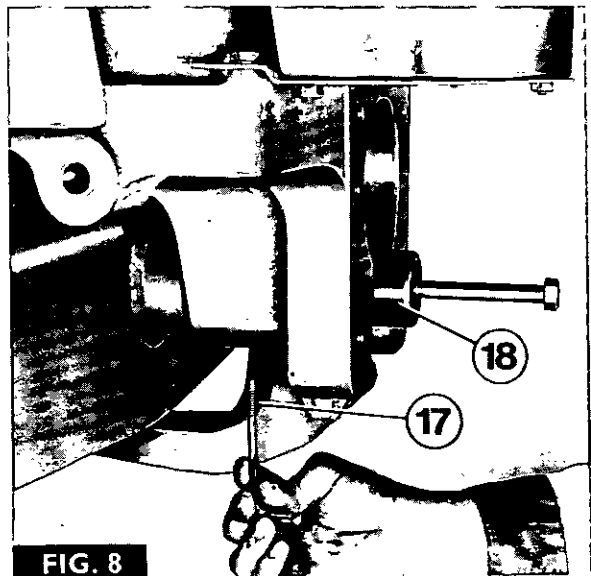
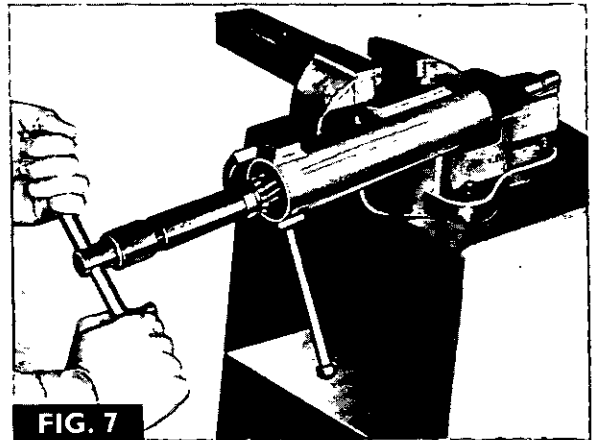
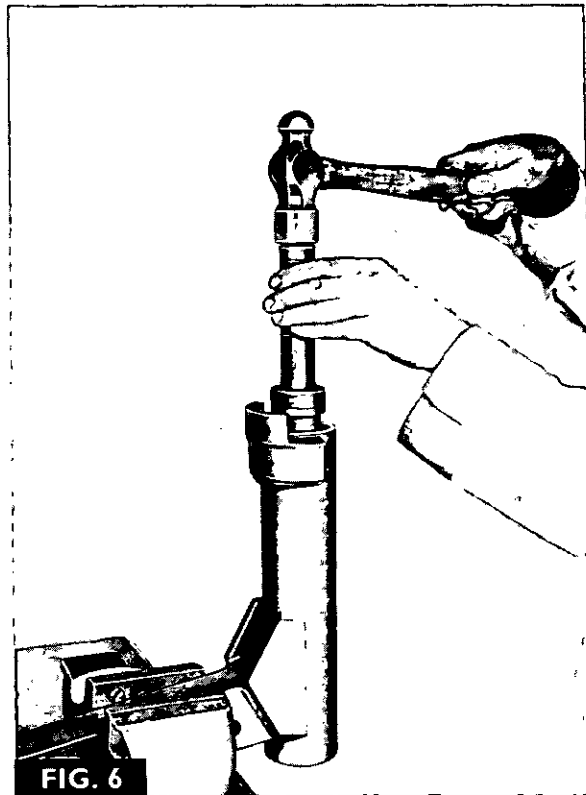
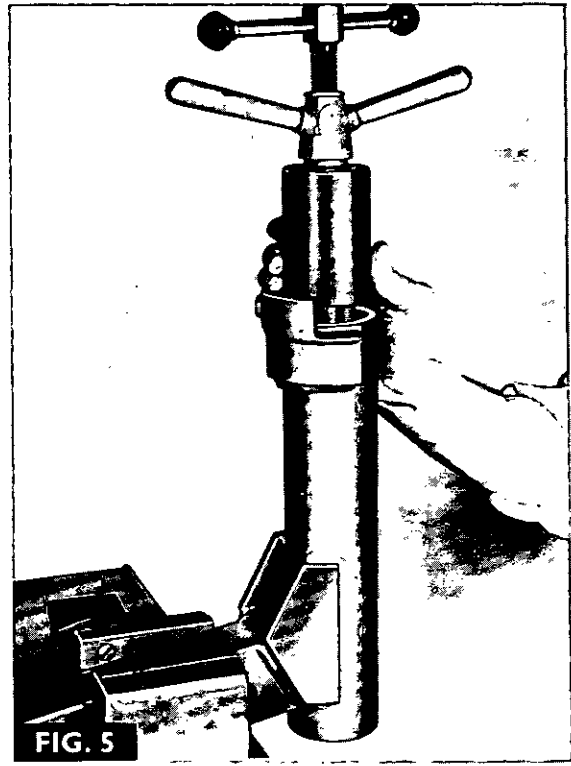
|   |                 |
|---|-----------------|
|  | 52"<br>1320 mm. |
|  | 56"<br>1422 mm. |
|  | 60"<br>1524 mm. |
|  | 64"<br>1625 mm. |
|  | 68"<br>1727 mm. |

FIG. 3

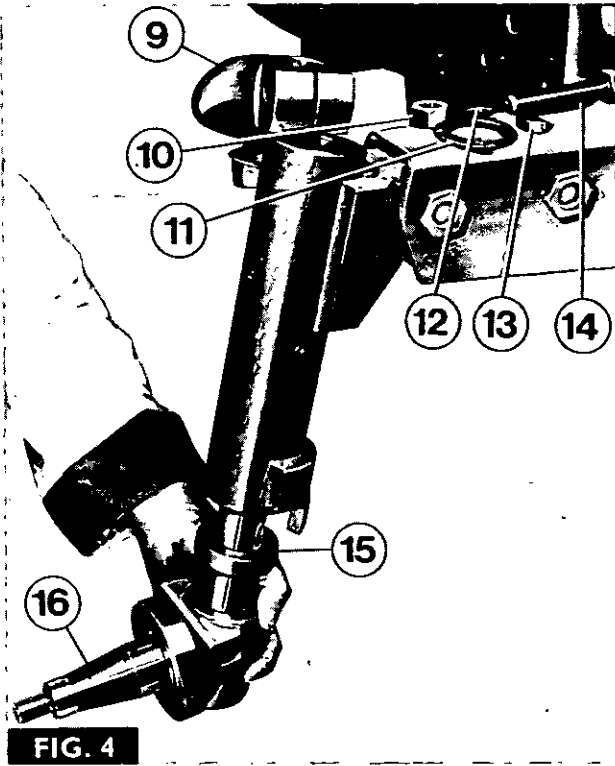FRONT AXLE



7. Fit the pilot MF 264-1/2 to the upper end of the reamer handle and the reamer MF 264-1/1 to the lower end of the handle, then line ream the lower bush to size.
8. Remove all swarf from the housing by washing the housing in clean paraffin and ensure that the grease nipple hole is clear.
9. Refit the spindle shaft as stated in operation 6A-03-02

### CENTRE BEAM ASSEMBLY

#### Removal and Refitment 6A-06-05

##### Removal

1. Jack up the tractor under the sump.
2. Remove the nuts securing the tie rod ends and release the tie rod ends by tapping both sides of the arm with two hammers, sharply and simultaneously.
3. Remove the nuts and bolts securing the outer axle arms to the centre beam, then withdraw the outer axles from the centre beam, complete with their wheels.
4. Fig. 8. Remove the locknut (22) and screw (21) from the front support casting.
5. Fit a  $\frac{7}{8}$  UNC bolt into the front of the axle beam pivot pin (23).
6. With one operator each side supporting the beam, withdraw the pivot pin.
7. Slide the beam sideways out of the support casting, also removing the thrust washer (19) and the shims (20).

##### Examination

Check the end faces of the centre beam journals, the pivot pin and the thrust washer for wear. Examine all bores and threads for wear or damage.

In the event of accident damage, check the beam for bending or twisting. If the beam has been in any way deformed, it must be replaced, as steering characteristics and tyre wear can be severely affected. Also, the beam may have been dangerously weakened due to straining of the welded seams.

##### Reassembly

1. Slide the centre beam into position between the lower steering arm and the front support casting.
2. Fit a  $\frac{7}{8}$  UNC bolt to the pivot pin (23).
3. With one operator each side supporting the beam, align the bore of the centre beam with the pivot pin, then push the pivot pin into position, locating the thrust washer (24) on the pin and then locating the pin in the rear bore. Do not yet fit the locking screw.
4. Fig. 9. Push the beam fully rearwards, then measure the end float using feeler gauges.
5. From the table below, select shims (25) to give 0,8 to 0,25 mm (0.003 to 0.010 in).

| Part No.   | Shim Thickness |                |
|------------|----------------|----------------|
|            | mm             | in             |
| 898 018 M1 | 0,7 to 0,76    | 0.028 to 0.030 |
| 898 019 M1 | 0,86 to 0,91   | 0.034 to 0.036 |
| 898 020 M1 | 0,99 to 1,04   | 0.039 to 0.041 |
| 882 868 M1 | 1,12 to 1,17   | 0.044 to 0.046 |
| 882 869 M1 | 1,24 to 1,30   | 0.049 to 0.051 |

6. Supporting the beam, withdraw the pivot pin, then fit the new shim (25) at the front of the beam, then refit the pivot pin, re-locating the thrust washer.
7. Thoroughly degrease the tapped hole in the support casting, the locking screw (21) and the locknut (22).
8. Rotate the pivot pin until the locking screw hole is aligned with the hole in the support casting.
9. Apply a few drops of either Loctite Grade AV (Red) or Casco Metallock ML15 to the screw, then fit the screw, tightening it to 7,5 kg-m (55 lb-ft). Refit the locknut and tighten it to 6 kg-m (40 lb-ft).
10. Refit the outer axle arms, obtaining partial engagement of all the nuts and bolts, then tighten the nuts to 25 kg-m (180 lb-ft) and finally tighten the bolts to 25 kg-m (180 lb-ft).
11. Refit the tie rods to the spindle arms, then refit the nuts and tighten them to 12,5 kg-m (90 lb-ft).
12. Remove the jack.

### CENTRE BEAM BUSH

#### Removal and Replacement 6A-07-05

Special Tools Required: MF 263 Bush Remover  
MF 263-2 Adapter  
550 Universal Handle

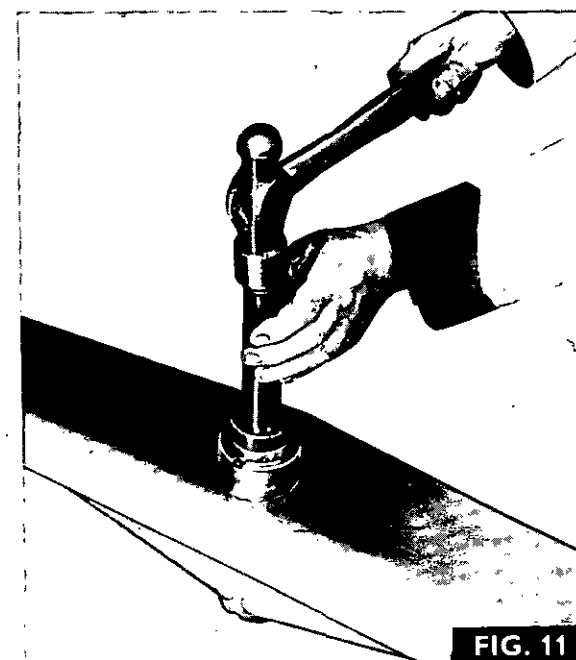
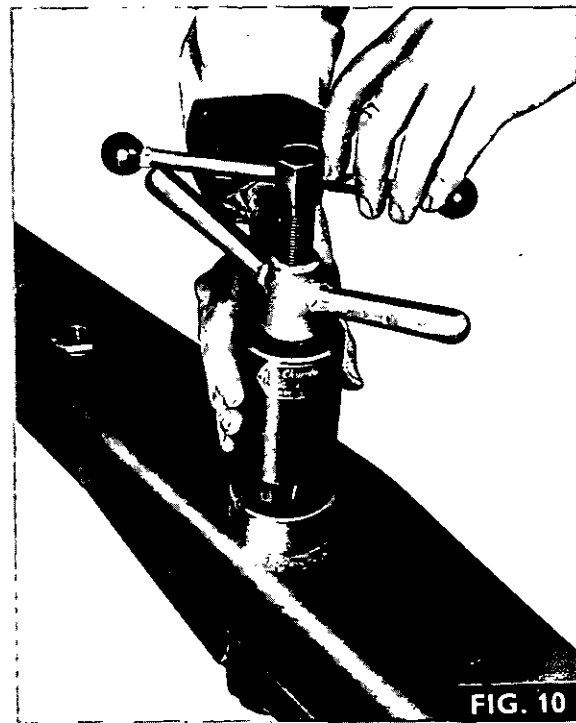
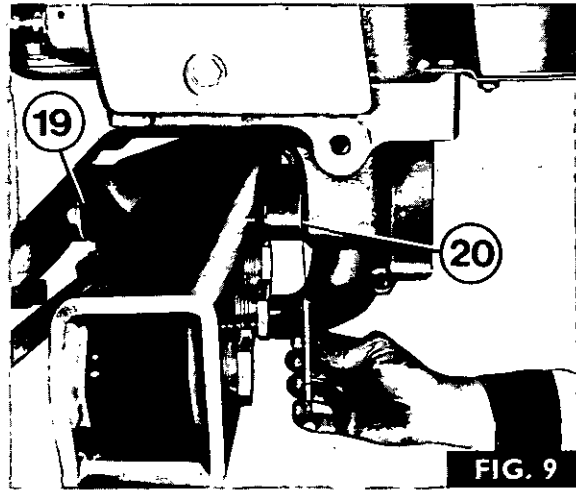
##### Removal

1. Remove the centre beam assembly, as stated in operation 6A-06-05.
2. Fig. 10. Assemble the puller MF 263 and the adapter MF 263-2/1 as shown. Turn the upper handle until the puller enters the bush, then extract the bush by rotating the upper handle. Repeat this operation for the other bush.

##### Replacement

1. Ensure that the bore of the centre beam is clean and free from burrs.
2. Position the new bush squarely over its bore in the centre beam, with the cut-out positioned vertically and facing the top of the tube.
3. Fig. 11. Drive in the new bush, as shown, using special tools MF 263-2/2 and the 550 handle.
4. Refit the centre beam assembly, as stated in operation 6A-06-05.





## WHEELS AND TYRES

## Part 6 Section B

| Operation<br>No. | Table of Contents  | Page<br>No. |
|------------------|--|-------------|
|                  | REAR TYRES   | 02          |
|                  | General  | 02          |
|                  | Traction   | 02          |
|                  | Pressures  | 02          |
|                  | Over-inflation   | 02          |
|                  | Under-inflation  | 02          |
|                  | Cleanliness  | 03          |
|                  | Effective Tyre Pressures                                   | 03          |
|                  | Road Work  | 03          |
|                  | Using a Front-End Loader                                   | 03          |
| 6B-01-03         | Inner tube Removal and Refitment                           | 03          |
| 6B-02-04         | Tyre Removal and Refitment                                 | 04          |
|                  | REAR WHEELS  | 04          |
|                  | General  | 04          |
|                  | Track Settings   | 04          |
|                  | Track Adjustment Procedure – tractors with P.A.V.T. wheels | 04          |
|                  | <br>BALLASTING   | <br>07      |
|                  | General  | 07          |
|                  | Pressure Control & Draft Control                           | 07          |
|                  | Liquid Ballast   | 07          |
|                  | Mixing the Calcium Chloride Solution                       | 07          |
|                  | Tyres filled with water                                    | 07          |
|                  | Ballasting Procedure                                       | 07          |
|                  | 75% Filling  | 07          |
|                  | Essential Facts when Liquid Ballasting                     | 07          |
|                  | Bolt-on Ballast weights                                    | 08          |
|                  | Fitting wheel weights – tractors with P.A.V.T. wheels      | 08          |
|                  | <br>TRACTION AIDS  | <br>08      |
|                  | Cage Wheels  | 08          |
|                  | Girdles  | 08          |
|                  | Half-tracks  | 08          |
|                  | Stakes   | 08          |
|                  | <br>FAULT FINDING CHART                                    | <br>11      |
|                  | <br>FRONT WHEELS AND TYRES                                 | <br>12      |
|                  | General  | 12          |
|                  | Tyre Pressures   | 12          |
|                  | Liquid Ballast   | 12          |
|                  | Bolt-on Ballast weights                                    | 12          |
| 6B-03-12         | Inner tube removal and replacement                         | 12          |
| 6B-04-12         | Tyre removal and replacement                               | 12          |

## WHEELS AND TYRES

### REAR TYRES

#### General

The tyres fitted to M.F. Farm Machinery tractors can be divided fairly easily into three separate categories:

1. Field (Dunlop RT40, Goodyear Traction Sure Grip or Firestone F151).
2. Universal Field and Road (Goodyear Sure Grip All Service, Firestone F151 or Dunlop RT35).
3. Grassland, Sand or Hard Surfaces (Firestone A.N.S. or Goodyear All Weather).

Each of the above types of tyre has been designed especially to give the best grip and wear characteristics obtainable in the specified conditions. On grassland, such as parks and golf courses, worn field or universal type tyres can also be used successfully.

#### Traction

Very few tractors are used to their fullest capacity, mainly due to inability of the driver to control excessive wheelspin.

If a tractor (or any other wheel driven machine) is being driven along a smooth flat surface, the tyre tread will grip the road provided that the torque applied to the wheel is not in excess of the coefficient of friction between the tyre and the road. When the tyre grips the road without slipping, the condition is one of 100% traction.

Unfortunately, due to tread design and other factors, the maximum rate of traction normally obtainable in the most favourable conditions (i.e. smooth concrete) is approximately 90%, i.e. the tractor will pull a load of 90% of the weight acting on its rear wheels, e.g. a tractor working on smooth dry concrete, with a weight of 5000 kg acting on its rear wheels. Allowing for a coefficient of traction of 90%, the tractor will be capable of pulling a load of approximately:

$$\frac{5000}{1} \times \frac{90}{100} = 4500 \text{ kg}$$

When ploughing or performing similar operations in the field, the coefficient of traction is reduced to around 45 to 50%. This is the reason for ballasting the rear end of the tractor, thereby increasing the weight acting on the rear axle and thus increasing the tractive effort of the tractor.

The coefficients of traction mentioned can only be achieved by ensuring that all of the factors which affect the tractor performance are adjusted to suit the ground condition.

Some of the factors are:

1. Tyre Pressures – must be set at the lowest pressure permissible for the load being carried and the size and the ply-rating of tyre being used.
2. Tyre Tread – the tyre tread should not be more than  $\frac{1}{2}$  to  $\frac{1}{2}$  worn for efficient ploughing. The lug-bars must face in the correct direction (most tyres have arrows on the sidewalls to indicate the correct direction of rotation).
3. The correct section and size of tyre should be used for certain ground conditions. Some examples are:
  - a. Clay – Large diameter, narrow section tyres. These tyres have a small contact area and will concentrate a larger amount of weight on the contact area than would a wide section tyre, thus helping the lug-bars to 'bite' into the soil and give traction.
  - b. Very light sandy soil – or peat. Any wide section tyre will allow the weight acting on the rear end of the tractor to be spread over a larger area than with a narrow tyre, thus preventing sinkage and crushing of the furrow.
  - c. Stony Ground – Large diameter, wide section tyres will spread the wear out over a large area of tread and give good flotation.
  - d. Sand – Sand requires an entirely different type of tyre, for if ordinary lug-bar type tyres are used, they will greatly disturb the surface of the sand and rapidly dig themselves into an ever increasing depth. In these conditions, a smooth tread pattern, on as wide a tyre as possible is required, to disturb the surface as little as possible and give good flotation.

### CORRECT TYRE USAGE FOR ECONOMICAL LIFE

#### Pressures

Tyre pressure must be maintained at the manufacturers' recommended minimum to give the best possible performance. This minimum is determined by the weight acting on the rear end of the tractor and can be calculated from the table given in the Specification Section.

Incorrect inflation of tyres has the following effects:

#### Over-Inflation

Excessive tyre pressure deprives the tyre of its self-cleaning properties. This causes wheelspin, which in turn causes sinkage, thus increasing the rolling resistance of the tyre and lowering the power available for traction.

Frequent and prolonged bouts of wheelspin cause rapid tyre wear. Another effect of over-inflation is that the casing of the tyre is very susceptible to damage from sharp rocks or similar objects due to the inability of the casing to 'give' on contact.

#### Under-Inflation

If a tyre has insufficient pressure to support the casing, this may be deflected to such an extent that the plies may become separated. Such damage is irreparable and the tyre must be replaced. Excessive deflection allied to a high drawbar pull can cause wrinkling of the tyre sidewalls which, if allowed to occur continually can cause the tyre to 'creep' on the rim and tear out the valve.

A visible warning of under-inflation is uneven wear of the lug-bars, indicated by 'gouging' of the centre of the bars.

**Cleanliness**

Certain liquids can cause considerable harm to tyres, if they are not quickly removed. Some of the worst offenders are oil, grease and some crop sprays which can contain considerable quantities of acid or alkali. If any of the above penetrate into the plies through small holes or splits, rapid deterioration will result.

**Effective Tyre Pressures**

Details of the maximum pressures usable with the various sizes and ply-ratings of tyres fitted are given in the Specification Section. These maxima are only used when very heavy loading of the tractor is required.

Under normal conditions the following pressures can be used, but must be increased if extra loading is involved.

Ploughing: 0,84 kg/cm<sup>2</sup> (12 lb/in<sup>2</sup>)

If bolt-on ballast weights are used, the pressure must be raised accordingly. When working on a hillside pressure should be raised by 0,14 kg/cm<sup>2</sup> (2 lb/in<sup>2</sup>) in both tyres, because as each tyre alternately takes most of the load when it is on the side of the tractor nearest the bottom of the slope, the pressure must be raised accordingly to cope.

When using a non-reversible plough the pressure of the landside tyre may be reduced by 0,14 kg/cm<sup>2</sup> (2 lb/in<sup>2</sup>) although the differential lock should be used to compensate for wheelspin by one wheel only.

**Road Work**

When driving a tractor on the road, higher speeds can be used than in the field. In such conditions the pressure can be raised by 0,28 kg/cm<sup>2</sup> (4 lb/in<sup>2</sup>) (not Firestone F151) to prevent squirming and gouging of the lug-bars.

If a two wheel trailer, or manure spreader is used, the weight exerted on the tractor drawbar should be determined and the pressure adjusted to suit.

**Using a Front End Loader**

If a loader is fitted to the tractor, a counter-weight is frequently fitted to the tractor rear linkage as a safety precaution. If a counter-weight is to be fitted the tyre pressure should be raised to compensate.

**INNER TUBE****Removal and Refitment**

6B-01-03

Special tools required: 'Bead-breaking' tool  
3lb. Hammer  
Tyre levers

**Removal**

1. Lay the wheel on the ground with the valve uppermost.
2. Deflate the tyre by removing the valve core.

Remove the valve retaining nut.

3. Fig. 1. Drive the 'bead-breaking' tool between the tyre and rim, taking care not to damage the rim or the tyre.
4. After the bead has been released from the rim, invert the wheel and repeat Item 3.
5. Fig. 2. Lubricate the rim, tyre and base of the tube with a solution of soap and water or similar rubber lubricant.

**NOTE – NEVER USE PETROLEUM OR SILICONE BASE GREASES.**

6. Fig. 3. Starting at the valve location, pry the tyre off the rim, taking small bites with tyre levers, and ensuring that the bead on the opposite side is fully located in the mounting well.
7. Fig. 4. With the wheel in a vertical position, pull the tyre forwards and remove the tube.

Examine the bead seating area of the rim. Remove any build-up of rust, corrosion or old rubber. Inspect inside the tyre casing for foreign matter or damage.

**Refitment**

1. Fig. 5. Inflate the tube until 'rounded out'. Place the tube in the tyre with the valve located in the valve hole. Refit the valve retaining nut finger tight.
2. Fig. 6. Refit the tyre, starting opposite the valve location taking small bites with long tyre levers and keeping the fixed part of the bead fully located in the well.

A solution of soap and water, or similar rubber lubricant, brushed on to the rim and bead will help fitment.

**NOTE – CARE MUST BE TAKEN NOT TO PINCH THE TUBE WHEN FITTING.**

3. Fig. 7. Centre the tyre on the rim and inflate to approx. 2,5 kg/cm<sup>2</sup> (35 lb/in<sup>2</sup>).

**NOTE – NEVER STAND OVER THE ASSEMBLY WHEN INFLATING, REMOTE CONTROL INFLATION EQUIPMENT SHOULD BE USED.**

4. Remove the valve core and completely deflate the tyre.
5. Refit the valve core and inflate to recommended pressure.

**NOTE – IF BEADS FAIL TO SEAT AT 2,5 kg/cm<sup>2</sup> (35 lb/in<sup>2</sup>) THE TUBE MAY BE PINCHED, DO NOT INCREASE THE PRESSURE BUT REMOVE THE VALVE CORE AND RELEASE TYRE FROM RIM. LUBRICATE TYRE, BEAD AND RIM AND REINFLATE TO 2,5 kg/cm<sup>2</sup> (35 lb/in<sup>2</sup>). REPEAT PROCESS UNTIL BOTH BEADS ARE PROPERLY SEATED.**

## WHEELS AND TYRES

### TYRE

#### Removal and Refitment 6B-02-04

Special tools required: 'Bead-breaking' tool  
3lb. Hammer  
Tyre levers

#### Removal

1. Remove inner tube as stated in operation 6B-01-03
2. Figs. 8 & 9. With the wheel in a vertical position pry off the tyre taking small bites with the tyre levers. The use of rubber lubricant will help removal.

#### Refitment

1. Place the rim on the ground, lubricate the bead and rim and place the tyre on rim.
2. Fig. 10. Refit the tyre to rim, using long tyre levers.
3. Refit the inner tube as stated in operation 6B-01-03

### REAR WHEELS

#### General

Two types of rear wheel are fitted:

Pressed steel, single, disc wheels (Fig. 11).

Pressed steel rims, with cast iron centre discs capable of power adjustment of the track (P.A.V.T.) (Optional Extra) (Fig. 12).

A general rule governing rim size in relation to tyre size is that the rim will be 25 mm. (1 inch) narrower than the tyre fitted to it:

e.g. W11 x 38 rims are fitted with 12 - 38 tyres. However, this rule does not always apply and in certain instances the rim may be the same nominal width as the tyre:

e.g. W14 x 30 rims fitted with 14 - 30 tyres.

### TRACK SETTINGS

#### W14 x 30 and W14 x 38 P.A.V.T. Wheels

Fig. 12. Five settings are obtainable with the wheels set normally, from 1422 mm (56 in) to 1930 mm (76 in). When the wheels are reversed, track widths from 1727 mm (68 in) to 2235 mm (88 in) are obtainable. See Table 2.

#### W11 - 38 P.A.V.T. Wheels

Fig. 14. Six settings are obtainable with the wheels set normally from 1371 mm (54 in) to 1879 mm (74 in). When the wheels are reversed, track widths from 1778 mm (70 in) to 2286 mm (90 in) are obtainable. See Table 1.

### TRACK ADJUSTMENT PROCEDURE

#### Tractors with P.A.V.T. Wheels

1. Fig. 11. Remove the two pins (1) from the rim stops.
2. Move a rim stop until it aligns with a hole adjacent to the selected track setting position.
3. Refit a rim stop pin to the rim stop position in item 2.
4. Fig. 12. Slacken the six rim stop clamp nuts (2).
5. Start the tractor engine.
6. Select a gear, forward to widen the track, reverse to narrow it.
7. Release the clutch smoothly; the rim and tyre will remain stationary but the inner disc will rotate helically and push or pull the disc into the new position, the rim stop clamp coming to rest against the rim stop.
8. Switch off the tractor engine.
9. Fit the other rim stops and pins to the holes immediately adjacent to the rim clamp. If the track setting is either '1' or '6' in table 1 or 2 - the rim stops can be fitted in any convenient holes.
10. Re-tighten the six rim clamp nuts PROGRESSIVELY and EVENLY to a torque of 27,5 kg.m (200 lb ft).

Table 1. Fig. 14. 12-38 Tyres

| Position | Normal |      | Reversed |      |
|----------|--------|------|----------|------|
|          | mm.    | ins. | mm.      | ins. |
| 1        | 1371   | 54   | 1778     | 70   |
| 2        | 1473   | 58   | 1879     | 74   |
| 3        | 1575   | 62   | 1981     | 78   |
| 4        | 1676   | 66   | 2083     | 82   |
| 5        | 1778   | 70   | 2184     | 86   |
| 6        | 1879   | 74   | 2286     | 90   |

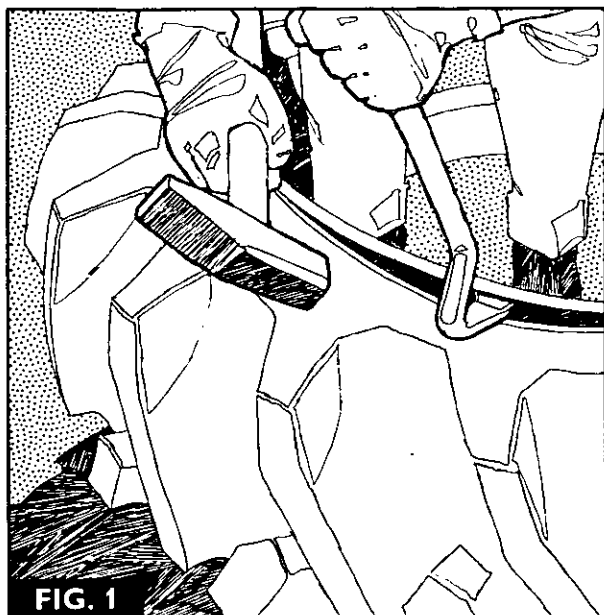


FIG. 1

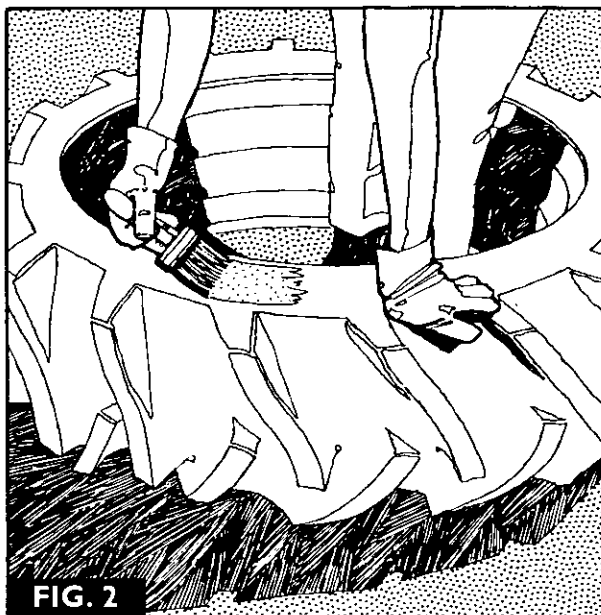


FIG. 2

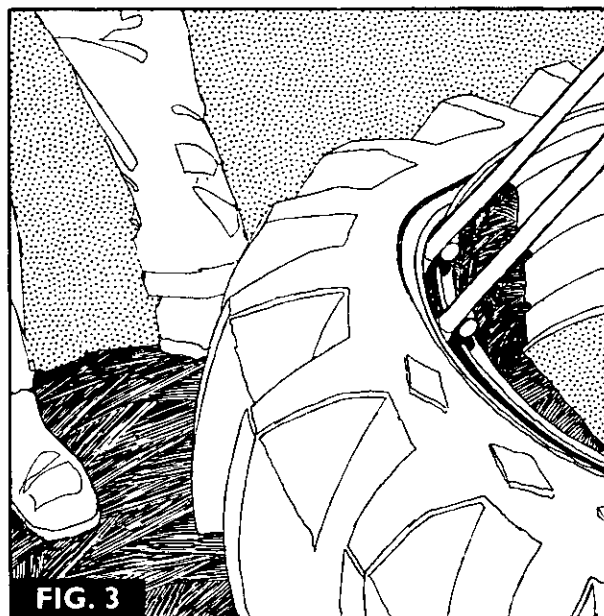


FIG. 3

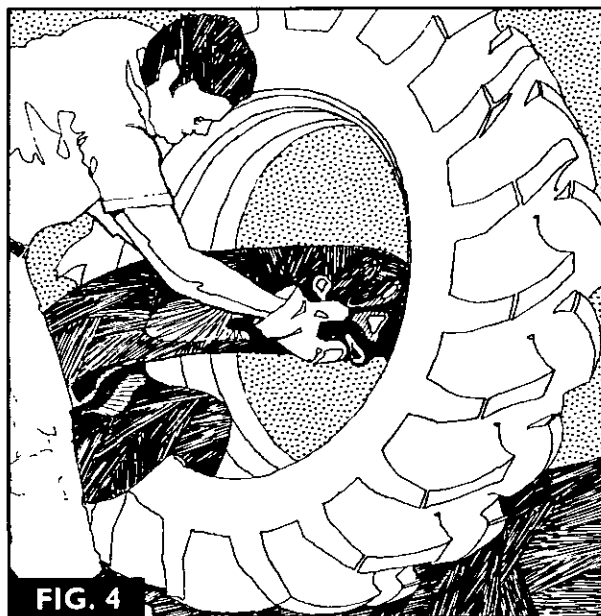


FIG. 4

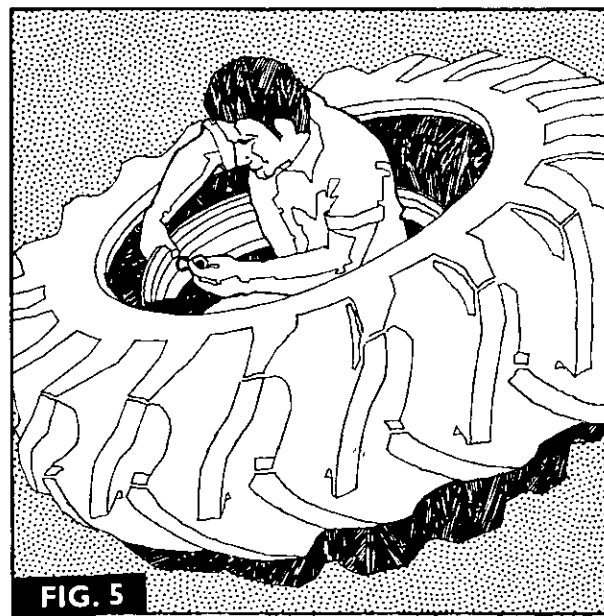


FIG. 5

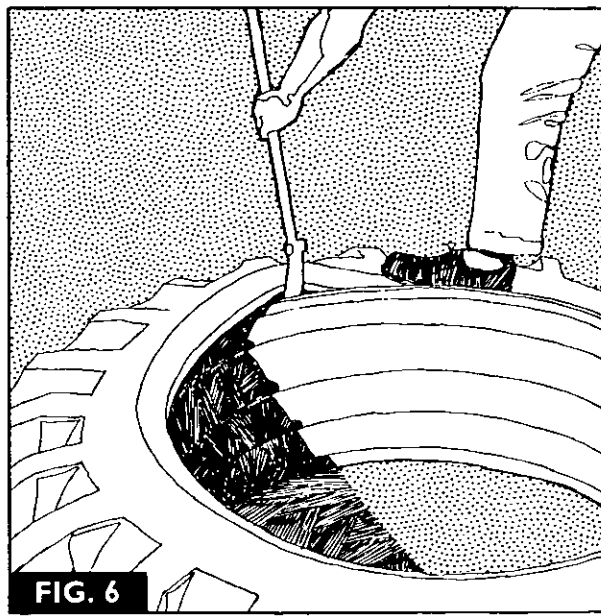


FIG. 6

WHEELS AND TYRES

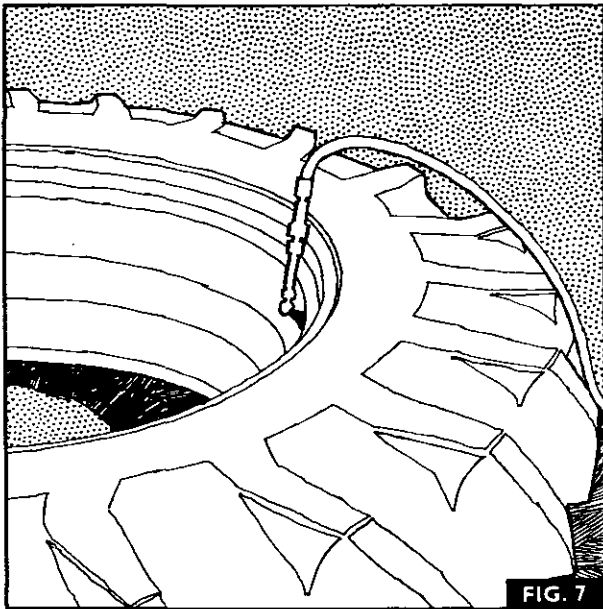


FIG. 7

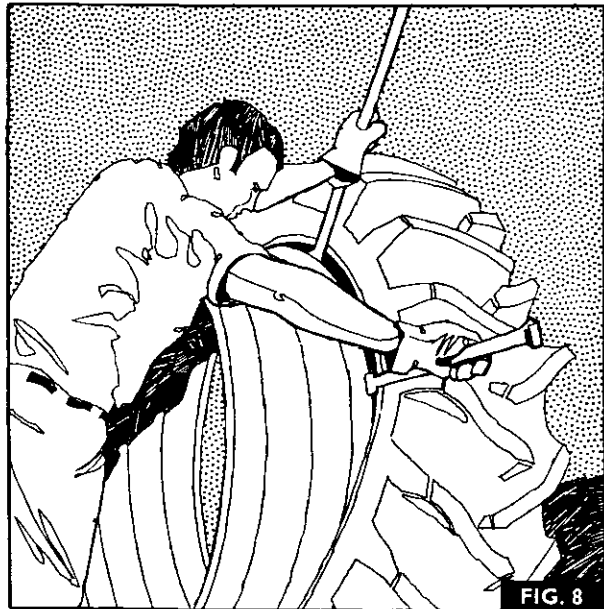


FIG. 8

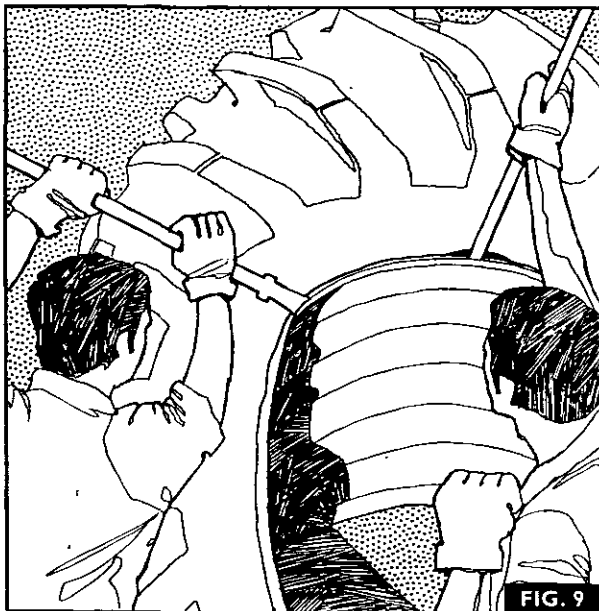


FIG. 9

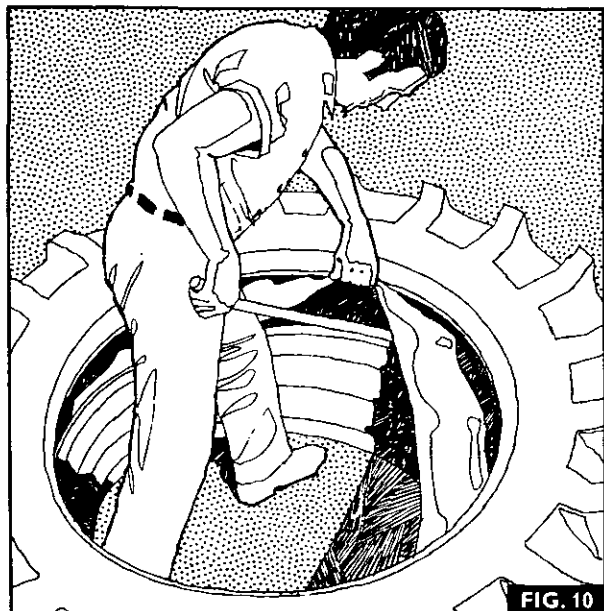


FIG. 10

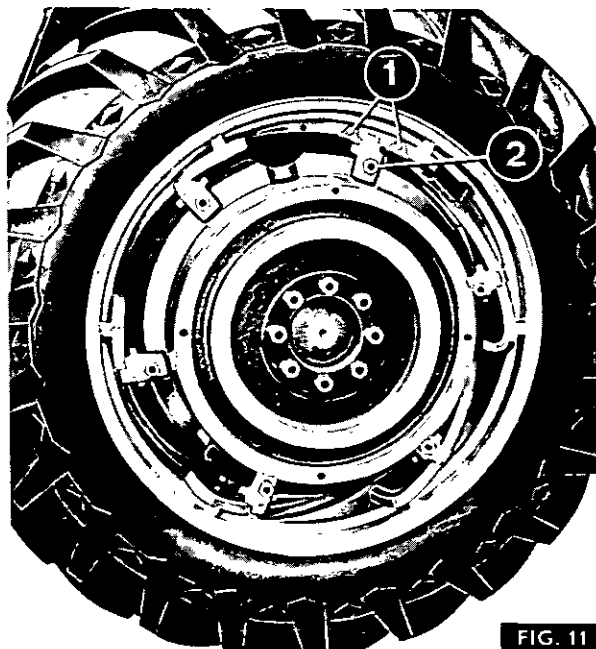


FIG. 11

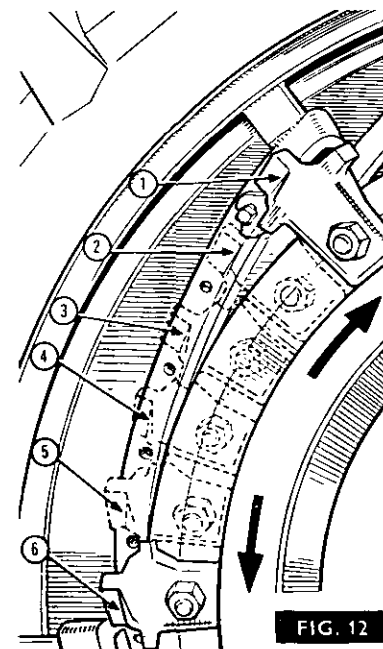


FIG. 12

## WHEELS AND TYRES

Table 2. Fig. 14. 15-30 and 14-34 Tyres

| Position | Normal |      | Reversed |      |
|----------|--------|------|----------|------|
|          | mm.    | ins. | mm.      | ins. |
| 1        |        |      | 1727     | 68   |
| 2        | 1524   | 60   | 1828     | 72   |
| 3        | 1625   | 64   | 1930     | 76   |
| 4        | 1727   | 68   | 2032     | 80   |
| 5        | 1828   | 72   | 2134     | 84   |
| 6        | 1930   | 76   | 2235     | 88   |

**BALLASTING****General**

To impart extra weight on the rear wheels of a tractor, several methods may be employed:

1. Pressure Control or Draft Control
2. Liquid Ballast
3. Bolt-on Weights

Each of these methods has advantages and disadvantages, but all work well in practice and any two, or even all three may be combined for absolute efficiency.

**PRESSURE CONTROL AND DRAFT CONTROL**

This feature, exclusive to Massey-Ferguson tractors, is described in detail in Part 7A of this Manual.

**LIQUID BALLAST**

Liquid filling of the tyres is a well known and widely used method of weighting the rear of a tractor. To prevent damage by frost, calcium chloride should be dissolved in the water used to fill the tyres, thus forming an anti-freeze solution. The calcium chloride used should be 'Commercial Grade 70 to 72% Ca.Cl<sub>2</sub>'.

The following table and actual filling method is based on data supplied by the Dunlop, Goodyear and Firestone Tyre Companies. This table is, of necessity, a compromise, because tyres of the same nominal size manufactured by different companies differ slightly in internal dimensions, which may alter the degree of filling by a small percentage, but this will not affect the actual performance of the tyre.

**MIXING THE CALCIUM CHLORIDE WATER SOLUTION**

**WARNING.** - NEVER POUR THE WATER ON TO CALCIUM CHLORIDE. ALWAYS ADD CALCIUM CHLORIDE TO WATER.

Procedure is as follows:

1. Consult the chart and locate the size of tyre to be filled.
2. Weigh out the correct quantity of calcium chloride (column 1), but do not put it in the mixing tank.
3. Measure the volume of water shown in column 2 and put it into the tank.
4. Add the calcium chloride to the water slowly.

**NOTE** - WHEN CALCIUM CHLORIDE AND WATER ARE MIXED A CHEMICAL REACTION CAUSES GREAT QUANTITIES OF HEAT TO BE PRODUCED. THE HOT SOLUTION MUST NOT BE USED - WAIT UNTIL IT HAS COOLED.

5. Add the remaining volume of water indicated in column 3 to the solution.

**TYRES FILLED WITH WATER**

If a tyre has been previously filled with water and calcium chloride anti-freeze is to be added, drain off the amount indicated in column 5 of the table.

Mix a solution from the quantities shown in columns 1 and 2 and allow to cool.

Re-fill the tyre with this solution to make up the correct filling.

**WARNING** - NEVER ATTEMPT TO ADD PURE CALCIUM CHLORIDE TO A TYRE FILLED WITH WATER, AS THE RESULTANT HEAT AND EXPANSION CAN CAUSE TYRE DAMAGE.

**Ballasting Procedure**

There are two methods of liquid ballasting tractor tyres, 75% filling and 100% filling. The 75% filling method is the most common, and is easier to achieve than 100% filling, not requiring a motorised pump.

The 100% filling increases casing vulnerability to impact damage and accordingly 75% filling is recommended by Tyre Manufacturers.

**75% Ballasting**

1. Using a jack capable of lifting 5000 kg. (5 tons) raise the rear wheels just clear of the ground.
2. Ensure that the tyre valve is secured to the rim, either by a mounting cone or valve nut. If so, deflate the tyre.
3. Check that an air-water type valve core is fitted to the valve.
4. Position the valve by turning the wheel until the valve is at '12 o'clock' (i.e. vertical and at the top).
5. Connect the water adapter to the valve and place the solution suction tube in the tank of solution.
6. Pump the solution into the tyre until a steady stream of solution pours from the breather hole. This indicates that the tyre has been filled up to the level of the valve, which is approximately 75% of the tyre's capacity.
7. Disconnect the water adapter.
8. Using a special air-water gauge, adjust the air pressure in the tyre to that recommended for the load being carried by the rear of the tractor.

**Essential Facts when Liquid Ballasting**

Always use a proper air-water pressure gauge, as a normal air type gauge will be rapidly corroded by calcium chloride solution.

Never attempt to inflate the tyre with the wheel resting on the ground.

Always use an open topped container when mixing calcium chloride solution.

Never pour water on calcium chloride.



## WHEELS AND TYRES

### LIQUID BALLAST TABLE 75% FILLING

| Tyre Size | Rim Size | 1    |     | 2    |      | 3     |      | 4     |      | 5    |      |
|-----------|----------|------|-----|------|------|-------|------|-------|------|------|------|
|           |          | kg.  | lb. | Lit. | Gal. | Lit.  | Gal. | Lit.  | Gal. | Lit. | Gal. |
| 15 - 30   | W14 x 30 | 53,1 | 117 | 77,3 | 17   | 254,6 | 56   | 330,7 | 729  | 81,9 | 18   |
| 14 - 34   | W14 x 34 | 52,2 | 115 | 81,8 | 18   | 245,5 | 54   | 320,2 | 706  | 86,4 | 19   |
| 12 - 38   | W11 x 38 | 35,4 | 78  | 54,6 | 12   | 168,2 | 37   | 219,1 | 483  | 59,1 | 13   |

### BOLT-ON BALLAST WEIGHTS

The main advantage of bolt-on weights is that they can be removed easily when not required; thus relieving the tractor of unnecessary weight. This should, over a long period, give the tractor better fuel consumption than a tractor with liquid ballast, which cannot easily be removed.

These are cast iron weights, having various tapped and plain holes which are necessary for attaching the weight to the wheel and subsequent weights.

### FITTING WHEEL WEIGHTS

As this tractor is available with two different types of wheel, the wheel weights vary accordingly.

#### 12 - 38 P.A.V.T. Wheels

Weights are not available for this size of wheel.

#### 15 - 30 and 14 - 34 P.A.V.T. Wheels

Special one-piece weights are used.

**NOTE - IN ALL CASES AN EQUAL AMOUNT OF WEIGHT MUST BE FITTED TO BOTH SIDES OF THE TRACTOR. TYRE PRESSURES MUST BE RAISED TO SUIT THE AMOUNT OF WEIGHT ACTING ON THE TYRES.**

### TRACTION AIDS

#### Cage Wheels (Fig. 13)

Cage Wheels are circular frames which attach to the sides of the existing tractor wheels to increase flotation and traction. There are numerous types available with either straight, angled or chevron type tread bars.

Due to the large number of differing designs available, pedantic instructions for fitting and removal cannot be given.

#### Girdles (Fig. 14)

These are chains made of steel strip which are fitted around the periphery of the wheel to give better traction when hauling timber and in similar conditions.

#### Half-Tracks (Fig. 15)

Half-Tracks are ideal for work in deep snow where as much flotation as possible is required.

#### Strakes (Fig. 16)

Strakes are retractable, radially mounted metal bars, with spade lug-ends which can give increased traction in heavy clay and similar soils.

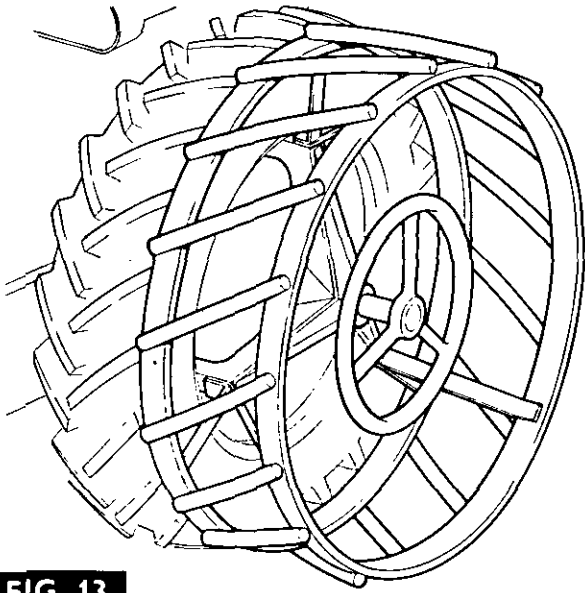


FIG. 13

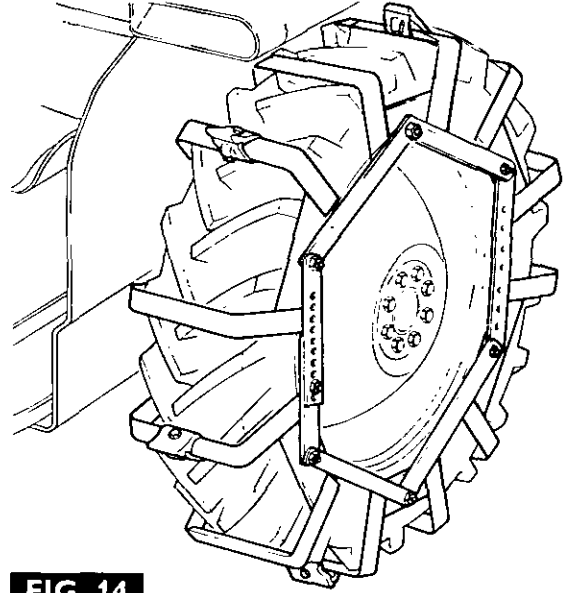


FIG. 14

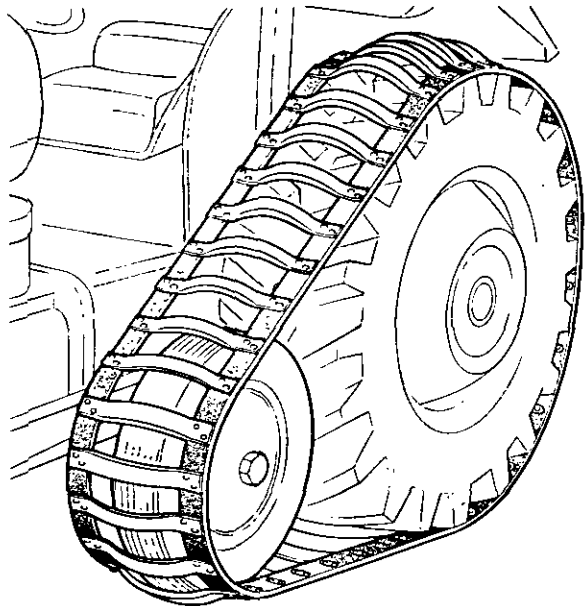


FIG. 15

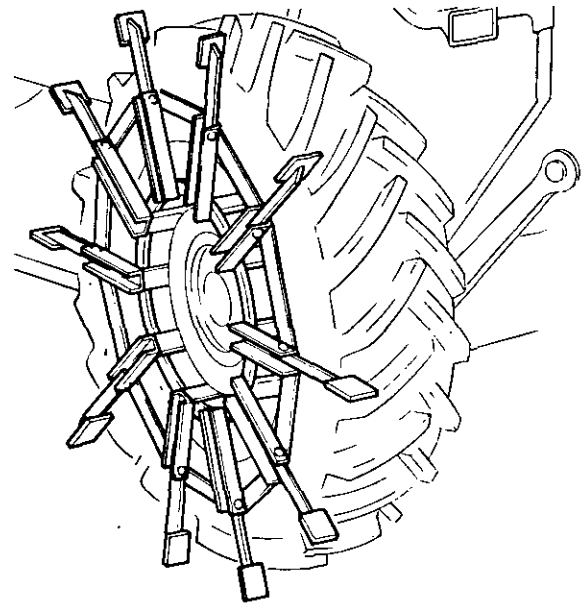


FIG. 16



FIG. 17

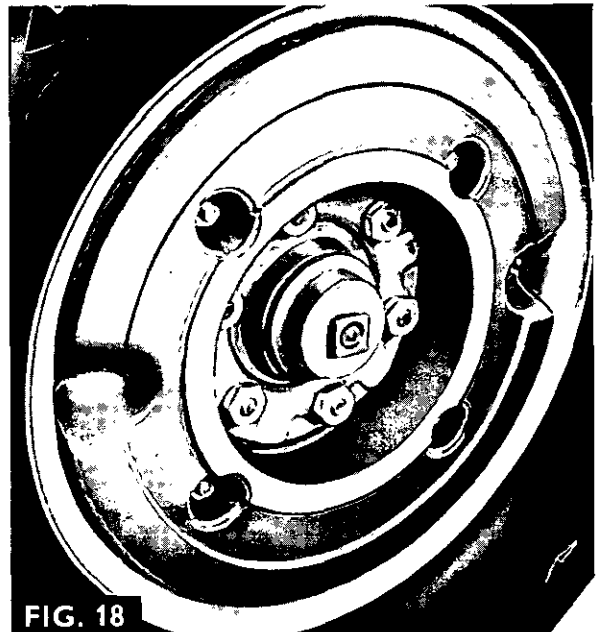


FIG. 18

## WHEELS AND TYRES

### TYRE FAULT FINDING CHART

| Symptom   | Possible Cause  | Suggested Cure   |
|---|---|--|
| Wheelspin   | Too low gear  | Use the highest gear that the tractor will pull without labouring  |
| Wheelspin due to tyres loading with soil  | Tyre pressures excessive  | Adjust the pressures to the manufacturer's recommended minimum   |
|   | Inadequate tyre pressures   | Raise the tyre pressures to that correct for the load on the rear end of the tractor   |
|   | Insufficient weight acting on the rear end of the tractor                           | 1) Fit wheel weights<br>2) Water ballast tyres<br>3) Increase 'Pressure Control' pressure if fitted.<br>4) Try narrower section tyres                            |
|   | Inadequate weight on the front end of tractor                                       | Fit weight frame and front-end weights   |
| Wheelspin<br>The tyre retains its self-cleaning action and sinks into the ground. | Too narrow section tyre for the weight being carried by the rear end of the tractor | 1) Fit wider section tyres<br>2) Reduce the weight on the rear end of the tractor  |
|   | Lug-bar type tyres being used in sand   | Use either grassland/sand type tyres, or heavily worn lug-bar type tyres   |
| Tractor slews from side to side when being driven on hard ground (e.g. road)      | Tyre squirms due to excessively low pressures                                       | Raise the tyre pressures. This complaint can cause rapid tyre wall wear and consequent failure   |
| Tyre tread worn unevenly when used for long periods on the road                   | 1) Too low pressure<br>2) Overloading   | Raise pressure – This complaint is indicated by wear on the leading and trailing edges of the lug-bar  |
| Uneven tread wear   | Over-inflation  | Adjust pressures to those recommended by tyre manufacturers. This problem is indicated by wear to the centre of the tread only                                   |
|   | P.A.V.T. wheels running out of true   | 1) Jack up axle to relieve wheel of weight slacken and re-tighten wheel nuts.<br>2) Check that the tyre is located accurately on the rim.                        |
| Tyre creep  | Too low tyre pressure   | 1) Increase tyre pressure<br>2) Check the condition of both the rim and bead and replace as necessary<br>Certain sizes of wheel are available with knurled rims. |
| Split sidewall  | Under-inflated tyre striking a sharp object   | Minor splits are repairable. In cases of severe damage the tyre must be replaced.  |

## FRONT WHEELS AND TYRES

### General (Fig. 17)

One type of front wheel is fitted to this tractor. This is a W5.50 x 16 Pressed Steel Rim and Disc fitted with either a three-rib or multi-rib 7.50-16 tyre.

### Tyre Pressures

The tyre pressures are shown in the Specification Section. However, if a very heavy front end weight is fitted, such as a loader, the pressure should be raised to 2.81 to 3.09 kg/cm<sup>2</sup> (40 – 44 lb/in<sup>2</sup>).

### Liquid Ballast

Liquid ballasting is not normal procedure, but it can be used if required. The procedure is similar to that used for rear tyres. Ensure the correct type of valve is fitted to the tyre.

### Bolt-On Ballast Weights (Fig. 18)

Two types of weight can be fitted to this tractor; an inner weight and an outer weight.

The inner weight is fitted first and is secured by four bolts, nuts and spring washers.

The outer weight (optional extra) has semi-circular cut-outs which must align with the tyre valve, to render the valve accessible.

Fitting procedure as follows:

1. Position the tractor on level ground.
2. Ensure that tractor is in gear with the parking brake engaged.
3. Using a jack, raise the front wheels just clear of the ground.
4. Remove the wheel.
5. Place the inner weight on the inside of the wheel and secure with the four bolts, nuts and spring washers, making sure the head of the bolts faces inwards.
6. Refit the wheel to tractor and secure it with the wheel nuts tightened to a torque of 8.3 kg/m (60 lb ft).
7. Place the outer weight over the protruding bolts making sure the semi-circular cut-outs align with the valve. Secure the weight with four nuts and spring washers.
8. Lower tractor to ground and remove the jack.
9. Repeat this procedure for the other side.

**NOTE** NEVER OPERATE THE TRACTOR WITH UNEVEN WEIGHTS (E.G. LH WHEEL WEIGHTED, RH WHEEL WITHOUT WEIGHTS).

**Inner Tube Removal and Refitment** 6B-03-12  
See operation 6B-01-03

**Tyre Removal and Refitment** 6B-04-12  
See operation 6B-02-04

## STEERING SYSTEM

## Part 6 Section C

| Operation<br>No. | Table of Contents                               | Page<br>No. |
|------------------|---|-------------|
|                  | GENERAL   |             |
|                  | STEERING BOX                                    | 02          |
| 6C-01-02         | Removal and Refitment                           |             |
| 6C-02-07         | Gasket Removal and Refitment                    |             |
| 6C-03-07         | Servicing                                       |             |
|                  | DRAG LINK                                       | 08          |
| 6C-04-08         | Removal and Refitment                           |             |
|                  | STEERING ARM AND SHAFT<br>(MANUAL STEERING)     | 08          |
| 6C-05-08         | Removal and Refitment                           |             |
| 6C-06-08         | Servicing                                       |             |
|                  | TIE ROD   | 08          |
| 6C-07-08         | Servicing                                       |             |
|                  | MAIN STEERING SHAFT BUSHES<br>(MANUAL STEERING) | 11          |
| 6C-08-11         | Removal and Replacement                         |             |
|                  | STEERING ARM AND SHAFT<br>(POWER STEERING)      | 11          |
| 6C-09-11         | Removal and Refitment                           |             |
| 6C-10-12         | Servicing                                       |             |
|                  | MAIN STEERING SHAFT BUSHES<br>(POWER STEERING)  | 12          |
| 6C-11-12         | Removal and Replacement                         |             |
|                  | POWER STEERING RAM                              | 12          |
| 6C-12-12         | Servicing                                       |             |
| 6C-13-15         | Adjustment                                      |             |
|                  | POWER STEERING PUMP                             | 15          |
| 6C-14-15         | Servicing                                       |             |

**GENERAL (Figures 1, 2)**

The steering box is a worm and cam type unit, mounted separately above the transmission casing. A single drop arm and drag link, connected to an arm and shaft mounted in the front engine support, transmit steering wheel movement to the tie rods.

The Power Steering mechanism consists of a hydraulic ram, engine driven pump, reservoir and piping.

The ram cylinder assembly is bolted to the ram arm pivot pin, the ram arm being splined to the main steering shaft. The ram plunger is located by a pin fitted into the R.H. side of the front engine support casting. The ram control valve, which is part of the cylinder assembly, is operated by an adjustable link connected to the main steering arm. The gear type oil pump is bolted to the engine timing case and is driven from the timing gears. The reservoir is attached to the

rear of the pump.

Oil is pumped from the reservoir through piping to the ram control valve. The control valve feeds oil into the cylinder to the appropriate side of the ram, determined by steering wheel movement, and hydraulic force turns the road wheels in the direction required.

The tractor can be steered manually if the power steering mechanism fails, or if the tractor is being moved without the engine running. If it should be necessary to use the tractor with the power steering out of action, the valve adjusting screw should be fully tightened.

The power steering reservoir should be topped up with a recommended oil. To top up the reservoir, turn the wheels to full Left Hand Lock, start the engine and add oil to within 13 mm (½ in) of filler hole level, then replace the plug.

## STEERING SYSTEM

### STEERING BOX

#### Removal and Refitment

6C-01-02

#### Special Tools Required:

MF 268 Steering Wheel Remover  
6312A Drop Arm Puller

#### Removal

1. Remove the hood assembly, as stated in Part 2.
2. Remove the battery access panel and disconnect the battery leads.
3. Remove the battery retainer clamp and lift out the battery.
4. Disconnect the following wires:
  - Four wires from the lighting switch.
  - Two wires from the fuel tank.
  - One wire from the thermostart.
  - Two wires from the dynamo.
  - Two wires from the starter solenoid.
  - Two wires from the safety start switch.
  - Two wires from the horn (if fitted).
5. Disconnect the tractorometer drive cable at the back of the tractorometer.
6. Remove the horn (if fitted).
7. Release the fuel tank rear securing strap nuts, then place suitable blocks, or wedges, between the top of the rocker cover and the fuel tank.
8. Release the water temperature gauge wire at the cylinder block then feed the wire back through the bulkhead.
9. Release the oil pressure gauge pipe at the gauge.
10. Fig. 3. Remove the fuel cut-off rod (1), disconnecting it at the fuel injection pump and sliding it out rearwards.
11. Fig. 4. Turn the fuel tap to OFF and disconnect the fuel pipe (9).
12. Remove the secondary fuel filter and the pipe (12) connecting it to the primary filter.
13. Remove the fuel feed and low pressure return pipes (14) (fuel injection pump to secondary fuel filter).
14. Disconnect the Multi-Power shift linkage on top of the transmission case (if fitted).
15. Fig. 3. Remove the Multi-Power pipe support bracket (7) (just forward of the steering box filler plug, if fitted).
16. Disconnect the throttle to fuel injection pump rod (8) at the crank on the rear end of the rod.
17. Fig. 4. Disconnect the hand and foot throttle rods (10 and 11) at the quadrant, by releasing the clip and split pin respectively.
18. Slacken the bolt securing the Multi-Power shift rod to the operating lever, then remove the Multi-Power shift rod guide which is bolted to the battery platform.
19. Detach the cap from the centre of the steering wheel and remove the nut.
20. Fig. 5. Pull off the steering wheel, using special tool MF 268, as shown.
21. Remove the cap, spring and grommet from the steering column.
22. Figs 3 and 4. Remove the bolts (3) securing the bulkhead to the steering box.
23. Fig. 3. Remove the bolts (2) securing the instrument panel to the top of the gearbox.
24. Manoeuvre the instrument panel/bulkhead unit over the steering column.
25. Fig. 3. Remove the nut (1 7/8 A/F) (5) and spring washer securing the drop arm (4) to the steering box.
26. Fig. 6. Fit special tool No. 6312A as shown and pull off the drop arm.
27. Figs 3 and 4. Remove the two bolts (6) securing the front of the steering box and two bolts (13) securing the rear of the box to the transmission housing. Remove the steering box.

#### Refitment

1. Locate the steering box on top of the transmission case, then refit the four bolts (6 and 13) and spring washers. Torque the front bolts (6) to 7,0 kg-m (50 lb-ft) THEN the rear bolts (13) to the same torque.
2. Fig. 3. Aligning the master spline of the drop arm (4) and the steering shaft, refit the drop arm, spring washer and nut (1 7/8 A/F) (5) tightening the nut to 24,2 kg-m (175 lb-ft).
3. Manoeuvre the instrument panel/bulkhead over the steering column, then refit the bolts (2) securing the instrument panel to the gearbox top.
4. Refit the bolts (3) to secure the bulkhead to the steering box.
5. Refit the cap, spring and grommet to the steering column, then refit the steering wheel with the drop arm in the straight ahead (vertical) position and with one spoke of the steering wheel vertical at the top.
6. Refit the steering wheel securing nut, torquing it to 5,5 kg-m (40 lb-ft), then refit the cap, with the motif upright.
7. Refit the Multi-Power shift rod guide, then reconnect the Multi-Power linkage.
8. Reconnect the hand and foot throttle rods (10 and 11) to the quadrants securing them with the clip and split pin respectively.
9. Reconnect the fuel injection pump throttle rod (8), to the crank at the rear end of the rod.
10. Refit the Multi-Power pipe support bracket (7) (if fitted).
11. Refit the secondary fuel filter and pipe (12) from the primary to secondary fuel filter.
12. Refit the fuel feed and low pressure return pipes (14) from the injection pump to secondary fuel filter.
13. Reconnect the fuel tank feed pipe (9).
14. Slide the fuel cut-off rod (1) into position, then reconnect it to the fuel injection pump.
15. Reconnect the oil pressure pipe to the oil pressure gauge.
16. Thread the water temperature gauge wire forwards through the bulkhead and reconnect the wire to the cylinder block.
17. Remove the wedges supporting the fuel tank, then resecure the fuel tank by refitting the rear strap.
18. Refit the horn (if fitted).
19. Reconnect the tractorometer drive cable to the back of the tractorometer.
20. Reconnect the following wires:
  - Four wires at the lighting switch.
  - Two wires to the fuel tank sender unit.
  - One wire to the thermostart.
  - Two wires to the dynamo.
  - Two wires to the starter solenoid.
  - Two wires to the safety start switch.
  - Two wires to the horn (if fitted).
21. Refit the battery and refit the battery retainer clamp.
22. Reconnect the battery leads. Smear the terminals with petroleum jelly.
23. Refit the hood as stated in Part 2.
24. Refit the battery access panel.
25. Turn on the fuel and bleed the fuel system, as stated in the A4.248 Perkins Workshop Manual.

STEERING SYSTEM

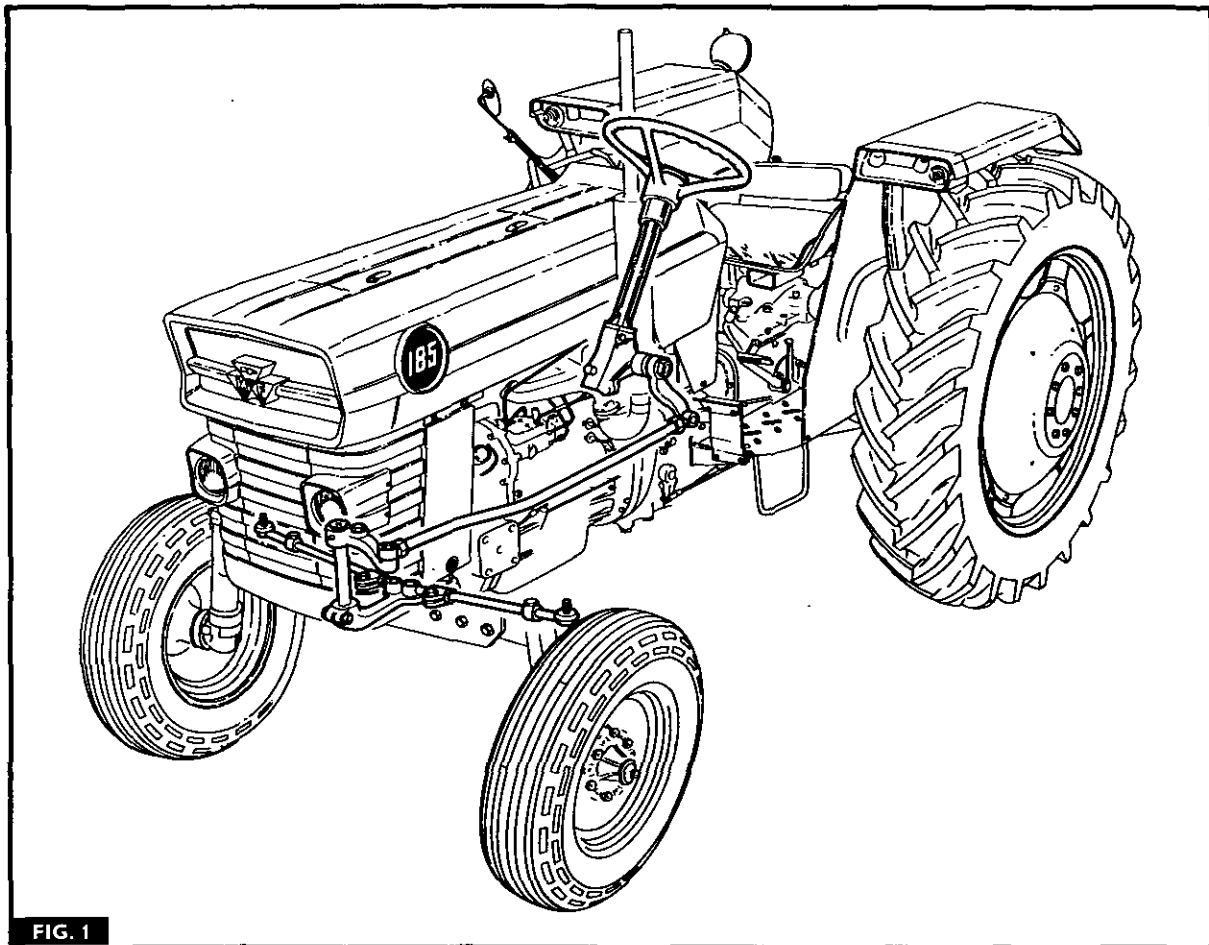


FIG. 1

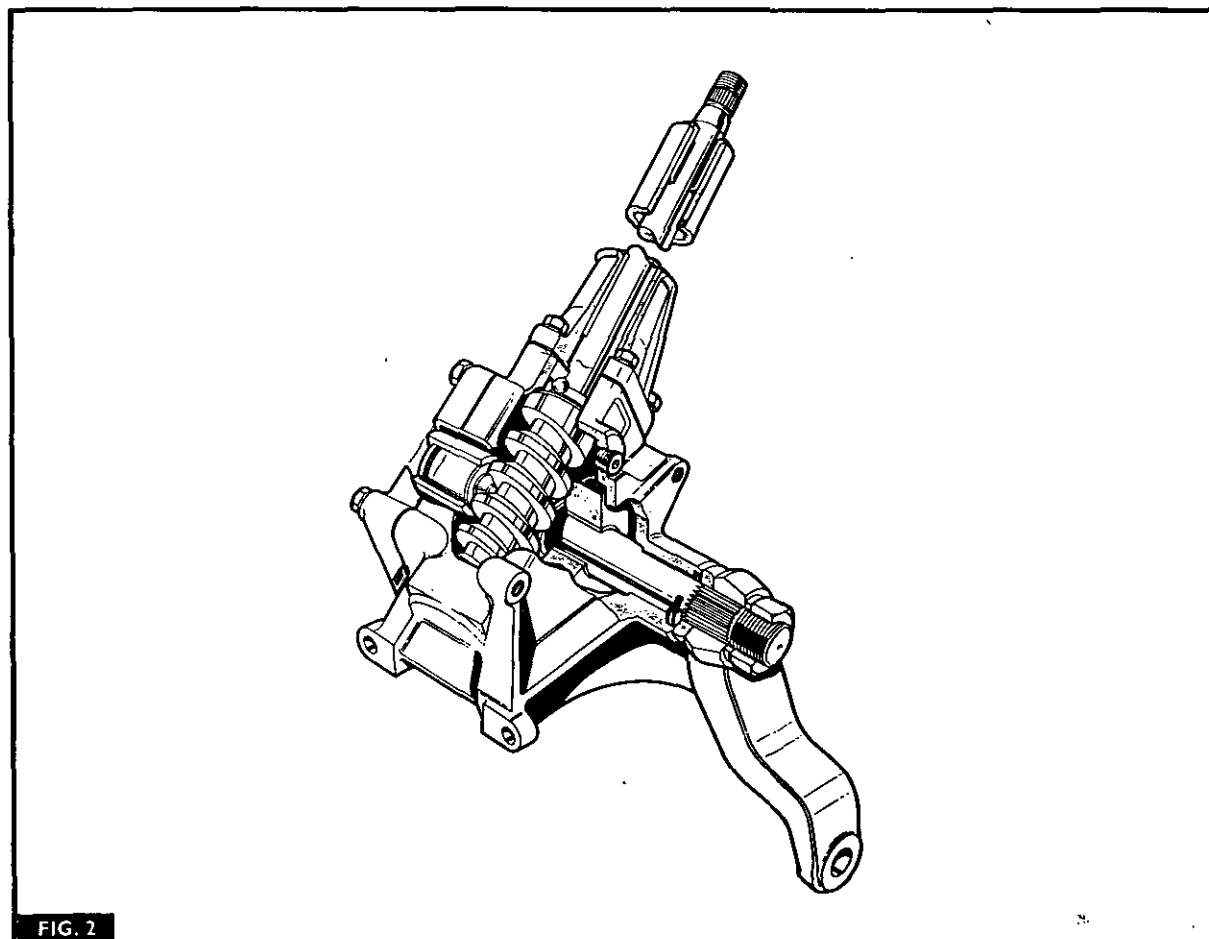


FIG. 2

STEERING SYSTEM

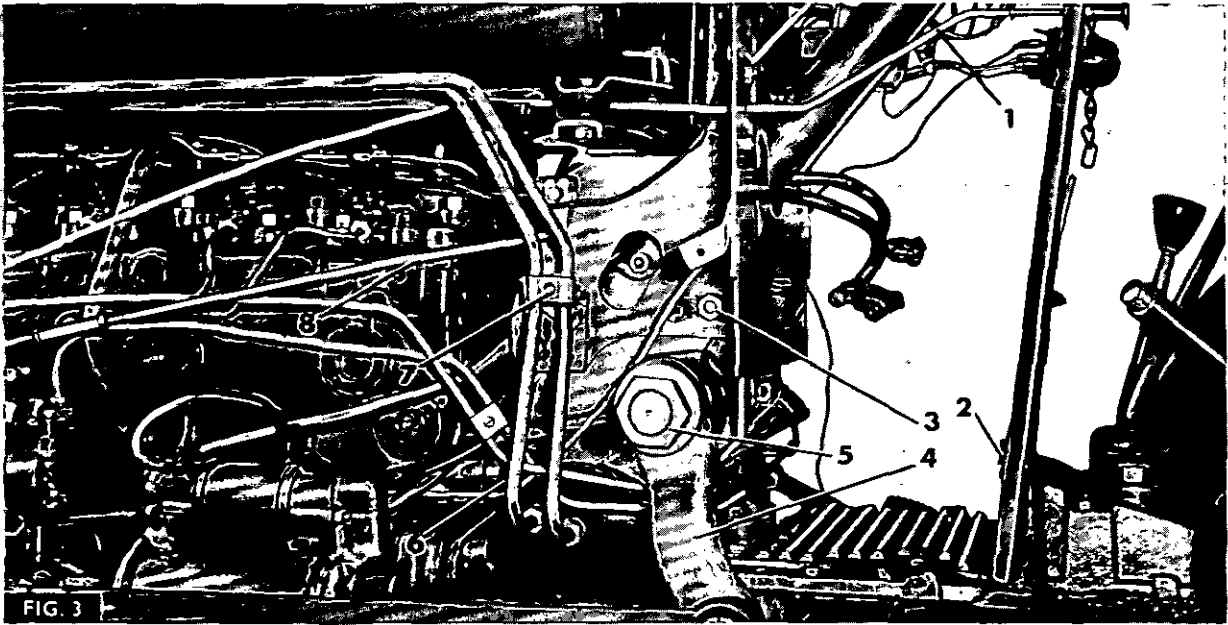


FIG. 3

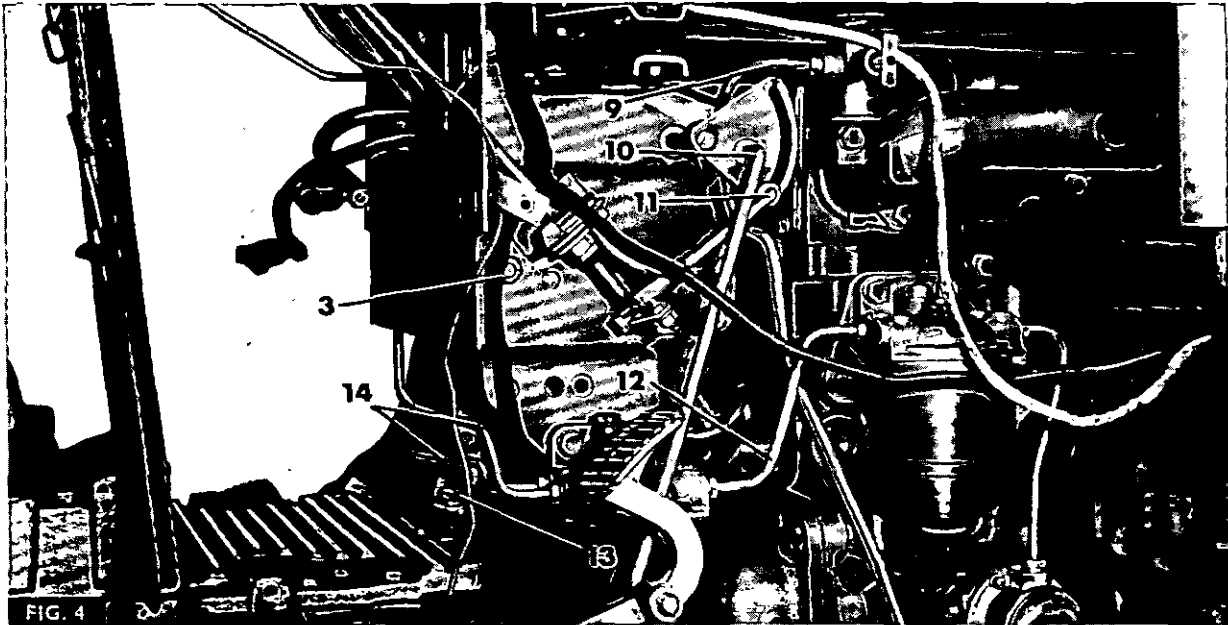


FIG. 4

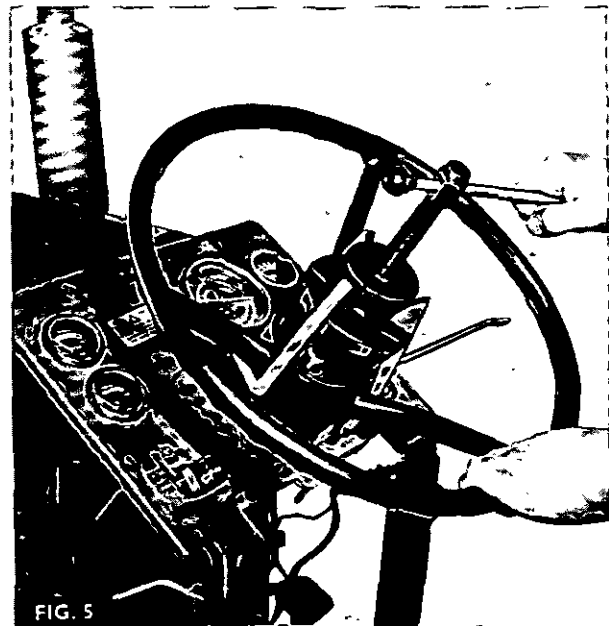


FIG. 5

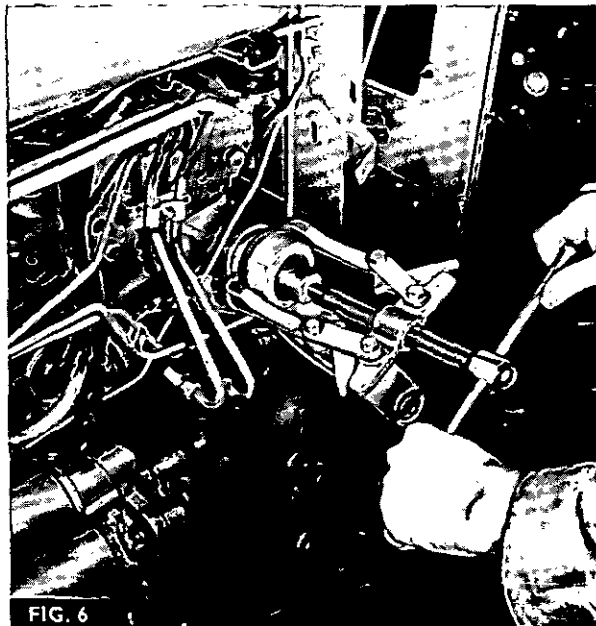


FIG. 6





STEERING SYSTEM

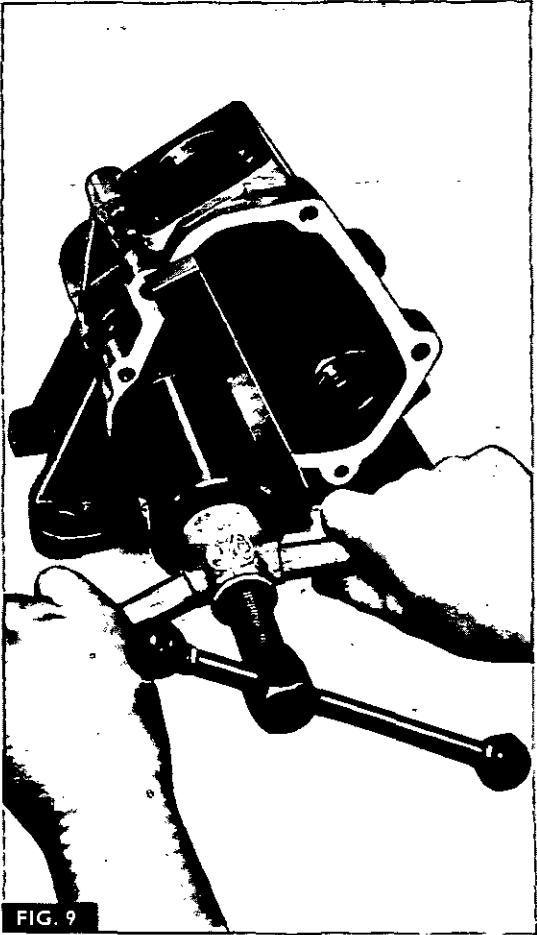


FIG. 9



FIG. 10

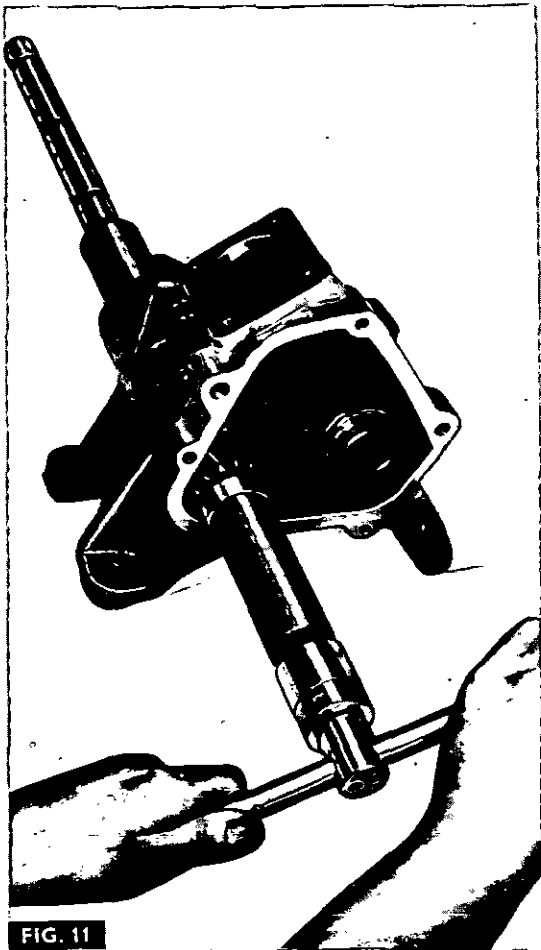


FIG. 11

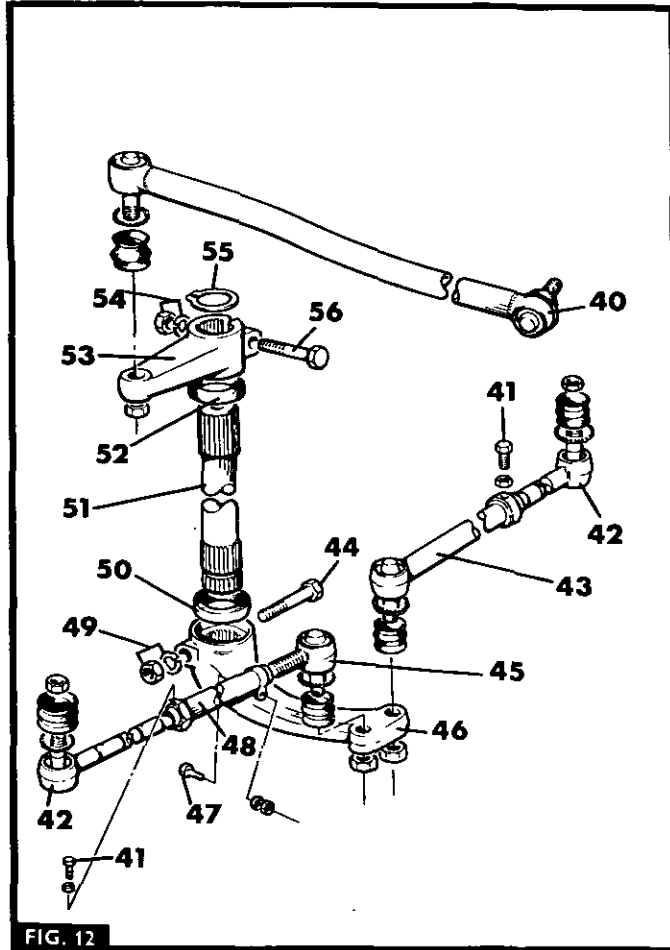


FIG. 12

## STEERING SYSTEM

## STEERING BOX GASKET

**Removal and Replacement** 6C-02-07  
**Special Tools Required:** MF 268 Steering Wheel Remover.  
 No. 6312A Drop Arm Puller.

**Removal**

1. Remove the steering box as stated in operation 6C-01-02.
2. Fig. 7. Remove the plug (37) and drain off the oil. Remove the bolts (26) and slide off the cover (29) complete with the gasket (30).
3. Remove the locknut (28) and screw (27) from the side cover.

Examine the joint faces on the steering box and the side cover for damage or distortion. Clean both faces, removing any pieces of old gasket. Always fit a new gasket.

**Replacement**

1. Apply a thin even coating of Hylomar SQ32M jointing compound to the joint faces of the steering box and the side cover (29).
2. Placing the new gasket in position, refit the side cover and the bolts (26).
3. Loosely refit the screw (27) and the locknut (28), then adjust the steering pre-load as follows:
4. Temporarily refit the steering wheel and the drag link (including the nut and spring washer).
5. Set the steering in the straight ahead position (i.e. with the drag link vertical).
6. Fig. 8. Using a spring balance, as shown, adjust the screw (27) until a pull of 0,9 kg (2 lb) is required to turn the steering wheel, then tighten the locknut to 2 kg-m (15 lb-ft). Re-check the pull with the spring balance after tightening the locknut.
7. Remove the steering wheel and drag link (special tools MF 268 and No. 6312A may be required).
8. Refit the steering box, as stated in operation 6C-01-02.
9. Refill the steering box with a recommended oil.

## STEERING BOX

**Servicing** 6C-03-07  
**Special Tools Required:** MF 263 Bush Remover  
 MF 263-2 Adapter  
 MF 264 Bush Remover  
 MF 264/1 Reamer  
 550 Handle

**Disassembly**

1. Remove the side cover from the steering box, as stated in operation 6C-02-07.
2. Fig. 7. Withdraw the rocker shaft (31), complete with the peg (33) from the steering box.
3. Remove the four bolts (20) and spring washers securing the steering column tube (19) to the steering box. Remove the tube (19), shims (21) and gasket (22). Remove the bush (18) from the tube.
4. Withdraw the steering column (25), upper bearing cup (23) and upper bearing (24).
5. Remove the lower bearing (39) from the steering box.

6. Remove the rocker shaft oil seal (35) and lower bearing cup (38) from the steering box.
7. Fig. 9. Assemble special tool MF 263 and adapter MF 263-2/1, then fit the puller to the steering box using a piece of metal bar 150 mm long, 25 mm wide and 16 mm thick (6 in x 1 in x  $\frac{5}{8}$  in), as shown. Screw in the outer handle of MF 263 to cut a thread in the bush, then pull out the bush by rotating the inner handle.
8. Fit MF 263 and MF 263-2/1 to the outer bush, then pull out the bush. The piece of metal bar is not required.

**Examination**

Check the condition of all components for wear or damage and replace any components which are unfit for further service. Thoroughly clean all components of the steering box, removing any pieces of old gasket from the joint face of the steering box.

**Reassembly**

1. Fig. 10. Fit the adapter MF263-2/2 to the 550 handle.
2. Position the bush squarely over the hole, then drive in the new bush.
3. Repeat operation 2 for the other bush.
4. Fig. 11. Assemble the reamer and pilot MF264-1 with the handle MF 264, then line ream the bushes to size. Check the rocker shaft for correct fit.
5. Thoroughly clean out all swarf from the steering box.
6. Fig. 7. Refit the lower bearing cup (38) and bearing (39) to the steering box.
7. Position the upper bearing (24) and bearing cup (23) on the steering column (25).
8. Lower the steering column, complete with bearings into the box, locating the bottom of the column in the bearing, then locate the upper bearing in the steering box.
9. Slide the steering column tube on to the steering column, then measure the clearance between the base of the tube and the joint face of the steering box, using feeler gauges.
10. From the table below, select shims to equal the measured gap - 0,00 mm + 0,061 mm (-0.0 + 0.0024 in).

| Shim Thickness |        | Part No.   |
|----------------|--------|------------|
| mm             | in     |            |
| 0,061          | 0.0024 | 1853 118M1 |
| 0,127          | 0.005  | 1853 119M1 |
| 0,254          | 0.010  | 1853 120M1 |

Gasket 1853 121M1 is 0,127 mm (0.005 in) thick.

11. Apply a thin coating of Hylomar SQ32M jointing compound to the base of the column and the joint face of the steering box, then fit the new gasket (22) to the top of the steering box, followed by the shims (21), and the tube (19).
12. Apply a coating of Hylomar SQ32M jointing compound to the threads of the four bolts (20), then refit them, complete with their spring washers.

**STEERING SYSTEM**

13. Refit the bush (18) to the top of the tube (19).
14. Drive a new rocker shaft seal (35) into the steering box.
15. Assemble the peg (33) to the rocker shaft (31) then refit the rocker shaft to the steering box, engaging the peg in the worm.
16. Fit a new seal (34) to the rocker shaft.
17. Refit the side cover as stated in operation 6C-02-07

**DRAG LINK****Removal and Refitment** 6C-04-08**Removal**

1. Fig. 12. Remove the grille and front side panels assembly, as stated in operation 2B-03-02.
2. Remove the two nuts securing the drag link (40) end to the steering box drop arm and the upper steering arm (53).
3. Release the tapered ball ends pegs of the drag link, at the front and rear end, then remove the drag link by withdrawing it rearwards.

Check the ball ends for wear and replace if necessary.

**Refitment**

1. Slide the drag link through the drag link seal on the L.H. side of the radiator, then engage the tapered ball end pegs in the upper steering arm and the steering box drop arm.
2. Refit the nuts and tighten them to a torque of 12,5 kg-m (90 lb-ft).
3. Refit the grille and front side panels assembly, as stated in operation 2B-03-02.

**STEERING ARM AND SHAFT ASSEMBLY (MANUAL STEERING) Fig. 12.****Removal and Refitment** 6C-05-08**Removal**

1. Remove the grille and front side panels assembly, as stated in operation 2B-03-02.
2. Remove the nut and spring washer (49) securing the lower steering arm (46), then remove the bolt (44).
3. Disconnect the drag link (40) at the upper steering arm (53).
4. Drive the main steering shaft (51) upwards, out of the lower steering arm (46) and remove the complete assembly.
5. Remove the felt sealing rings (50 and 52) from the steering arms.

**Refitment**

1. Fit new felt sealing rings (50 and 52) to the upper and lower steering arms.
2. Slide the steering shaft through bushes in the front support casting, then fit the lower steering arm (46) on the steering shaft splines, aligning the master spline.

3. Refit the bolt (44), nut and spring washer (49). Check the steering shaft and float which should be 0,03 to 0,13 mm (0.001 to 0.005 in).
4. Refit the drag link to the upper steering arm. Refit the nut and tighten it to 12,5 kg-m (90 lb-ft).

**STEERING ARM AND SHAFT ASSEMBLY (MANUAL STEERING) Fig. 12.****Servicing** 6C-06-08

Special Tools Required: No. 7066 Circlip Pliers

**Disassembly**

1. Remove the steering arm and shaft assembly, as stated in operation 6C-05-08.
2. Using the No. 7066 circlip pliers, remove the circlip (55) from the top of the steering shaft.
3. Remove the nut and spring washer (54), then remove the bolt (56).
4. Drive the main steering shaft (51) out of the upper steering arm (53).

**Reassembly**

1. Align the master spline, refit the steering arm (53) to the steering shaft (51), then refit the bolt (56) and the spring washer and nut (54).
2. Using the No. 7066 circlip pliers, fit a new circlip (55).
3. Refit the steering shaft and arm assembly, as stated in operation 6C-05-08.

**TIE ROD ASSEMBLY (Fig. 12).****Servicing** 6C-07-08**Removal**

1. Remove the nut securing the tie rod assembly (42) to the spindle arm, then release the tie rod end taper by hitting the side of the spindle arm smartly whilst supporting the opposite side of the spindle arm with a block of metal.
2. Remove the nut and spring washer (49) and the bolt (44) securing the lower steering arm (46) to the steering shaft (51).
3. Pull the lower steering arm off the steering shaft.
4. Fig. 13. Remove the tie rod to steering arm, nuts, then place the steering arm in a vice, as shown and release the tie rod by hitting the steering arm smartly, adjacent to the tie rod location.
5. Repeat operation (4) for the other tie rod.
6. Remove the peg bolts and locknuts (41) and slide the tie rod halves apart.

**NOTE - DO NOT REMOVE THE PINCH BOLT (47), OR UNSCREW THE L.H. INNER BALL END UNLESS THE BALL END IS TO BE REPLACED.**

Check all of the end joints for wear, replacing any defective components and fitting new rubber boots and garter springs.

STEERING SYSTEM

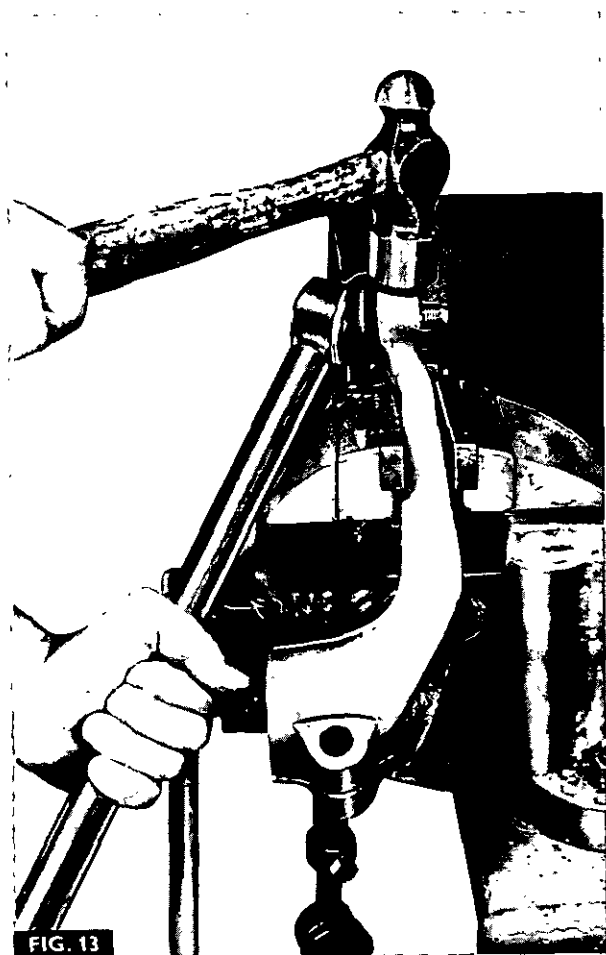


FIG. 13



FIG. 14



FIG. 15


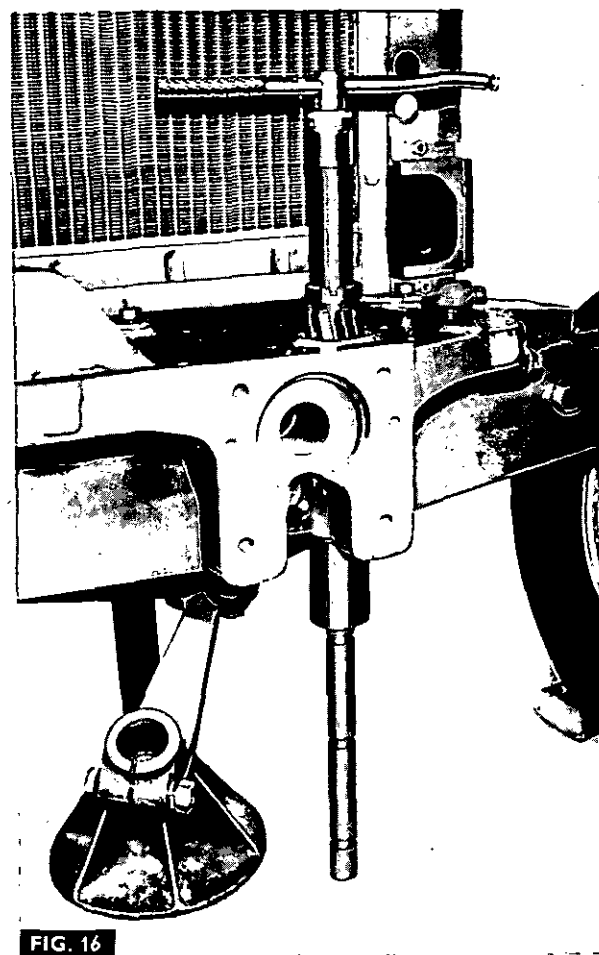
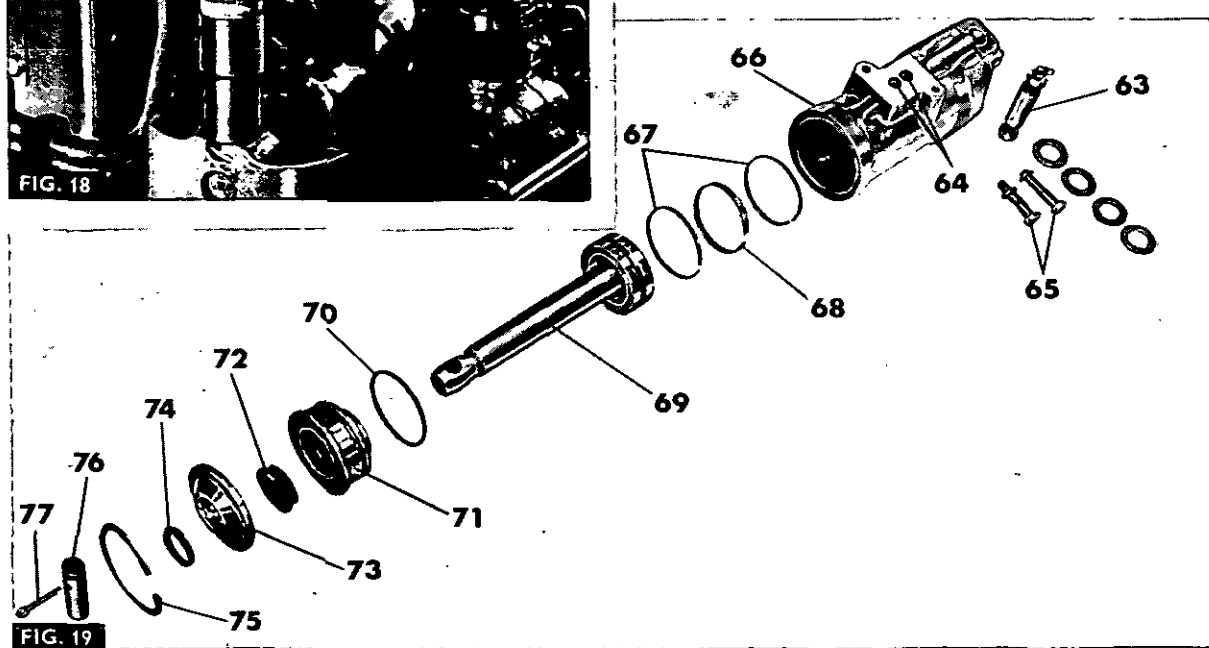
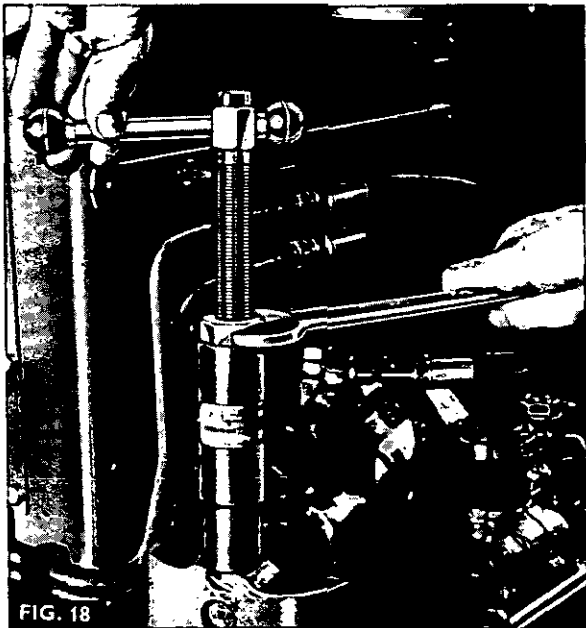


FIG. 16

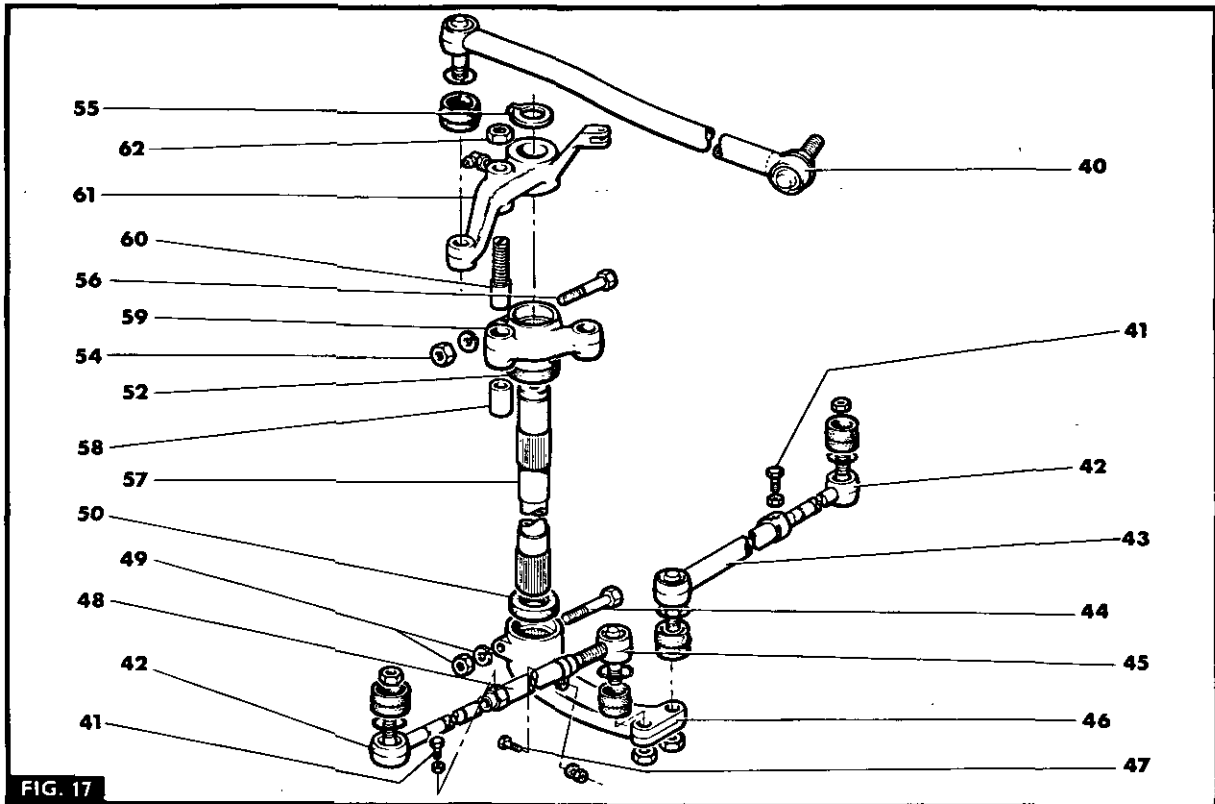STEERING SYSTEM



**STEERING SYSTEM****Replacement**

1. Refit the tie rod ends (42) into the tubes (43 and 48), refitting the peg bolt and locknut (41). Ensure that peg bolts are located in the seating grooves in the tie rod ends.
2. If necessary, screw the adjustable end (45) into the tube of the L.H. tie rod (48). Screw the end in, or out until the length of the tie rod (at minimum track setting) is 476,25 mm  $\pm$  1,5 mm (18 $\frac{3}{4}$  in  $\pm$   $\frac{1}{16}$  in) from the centres of the ball joints. Retighten the pinch bolt (47), to a torque of 8 kg-m (35 lb-ft).

**NOTE – THE BALL ENDS MUST BE PLACED AS SHOWN IN FIG. 12.**

3. Fit a new felt sealing ring (50) to the lower steering arm (46).
4. Refit the lower steering arm (46) to the steering shaft (51) aligning the master spline. refit the bolt (44) and the lockwasher and nut (49).
5. Attach the tie rod assemblies to the spindle arms and the lower steering arm, refitting the nuts and tightening them to a torque of 12,5 kg-m (90 lb-ft).

**NOTE – THE ADJUSTABLE TIE ROD (42, 45, and 48) MUST ALWAYS BE FITTED TO THE L.H. SIDE.**

6. Check the front wheel toe-in, as stated in operation 6A-02-02.

**MAIN STEERING SHAFT BUSHES (MANUAL STEERING)****Removal and Replacement** 6C-08-11

Special Tools Required: MF 263 Puller  
MF 263-2 Adapter  
MF 264 Reamer Handle  
MF 264-2 Adapter  
550 Handle

**Removal**

1. Remove the steering arm and shaft assembly, as stated in operation 6C-05-08.
2. Fig. 14. Fit the puller, adapter MF 263-2/1 to the puller MF 263, then cut a thread in the bush, by rotating the upper handle fully clockwise.
3. Extract the bush, by turning the lower handles, as shown.
4. Fit the puller MF 263 to the underside of the front axle support casting, then repeat operations 2 and 3.

Before fitting the new bushes, ensure that the front axle support casting bore is clean and free from burrs.

**Replacement**

1. Fig. 15. Position the new bush squarely over its bore, then drive in the bush using special tool 550 and MF 263-2/2, as shown, until the bush is flush with the face of the casting.
2. Repeat operation (1) for the lower bush.

3. Fig. 16. Assemble special tool MF 264 and MF 264-2/1 and MF 264-2/2 and ream the bushes as shown.
4. Thoroughly clean all swarf from the bushes and the bore.
5. Refit the steering arm and shaft assembly, as stated in operation 6C-05-08.

**STEERING ARM AND SHAFT ASSEMBLY (POWER STEERING)****Removal and Refitment** 6C-09-11

Special Tools Required: PD1C Puller  
MF 334 Adapter

**Removal**

1. Fig. 17. Remove the grille and front side panels assembly, as stated in operation 2B-03-02.
2. Remove the nut and spring washer (49) securing the lower steering arm (46), then remove the bolt (44).
3. Disconnect the drag link (40) at the upper steering arm (61).
4. Fig. 19. Remove the split pin (77) securing the power steering ram pin (76) to the front support casting.
5. Fig. 18. Using Puller PD1C and adapter MF 334, extract the power steering ram pin (76).
6. Remove the two power steering hoses from the top of the control valve.

**NOTE – BLANK OFF THE OPEN ENDS OF THE HOSES AND PORTS WITH SUITABLE PLUGS OR MASKING TAPE.**

7. Fig. 17. Disengage the piston rod from the front support casting, then drive the steering shaft (57) upwards out of the lower steering arm (46) and remove the shaft complete with the two upper arms (59 and 61) and the power steering ram.
8. Remove the felt sealing rings (50 and 52).

**Refitment**

1. Fit new sealing rings (50 and 52).
2. Slide the steering shaft through the bushes in the front support casting, then fit the lower steering arm (46) on the steering shaft splines, aligning the master splines. Refit the bolt (44), nut and spring washer (49).
3. Refit the drag link (40) to the upper steering arm (61).
4. Refit the nut and tighten it to 12,5 kg-m (90 lb-ft).
5. Fig. 19. Refit the piston rod into the front support casting, apply a coating of Mobilgrease Super to the pin (76), then refit the pin, aligning the holes and securing it with a new split pin (77).
6. Remove the masking tape, or plugs and refit the power steering hoses.

**NOTE – THE HOSE ATTACHED TO THE LOWER METAL PIPE MUST BE ATTACHED TO THE REAR PORT ON THE POWER STEERING RAM.**

7. Refit the grille and front side panels assembly as stated in operation 2B-03-02.

**STEERING SYSTEM****STEERING ARM AND SHAFT ASSEMBLY  
(POWER STEERING)**

**Servicing** 6C-10-12

**Special Tools Required:** No. 7066 Circlip Pliers

**Disassembly**

1. Remove the steering arm and shaft assembly, as stated in operation 6C-09-11.
2. Remove the split pin and clevis pin connecting the upper steering arm (61) to the power steering ram control valve linkage.
3. Using the No. 7066 pliers, remove the circlip (55).
4. Lift off the steering arm, and, if necessary, remove the reaction pin (60) and the locknut (62).
5. Fig. 19. Remove the two bolts and spring washers (65) securing the ram cylinder pivot pin (63), then withdraw the pin.
6. Fig. 17. Remove the nut and spring washer (54) and the bolt (56).
7. Drive the main steering shaft (57) out of the upper steering arm (59).
8. Drive the bush (58) out of the arm (59).

Examine all components for wear, or damage and replace all defective parts. Always fit a new bush (58) and circlip (55).

**Reassembly**

1. Drive a new bush (58) into the arm (59).
2. Press the main steering shaft on to the arm (59), but do not yet fit bolt (56) and the nut and washer (54).
3. If necessary, refit the reaction pin (60) and the locknut (62), then slide the steering arm (61) on to the main steering shaft (57).
4. Temporarily refit the steering shaft and arms assembly to the tractor front support casting, then tap the shaft downwards with a soft faced hammer until the circlip is seated against the upper arm, but the arm will still move freely with an end float of 0,025 to 0,08 mm (0.001 to 0.003 in).
5. Refit the bolt (56) and the nut and spring washer (54).
6. Remove the shaft and arm assembly from the tractor, then check the gap between the bushed lug on the upper arm (59) and the lugs on the end of the ram cylinder.
7. Fig. 19. Select shims from the list below to give a gap of not more than 0,18 mm (0.007 in). Then refit the power steering ram, fitting the shims as evenly as possible above and below the arm. Refit the pin (63) and the two bolts and spring washers (65).

**NOTE - THE GREASE NIPPLE MUST FACE FORWARD**

| Shims Thickness |                | Part No.  |
|-----------------|----------------|-----------|
| mm              | in             |           |
| 0,08 to 0,13    | 0.003 to 0.005 | 829 258M1 |
| 0,51 to 0,56    | 0.020 to 0.022 | 829 259M1 |

8. Refit the split pin and clevis pin to connect the steering arm (61) to the control valve linkage.
9. Refit the steering shaft and arm assembly, as stated in operation 6C-09-11.
10. Adjust the power steering, as stated in operation 6C-13-15.

**MAIN STEERING SHAFT BUSHES  
(POWER STEERING)**

**Removal and Replacement** 6C-11-12

**Special Tools Required:** MF 263 Puller  
MF 263-2 Adapter  
MF 264 Reamer Handle  
MF 264-2 Adapter  
550 Handle

**Removal**

1. Remove the steering arm and shaft assembly, as stated in operation 6C-09-11.
2. Fig. 14. Fit the puller adapter MF 263-2/1 to the puller MF 263, as shown, then cut a thread in the bush, by rotating the upper handle fully clockwise.
3. Extract the bush, by turning the lower handles fully clockwise.
4. Fit the puller MF 263 to the underside of the front axle support casting, then repeat operations 2 and 3.

Before fitting the new bushes, ensure that the front axle support casting bore is clean and free from burrs.

**Replacement**

1. Fig. 15. Position the new bush squarely over its bore, then drive in the bush, using the handle 550 and MF 263-2/2, as shown, until the bush is flush with the face of the casting.
2. Repeat operation 1. for the lower bush.
3. Fig. 16. Assemble special tool MF 264 with the adapter MF 264-2/1 and MF 264-2/2 and ream the bushes, as shown.
4. Thoroughly clean all swarf from the bushes and the bore.
5. Refit the steering arm and shaft assembly, as stated in operation 6C-09-11.

**POWER STEERING RAM**





**Servicing** 6C-12-12  
**Special Tools Required:** Piston Ring Compressor (Fig 28)  
No. 7066 Circlip Pliers

**Disassembly**





1. Remove the steering arm and shaft assembly, as stated in operation 6C-09-11.
2. Remove the split pin and clevis pin connecting the upper steering arm to the control valve linkage.
3. Fig. 19. Remove the two bolts and spring washers (65), securing the ram cylinder pivot pin (63), then withdraw the pin and remove the shims.



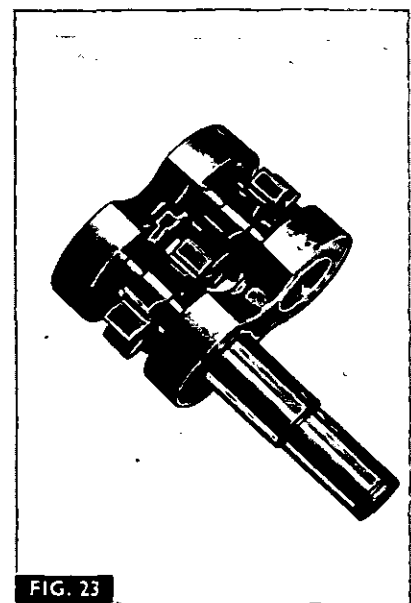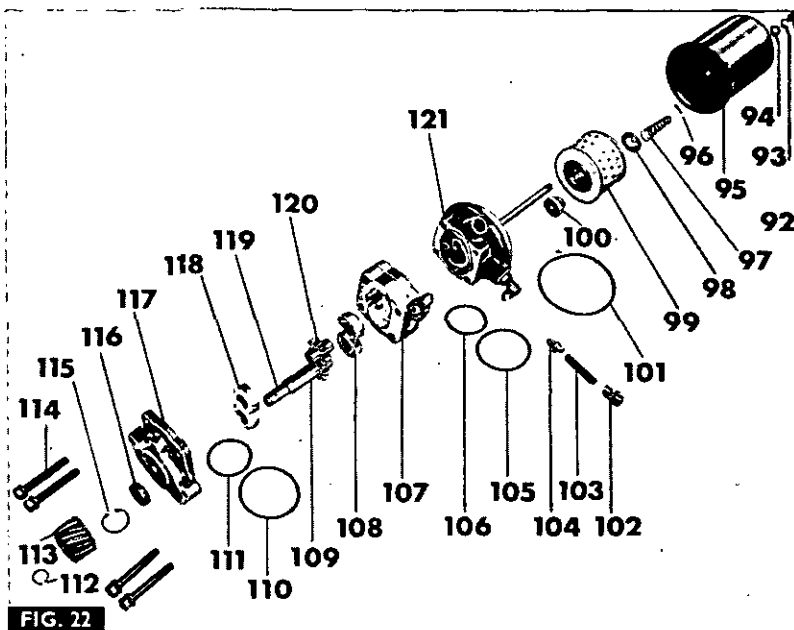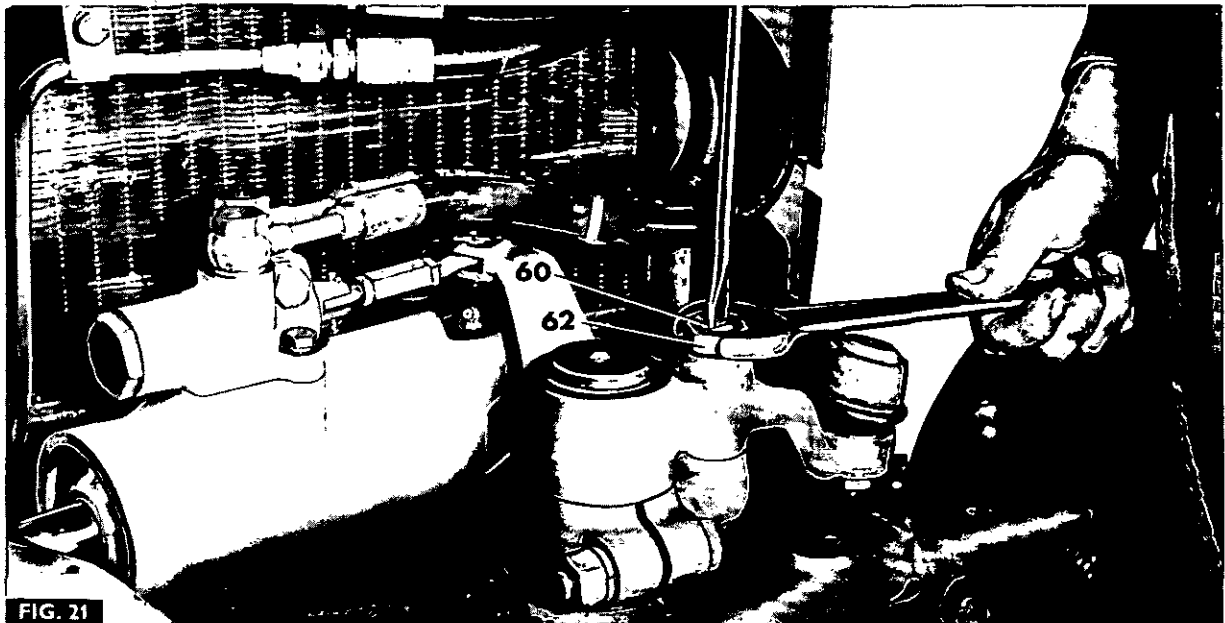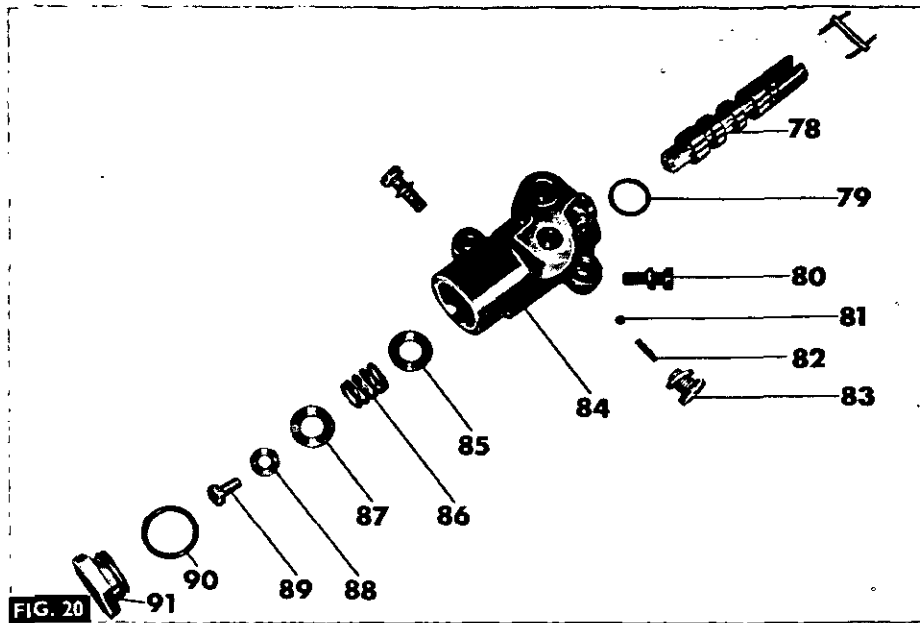STEERING SYSTEM



STEERING SYSTEM

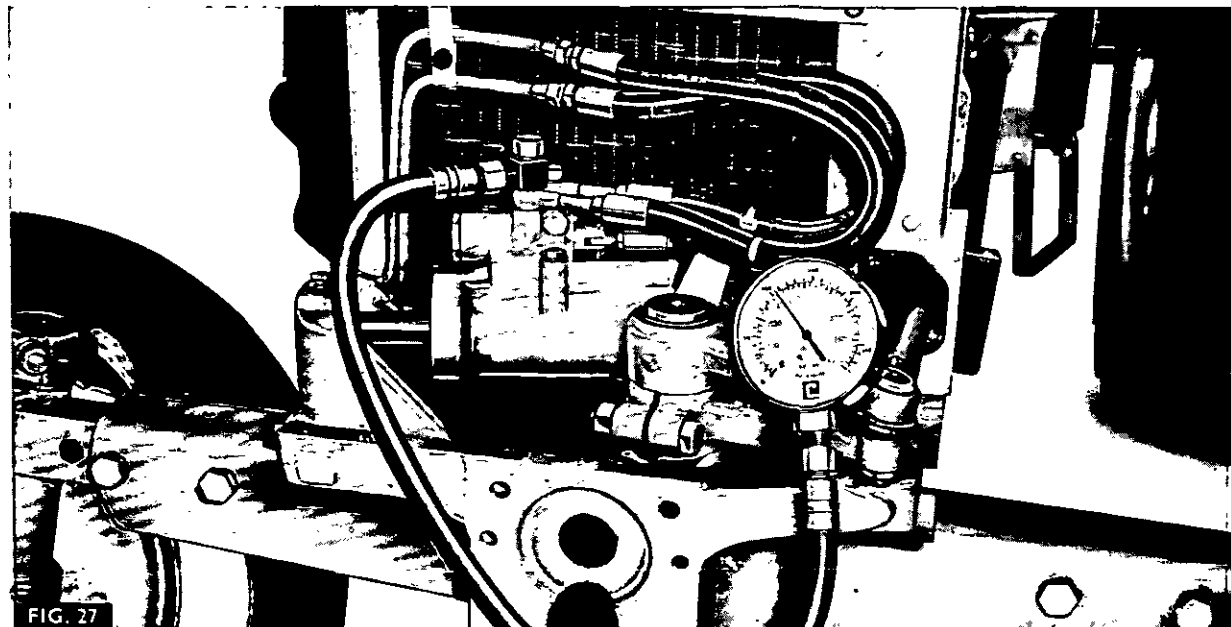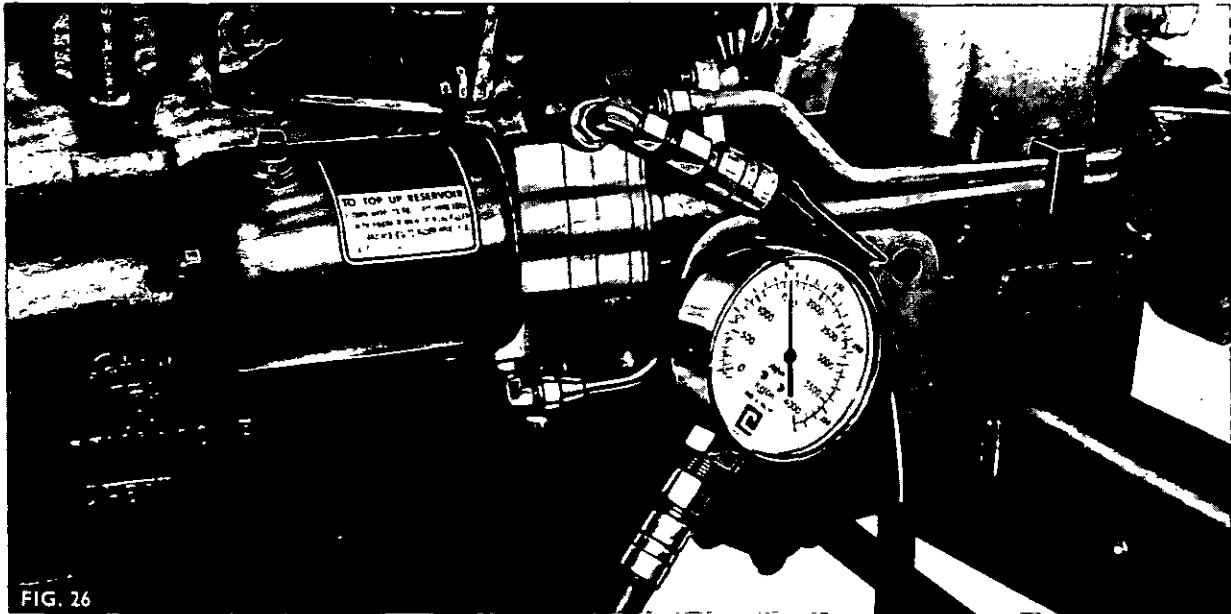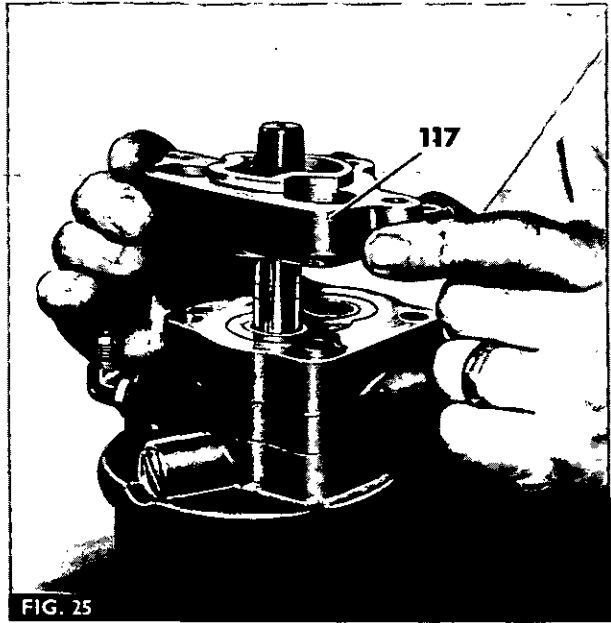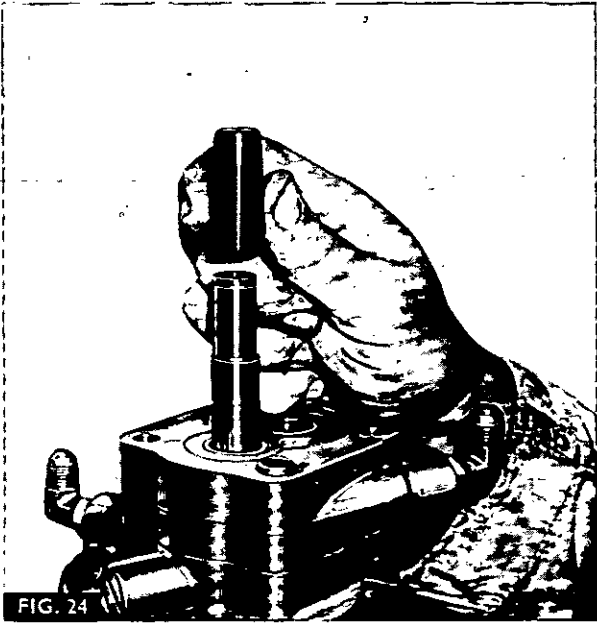

## STEERING SYSTEM

4. Thoroughly clean the ram cylinder in paraffin, to prevent the ingress of dirt when the ram is disassembled.
5. Remove the circlip (75) with the No. 7066 pliers and withdraw the piston rod (69), complete with the outer cover (73), end cover (71), and seals.
6. Lever the two seals (74 and 72) out of the outer and end covers respectively and remove the 'O' ring (70). Also remove the piston rings (67 and 68).
7. Fig. 20. Remove the two bolts (80) securing the control valve to the ram cylinder. Remove the two 'O' rings (64, Fig. 19).
8. Fig. 20. Remove the end plug (91), complete with its 'O' ring (90), then push the spool assembly out of the body (84) in the direction of the arrow.
9. Remove the screw (89) and lift off the washers (88, 87 and 85) and the spring (86).
10. Remove the 'O' rings (90 and 79) from the plug (91) and spool (78).
11. Remove the screw (83) spring (82) and ball (81).

Examine all components for wear, scoring, or damage and replace any defective components.

Always fit new seals and 'O' rings (64, 70, 72, 74, 79 and 90), and new piston rings (67 and 68).

**Reassembly**

1. Refit the washer, (85) spring (86) washers (87 and 88) and the screw (89) to the end of the spool, fully tightening the screw.
2. Fit a new 'O' ring (79) to the spool, then slide the spool into the body (84).
3. Fit a new 'O' ring (90) to the plug (91), then screw the plug into the body.
4. Refit the ball (81), spring (82) and screw (83) to the body.
5. Fit new 'O' rings (64) to the recesses in the top face of the ram cylinder, then place the control valve assembly in position and refit the two bolts (80).
6. Fig. 19. Fit the broad piston ring (68) to the piston (69), followed by the two narrow rings, spacing the ring gaps at 120° to one another.
7. Fit new seals (72 and 74) to the end cover (71) and the outer cover (73), then carefully slide these two components on to the piston rod.
8. Fit a new 'O' ring (70) to the end cover (71).
9. Place the piston ring compressor in the end of the ram cylinder, then slide the piston rod assembly into the cylinder bore.
10. Fully seat the end cover and outer cover in the cylinder bore, then fit a new circlip (75), using the No. 7066 pliers.
11. Check the gap between the bushed lug on the upper steering arm (59, Fig. 17), using feeler gauges.
12. Select shims from the list shown above in the next column to give a gap of not more than 0,18 mm (0.007 in), then refit the power steering ram, fitting the shims, as evenly as possible above and below the arm. Refit the pin (63) and the two bolts and spring washers (65).

**NOTE - THE GREASE NIPPLE MUST FACE FORWARDS.**

| Shim Thickness |                | Part No.  |
|----------------|----------------|-----------|
| mm             | in             |           |
| 0,08 to 0,13   | 0.003 to 0.005 | 829 258M1 |
| 0,51 to 0,56   | 0.020 to 0.022 | 829 259M1 |

13. Refit the split pin and clevis pin to connect the control valve linkage to the upper steering arm (61).
14. Refit the steering shaft and arm assembly, as stated in operation 6C-09-11.
15. Adjust the power steering, as stated in operation 6C-13-15.

**Adjustment** 6C-13-15

1. Set the front wheels in the straight ahead position.
2. Fig 21. Slacken the locknut (62) and screw the tapered pin (60) fully in until it bottoms.
3. Slacken the locknuts on the linkage turnbuckle and adjust the length of the turnbuckle until there is no steering reaction in either direction. Re-tighten the locknuts.

If difficulty is experienced in making the final adjustment, slacken the FINE THREAD locknut and turn the spool slightly to affect the final adjustment. Re-tighten the locknut.

4. When the linkage has been correctly set, screw the tapered pin (60) out SEVEN full turns and tighten the locknut.
5. Check the steering for operation.

**STEERING PUMP****Servicing** 6C-14-15

Special Tools Required: MF 148A Pressure Gauge  
MF 810-4/1 OR MF 148-7 Adapter.  
MF 332 Seal Protector  
No. 7066 Circlip Pliers

**Disassembly**

1. Fig. 22. Place a drain tin under the pump, then remove the nut (92), lockwasher, (93), and rubber seal (94), then pull off the reservoir (95), thus releasing the oil from the pump.
2. Disconnect the pump feed and return pipes. Mask off the pipes.
3. Remove the bolts securing the pump to the engine and remove the pump.
4. Thoroughly clean the pump exterior by washing in paraffin.
5. Remove the pin (96) spring (97) seat (98) element (99), and inner seat (100) from the centre post.
6. Remove the circlip (112) from the pump drive gear shaft, then remove the gear (113) and the woodruff key (119).
7. Carefully mark the pump body (107) and end plates (117 and 121) to facilitate reassembly.
8. Remove the four bolts and spring washers (114), then carefully separate the pump end plate (117) from the body (107) and the other end plate (121).

## STEERING SYSTEM

**WARNING** – IF THE PLATES WILL NOT PART EASILY, DO NOT ATTEMPT TO LEVER THEM APART WITH A SHARP INSTRUMENT, AS THE BODY SEALING MAY BE PERMANENTLY DESTROYED. A GENTLE TAP WITH A SOFT-FACED MALLET (HIDE OR NYLON) IS ALL THAT IS REQUIRED.

9. Remove the drive and driven gears (109 and 120) complete with the two floating bearings (108 and 118).
10. Remove the inner and outer seals (105, 106, 110 and 111) from the end plates (117 and 121).
11. Remove the 'O' ring (101) from the end plate (121).
12. Using the No. 7066 pliers, remove the circlip (115) from the end plate (117), then drive out the oil seal (116).
13. Remove the plug (102) spring, (103) and poppet (105).

**Examination** Check the floating bearings (108 and 118) for wear, both on the faces and in the bores. Pay particular attention to the condition of the lubricating scrolls and the portion of the bearing between the bearing bores. Score marks, or damage at this point can cause very high leakage losses.

During servicing, the floating bearings should normally be replaced. However, if new bearings are not available, the existing bearings can be salvaged (if only lightly marked) by polishing, as follows: Place a sheet of grade O emery paper, lubricated with paraffin on a truly flat surface (e.g. surface plate, or a piece of plate glass), then polish the surface, using a light, circular motion. Check that the bearings can move freely in the pump body (107), if necessary, polishing the outside diameters of the bearings to ensure free movement.

After polishing, thoroughly wash the bearings in clean paraffin to remove all traces of aluminium dust.

Visually check the pump body and end plates for signs of cracks or damage. Check the bores for wear, cracks, or scoring. Due to the action of oil pressure, the gears normally cut a track on the inlet side of the pump body bores. The depth of this track must not exceed 0,01 mm (0.004 in), otherwise the body must be replaced.

The only salvage work possible on the pump body is to very carefully remove the burrs from the edge of the track, using fine emery cloth.

Inspect the gear teeth for scored, or worn faces or journals, damaged teeth, or surface scratches. Slight wear, or scoring of the journals can be removed by polishing between lathe centres, using grade O emery cloth, lubricated with paraffin.

Slightly scored gear faces can be salvaged by sandwiching emery paper between the gear face and a scrap bearing.

Also check that the gear widths of drive and driven gears, are within 0,005 mm (0.0002 in) of each other. If the gears cannot be reclaimed by light polishing, as stated above, a pair of gears (only matched sets are supplied) must be fitted.

Always check that the gear faces are flat. This can be checked by lightly smearing a bearing face with "engineers blue" and rotating the gear against this face. This will reveal any sharp edges on the teeth which can be removed with a fine cut needle file.

Check the diameter of the journal on each gear. These must be within 0,013 mm (0.0005 in) of each other (per gear) for efficient operation. Examine the reservoir for damage, particularly the end face being concave due to overtightening of the retaining nut. Also check that the 'O' ring sealing face is undamaged.

Finally, examine the poppet (104) and its seat for erosion, or damage. If necessary, lightly re-lap the poppet and seat, using fine lapping paste, then thoroughly flush out the seat and poppet.

In the event of components not cleaning up as detailed, clean out the hydraulic system and replace all worn components, but the following points should be noted:—

Under working conditions hydraulic pressure within the pump loads the gears towards the inlet side of the body, thus cutting the running track. If the bearings or gear journals wear, the gears move over and deepen the track.

Therefore, if the running track is worn past or to the limit for re-use, the fitting of a new floating bearing may not improve pump efficiency as the new bearing will hold the gears and prevent them from bottoming in the running track, therefore, the body will also need to be replaced.

Clean all components in paraffin or petrol and thoroughly dry. Cleaning solvents likely to attack the synthetic sealing rings must not be used.

All machined surfaces should be free from burrs and bruise marks. Ensure that the lubrication grooves in the bearing bores are free from damage and foreign matter.

### Reassembly

1. Carefully drive the new oil seal (116) into the end plate (117).
2. Fit a new circlip (115), using the No. 7066 pliers.
3. Fig. 23. Assemble the drive and driven gears (109 and 120) to the floating bearings (108 and 118), as shown, with the relieved side of the floating bearings on the outlet side of the pump. To ensure correct sealing, measure the thickness of the assembled 'sandwich' of gears and bearings, then measure the thickness of the pump body (107). The sandwich should be 0,10 to 0,20 mm (0.004 to 0.008 in) less than the body thickness.
4. Place the reservoir end plate (121) in a vice, by lightly gripping the centre stud.

**WARNING** – TAKE CARE NOT TO BEND THE STUD.

5. Fit the new sealing rings (105 and 106) to the end plate, locating them in the grooves.
6. Noting the alignment marks, refit the body (107) to the end plate (121), locating the dowels in the recesses.
7. Slide the gears and bearings 'sandwich' into place.
8. Fit the new seals (110 and 111) to the other end plate (117).

## STEERING SYSTEM

9. Fig. 24. Fit the seal protector MF 332, as shown.
  10. Fig. 25. Lightly smear the seal (116) with petroleum jelly, then carefully slide the end plate (117) into position; locating the dowels in their holes.
  11. Fig. 22. Refit the four bolts (114), tightening them to a torque of 4 kg-m (30 lb-ft). Remove MF 332.
  12. Refit the woodruff key (119) to the shaft, then slide the gear (113) on to the shaft and secure it with the circlip (112).
  13. Refit the inner seat (100) new element (99) outer seat (98), spring (97) and retaining pin (96).
  14. Fit the new sealing ring (101) to the end plate (121), then refit the reservoir (95) and secure it with the rubber seal (94), lockwasher (93) and domed nut (92).
  15. Refit the poppet (104), spring (103) and screw (102).
  16. Refit the pump to the tractor and retighten the bolts.
  17. Reconnect the pipes to the unions.
  18. Place the tractor front wheels on full LEFT lock, then refill the reservoir to within 13 mm ( $\frac{1}{2}$  in) of the filler plug level.
  19. Start the engine and recheck the level, adding oil as required.
  20. Keep the engine running at approximately 1500 rev/min and on full left lock until the oil temperature is 45 to 50°C (110 to 120°F). Switch off the engine.
  21. Fig. 26. Fit adapter MF 810-4/1 to the MF 148A gauge and screw the adapter into the outlet port of the pump as shown. The relief valve will discharge and should indicate a pressure of 105 to 112 kg/cm<sup>2</sup> (1500 to 1600 lb/in<sup>2</sup>) at 1500 engine rev/min. If the pressure is incorrect, adjust by screwing the plug (102), in or out.
- Fig. 27. ALTERNATIVELY: Fit adapter MF 148-7 to the MF 148A gauge and fit it to the front hose connection as shown. Apply full lock (in either direction) with the engine running at 1500 rev/min. The gauge should indicate 105 to 112 kg/cm<sup>2</sup> (1500 to 1600 lb/ft<sup>2</sup>). Adjust the screw (102) as necessary.

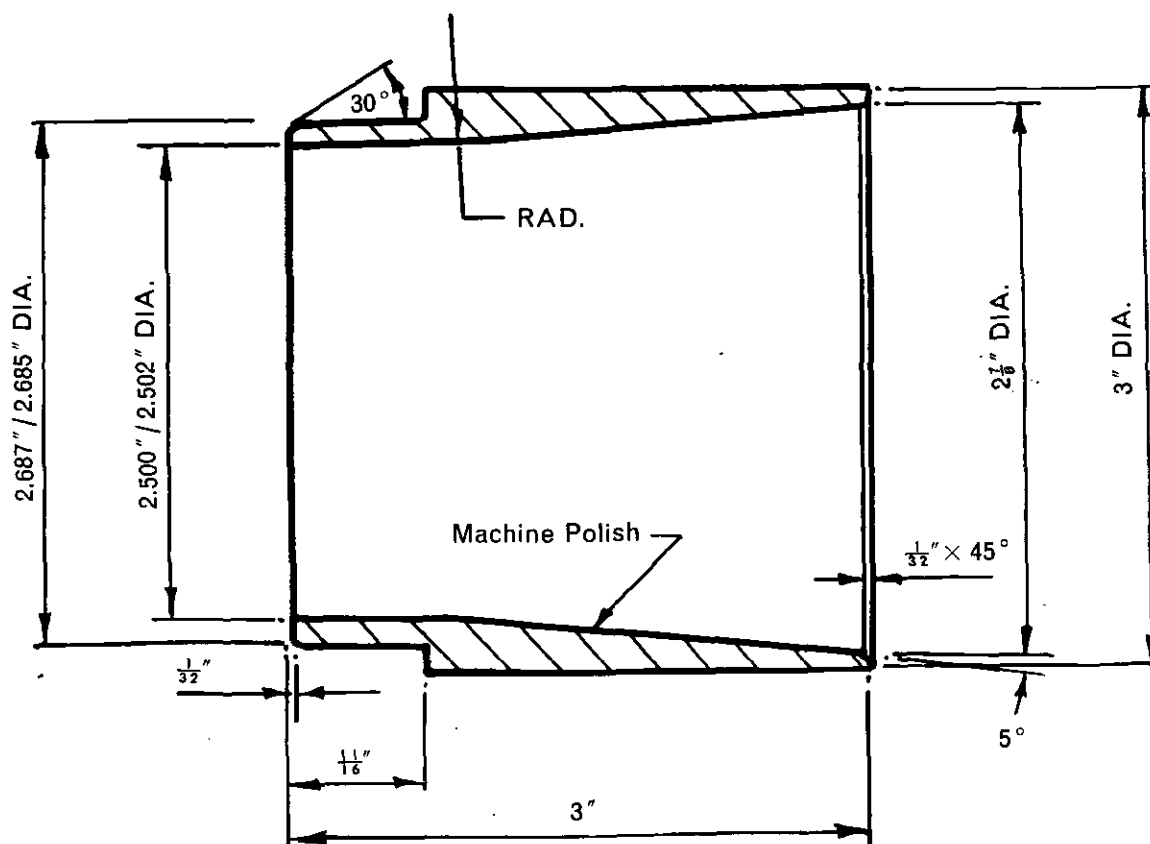


FIG. 28

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 7**

**Publication No. 1856 001 M1**

comprising

- A HYDRAULIC SYSTEM
- B AUXILIARY HYDRAULICS
- C DRAWBAR AND LINKAGE

## HYDRAULIC SYSTEM

## Part 7 Section A

| Operation<br>No. | Table of Contents                         | Page<br>No. |
|------------------|---|-------------|
|                  | GENERAL                                   | 02          |
|                  | Hydraulic Pump                            | 02          |
|                  | Control Valve                             | 02          |
|                  | OPERATION                                 | 02          |
|                  | Draft Control                             | 02          |
|                  | Position Control                          | 11          |
|                  | Responce Control                          | 11          |
|                  | Pressure Control                          | 11          |
|                  | CONTROLS                                  | 12          |
|                  | Draft Control Lever                       | 12          |
|                  | Position Control Lever                    | 12          |
|                  | Responce Control Quadrant                 | 12          |
|                  | EXAMPLES OF CONTROL LEVER SETTINGS        | 12          |
|                  | Draft Control                             | 12          |
|                  | Position Control                          | 12          |
|                  | Pressure Control                          | 15          |
|                  | Control of Hydraulic Equipment            | 15          |
|                  | OPERATION OF EXTERNAL HYDRAULIC EQUIPMENT | 15          |
|                  | CONTROL SPRING                            | 15          |
| 7A-01-15         | Removal and Refitment                     |             |
| 7A-02-15         | Servicing                                 |             |
|                  | HYDRAULIC LIFT COVER                      | 16          |
| 7A-03-16         | Removal and Refitment                     |             |
| 7A-04-16         | Servicing                                 |             |
|                  | RESPONSE CONTROL DASHPOT                  | 21          |
| 7A-05-21         | Removal and Refitment                     |             |
| 7A-06-22         | ·Servicing                                |             |
|                  | PRESSURE CONTROL VALVE                    | 22          |
| 7A-07-22         | Removal and Refitment                     |             |
| 7A-08-22         | Servicing                                 |             |
|                  | DIAPHRAGM                                 | 23          |
| 7A-09-23         | Removal and Replacement                   |             |
|                  | CYLINDER, PISTON AND RAM ARM              | 23          |
| 7A-10-23         | Removal and Refitment                     |             |
|                  | HYDRAULIC LINKAGE                         | 24          |
| 7A-11-24         | Removal and Refitment                     |             |
|                  | ADJUSTMENTS                               | 27          |
| 7A-12-27         | External and Internal                     |             |
| 7A-13-28         | Hydraulic Test Procedure                  |             |
|                  | HYDRAULIC PUMP                            | 31          |
| 7A-14-31         | Removal and Refitment                     |             |
| 7A-15-32         | Servicing                                 |             |
|                  | CONTROL VALVE                             | 33          |
| 7A-16-33         | Removal and Refitment                     |             |

## HYDRAULIC SYSTEM

### GENERAL

Fig. 1. The hydraulic lift system comprises of a four cylinder pump (2), which delivers oil through a vertical pipe (1), to the cylinder (3).

A connecting rod (4), from the cylinder piston engages the ram arm (5) on the lift shaft, which projects from the lift cover. Lift arms (6) are splined to each end of the lift shaft.

When oil, under pressure from the pump, is delivered to the closed end of the cylinder, the piston inside the cylinder is forced rearwards and pushes the ram arm upwards, causing the lift shaft to rotate and raise the lift arms.

Conversely, when the oil is allowed to drain back from the system, the piston moves back along its cylinder under the load of the lift arms.

### Hydraulic Pump

The pump is driven by the front p.t.o. drive shaft. Dowel pins, fitted through each side of the centre housing, prevent the pump from rotating.

Fig. 2. The pump consists of two piston yokes which ride on cam blocks over eccentrics on a camshaft. The pistons, two on each yoke, reciprocate in two opposed valve chambers, each chamber housing two inlet and outlet valves, and springs. A sealing plug and snap ring close the valve bores in the valve chambers. Front and rear castings incorporate the oil galleries connecting the two valve chambers, and house the control valve at the rear, and support the oscillator body and oil strainer.

As each of the pump pistons moves down its cylinder it creates suction which lifts the inlet valve from its seat and draws in oil past the control valve – if open – along the intake gallery into the cylinder. During this inlet stroke the outlet valve is held closed by the spring acting upon it. When the piston reaches the end of its inlet stroke, the suction ceases and the inlet valve is closed by the inlet valve spring. As the piston returns into the cylinder, the resultant pressure in the oil keeps the inlet valve closed and lifts the outlet valve. This pressure forces the oil past the outlet valve into the discharge passage.

### Control Valve

Fig. 3 The control valve slides inside the lower part of the pump rear casting on three hardened steel washers, which are separated by spacing sleeves, dividing the bore inside the casting into two compartments.

These two compartments provide inlet and outlet chambers for the pump which are opened and closed by the inlet and outlet slots at opposite ends of the control valve. The suction side of the pump or intake passage connects with the rear or outer compartment, and similarly the inner compartment lies at the bottom of the high pressure side of the system. The outer ends of the high pressure chamber are sealed by 'O' rings and the assembly is held in place by a cover plate bolted to the rear casting.

### Intake Position

When the valve slides forward, its inlet slots pass within the suction chamber so that the constant running pump may draw on the oil supply and deliver it to the lift cylinder to raise the lower links. In this position the valve keeps the discharge chamber closed so that oil cannot escape back to the sump.

### Neutral Position

With the valve positioned centrally, both the inlet and outlet slots are outside their respective chambers, the oil is therefore locked in the system and the lift piston and lower links remain stationary.

### Discharge Position

When the valve slides rearwards, the suction chamber remains closed, but the outlet slots are brought within the discharge chamber, permitting oil to drain into the sump from the lift cylinder, and the lower links fall.

The rate at which the oil drains away is, of course, proportional to the area of the slot within the chamber, which is dependant on the amount the valve is withdrawn.

### OPERATION

#### Draft Control – Implement Lowering (Fig. 4)

The position control lever must be in the transport position when operating the draft control.

To lower the implement, move the draft control lever downwards through the quadrant. This action presses the eccentric roller (7), on the end of the draft control lever shaft, down onto the upper cam face of the draft control cam (8), causing the lower face of cam (8) to be forced downwards into contact with roller (9) on the draft control linkage. Cam (8) is then moved rearwards causing the vertical lever (10) to pivot about its fulcrum and move the pump control valve lever (11) into the discharge position against the influence of the pump control valve spring. The draft control linkage will move because the force from the pump control valve is less than the breakout spring force from (12).

#### Draft Control – Compression Force in Top Link (Fig. 5)

When the vertical lever (10) has moved the control valve to full discharge, the lever (10) will also have forced the dashpot piston to the end of its stroke. Therefore, with further downward movement of the draft control lever, the eccentric roller (7) acting on the upper cam face of the draft control cam (8), forces the lower cam face of the draft control cam (8) to move roller (9) forwards. Forward movement of the roller (9) leaves a gap between the draft control rod (15) and the draft control spring plunger (14), and simultaneously compresses the spring on the guide rod (12).

Forward movement of the tractor will cause an implement to gain depth (as the control valve is in the discharge position), until the resultant implement draft reaction compression forces applied through the top link deflect the control spring and cause the draft control spring plunger (14) to contact the draft control rod (15), and move the draft control linkage forwards. This permits the draft control cam (8) to move forward, acting under the influence of the pump control valve spring and limited by the position of roller (9), until the control valve reaches the neutral position.

#### Draft Control – Tension Force in Top Link (Fig. 6)

Variations in ground conditions will cause fluctuation in the draft force in the top link. If the draft force decreases, the compression force in the control spring decreases.



HYDRAULIC SYSTEM

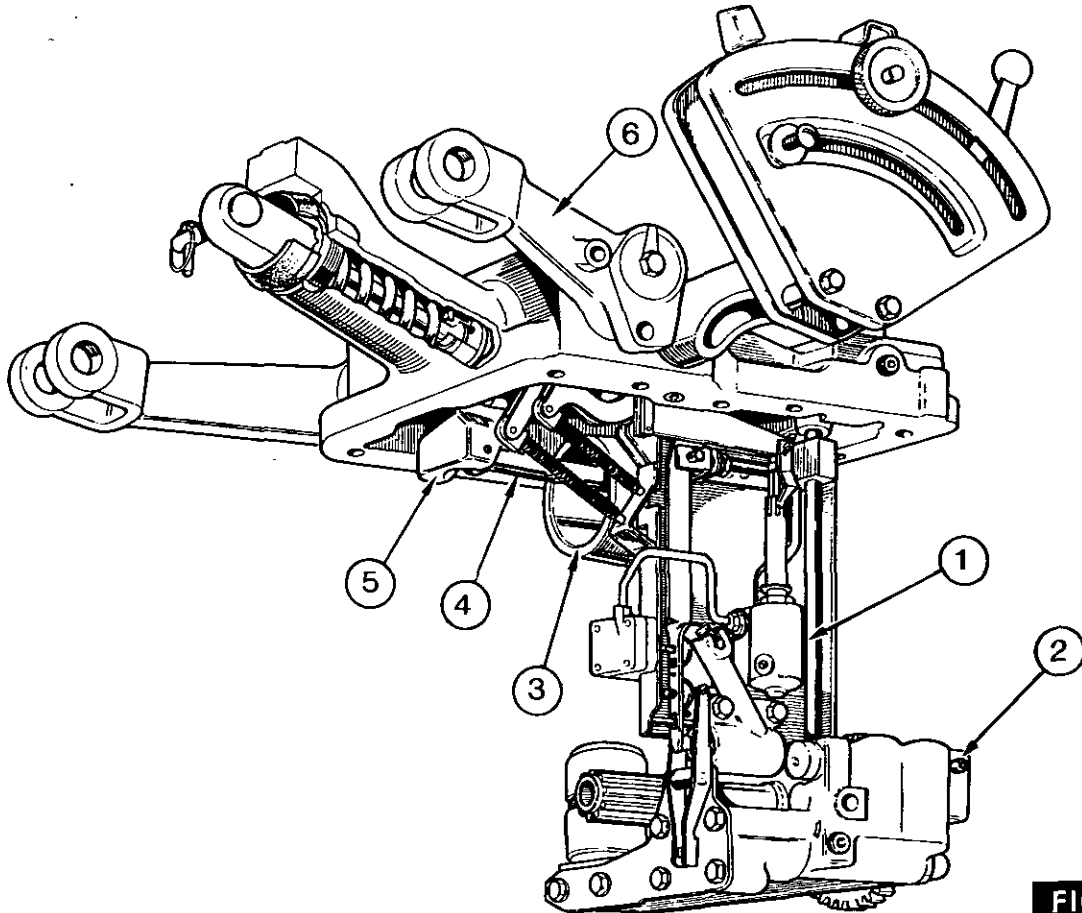


FIG. 1

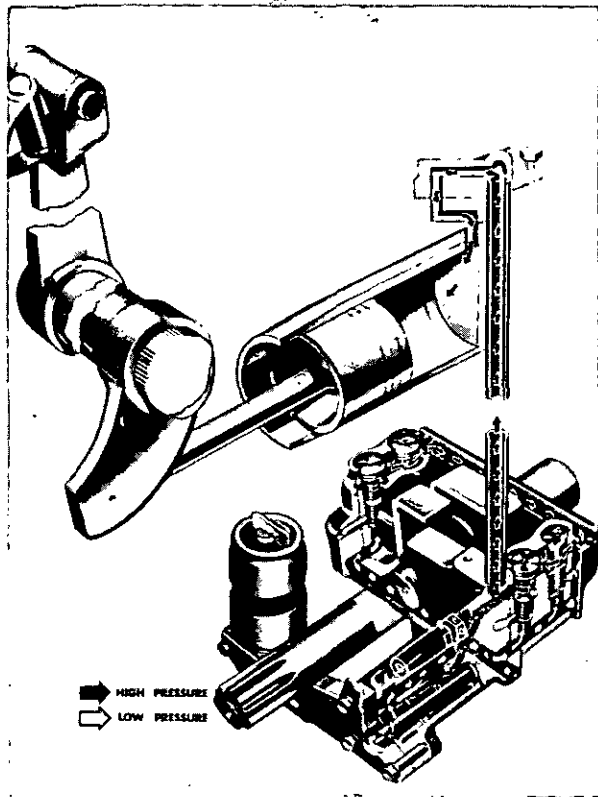


FIG. 2

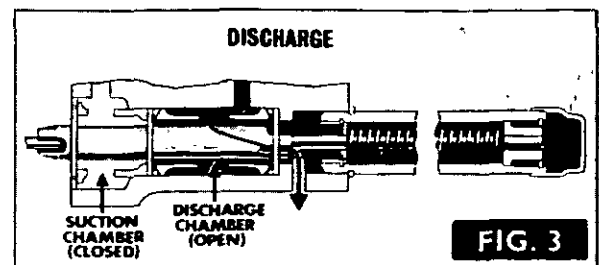
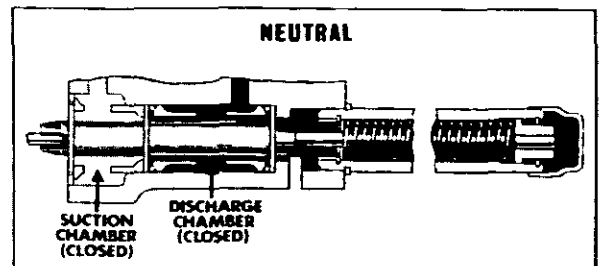
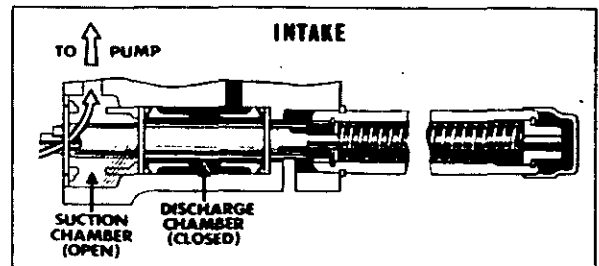


FIG. 3

DRAFT CONTROL - IMPLEMENT LOWERING

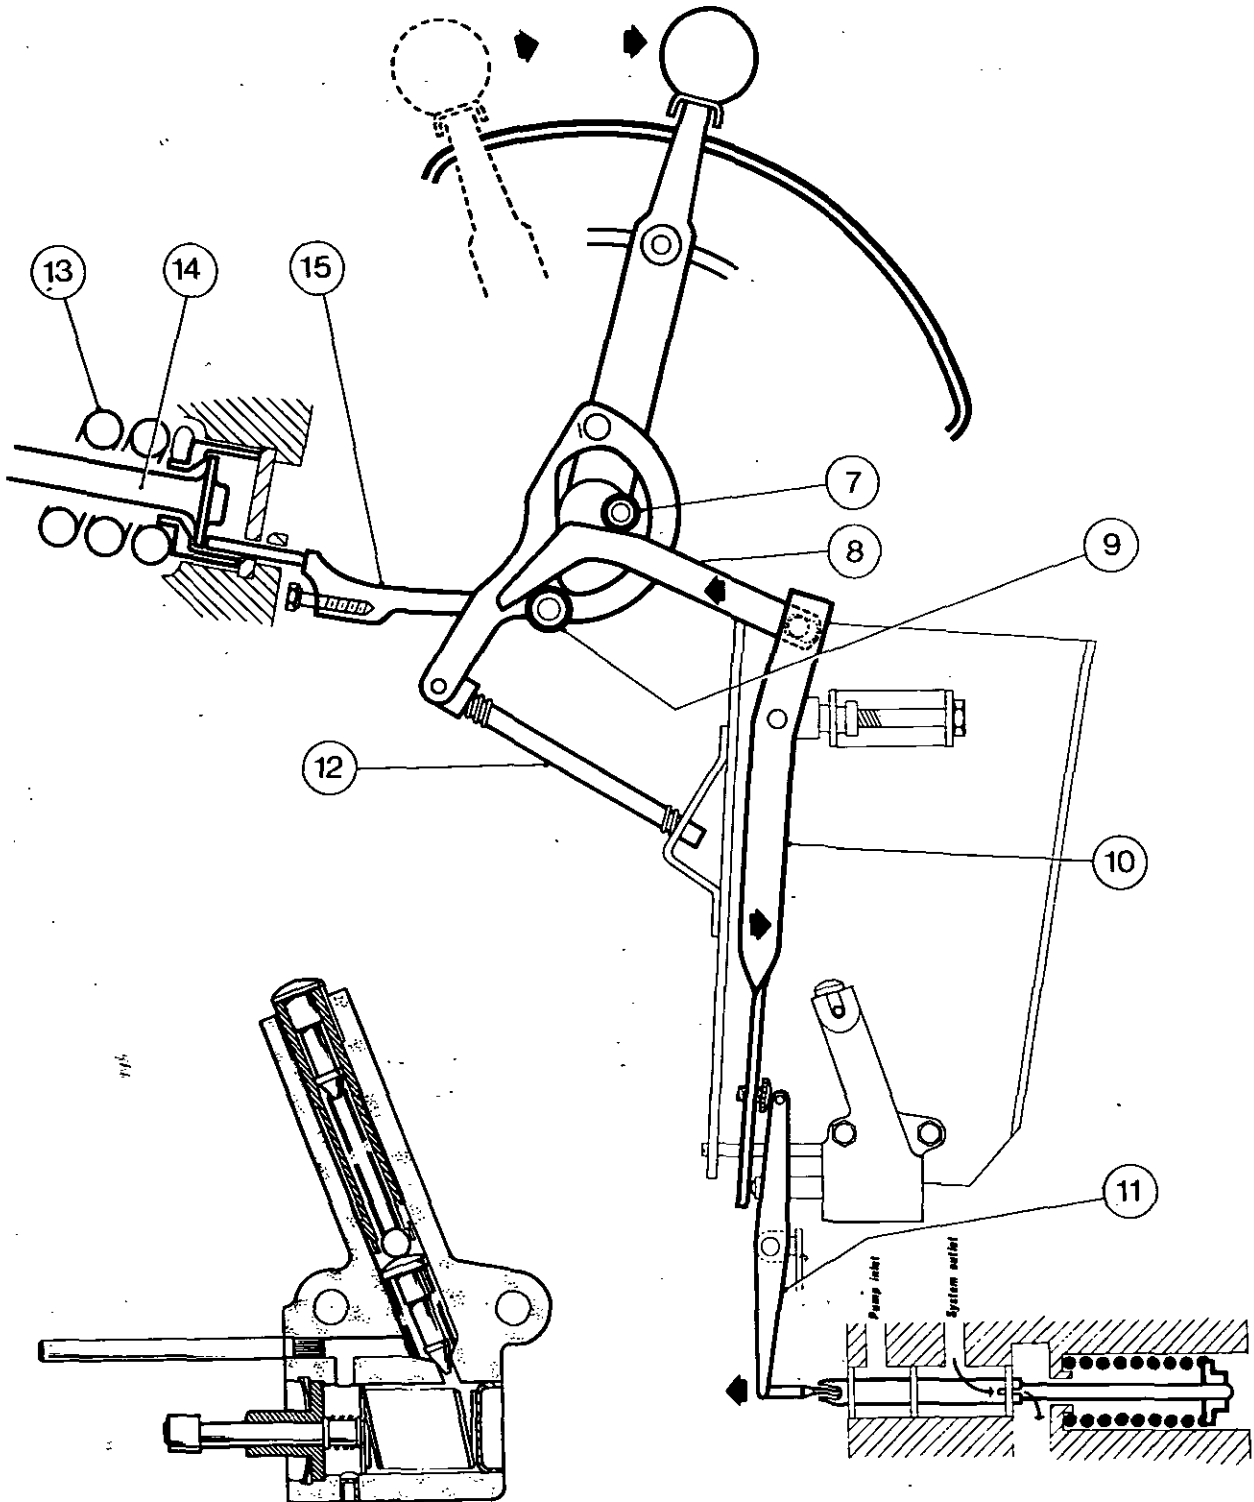


FIG. 4

DRAFT CONTROL - COMPRESSION FORCE IN TOP LINK

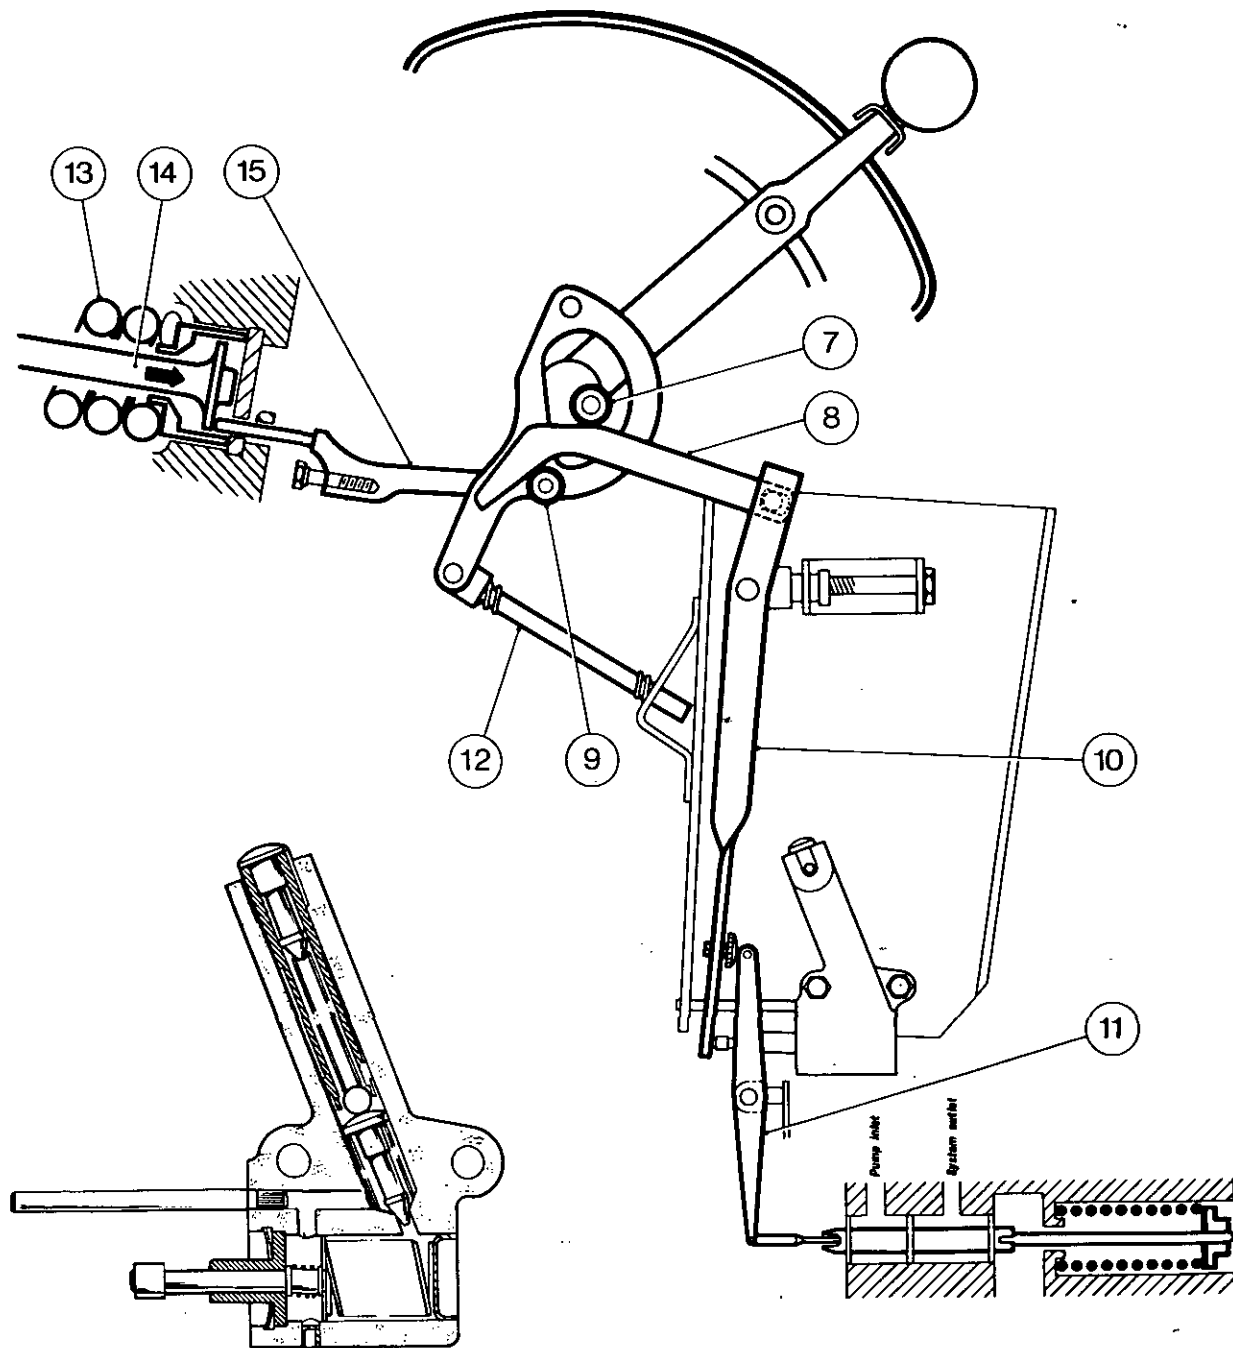


FIG. 5

DRAFT CONTROL - TENSION FORCE IN TOP LINK

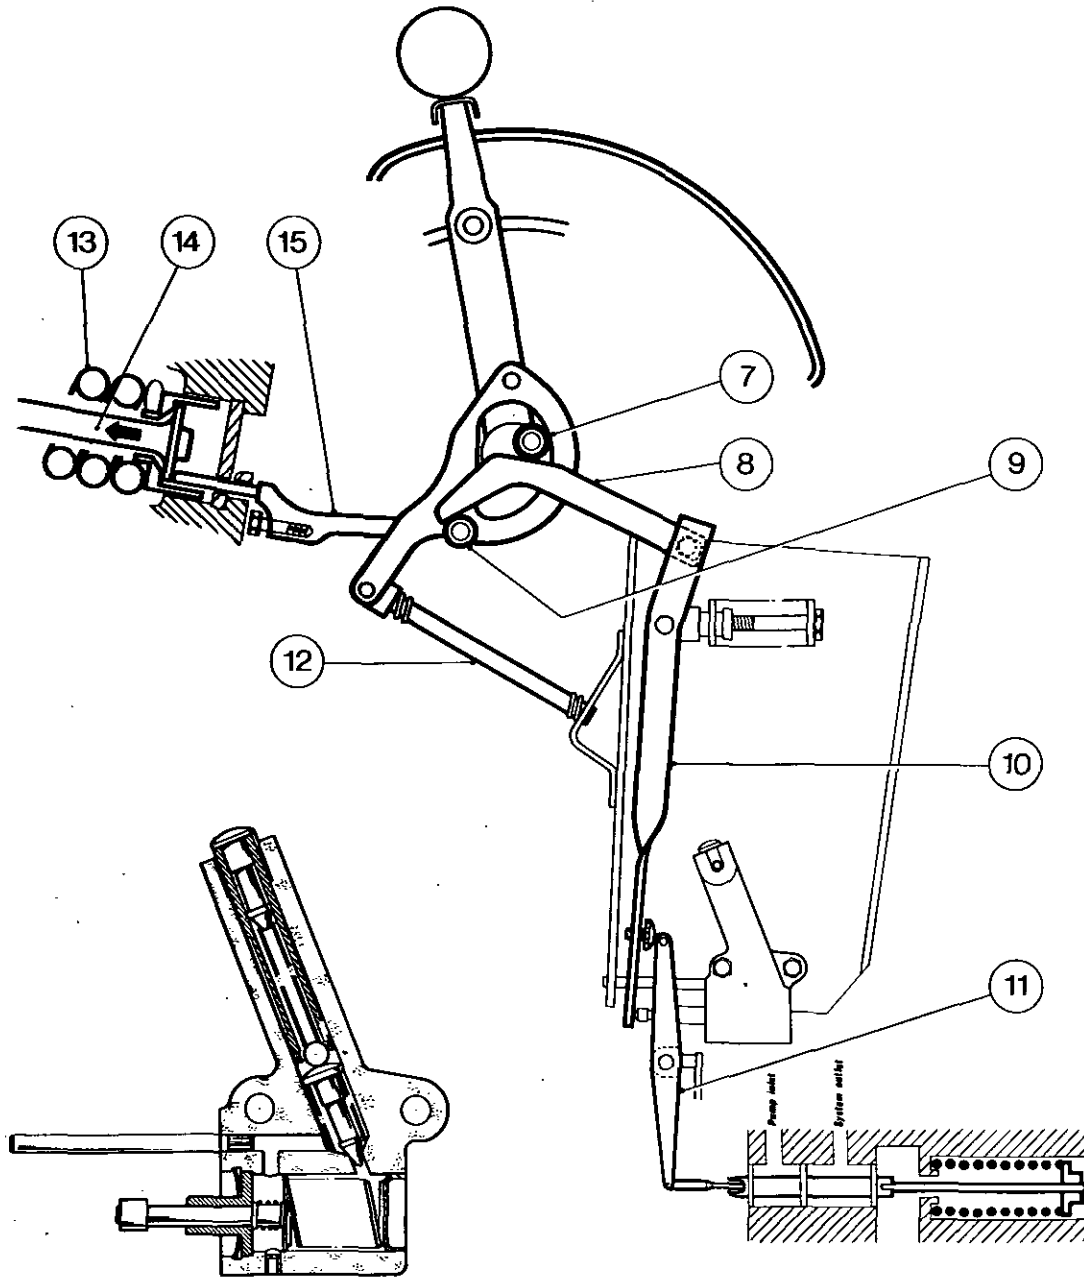


FIG. 6

POSITION CONTROL — TRANSPORT POSITION

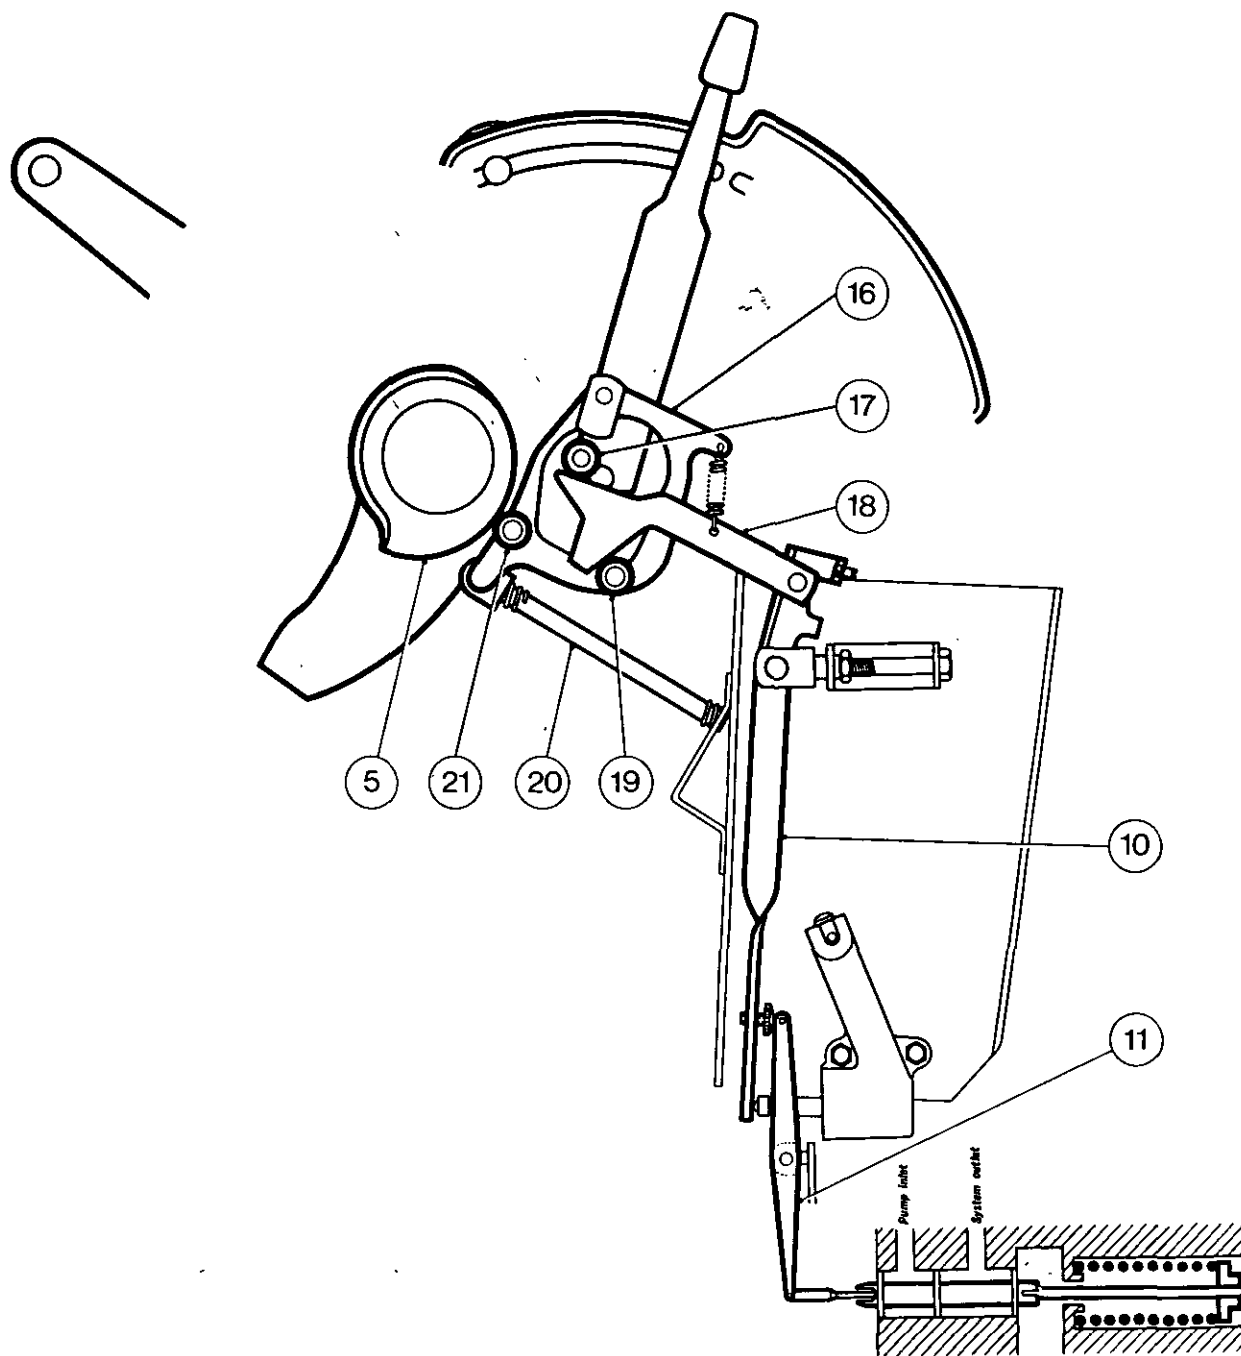


FIG. 7

POSITION CONTROL - IMPLEMENT LOWERING

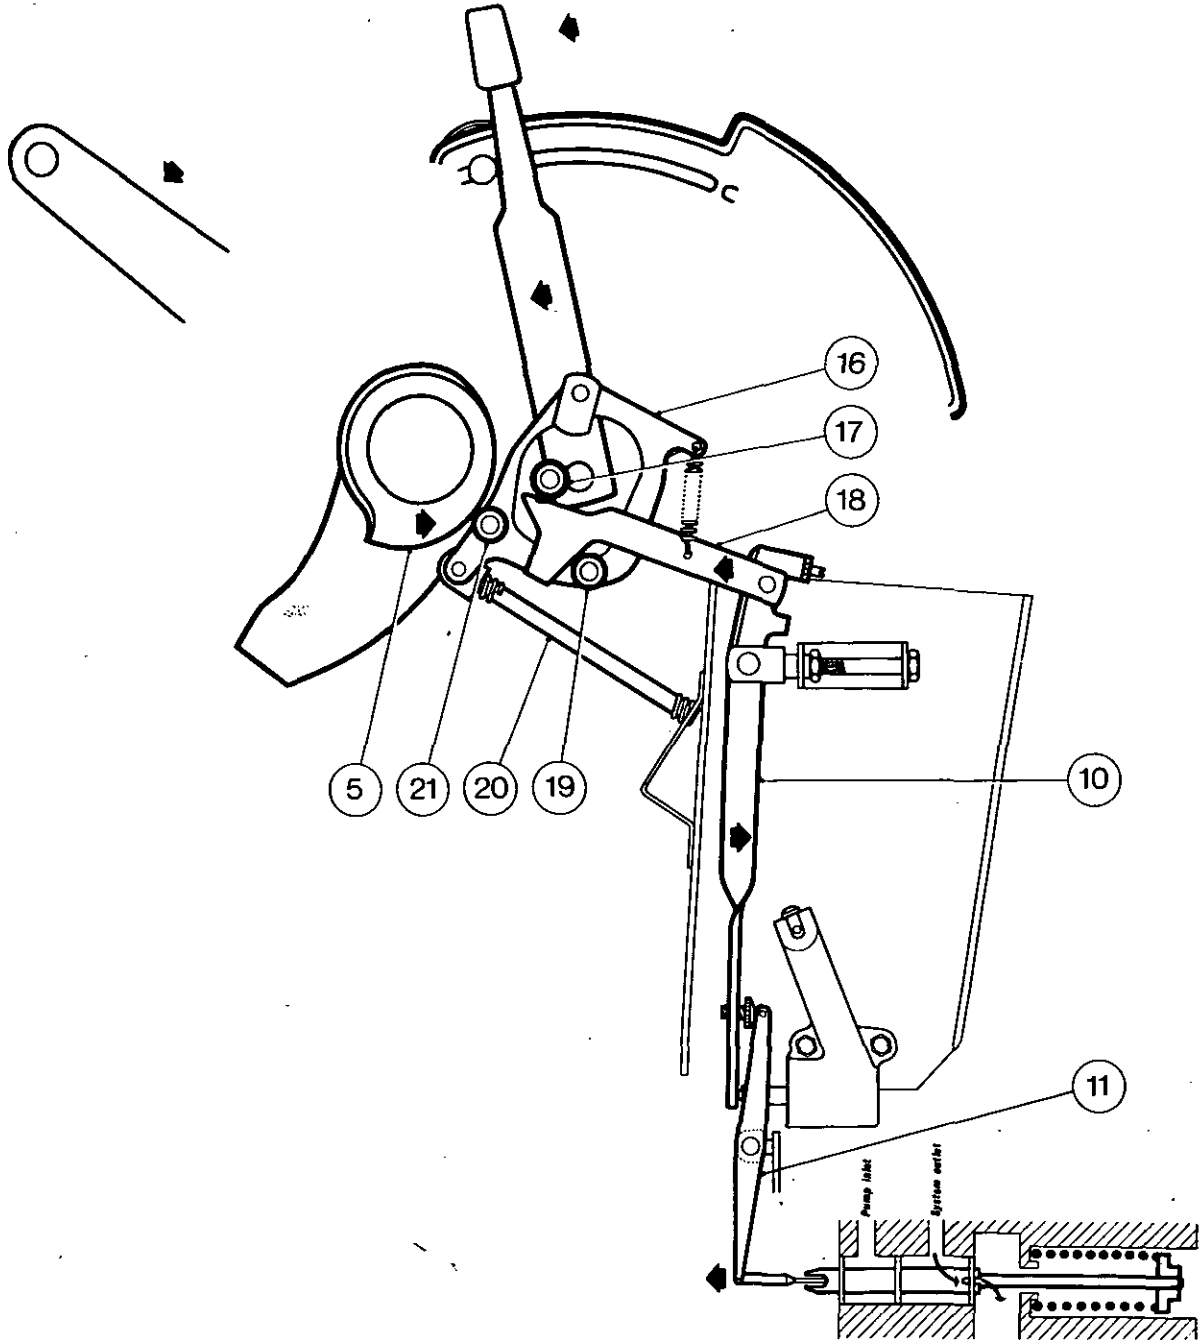


FIG. 8

POSITION CONTROL - IMPLEMENT RAISING

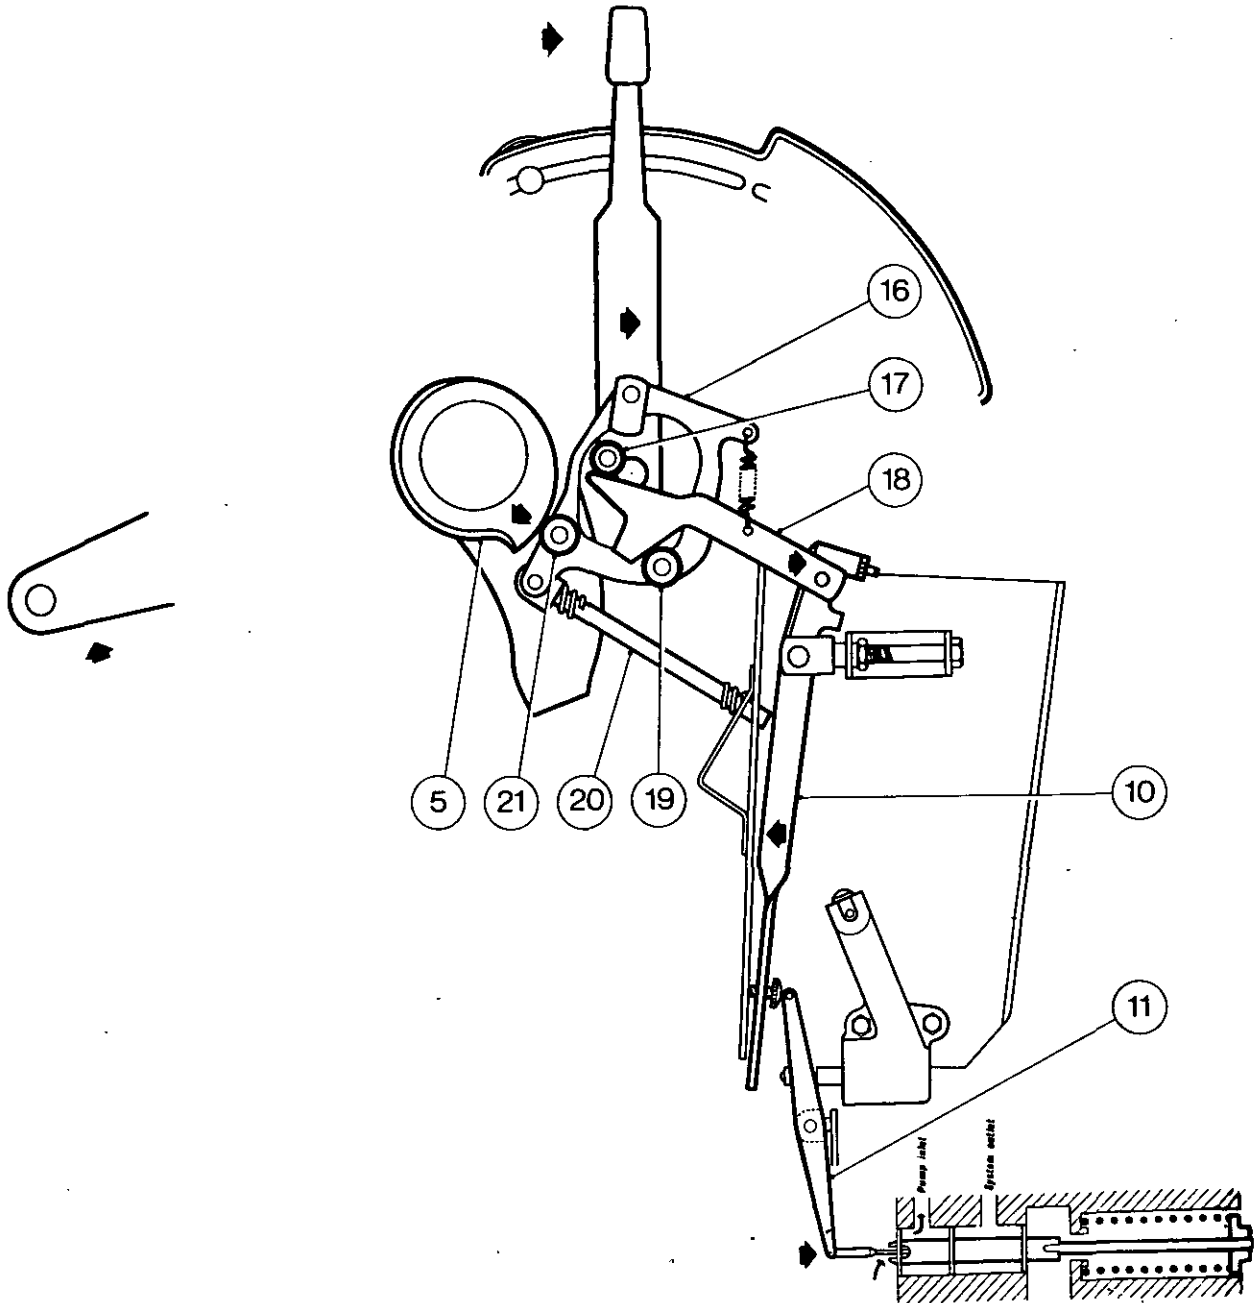


FIG. 9

PRESSURE CONTROL

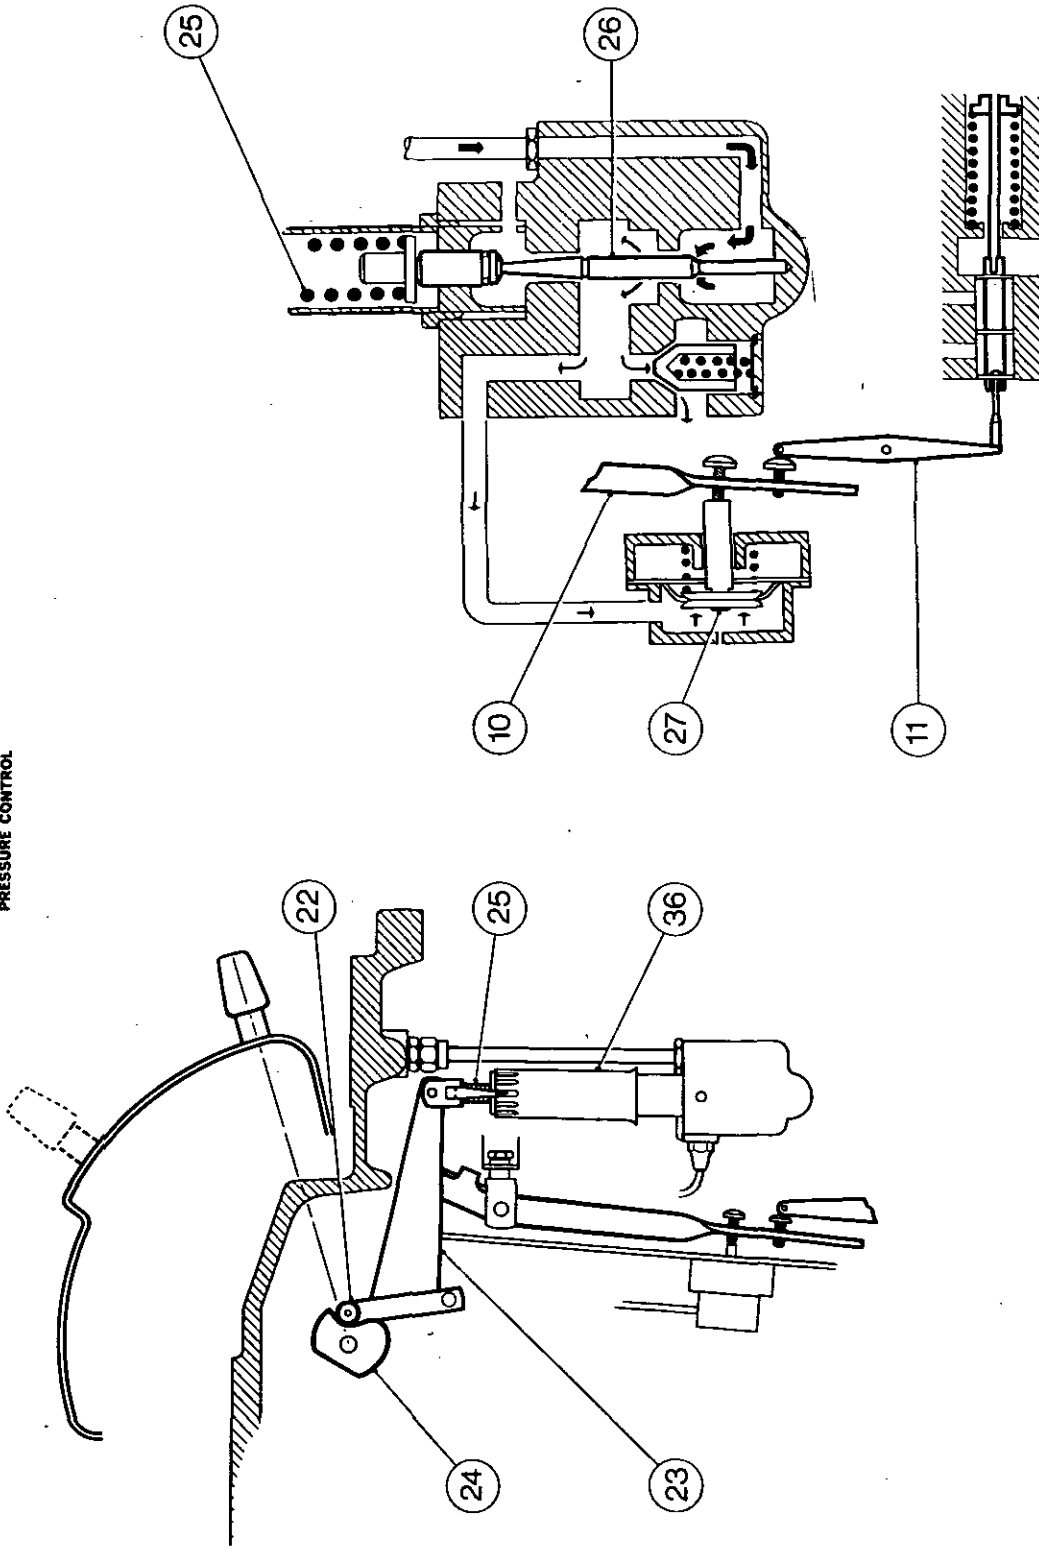


FIG. 10



The draft control linkage follows the control spring plunger (14) under the influence of the spring on guide rod (12), and moves the draft control link rearwards. Lever (10) again pivots and causes the pump control valve lever (11) to push the pump control valve towards discharge. When correct depth is gained, the valve is restored to neutral. An increase of draft force in the top link will have an opposite effect.

#### Position Control – Transport Position (Fig. 7)

The position control lever shaft carries an eccentric roller (17) which contacts the upper cam face of the position control cam (18). The position control link (16) is pivoted at the top and carries two rollers (19) and (21). The front roller (19) contacts the lower cam face of the position control cam (18). The rear roller (21) is held in contact with the cam on the ram arm (5) by the spring on the guide rod (20). The front end of the position control cam (18) is connected to the vertical lever (10), which is in contact with the control valve lever (11).

#### Position Control – Implement Lowering (Fig. 8)

Downward movement of the position control lever causes the eccentric roller (17) to force the cam (18) downwards. The breakout spring pushes the position control link (16) to maintain contact between the roller (21) and the ram arm (5), and the front roller (19) moves the cam (18) rearwards, thus moving the pump control valve into discharge.

#### Position Control – Implement Raising (Fig. 9)

Release of oil from the ram cylinder allows the ram arm (5) to rotate and force the rear roller (21), mounted on position control link (16), forward. This action allows the pump control valve spring to move the position control cam (18), which is in contact with the front roller (19), forward, until the control valve reaches the neutral position, which has been determined by the position control lever.

#### Response Control

Response control governs the rate of movement of the pump control valve towards discharge, in the discharge range. In this way, the rate of drop of implements is controlled, thus ensuring smooth draft control operation.

The response control unit is bolted to the base of the lever support bracket. The unit is submerged in oil and is self-priming, and comprises a horizontal dashpot to which is fitted a spring loaded plunger with a spring loaded piston, and a vertical plunger with a spring loaded needle valve. Holes in the dashpot housing enable oil to enter either side of the piston.

The dashpot is only effective when the vertical lever moves forwards from the neutral position, i.e. control valve moving towards discharge. This action pushes the plunger and the piston forwards along the dashpot bore, oil is then forced past the needle valve to the other side of the piston and to the sump. Rearward movement of the vertical lever, i.e. control valve moving towards inlet, allows the plunger spring to lift the plunger clear of the piston, exposing a hole in the piston centre. Oil pressure then equalises on either side of piston as it is forced rearwards by the return spring.

Rate of oil escape from the dashpot is controlled by the size of the orifice between the needle valve and its seat. Movement of the response control lever (situated on the R.H. centre housing inspection cover, will adjust the orifice size due to the cam on the end of the lever acting against the needle valve plunger. The spring holding the needle valve clear of its seat also holds the valve and plunger up against the cam.

Movement of the response control lever rearwards, i.e. towards SLOW Response causes the cam to force the plunger and needle valve closer to the seat against spring pressure. This reduces the orifice size, so restricting oil flow past the valve. The damping action of the dashpot is thereby increased, thus slowing the vertical lever and pump control valve movement.

Conversely, movement of the response control lever forwards, i.e. towards FAST Response, rotates its cam, permitting the plunger and needle valve to lift away from the valve seat. The size of the orifice and oil flow past the valve thus increases. Damping effect of the plunger is reduced and faster movement of the vertical lever and pump control is allowed.

#### Pressure Control (Fig. 10)

The pressure control system enables the pressure in the ram cylinder to be regulated from 10,5 to 211 kg/cm<sup>2</sup> (150 to 3000 lb/in<sup>2</sup>). One of the uses for this system is with semi-trailed implements fitted with depth control wheels. By suitable adjustment of the pressure control lever, part of the weight of the implement is supported by the tractor linkage, thus obtaining weight transfer to the tractor rear wheels and increasing traction.

The cam (24), fixed to the pressure control shaft, contacts the roller (22), mounted on the pressure control lever (23). This lever pivots at its rear lower end on the support bracket assembly.

The front end of the pressure control lever (23), carries an adjustable rod assembly which screws into an adjustment tube fitted to the control valve assembly. The control spring (25), fitted inside the adjustment tube locates at its lower end onto a guide, this guide contacts the servo valve plunger which in turn contacts the servo valve piston (26). A pin, fitted into the control valve body below and in line with the piston, controls maximum piston travel.

The piston runs in a sleeve assembly which embodies three compartments, the lower (pressure) compartment, central compartment and exhaust compartment. The central compartment is connected, by drillings in the sleeve and the valve body, and a pipe, to a diaphragm assembly (27). The diaphragm plunger acts on vertical lever (10).

When the pressure control lever is moved to its lowest position on the quadrant, the roller (22) on the internal pressure control lever (23) moves to the lowest position on the cam (24), allowing the lever (23), to exert minimum compression force on the control spring.

Oil entering the lower compartment, exerts pressure on the lower face of the piston and moves it against spring pressure. This allows the slot in the piston to pass through the lower sleeve and form a passage between the pressure and central compartments. Oil then flows into the diaphragm unit (27), which causes the plunger to move the vertical lever (10), and the pump control valve lever (11), and the pump control valve towards neutral. Maintaining system pressure at

## HYDRAULIC SYSTEM

a selected value, slight oil flow past the piston slot maintains pressure at the diaphragm face, under the influence of a  $1.6 \text{ kg/cm}^2$  ( $23 \text{ lb/in}^2$ ) valve which allows flow back to the sump. A small hole in the rear diaphragm housing allows a continuous oil leakage.

As the quadrant lever is moved rearwards towards the high pressure position, the load on the control spring increases, so that a greater system pressure will be required to move the piston and allow oil through to the central compartment to extend the diaphragm plunger.

When the spring force on the piston exceeds the opposing pressure force, the piston will move down to the stop pin, cutting off oil supply to the central compartment and so to the diaphragm, thus allowing oil to exhaust from the diaphragm unit past the taper on the upper half of the piston. The diaphragm plunger is thus allowed to move rearwards, allowing the pump control valve under the influence of its spring to move into the lift position.

### CONTROLS

The Hydraulic Control Quadrants are located on the right hand side of the seat within easy reach of the operator. The two control levers, Draft (outer) and Position (inner), operate as follows:—

#### Draft Control Lever (Fig. 11)

The Draft Control Lever is the outer lever, and operates on the Draft (Yellow) range of the quadrant. A knurled nut locks the adjustable stop in place to indicate when the desired working depth is reached. The further the lever is moved towards the 'Down' position, the deeper the implement will tend to penetrate the ground, and conversely the nearer the lever is to the 'Up' mark, the shallower the implement will tend to work.

#### Position Control Lever (Fig. 11)

The Position Control Lever is the inner lever and operates on the Pressure (Black), Constant Pumping (Blue), and Position (Red) ranges of the quadrant. There are two knurled nuts which enable the adjustable stops to be locked in the required position. In the Position (Red) sector of the quadrant, the lever is used for lifting and lowering the tractor linkage, and carrying an implement at varying fixed heights above the ground. When the lever is in the Constant Pumping (Blue) sector, the tractor's hydraulic power is transmitted to external control rams or hydraulic motors. With the lever in the Pressure (Black) sector of the quadrant, a variable pressure in the system can be obtained which is determined by the position of the lever. The pressure can vary from  $10.5 \text{ kg/cm}^2$  ( $150 \text{ lb/in}^2$ ) with the lever in 'Low', to  $211 \text{ kg/cm}^2$  ( $3000 \text{ lb/in}^2$ ) with the lever in 'High', and enables part of the weight of a trailed implement (with pressure control coupler), or semi-mounted implement to be transferred to the tractor rear wheels for adhesion. The lower the lever in the quadrant the less weight is transferred, and conversely, the higher the lever in the quadrant the more weight is transferred.

#### Response Control Quadrant (Fig. 12)

The response quadrant is positioned on the right-hand side cover of the centre housing, which incorporates the transmission oil level dipstick. The quadrant is marked FAST and SLOW with an arrow on the lever knob to indicate the position. When the arrow is in the FAST position, an implement will drop in work fast, and conversely in the SLOW position, will drop in work slowly. Therefore, when ploughing, for example, over undulating ground, the plough will re-enter and follow the ground contours more accurately with the response lever towards the FAST position. The normal working position for the response lever should be just on the SLOW side of the centre position.

### EXAMPLES OF CONTROL LEVER SETTINGS

#### Draft Control (Fig. 13)

Type of Work: Ploughing, subsoiling and heavy cultivation.

For Draft Control, use the outer lever (yellow quadrant).

Transport Position: Lever fully back (A).

Entering Work: Push the lever forward until the implement reaches the required depth (B).

Set the adjustable stop in line with the lever.

Set the Response Control lever as shown.

Working:

The Draft Control lever can be moved slightly to suit varying soil conditions.

If an even depth cannot be maintained on undulating ground, move the Response lever towards FAST.

If the implement 'bobs', move the Response lever towards 'SLOW'.

Leaving Work:

Pull the Draft lever back to position 'A'.

#### Position Control (Fig. 14)

Type of Work: Mowing, grading, harrowing and broadcasting.

For Position Control, use the inner lever in the rear sector (red quadrant).

Transport: Push the lever to line up with the 'TRANSPORT' mark (A).

Entering Work: Move the lever rearwards until the required implement position is obtained (B).

Set the adjustable stop in line with the lever.

Set the Response Control lever centrally as shown.

Working:

No further adjusting is necessary.

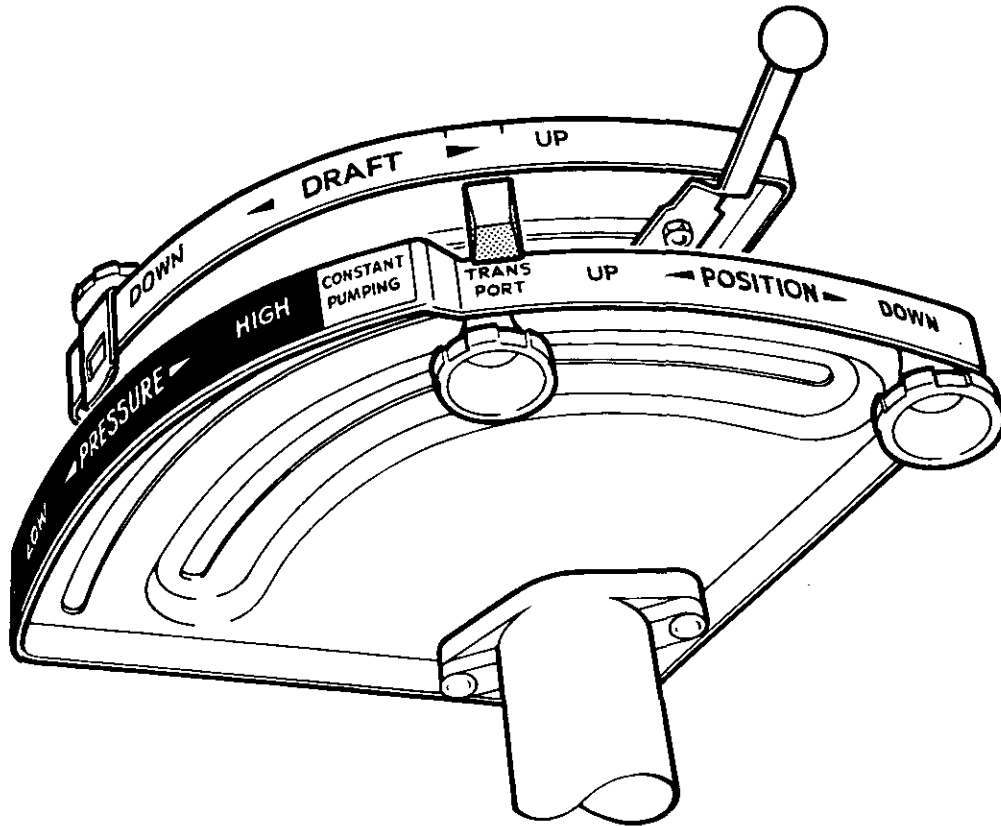


FIG. 11

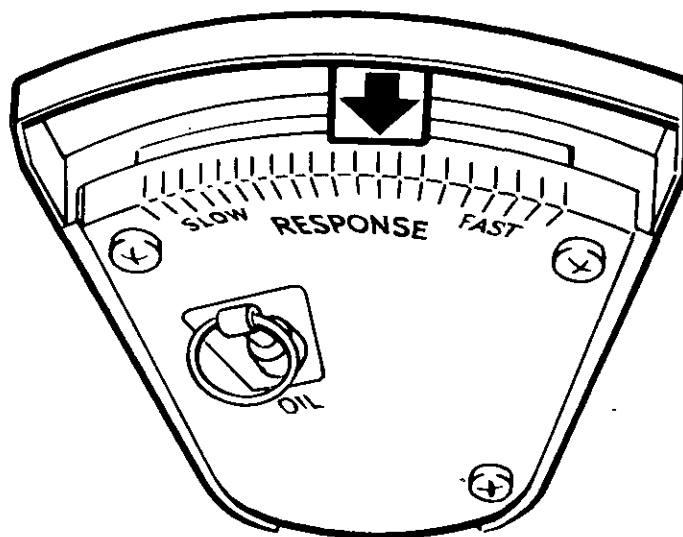


FIG. 12

HYDRAULIC SYSTEM

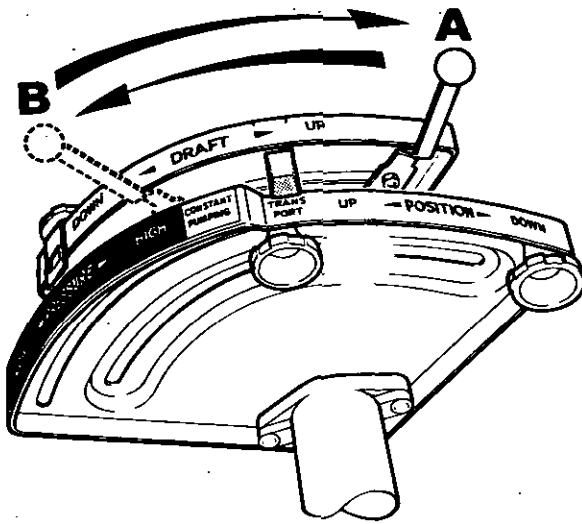


FIG. 13

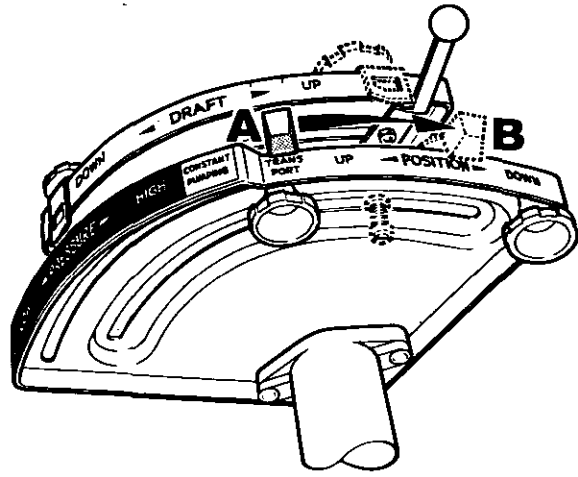


FIG. 14

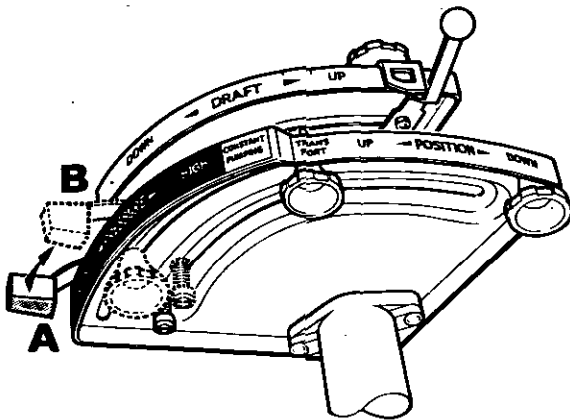
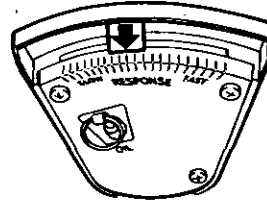
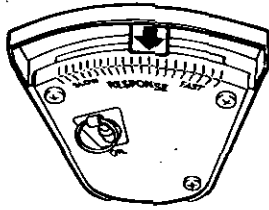


FIG. 15


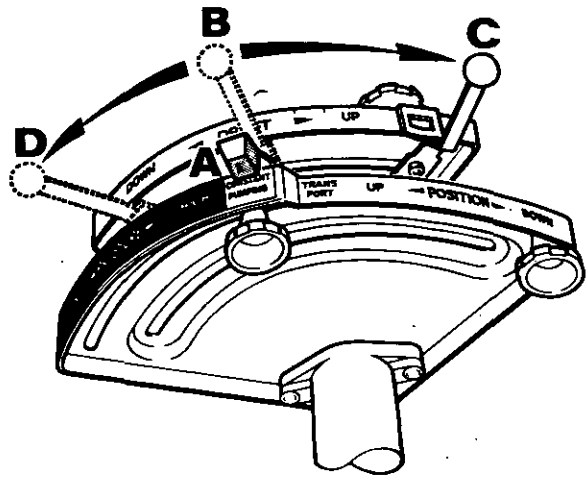


FIG. 16

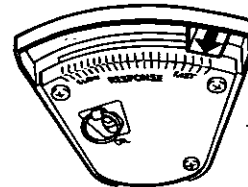

## HYDRAULIC SYSTEM

**Leaving Work:** Move the lever forward to the 'TRANSPORT' position.

**Pressure Control (Fig. 15)**

**Type of Work:** Towing four-wheel trailers, disc harrows, seed drills, balers or manure spreaders.  
Pressure control can only be used with the additional coupler. For Pressure Control, use the inner lever in the front sector (black quadrant).

**Operating:** If wheelspin occurs, pull the lever rearwards from 'A' until traction is obtained (B). Set the adjustable stop in line with the lever.

**NOTE – USE OF EXTREME PRESSURE (IN EXCESS OF NORMAL REQUIREMENTS) CAN CAUSE FRONT END INSTABILITY.**

When operating, the pressure may need to be increased slightly to improve traction, but the lever should be returned to position 'B' as soon as possible.

**Control of Hydraulic Equipment (Fig. 16)**

**Type of Work:** Single-acting hydraulic ram and low input hydraulic motors.

**Rams:** Move the inner lever to 'CONSTANT PUMPING' ('A', blue sector), then move the outer lever to approx. position 'B' to establish the point at which the ram neither extends, nor retracts.  
Set the adjustable stop in line with the outer lever.  
Set the Response Control lever to FAST.

**Operation:** To extend the ram, move the lever to 'C'.  
To retract the ram, move the lever to 'D'.

**IMPORTANT – WHEN THE RAM IS FULLY EXTENDED, RETURN THE LEVER TO 'B' TO PREVENT THE INTERNAL PRESSURE RELIEF VALVE FROM DISCHARGING CONTINUOUSLY.**

**Hydraulic Motors:** Move the inner lever to 'CONSTANT PUMPING' ('A'). Move the outer lever to 'D'.

**Operation:** Move the outer lever to 'C' to engage the hydraulic drive and to 'D' to disengage the drive.  
Response Control is not used.

**OPERATION OF EXTERNAL HYDRAULIC EQUIPMENT**

There are four external tapping points (Fig. 17) in the left cover for use with implements which incorporate remote pressure operated hydraulic systems, such as loaders and tipping trailers. Various spool valves and hydraulic pipes can be fitted to this tractor.

For tapping points data see the Specification Section.

**NOTE – IF A QUANTITY OF OIL IN EXCESS OF 7 LIT. (1½ IMP. GAL) IS REQUIRED FOR EXTERNAL USE, ADDITIONAL OIL CAN BE ADDED TO THE "HIGH" MARK ON THE DIPSTICK.**

**CONTROL SPRING****Removal and Refitment**

7A-01-15

**Special Tools Required:** MF 163 Wrench  
Torque Wrench

**Removal**

1. Remove the control beam assembly.
2. Fig. 18. Slacken the socket screw (28).
3. Pull back the rubber boot (29).
4. Using tool MF 163, unscrew the retainer (30) out of the lift cover.
5. Fig. 19. Withdraw the control spring.

**Refitment**

1. Fig. 19. Refit the control spring assembly into the lift cover.
2. Place the draft control lever in the fully lowered position.
3. Fig. 18. Tighten the retainer (30) using tool MF 163 until all the end float is eliminated. Do not overtighten or end float will re-occur.
4. Refit the rubber boot (29).
5. Fit a new nylon locking plug then tighten the socket screw (28), to a torque of 0,70 kg-m (5 lb-ft).
6. Refit the control beam assembly.

**CONTROL SPRING ASSEMBLY SERVICING**

7A-02-15

**Special Tools Required:** MF 163 Wrench  
Torque Wrench

**Disassembly**

1. Remove the control spring assembly as stated in operation 7A-01-15.
2. Fig. 20. Drive out the pin (33) and detach the head (31).
3. Remove the retainer (30), control spring (13) and spring seat (32) from the plunger (14).

**Reassembly**

1. Fig. 20. Refit the spring seat (32), spring (13) and retainer (30) to the plunger (14).
2. Screw the plunger into the head (31), until all the end float is eliminated and the spring is tight to turn by hand.
3. Fit a new securing pin (33).
4. Refit the control spring assembly as stated in operation 7A-01-15.

**HYDRAULIC SYSTEM****HYDRAULIC LIFT COVER****Removal and Refitment**

7A-03-16

Special Tools Required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 kg (3 lb) weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Removal**

1. Remove the seat.
2. Disconnect the wiring to the number plate light at the connection box attached to the lift cover.
3. Remove the split pins and pivot pins securing the lift rods to the lift arms.
4. Remove the control beam assembly.
5. Disconnect the Auto-Hitch (if fitted) at the lift arms.
6. Fig. 21. Remove the two bolts and spring washers securing the stand pipe cap (34) to the lift cover and remove the cap.
7. Disconnect the stand pipe (1) from the hydraulic pump by lifting the stand pipe slightly.
8. Remove the R.H. footplate, and drain the oil to the low mark on the dipstick.
9. Fig. 22. Remove the four screws (63) securing the response control cover plate (64), and remove the plate.
10. Remove the five bolts (61) and the screw (59) securing the inspection cover (60) to the centre housing and remove the cover.
11. Fig. 23. Remove the valve actuating roller using tool MF 271 as shown.
12. Fig. 22. Suitably retain the dashpot plunger (49) to prevent it from dropping out when the lift cover is removed.
13. Remove the 14 bolts securing the lift cover to the centre housing.
14. Place the parking brake clear of the lift cover.
15. Fig. 24. Fit tool MF 226A and adapter MF 226A-3 to the lift cover as shown.
16. Fig. 25. Taking care not to damage the control valve vertical lever (10, Fig. 10), detach the lift cover from the centre housing as shown, and place the support leg on the ground.

**Refitment**

**NOTE** — BEFORE REFITMENT OF THE LIFT COVER THE EXTERNAL ADJUSTMENTS AS STATED IN OPERATION 7A-12-27 MUST BE CARRIED OUT.

1. Fig. 26. Fit the two special studs to the centre housing as shown.
2. Fit a new lift cover gasket.
3. Place the lift arms in the down position.
4. Set the shear tube split pin in the vertical position.
5. Fig. 25. Taking care not to damage any parts, manoeuvre the lift cover assembly into position, over the two special studs onto the centre housing.
6. Remove the two special studs, tool MF 226A and adapter MF 226A-3.
7. Fig. 23. Refit the valve actuating roller using tool MF 271 as shown.
8. Fig. 21. Centralise and locate the stand pipe (1) in the pump assembly.
9. Secure the lift cover and parking brake to the centre housing and tighten the bolts to a torque of 8,5 kg-m (65 lb-ft).
10. Fig. 21. Refit the stand pipe cap (34) with a new 'O' ring and secure with the two bolts and spring washers.
11. Refit the control beam assembly.
12. Secure the lift rods to the lift arms.
13. Reconnect the number plate light wiring at the connection box.
14. Refit the Auto-Hitch at the lift arms.
15. Carry out the internal adjustments as stated in operation 7A-12-27.
16. Refit the seat.

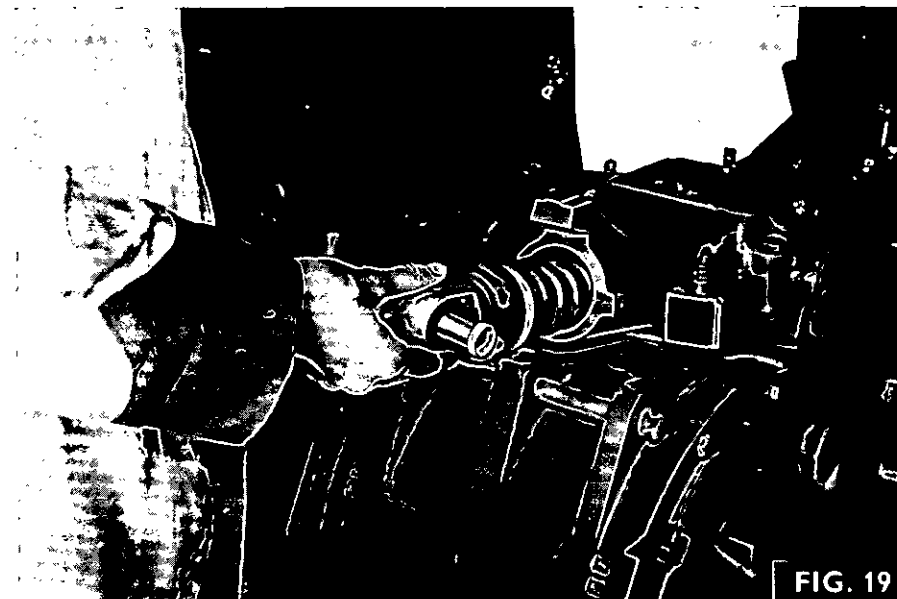
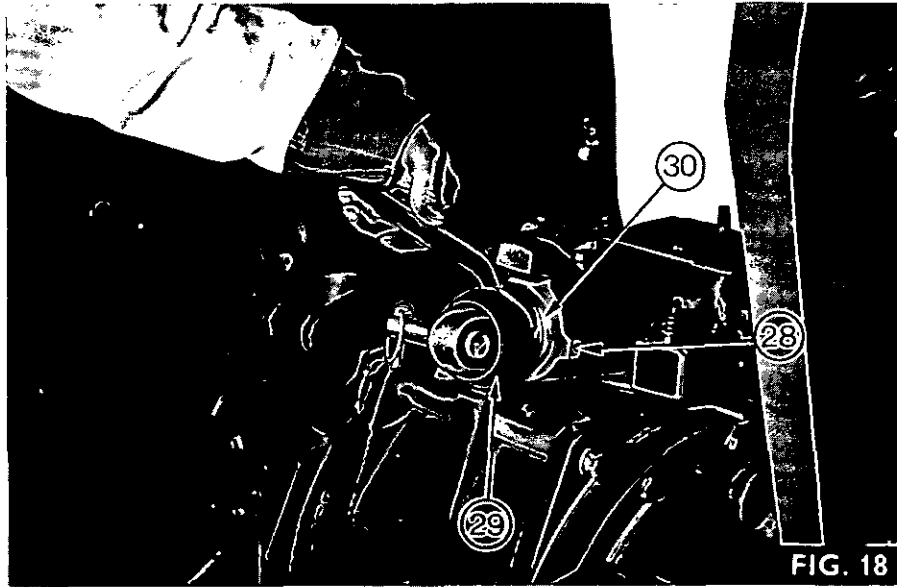
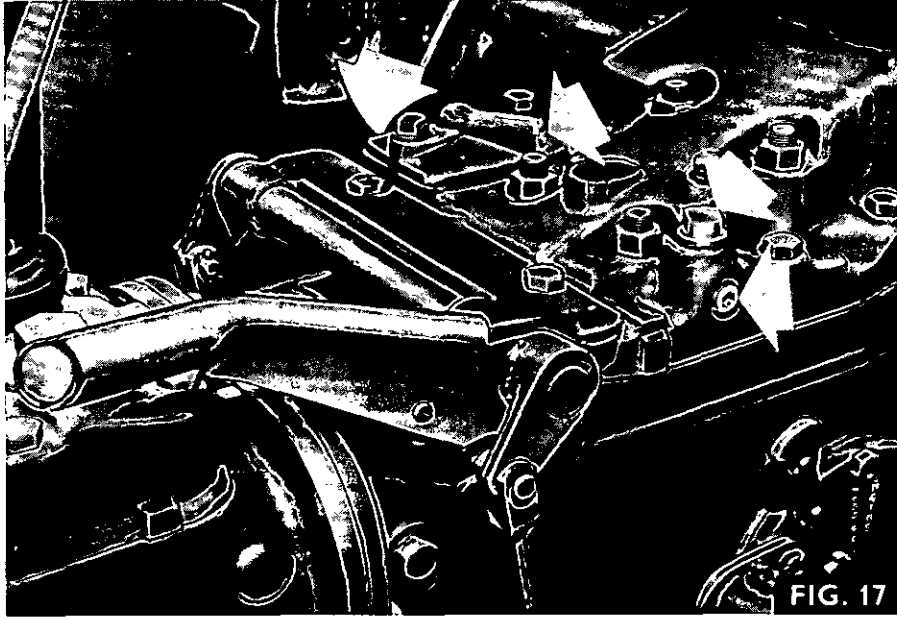
**HYDRAULIC LIFT COVER SERVICING 7A-04-16**

Special Tools Required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 kg (3 lb) Hide Hammer  
 1,36 kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Disassembly**

1. Remove the lift cover as stated in operation 7A-03-16.
2. Fig. 10. Place the position and pressure control lever in the constant pumping position, remove the split pin retaining the pressure control linkage (23) to the support bracket (35, Fig. 27) then place the lever into the low range on the quadrant and remove the linkage complete with the adjustment tube (36), and spring (25) and spring guide.
3. Fig. 27. Remove the position control spring (37) as shown.
4. Disconnect the diaphragm pipe (38) at the pressure control valve (39).

HYDRAULIC SYSTEM



HYDRAULIC SYSTEM

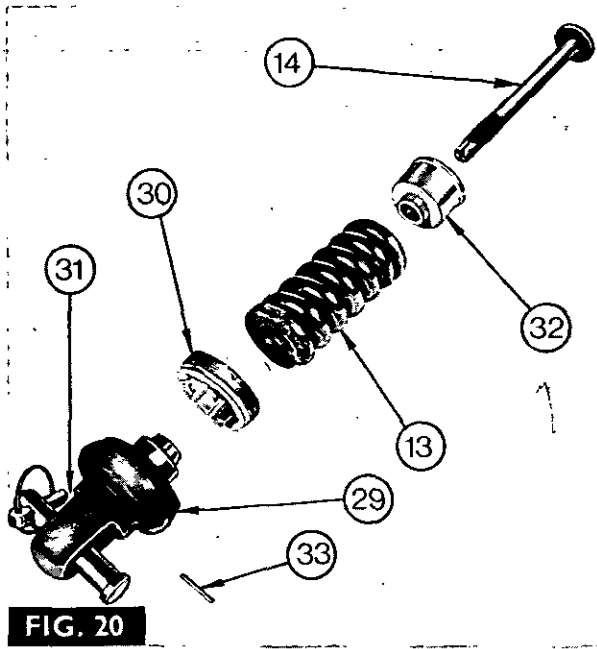


FIG. 20

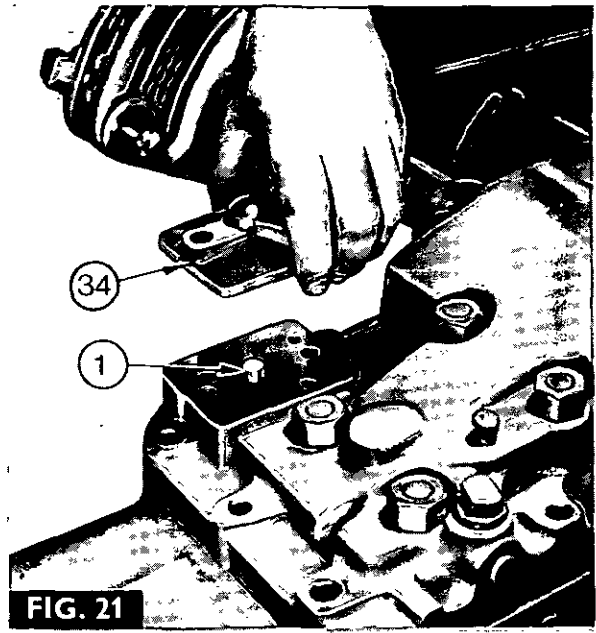


FIG. 21

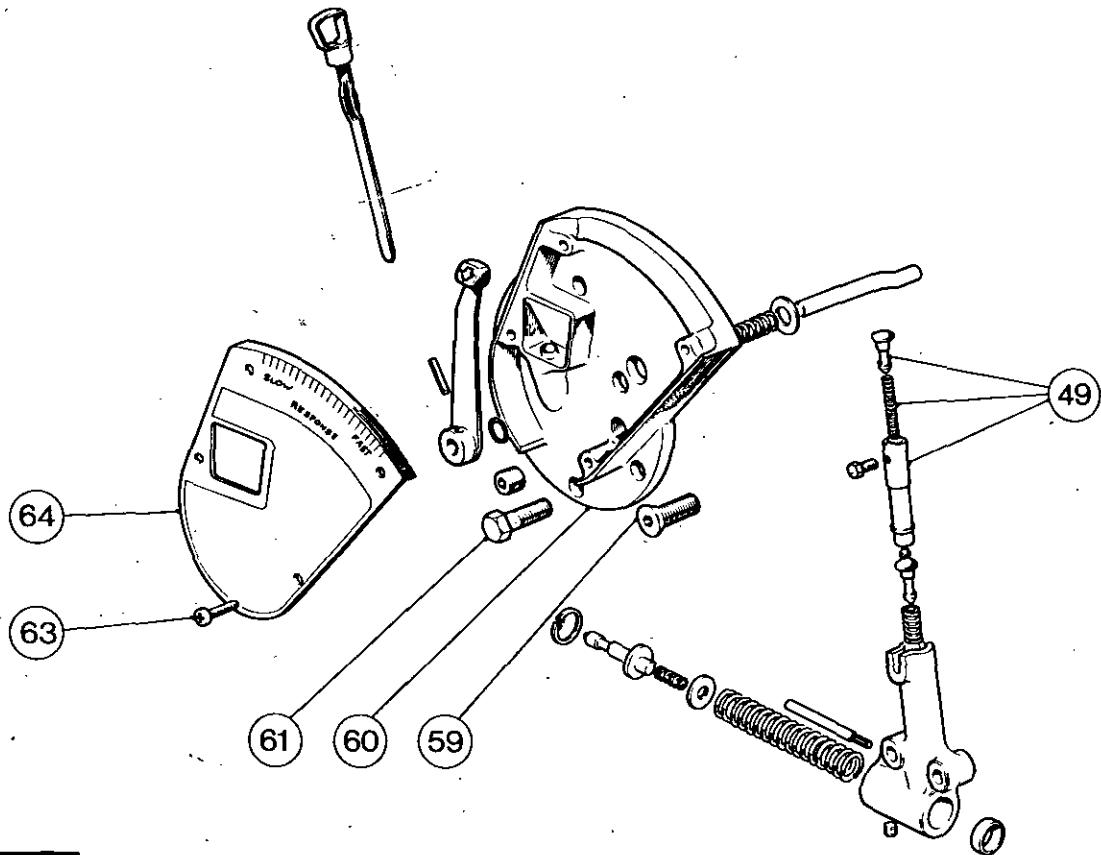


FIG. 22



HYDRAULIC SYSTEM

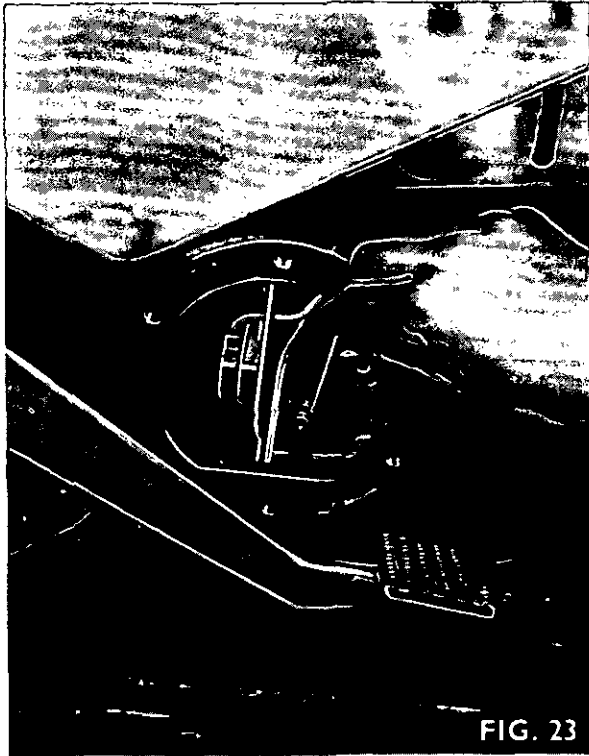


FIG. 23

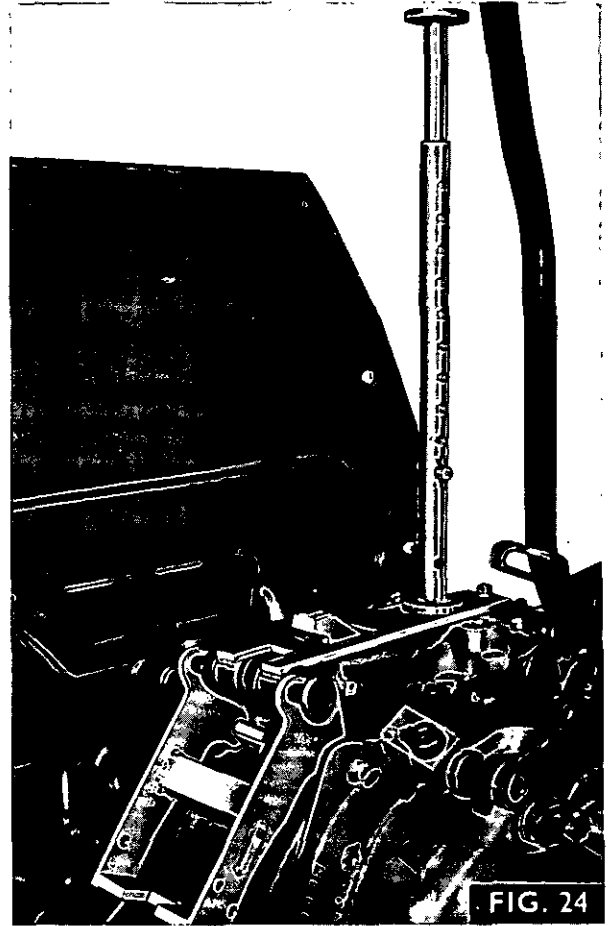


FIG. 24

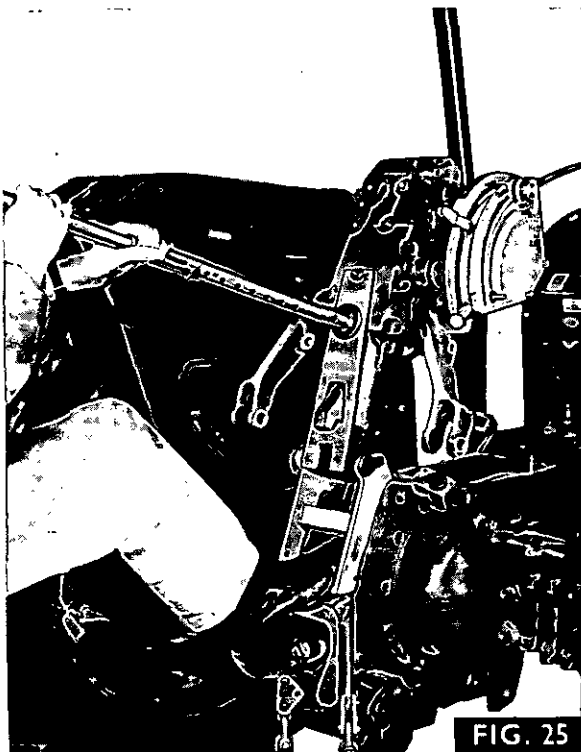


FIG. 25


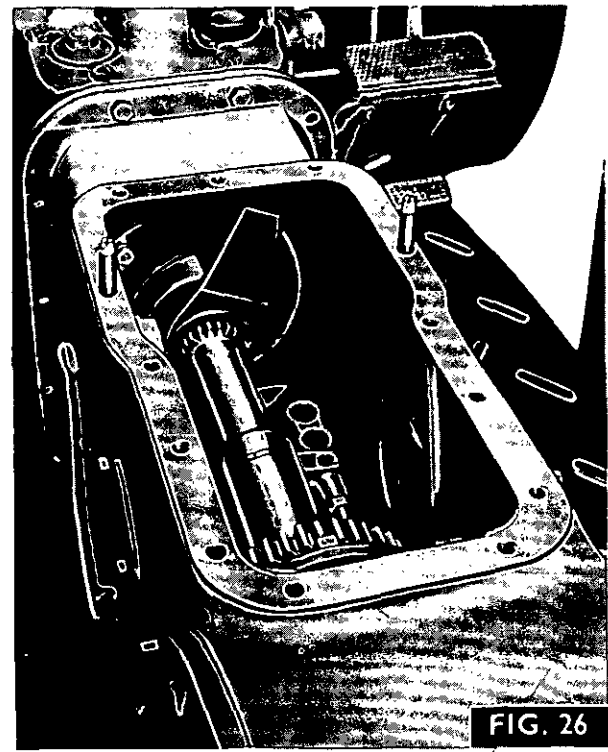
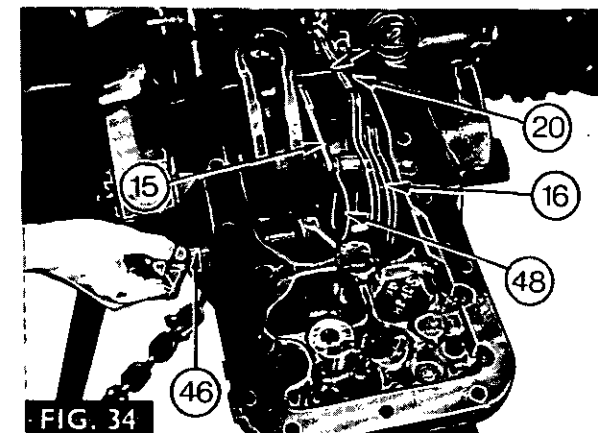
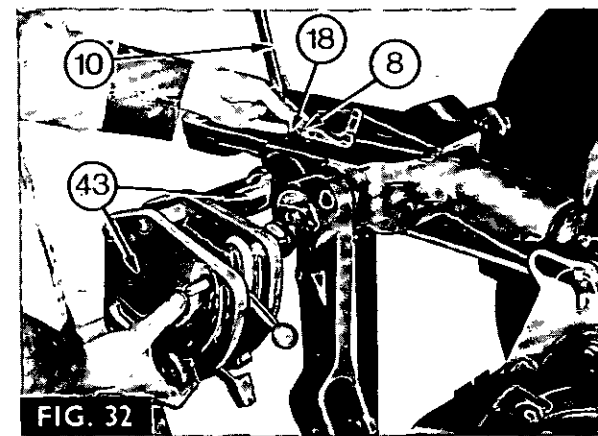
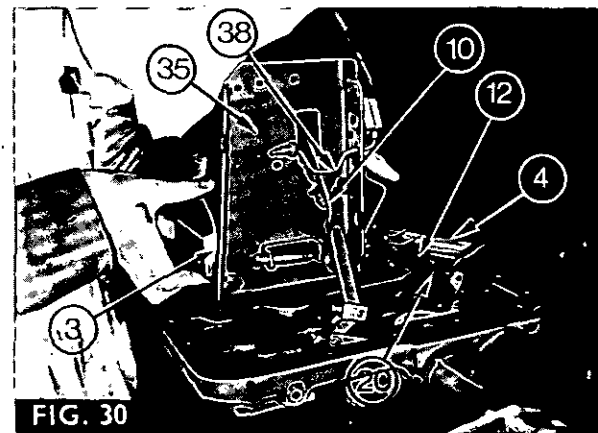
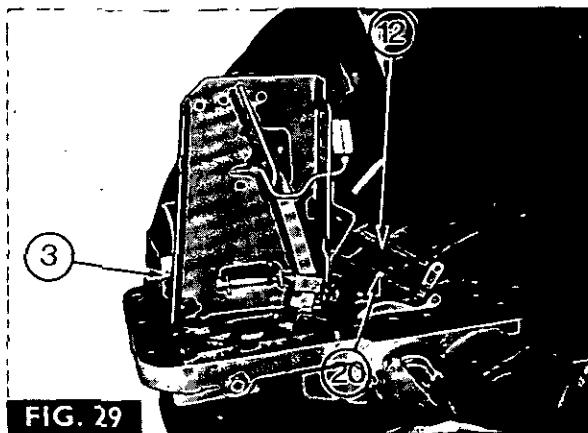
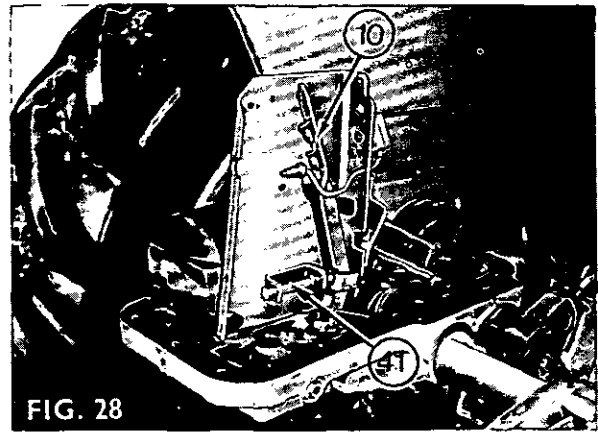


FIG. 26

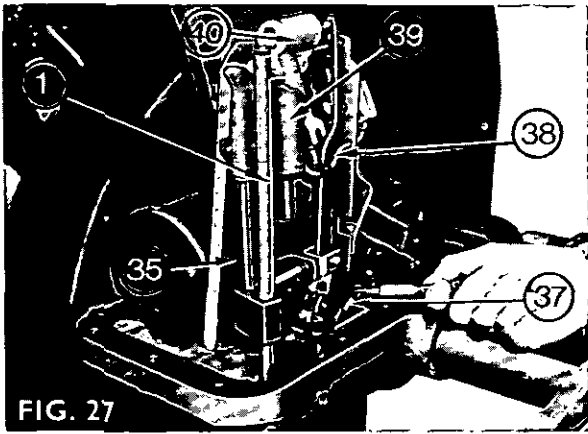HYDRAULIC SYSTEM



## HYDRAULIC SYSTEM

5. Remove the two bolts and washers securing the pressure control valve to the support bracket and remove the valve (39) complete with the stand pipe (1).
6. Remove the two bolts and washers securing the response control dashpot (40) to the support bracket (35) and remove the response control dashpot.
7. Fig. 28. Loosen the locknut on the fulcrum bolt (41) and release the vertical lever (10).
8. Fig. 29. Fit a suitable retaining pin to the lower guide rod (20) to prevent the spring from being ejected.
9. Remove the four nuts securing the ram cylinder (3) to the lift cover.
10. Lift the cylinder slightly and fit a suitable retaining pin to the upper guide rod (12) to prevent the spring from being ejected.
11. Fig. 30. Lift the cylinder (3) and support bracket (35) clear of the lift cover, taking care not to damage the vertical lever (10) or the diaphragm pipe (38).
12. Remove the connecting rod (4).
13. Fig. 31. Remove the Allen screw (42) retaining the quadrant (43) in the lift cover.
14. Fig. 32. Withdraw the quadrant (43) from the lift cover simultaneously removing the vertical lever (10) and cams (8 and 18).
15. Fig. 33. Remove the plug (44) on the L.H. side of the lift cover to enable the linkage pivot shaft (46) to be removed.
16. Remove the Allen Screw (45).
17. Fig. 34. Withdraw the linkage pivot shaft (46) as shown and remove the remaining links (12, 15 and 48, then 20 and 16).
18. Release the tab washer and remove the bolt and washer securing the R.H. lift arm (6, Fig. 1) to the lift shaft (47) and remove the arm.
19. Fig. 35. Drive the remaining lift arm and shaft (47) out of the lift cover and remove the ram arm (5).

**Reassembly**

1. Fig. 35. Position the ram arm (5) in the lift cover.
2. Slide the lift arm and shaft (47), with a new 'O' ring into the lift cover and ram arm (5), aligning the master spines on the shaft and ram arm.
3. Refit the remaining lift arm, with a new 'O' ring, aligning the master splines.
4. Release the tabwasher on the L.H. lift arm and slacken the securing bolt.
5. Refit the washer and securing bolt to the R.H. lift arm and fully tighten, then secure it with new tabwasher.
6. Tighten the L.H. bolt so that the lift arms just move freely through their travel with no lift shaft (47) end float, and secure it with a new tabwasher.
7. Fig. 34. Refit the position control linkage (16 and 20), the draft control linkage (48, 15 and 12) then refit the linkage pivot shaft (46) as shown.
8. Fig. 32. Refit the vertical lever (10) and cams (8 and 18) simultaneously refitting the quadrant (43) into the lift cover.
9. Fig. 31. Secure the quadrant in the lift cover with the Allen Screw (42).
10. Fig. 33. Making sure that the linkage pivot pin (46) is hard against the lift cover, secure the pin (46) with the Allen screw (45).

11. Refit the plug in the L.H. side of the lift cover.
12. Refit the connecting rod (4) into the ram arm (5). Apply Loctite Grade 'AV' or Casco 'Metalok ML15' to the Allen Screw. Fit the screw, screw it in fully, then back off ¼ turn.

**NOTE – THOROUGHLY DEGREASE THE RAM ARM THREADS.**

13. Fig. 30. Place the cylinder (3) and support bracket (35) assembly on the lift cover using new 'O' rings simultaneously locating the two guide rods (12 and 20) into their holes, the vertical link (10) upright as shown and relocate the connecting rod (4).
14. Fig. 29. Remove the upper guide rod (12) spring retaining pin.
15. Secure the cylinder assembly (3) to the lift cover with the four nuts tightened to a torque of 16,0 kg-m (120 lb-ft).
16. Remove the lower guide rod (20) spring retaining pin.
17. Fig. 27. Refit the response control dashpot (40) and secure it with the two bolts and washers.
18. Refit the pressure control valve assembly (39) complete with the stand pipe (1) using new 'O' rings and washer and secure the valve with the two bolts and washers.
19. Reconnect the diaphragm pipe (38) to the pressure control valve (39).
20. Refit the position control spring (37).
21. Refit the lift cover as stated in operation 7A-03-16

**RESPONSE CONTROL DASHPOT****Removal and Refitment**

7A-05-21

Special Tools Required: MF 163 Wrench

MF 271 Draft Control Rod Gauge

MF 148A Pressure Test Kit

MF 166 Adapter

MF 226A Lift Cover Remover and Replacer

MF 226A-3 Lift Cover Adapter

MF 269 Wrench

MF 270B Dashpot Piston Wedge

MF 271 Roller Tool

MF 272 Ram Arm Fixture

MF 273 Hydraulic Setting Fixture

1,36 kg (3 lb) Weight

Torque Wrench

Feeler Gauge

Rule

**Removal**

1. Remove the lift cover as stated in operation 7A-03-16.
2. Fig. 27. Remove the two bolts and washers securing the response control dashpot (40) to the support bracket (35) and remove the dashpot (40)

**Refitment**

1. Refit the response control dashpot (40) to the support bracket and secure with the two bolts and washers.
2. Refit the lift cover as stated in operation 7A-03-16.

**HYDRAULIC SYSTEM****RESPONSE CONTROL DASHPOT SERVICING**

7A-06-22

Special Tools Required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Disassembly**

1. Remove the response control dashpot as stated in operation 7A-05-21.
2. Fig. 36. Slacken the setscrew (50) and remove the plunger assembly (49), needle valve (51) and spring (52).
3. Remove the retaining ring (58), rod (57), guide (56), spring (55), piston (54) and spring (53).

Examine all the components for signs of wear, damage, scoring or pitting and replace if necessary.

**Reassembly**

1. Refit the spring (53), piston (54), spring (55), guide (56), rod (57), and secure with new retaining ring (58).
2. Refit the spring (52), needle valve (57) and plunger assembly (49) and secure with the setscrew (50).
3. Refit the response control dashpot as stated in operation 7A-05-21.

**PRESSURE CONTROL VALVE****Removal and Refitment**

7A-07-22

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Removal**

1. Remove the lift cover as stated in operation 7A-03-16.
2. Fig. 10. Place the position control lever in the 'Constant Pumping' position remove the split pin, retaining the pressure control linkage (23) to the support bracket then place the lever in the low range on the quadrant and remove the linkage complete with the adjustment tube (36), spring (25), and spring guide.
3. Fig. 27. Disconnect the diaphragm pipe (38) at the pressure control valve.
4. Remove the two bolts and washers securing the pressure control valve (39) to the support bracket (35) and remove the valve complete with the stand pipe (1).
5. Remove the stand pipe (1) from the valve (39) at the stand pipe block.

**Refitment**

1. Refit the stand pipe (1), with a new 'O' ring, to the valve (39).
2. Refit the valve, complete with the stand pipe, to the support bracket and secure with the two bolts and washers.
3. Reconnect the diaphragm pipe (38) to the valve (39).
4. Refit the lift cover as stated in operation 7A-03-16

**PRESSURE CONTROL VALVE SERVICING**

7A-08-22

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Disassembly**

1. Remove the pressure control valve as stated in operation 7A-07-22.
2. Fig. 37. Remove the pilot assembly (65), and withdraw the plunger (67).
3. Withdraw the sleeve assembly (68), piston (26) and pin (69).
4. Remove the retaining ring (73), washer (72), spring (71) and relief valve (70).

Examine all the components for signs of wear, damage, scoring or pitting and replace if necessary.

**Reassembly**

1. Refit the relief valve (70), spring (71), washer (72), and secure with a new retaining ring (73).
2. Fit two new 'O' rings (74), and one washer (75) to the sleeve assembly (68).

**HYDRAULIC SYSTEM**

3. Check that the diametral clearance between the piston (26) and the insert inside the sleeve is 0,0051 to 0,0102 mm (0.0002 to 0.0004 in).
4. Locate the pin (69) into the valve body (39) and refit the sleeve assembly (68) and piston (26).
5. Locate the plunger (67) into the pilot assembly (65) and secure the pilot assembly (65) to the valve body (39) tightening to a torque of 3,5 kg-m (25 lb-ft).
6. Refit the pressure control as stated in operation 7A-07-22

**DIAPHRAGM****Removal and Replacement** 7A-09-23

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit,  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270 B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Removal**

1. Remove the pressure control valve as stated in operation 7A-07-22.
2. Remove the response control dashpot as stated in operation 7A-05-21.
3. Fig. 28. Loosen the locknut on the fulcrum bolt (41) and release the vertical lever (10).
4. Fig. 37. Remove the two screws (76) securing the diaphragm assembly to the support bracket.
5. Disconnect the diaphragm pipe (38) from the diaphragm assembly and remove the pipe and the diaphragm assembly from the support bracket.
6. Disassemble the diaphragm assembly by removing the remaining two screws (76), rear housing (79), diaphragm (27), spring (78), and front housing (77).

Examine the diaphragm (27) for wear or damage and replace if necessary.

**Replacement**

1. Reassemble the spring (78), and the diaphragm (27) to the front housing (77) and secure the rear housing (79) to the front housing (77) with the two short screws (76).
2. Fig. 28. Position the diaphragm assembly in place on the support bracket and refit the diaphragm pipe (38) with a new 'O' ring, and secure the diaphragm assembly with the two screws as shown.

3. Refit the response control dashpot as stated in operation 7A-05-21.
4. Refit the pressure control valve as stated in operation 7A-07-22.

**CYLINDER, PISTON AND RAM ARM****Removal and Refitment** 7A-10-23

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270 B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 MF 283 Ram Piston Assembly Ring  
 1,36 kg (3 lb) Hide Hammer  
 1,36 kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

**Removal**

1. Remove the lift cover as stated in operation 7A-03-16.
2. Remove the response control dashpot as stated in operation 7A-05-21.
3. Remove the pressure control valve as stated in operation 7A-07-22.
4. Fig. 27. Remove the position control spring (37) as shown.
5. Loosen the locknut on the vertical lever and release the lever.
6. Fig. 29. Fit a suitable retaining pin to the lower guide rod (20) to prevent the spring from being ejected
7. Remove the four nuts securing the ram cylinder (3) to the lift cover.
8. Lift the cylinder slightly and fit a suitable retaining pin to the upper guide rod (12) to prevent the spring from being ejected.
9. Fig. 30. Lift the cylinder (3) and support bracket (35) clear of the lift cover, taking care not to damage the vertical lever (10) or the diaphragm pipe (38).
10. Remove the connecting rod (4).
11. Fig. 34. Remove the retaining spring clip on the draft rod (15) pivot pin and remove the rod.
12. Release the tabwasher and remove the bolt and washer securing the R.H. lift arm (6, Fig. 1) to the lift shaft (47) and remove the arm.
13. Fig. 35. Drive the remaining lift arm and shaft (47) out of the lift cover and remove the ram arm (5).
14. Remove the two bolts and washers securing the support bracket to the cylinder.
15. Withdraw the piston, from the cylinder.

## HYDRAULIC SYSTEM

### Refitment

1. If necessary replace the piston rings then reassemble the piston into the cylinder using tool MF 283.
2. Position the support bracket in place on the cylinder and secure it with the two bolts and washers.
3. Fig. 35. Position the ram arm (5) in the lift cover, apply Loctite Type AV or Casco Metalock ML15 to the threads, and screw the setscrew into the ram arm until engagement is made with the connecting rod, then slacken off the setscrew ¼ of a turn.
4. Slide the lift arm and shaft (47) with a new 'O' ring into the lift cover and ram arm (5), aligning the master spines on the shaft and ram arm.
5. Refit the remaining lift arm, with a new 'O' ring, aligning the master spline.
6. Release the tabwasher on the L.H. lift arm and slacken the securing bolt.
7. Refit the washer and securing bolt to the R.H. lift arm and fully tighten it, secure with a new tabwasher.
8. Tighten the L.H. bolt so that the lift arms just move freely through their travel with no lift shaft (47) end float, and secure with a new tabwasher.
9. Fig. 34. Refit the draft rod (15) securing it with a new spring retaining clip.
10. Fig. 30. Place the cylinder (3) and support bracket (35) assembly on the lift cover simultaneously locating the two guide rods (12 and 20) into their holes, the vertical link (10) upright as shown and relocate the connecting rod (4).
11. Fig. 29. Remove the upper guide rod (12) spring retaining pin.
12. Secure the cylinder assembly (3) to the lift cover with the four nuts tightened to a torque of 16,0 kg-m (120 lb-ft).
13. Remove the lower guide rod (20) spring retaining pin
14. Refit the pressure control valve as stated in operation 7A-07-22.
15. Refit the response control dashpot as stated in operation 7A-05-21.
16. Fig. 27. Refit the position control spring (37).
17. Refit the lift cover as stated in operation 7A-03-16.

MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

### Removal.

1. Remove the lift cover as stated in operation 7A-03-16
2. Remove the pressure control valve as stated in operation 7A-07-22
3. Remove the response control valve as stated in operation 7A-05-21
4. Fig 27 Remove the position control spring (37) as shown.
5. Fig 29 Fit a suitable retaining pin to the lower guide rod (20) to prevent the spring from being ejected.
6. Remove the four nuts securing the ram cylinder (3) to the lift cover
7. Lift the cylinder slightly and fit a suitable retaining pin to the upper guide rod (12) to prevent the spring from being ejected.
8. Fig 30. Lift the cylinder (3) and support bracket (35) clear of the lift cover, taking care not to damage the vertical lever (10) or the diaphragm pipe (38).
9. Fig 31. Remove the Allen screw (42) retaining the quadrant (43) in the lift cover.
10. Fig 32. Withdraw the quadrant (43) from the lift cover simultaneously removing the vertical lever (10) and cams (8 and 18).
11. Fig. 33 Remove the plug (44) in the L.H. side of the lift cover to enable the linkage pivot shaft (46) to be removed.
12. Remove the Allen screw (45).
13. Fig 34. Withdraw the linkage pivot shaft (46) as shown and remove the remaining links (12, 15 and 18, then 20 and 16).

### Refitment

1. Refit the position control linkage (16 and 20), the draft control linkage (48, 15 and 12), then refit the linkage pivot shaft (46) as shown.
2. Fig 32. Refit the vertical lever (10) and cams (8 and 18) simultaneously refitting the quadrant (43) into the lift cover.
3. Fig 31. Secure the quadrant in the lift cover with the Allen Screw (42).
4. Fig 33. Making sure that the linkage pivot pin (46) is hard against the lift cover, secure the pin (46) with the Allen screw (45).
5. Refit the plug in the L.H. side of the lift cover.
6. Fig 30. Place the cylinder (3) and support bracket (35) assembly on the lift cover simultaneously locating, the two guide rods (12 & 20) into their holes, the vertical link (10) upright as shown and relocate the connecting rod (4).

### LINKAGE

#### Removal and Refitment

7A-11-24

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter

HYDRAULIC SYSTEM

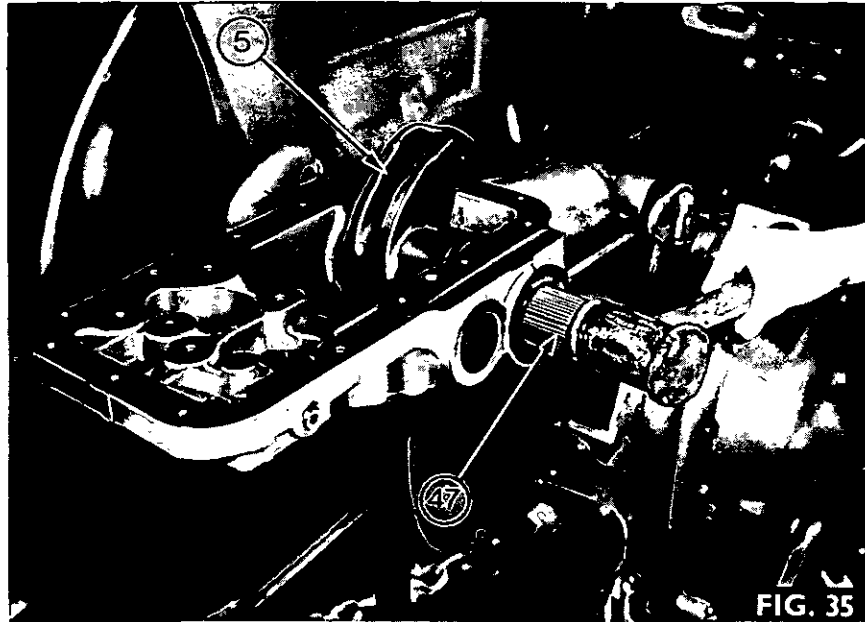


FIG. 35

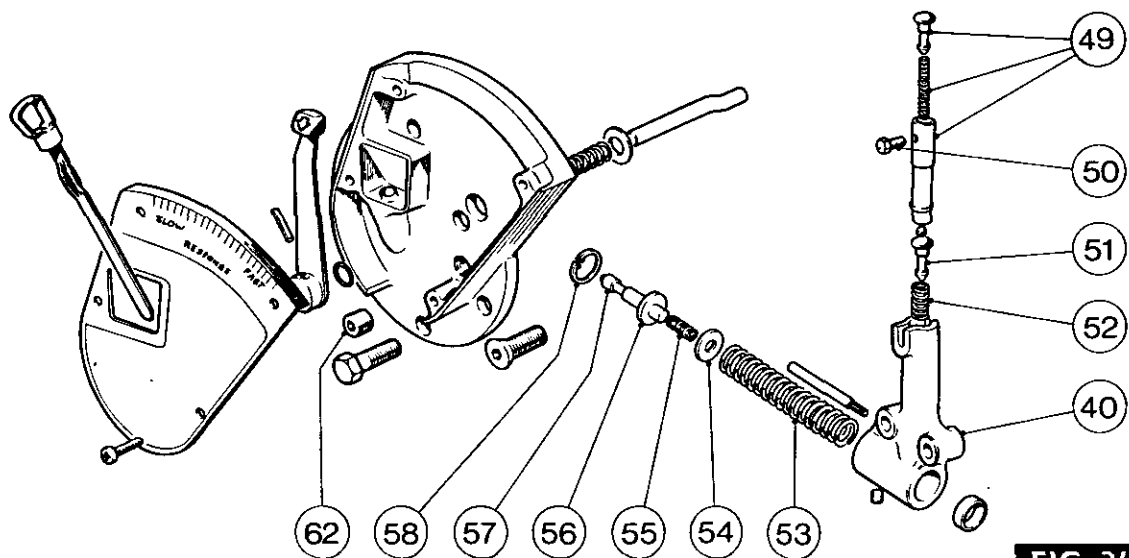


FIG. 36



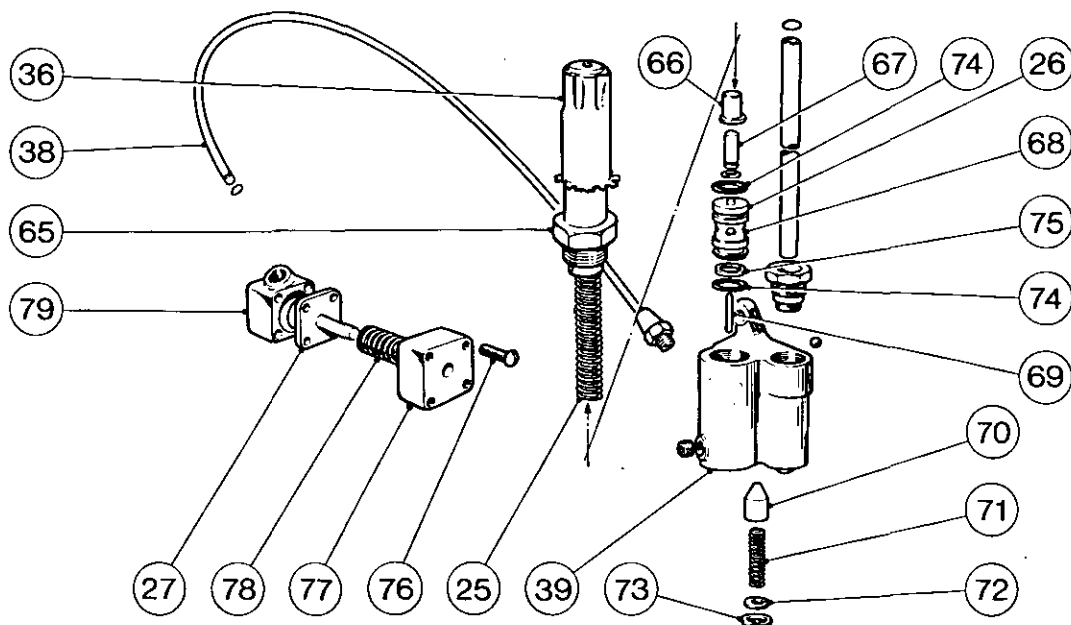
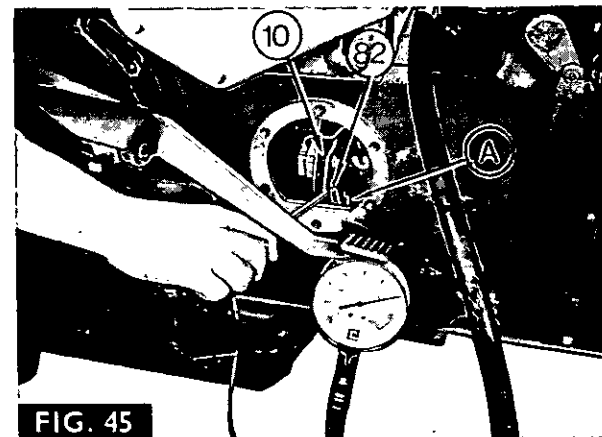
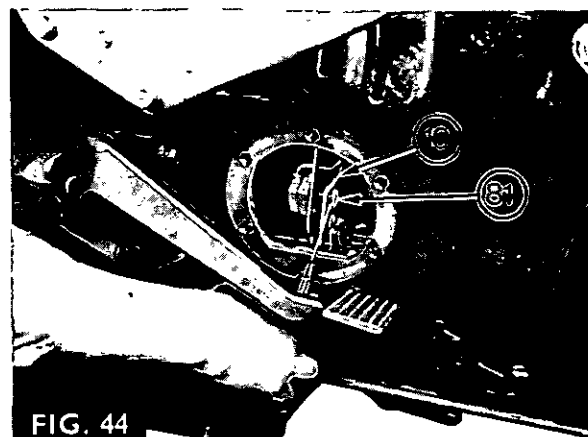
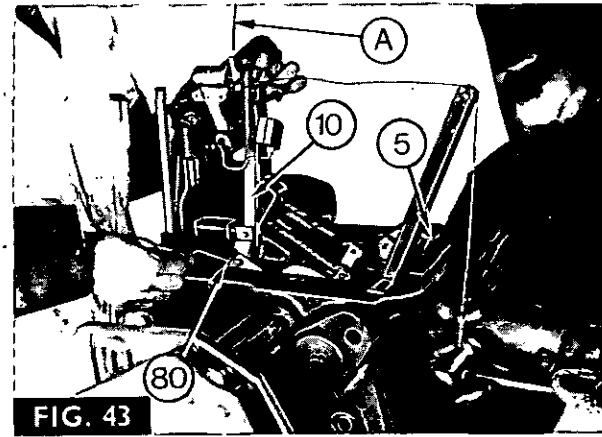
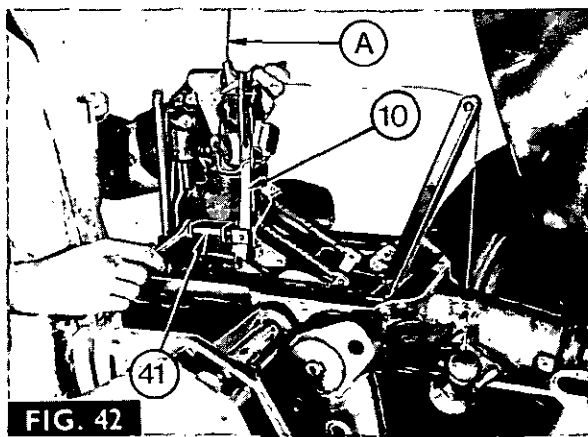
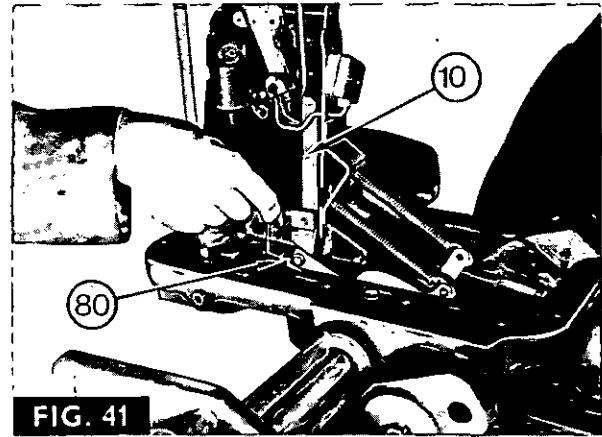
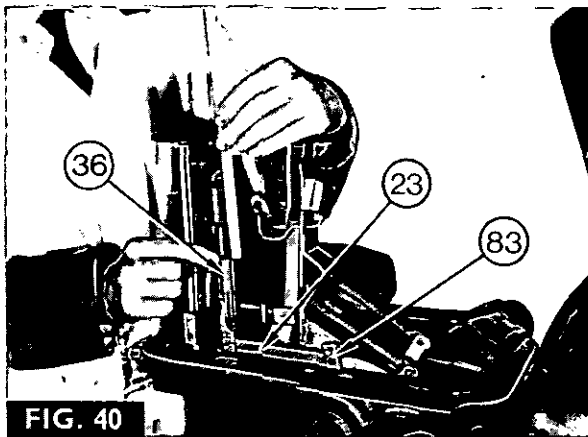


FIG. 37

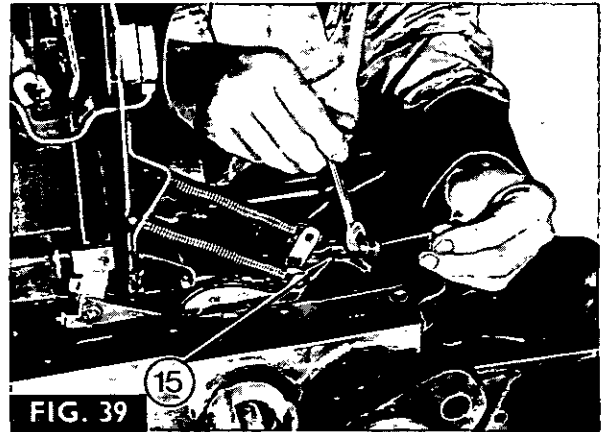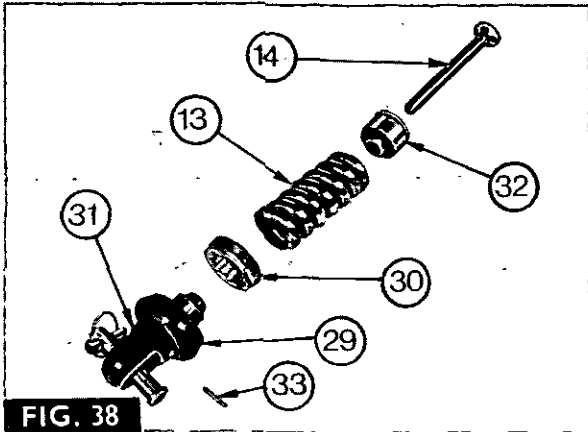HYDRAULIC SYSTEM





## HYDRAULIC SYSTEM

7. Fig 29. Remove the upper guide rod (12) spring retaining pin.
8. Secure the cylinder assembly (3) to the lift cover with the four nuts tightened to a torque of 16,0 kg-m. (120 lb-ft).
9. Remove the lower guide rod (20) spring retaining pin.
10. Refit the response control dashpot as stated in operation 7A-05-21.
11. Refit the pressure control valve as stated in operation 7A-07-22.
12. Fig 27. Refit the position control spring (37) as shown.
13. Refit the lift cover as stated in operation 7A-03-16

## HYDRAULIC ADJUSTMENTS

## External and Internal

7A-12-27

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1.36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

## External Adjustments

- Control Spring Internal and External End Float*
1. Remove the control spring as stated in operation 7A-01-15.
  2. Fig 38. Drive out the pin (33) and screw the plunger (14) into the head (31) until all the end float is eliminated and the spring (13) is tight to turn by hand.
  3. Fit new securing pin (33), and refit the Control Spring Assembly as stated in operation 7A-01-15.

*Lift Arm End Float.*

1. Release the L.H. lift arm tabwasher and slacken the retaining bolt.
2. Fully tighten the R.H. lift arm retaining bolt and secure with a new tabwasher.
3. Tighten the L.H. retaining bolt, so that the lift arms just move freely through their travel with no lift shaft end float, and secure with a new tabwasher.

*Quadrant Location.*

1. Slacken the two bolts securing the quadrant to the support.
2. Turn the position and pressure control quadrant to the central position of the bolt holes and retighten the two bolts.

*Draft Control Rod.*

1. Remove the lift cover as stated in operation 7A-03-16.

2. Place the draft control lever in the fully raised position.
3. Fig 39. With the draft control rod held against the control spring plunger by the linkage retain spring, adjust the setscrew on the draft control rod assembly (15), using tool MF 333 as shown, so that the clearance between the setscrew head and the lift cover casting is 5,8 mm (0.230 in).

*Draft Control*

1. Place the position control lever in the fully lowered position.
2. Figs. 37 and 40. Remove the split pin (83) retaining the pressure control linkage (23) to the support bracket, and remove the linkage complete with adjustment tube (36) spring (25) and spring guide (66).
3. Fig 41. Slacken the locknut and unscrew the socket screw (80) on the vertical link (10) to the end of its thread as shown.
4. Place the draft control lever between the two sector marks on the quadrant.
5. Place the position control lever in the Transport position, making sure the stop is at the end of its travel.
6. Fig 42. Fit wedge tool MF270B (A) to the dashpot piston rod.
7. Position the weight frame tool MF 273 and apply a load of 1,36 Kg (3 lb) to the end of the vertical lever (10) as shown.
8. Adjust the lever fulcrum clevis bolt (41) until the gap between the end of the lever (10) and the dashpot piston rod is 0,051 to 0,102 mm (0.002 to 0.004 in).
9. Tighten the clevis bolt locknut and check the gap.

*Position Control.*

1. Place the draft control lever in the fully raised position.
2. Place the position and pressure control lever in the Transport position.
3. Fig 43. Fit wedge tool MF270B (A) to the dashpot piston rod.
4. Position tool MF 272 into the lift cover as shown, then locate the ram arm (5) onto the tool.
5. Position weight frame tool MF 273 and apply a load of 1,36 kg (3 lb) to the end of the vertical lever (10) as shown.
6. Adjust the socket screw (80) on the vertical lever (10) until the gap between the lever and the dashpot piston rod is 0,051 to 0,102 mm (0.002 to 0.004 in).
7. Tighten the locknut and check the gap.

*Pressure Control Spring.*

1. Fig 37. Refit the pressure control linkage complete with adjustment tube (36), spring (25) and spring guide (66) and secure with a new split pin (83 Fig 40).
2. Place the draft control lever in the fully raised position
3. Place the position and pressure control lever right down to the forward (low) end of the pressure range on the quadrant.
4. Fig 40. Hold the adjustment tube and pressure control lever assembly against the cam to remove end play, then turn the adjustment tube (36) until the distance between the bottom of the tube and the control valve body is 33,4 mm (1  $\frac{5}{16}$  in).

## HYDRAULIC SYSTEM

### Internal Adjustments.

1. Refit the lift cover as stated in operation 7A-03-16.
2. Fill the transmission with recommended oil to the level of the inspection aperture in the centre housing.
3. Attach a weight of 400 kg (900lb) to the lower links.
4. Fig 44. Slacken the upper knurled adjusting screw (81), on the vertical lever (10), right out of contact with the diaphragm plunger.
5. Place the draft control lever in the fully raised position.
6. Set the engine at 400-600 rpm and operate the position control lever through the quadrant range to expel all the air from the system.

### Valve Blow off Position and Drop Rate.

1. Place the position and pressure control lever in the transport position.
2. Fig 45. Fit Wedge tool MF 270B (A) over the dashpot piston rod through the R.H. inspection aperture in the centre housing.

**NOTE: - THE WEDGE TOOL MUST BE HELD FIRMLY IN POSITION WHEN MAKING ADJUSTMENTS.**

3. Place the draft control lever in the fully lowered position.
4. Connect the pressure gauge MF 148A and adapter MF 166 to the tapped port.
5. Start the engine and set the engine speed at 400 to 600 rpm.
6. Screw in the lower knurled adjustment screw (82) on the vertical lever (10) as shown, until the weighted lower links have risen fully and pressure control valve starts to blow off and a gauge reading of approximately 208 to 218 kg/cm<sup>2</sup> (2950 to 3100 lb/in<sup>2</sup>) is obtained.
7. Fig 46. Scribe a line (A) on the lift cover and lift arm, to indicate the start of valve blow off.
8. Scribe two more lines (B) on the lift cover 3,2 mm ( 1/8 in) apart, and about 12,7 mm ( 1/2 in) back from the line (A) as shown.
9. Turn the lower adjustment screw (82) out until the time taken for the scribe line (A) on the lift arm to pass between the two scribe lines (B) on the lift cover is five seconds. (This is equivalent to a rate of drop of 25,4-mm (1 in) per five seconds at the ends of the lower links).
10. Fully raise the draft control lever and remove the wedge tool MF 270B (A).

### Transport Limit Stop.

1. Place the transport limit stop on the quadrant at the end of its travel.
2. Move the position and pressure control lever up against the stop.
3. Slacken the two bolts securing the quadrant to the support.
4. Turn the position and pressure control quadrant, NOT the draft control quadrant, until the lines (A) are 1,6 to 3,2 mm ( 1/16 to 1/8 in) apart.
5. Retighten the quadrant bolts.

### Pressure Control Final Adjustments.

1. Place the position and pressure control lever in the Constant pump position.

2. Fig 47. Screw in the upper knurled adjustment screw (81) on the vertical lever (10) as shown, until the lever (10) moves rapidly from side to side and the needle on the gauge MF 148A begins to fluctuate excessively.
3. Turn out the screw (81) until, the lever (10) is steady, the least amount of fluctuation is shown by the gauge needle, and as little oil as possible comes from the pressure control valve.
4. If the pressure reading on the gauge is not within 208 to 218 kg/cm<sup>2</sup> (2950 to 3100 lb/in<sup>2</sup>); place the position and pressure control lever in the low end of the pressure range on the quadrant.
5. Adjust the pressure control spring tube (up to decrease and down to increase the pressure), until the correct gauge reading is obtained in constant pumping.
6. Recheck the vertical lever (10). See items 2 and 3.
7. Remove the gauge MF 148A and adapter MF 166 and refit the plug.

### Response Control

1. Fig 48. Compress the cap into the plunger and using tool MF 269 tighten the setscrew to a torque of 0,28 to 0,42 kg m (2 to 3 lb-ft) as shown.
2. Fig 49. Refit the response control plate (60) with a new gasket and secure with the five bolts (61) and one screw (59).
3. Remove the plug (62) from the plate as shown.
4. Fig 50. Using tool MF 269 as shown, slaken the setscrew to allow the spring to force the plunger head upwards.
5. Place the response lever 6 mm ( 1/4 in) from the 'slow' position and retighten the setscrew to a torque of 0,28 to 0,42 kg m (2 to 3 lb-ft).
6. Refit the plug and the response cover plate.
7. Refit the R.H. footplate.
8. Add oil to the transmission until the required level is reached
9. Carry out Hydraulic Test Procedure as stated in operation 7A-13-28.

## HYDRAULIC TEST PROCEDURE

7A-13-28

The following test procedure is used for checking the accuracy of the adjustments previously carried out in operation 7A-12-27, with the tractor completely assembled.

Special Tools required: MF 148A Pressure Test Kit  
MF 166 Adapter.  
Rule.

1. Attach a weight of 400kg (900lb) to the lower links.
2. Connect the pressure gauge MF 148A and adapter MF 166 to one of the tapped ports on the lift cover.
3. Start the engine and set the engine speed at 400 to 600 rpm.
4. Place the response control lever in the FAST position.
5. Place the draft control lever in the fully raised position.
6. Place the position control lever in the transport position.
7. Rapidly raise and lower the weight several times using the position control lever, to expel air from the system.

HYDRAULIC SYSTEM

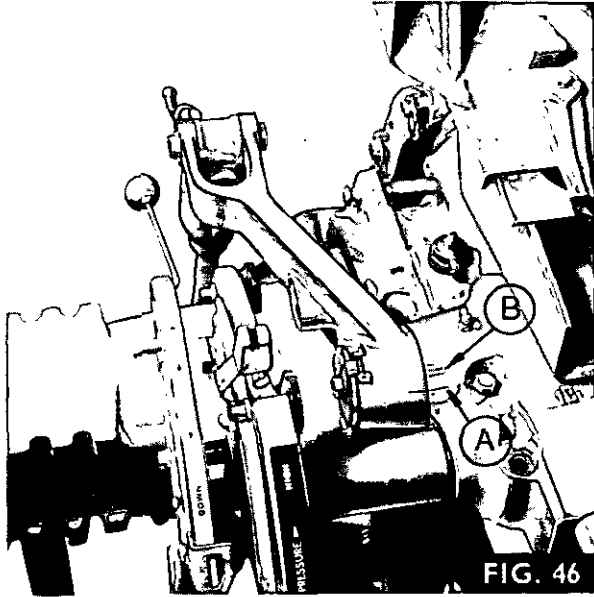


FIG. 46

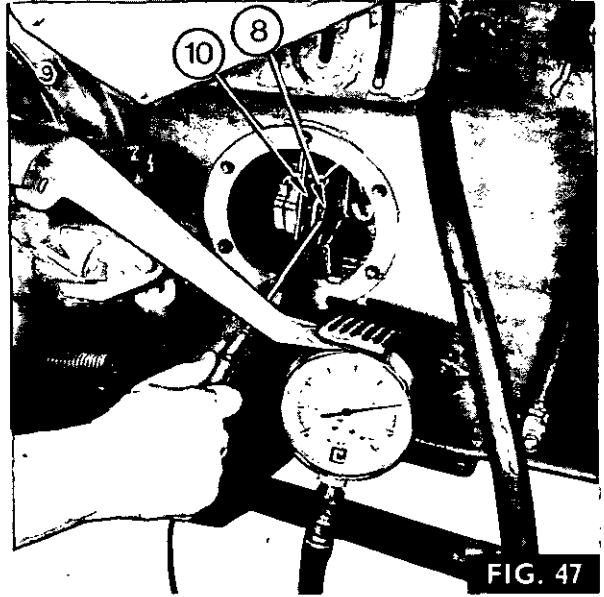


FIG. 47



FIG. 48

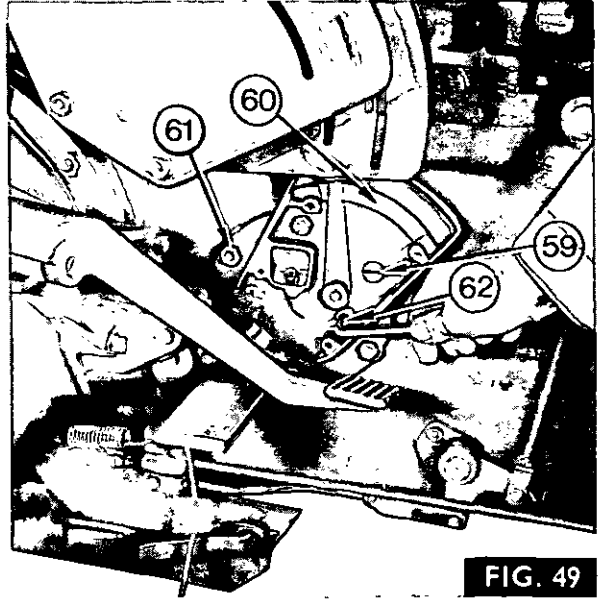


FIG. 49

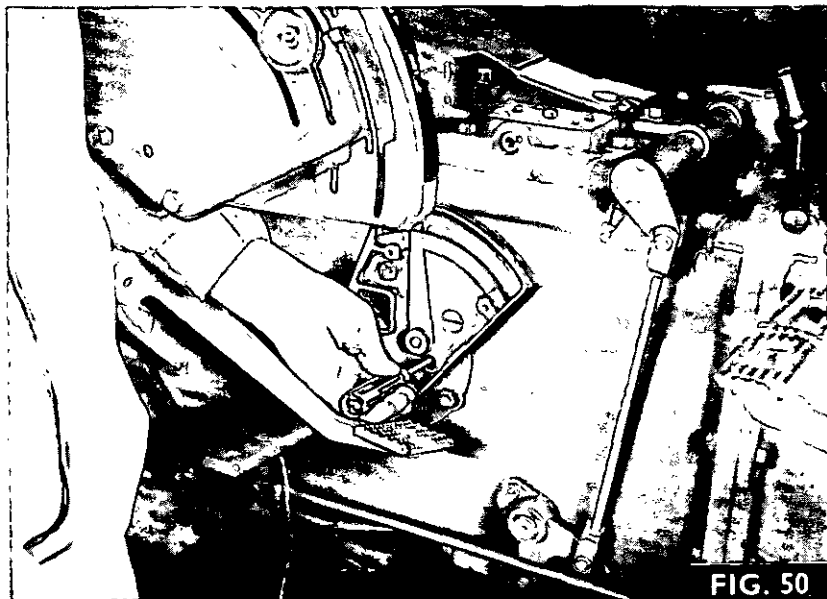


FIG. 50

HYDRAULIC SYSTEM

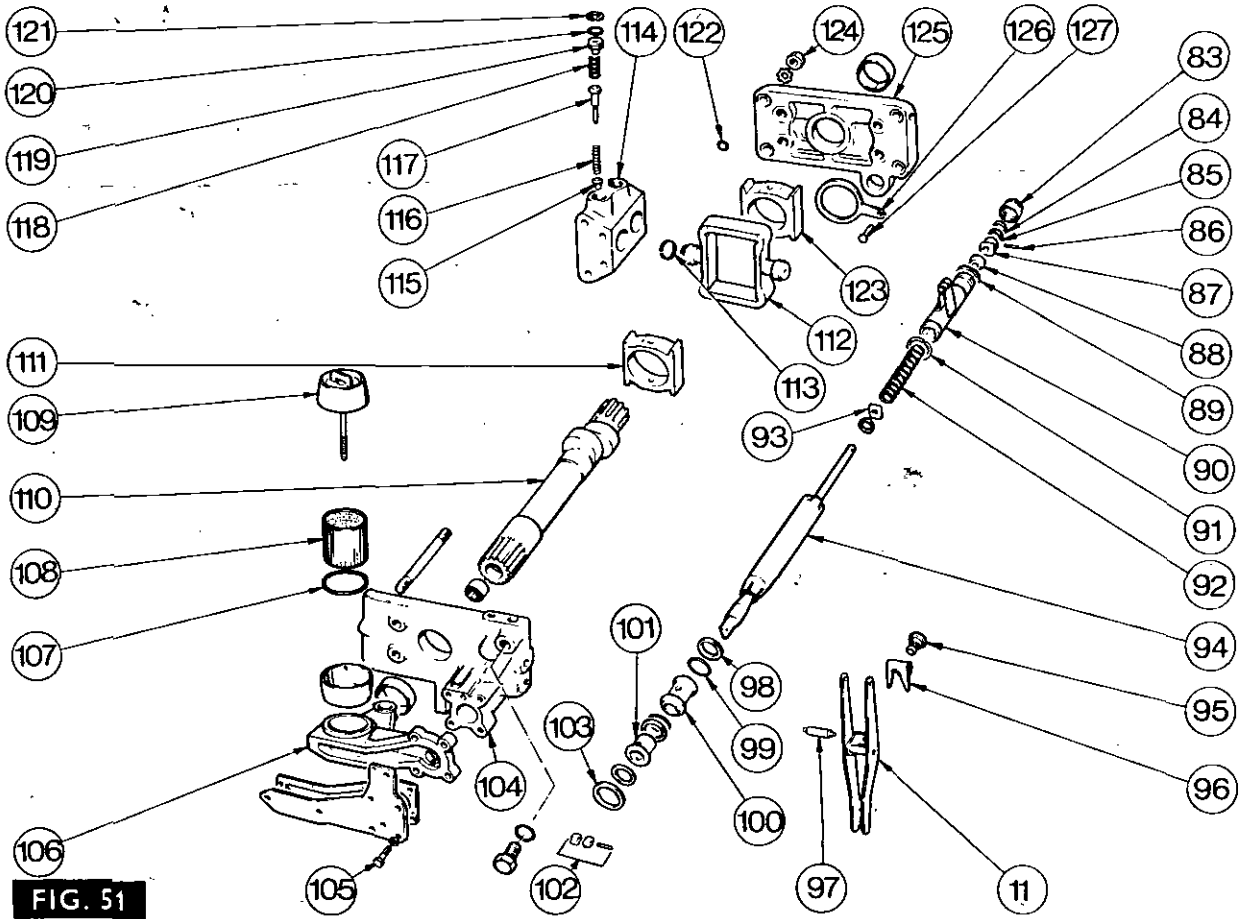


FIG. 51

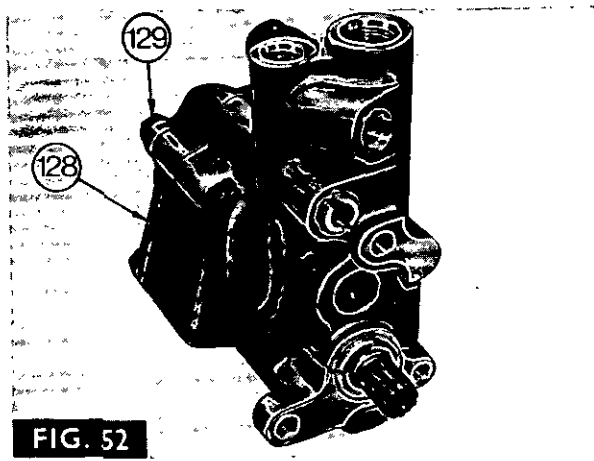


FIG. 52

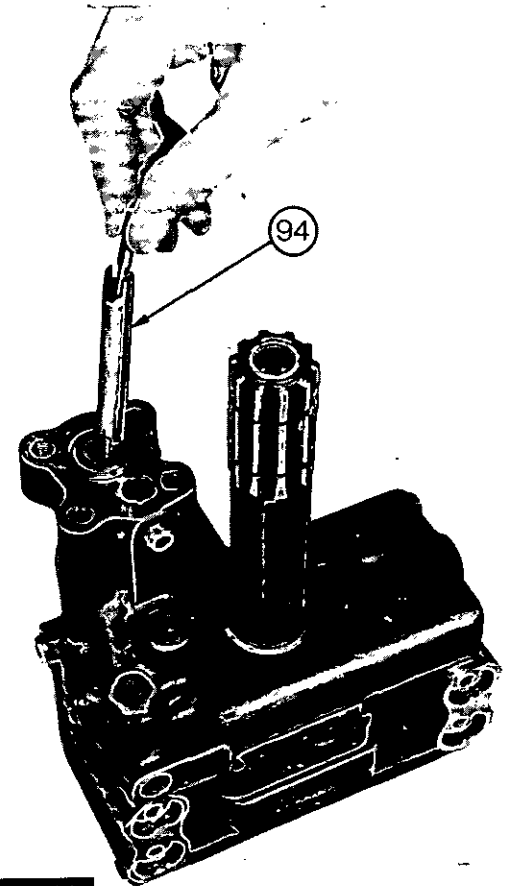


FIG. 54

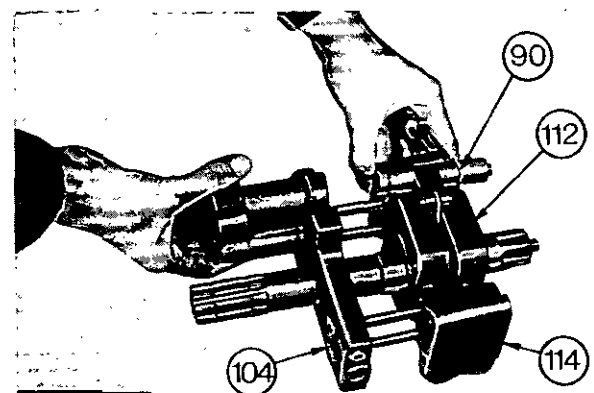


FIG. 53

## HYDRAULIC SYSTEM

*Position Control Test.*

1. Move the position and pressure control lever into the constant pumping sector on the quadrant, a gauge reading of 208 to 218 kg/cm<sup>2</sup> (2950 to 3100 lb/in<sup>2</sup>) should be obtained.
2. Move the lever past the transport position to lower the weight, then return the lever to the transport position against the stop, the scribe lines (A) (Fig. 46) should be 1,6 to 3,2 mm ( $\frac{1}{16}$  to  $\frac{1}{8}$  in) apart.
3. With the response control lever at FAST and then at SLOW, it must be possible, using the position control lever, to raise, lower and hold the weight at any pre-selected height throughout the full range of lower link travel. Any tendency to creep beyond a pre-selected height indicates internal friction or a sticking control valve.
4. Place the response control lever at 'SLOW'.
5. Place the position control lever in transport.
6. Check that the lower links rise to the correct height, scribe lines separated 1,6 to 3,2 mm ( $\frac{1}{16}$  to  $\frac{1}{8}$  in). Any tendency to creep up beyond this point indicates that the dashpot is preventing the pump from shutting off and the vertical lever assembly is mis-adjusted.

*Draft Control Test.*

1. Place the position control lever in transport.
2. Check that the weight can be raised and lowered with the draft control lever.
3. Place the response control lever at SLOW, then fully raise the draft control lever.
4. Check that the lower links rise to the correct height, scribe lines separated 1,6 to 3,2 mm ( $\frac{1}{16}$  to  $\frac{1}{8}$  in), without creeping up beyond this point.
5. With the weight fully supported on the lower links, move the draft control lever and find the position at which the lower links neither raise nor lower. At this point, the draft control lever must be between the sector marks in the quadrant within 6,4 mm ( $\frac{1}{4}$  in).

*Response Control Test*

1. Place the response control lever at 'SLOW'
2. Place the draft control lever in the fully raised position.
3. Rapidly lower the draft control lever and note the time taken for the weighted lower links to fall from the fully raised position to the horizontal position. The drop times must be:

| Oil Temperature | Minimum Drop Time In Seconds |
|-----------------|------------------------------|
| 16°C (60°F)     | 6                            |
| 27°C (80°F)     | 4                            |
| 38°C (100°F)    | 3                            |
| 49°C (120°F)    | 2,5                          |

4. Moving the response control lever progressively from SLOW to FAST, should result in a corresponding increase in the drop rate of the weighted lever links when the draft control lever is rapidly lowered. With the response control lever at FAST, the maximum drop time should be one second at an oil temperature of 49°C (120°F).

*Linkage Radial Drop Test.*

1. Fully raise the weighted lower links by placing the position control lever at transport.
2. Stop the engine.
3. Check that the lift arms continue to support the weight, and that after three minutes the lift arms do not fall more than 8 mm ( $\frac{3}{16}$  in), measured between the scribe times (A Fig 46) using recommended oil at 38°C (100°F) minimum.

## HYDRAULIC PUMP

## Removal and Refitment

7A-14-31

Special Tools required:

- MF 163 Wrench
- MF 271 Draft Control Rod Gauge
- MF 148A Pressure Test Kit
- MF 166 Adapter
- MF 226A Lift Cover Remover and Replacer
- MF 226A-3 Lift Cover Adapter
- MF 269 Wrench
- MF 270B Dashpot Piston Wedge
- MF 271 Roller Tool
- MF 272 Ram Arm Fixture
- MF 273 Hydraulic Setting Fixture
- 1,36 Kg (3 lb) Weight
- Torque Wrench
- Feeler Gauge
- Rule

## Removal

1. Remove the lift cover as stated in operation 7A-03-16.
2. Remove the p.t.o. shaft as stated in Part 5.
3. Remove the L.H. footplate.
4. Remove the L.H. side cover plate as stated in Part 5.
5. Fig 51. Release the locking wire on the stainer head (109) and remove the head, filter (108) and sealing ring (107).
6. Remove the split pin from the shear tube, remove the tube and the rear drive shaft.
7. Disconnect the L.H. and R.H. brake rods at the front clevis pins.
8. Disconnect the L.H. and R.H. parking brake rods at the cross shaft
9. Remove the two nuts each side securing the two dowel pins and remove the pins
10. Fig 52. Remove the four bolts (129) and spring washers securing the end plate (128) to the auxiliary pump (if fitted).
11. Remove the end plate (128) and then the feed pipe.

## HYDRAULIC SYSTEM

**NOTE:** - DO NOT USE A SCREWDRIVER OR ANY SHARP OBJECT TO PRISE THE END PLATE OFF THE PUMP AS DAMAGE WILL OCCUR.

12. Disconnect the multi-power feed pipe at the auxiliary pump (if fitted).
13. Move the hydraulic pump rearwards and manoeuvre the auxiliary pump (if fitted) complete with the plated drive out of the housing.
14. Manoeuvre the hydraulic pump, tailshaft first, out of the housing.

### Refitment

1. Place the hydraulic pump in the rear of the centre housing

**NOTE:** - BEFORE REFITTING THE AUXILIARY PUMP (IF FITTED) AND END PLATE ENSURE THAT THE END PLATE IS NOT SCORED OR DAMAGED, AND REPLACE IF NECESSARY.

2. Place the auxiliary pump (if fitted) into the centre housing and position it in place on the hydraulic pump.
3. Refit the feed pipe, with a new 'O' ring
4. Fig 52. Refit the end plate (128), with a new seal, and secure with the four bolts (129) and spring washers.
5. Slide both pumps rearwards to enable the end plate securing bolts to be tightened to a torque of 5,5 kg m (40 lb-ft).
6. Refit both pumps into position.
7. Place the p.t.o. gear into position and refit the p.t.o. shaft as stated in Part 5.
8. Refit the two dowel pins with new 'O' rings and secure with the two nuts each side.
9. Refit the parking brake rods and secure with the clevis pins and new split pins.
10. Refit the L.H. and R.H. brake rods and secure with the clevis pins and new split pin.
11. Fig 51. Fit a new sealing ring (107) and filter (108) and refit the strainer head (109), securing it with locking wire.
12. Refit the p.t.o. side cover as stated in Part 5, also refit the clutch pedal and the L.H. footplate to the side cover.
13. Reconnect the multi-power feed pipe to the auxiliary pump (if fitted).
14. Refit the rear drive shaft and shear tube and locate the split pin to give 0,38 to 2,54 mm (0.015 to 0.100 in) end float.
15. Refit the lift cover as stated in operation 7A-03-16.

### HYDRAULIC PUMP SERVICING

7A-15-32

Special Tools required:

|                                |                                 |
|--------------------------------|---------------------------------|
| MF 163 Wrench                  |                                 |
| MF 271 Draft Control Rod Gauge |                                 |
| MF 148A Pressure Test Kit      |                                 |
| MF 166 Adapter                 |                                 |
| MF 226A                        | Lift Cover Remover and Replacer |
| MF 226A-3                      | Lift Cover Adapter              |
| MF 196B Valve Seat Cutter Tool |                                 |
| MF 269 Wrench                  |                                 |
| MF 270B Dashpot Wedge          | Piston                          |
| MF 271 Roller Tool             |                                 |

MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

### Disassembly.

1. Remove the hydraulic pump as stated in operation 7A-14-31.
  2. Remove the control valve as stated in operation 7A-16-33.
  3. Fig 51. Remove the four nuts (124) and washers and detach the front body assembly (125).
  4. Fig 53. Withdraw the two valve chambers (114), from the rear body assembly (104), complete with the front cam block (123), pistons (112), cam follower (126) and oscillator assembly (90) and rear cam block (111) as shown.
  5. Fig 51. Separate the valve chambers (114) from the pistons (112) and remove the cam blocks (111 and 123) from the pistons.
  6. Withdraw the camshaft (110) from the rear body assembly (104).
  7. Dismantle the oscillator assembly (90) by removing the snap ring (84), collar (87), guide (88), spring (92), and retainer disc (93).
  8. If necessary remove the split pin and clevis pin (127) retaining the cam follower (126) to the oscillator assembly.
  9. Dismantle each valve chamber by removing the retaining ring (121) 'O' ring (120) plug (119), outlet valve spring (118) outlet valve (117) inlet valve spring (116) and inlet valve (115).
- Examine all parts for wear, damage, scoring or pitting and replace if necessary.

### Reassembly.

1. Recut the valve seats in the valve chambers (114) if necessary, using tool MF 196B.
2. Refit the inlet valve (115), inlet valve spring (116), outlet valve (117), outlet valve spring (118), plug (119), 'O' ring (120) and secure with a new retaining ring (121).
3. Refit the retainer disc (93), spring (92), guide (88) and roller (87) with the oscillator and secure with a new snap ring (84).
4. Secure the cam follower to the oscillator with the clevis pin (127) and a new split pin.
5. Fit new 'O' rings (122) into place on the front and rear bodies (104 and 125)
6. Refit the valve chambers (114) onto the pistons, with new piston rings (113) if necessary.
7. Place the cam follower (126) between the pistons.
8. Place the camshaft (110), with the front and rear cam blocks (111 and 123) into the pistons.
9. Refit the rear body (104) making sure the oscillator housing aligns with the aperture in the rear body.
10. Refit the front body (125) and secure it with the four nuts (124) and washers, tightened to a torque of 4,8 kg m (35 lb-ft).
11. Refit the control valve as stated in operation 7A-16-33.
12. Refit the hydraulic pump as stated in operation 7A-14-31.

## HYDRAULIC SYSTEM

## CONTROL VALVE

## Removal and Refitment 7A-16-33

Special Tools required: MF 163 Wrench  
 MF 271 Draft Control Rod Gauge  
 MF 148A Pressure Test Kit  
 MF 166 Adapter  
 MF 226A Lift Cover Remover and Replacer  
 MF 226A-3 Lift Cover Adapter  
 MF 269 Wrench  
 MF 270B Dashpot Piston Wedge  
 MF 271 Roller Tool  
 MF 272 Ram Arm Fixture  
 MF 273 Hydraulic Setting Fixture  
 1,36 Kg (3 lb) Weight  
 Torque Wrench  
 Feeler Gauge  
 Rule

## Removal.

1. Remove the hydraulic pump as stated in operation 7A-14-31.
2. Fig 51. Remove the clip (96) and stud (95), lever (11) and the two rollers and pin (102).
3. Remove the four bolts (105) and washer securing the oil strainer housing (106) to the pump, and detach the housing.
4. Remove the oscillator body cap (83) and retaining ring (85).
5. Extract the pin (86) from the collar (87) and the oscillator drive rod in the control valve (94).
6. Fig. 54. Withdraw the control valve (94) from the pump as shown.

7. Fig. 51. Remove the spacer washer (103), washer (98), intake chamber (101), washer (98), 'O' ring (99), discharge chamber (100), 'O' ring (99) and washer (98) from the pump.

*Examination*

Fit the three washers (98) to the control valve (94) and check that the diametral clearance between each washer and the valve is 0,0051 to 0,0102 mm (0.0002 to 0.0004 in), then remove the washers from the valve.

**NOTE** – ANY PARTS WHICH SHOW SIGNS OF WEAR, SCORING OR PITTING MUST BE REPLACED.

## Refitment.

1. Refit the following parts into the rear body of the pump in this order. Washer (98), 'O' ring (99), discharge chamber (100), 'O' ring (99), washer (98), intake chamber (101), washer (98), spacer washer (103).
2. Insert the valve assembly (94) into the pump, centralising the valve into the three washers (98). Operate the valve to ensure centralisation.
3. Refit the pin (86) to the collar (87) and oscillator drive rod in the control valve.
4. Secure the pin (86) with the retaining ring (85) fitted to the groove in the collar (87).
5. Refit the oscillator body cap (83).
6. Refit the oil strainer housing (106) to the pump and secure with the four bolts (105) and washers.
7. Refit the lever (11) and secure it to the control valve with the two rollers and pin (102).
8. Refit the stud (95) and clip (96).
9. Fit a new sealing ring (107) and filter (108), refit the strainer head (109) and secure with locking wire.
10. Refit the hydraulic pump as stated in operation 7A-14-31.

## HYDRAULIC SYSTEM (MARK III PUMP)

## PART 7 SECTION A

| Operation<br>No. | Table of Contents                     | Page<br>No. |
|------------------|---------------------------------------|-------------|
|                  | GENERAL                               | 36          |
| 7A—01—38         | CONTROL SPRING ASSEMBLY               | 38          |
| 7A—02—38         | Removal and Refitment<br>Servicing    |             |
|                  | HYDRAULIC LIFT COVER                  | 38          |
| 7A—03—38         | Removal and Refitment                 |             |
| 7A—04—41         | Servicing                             |             |
|                  | RAM CYLINDER                          | 42          |
| 7A—05—42         | Servicing                             |             |
|                  | HYDRAULIC LINKAGE                     | 42          |
| 7A—06—42         | Removal and Refitment                 |             |
|                  | QUADRANT AND SUPPORT ASSEMBLY         | 42          |
| 7A—07—42         | Removal and Refitment                 |             |
| 7A—08—42         | Servicing                             |             |
|                  | HYDRAULIC ADJUSTMENTS                 | 46          |
| 7A—09—45         | External Adjustments                  |             |
| 7A—10—46         | Internal Adjustments                  |             |
|                  | HYDRAULIC PUMP                        | 49          |
| 7A—11—49         | Removal and Refitment                 |             |
| 7A—12—49         | Servicing                             |             |
| 7A—13—53         | Control Valve Removal and Refitment   |             |
|                  | PRESSURE CONTROL VALVE                | 53          |
| 7A—14—53         | Removal and Refitment                 |             |
| 7A—15—53         | Servicing                             |             |
|                  | STRAINER HOUSING AND RESPONSE CONTROL | 54          |
| 7A—16—54         | Removal and Refitment                 |             |
| 7A—17—54         | Servicing                             |             |



**HYDRAULIC SYSTEM (MARK III PUMP)****GENERAL**

The Ferguson hydraulic system comprises a four cylinder scotch yoke type pump (1) which delivers oil, through a vertical pipe (2) to the cylinder (3).

A connecting rod (4) from the cylinder piston (5) engages in the ram arm (6) which is splined on to the lift shaft (7) which carries the linkage lift arms.

When oil, under pressure from the pump, is delivered to the ram cylinder (3), the piston is forced rearwards and pushes the ram arm upwards, causing the lift shaft to rotate and raise the lift arms.

The hydraulic pump is driven by the p.t.o. drive from the p.t.o. clutch plate, via the gearbox constant mesh gears and the p.t.o. drive shaft whose splines engage in the front end of the pump.

Dowel pegs, fitted through each side of the centre housing, prevent the pump from rotating.

Mounted on the right hand rear end of the pump is a control valve (9), which meters the quantity of oil being fed to the pump pistons and also allows oil to return from the ram cylinder. An oscillator, attached to the pump camshaft partially rotates the control valve to prevent it from sticking in its sleeve.

When using Draft Control, movement of the lever down the quadrant actuates the internal linkage which moves the control valve to the discharge position. As the implement enters the ground a force down the top link actuates the internal linkage which moves the control valve to the neutral position. Any variation in the force down the top link moves the control valve to the intake and the discharge positions, maintaining the implement at the pre-set depth. When the lever is fully raised the control valve moves to the full intake position, and when the lift arms reach their transport position, the Position Control linkage moves the valve to the neutral position.

When using Position Control, movement of the lever down the quadrant actuates the internal linkage which moves the control valve to the discharge position. As the lift arms lower, the cam on the ram arm actuates the internal linkage which moves the control valve to the neutral position. When the TRANSPORT position is selected the control valve moves to the full intake position, and when the lift arms reach their transport position, the cam actuates the internal linkage which moves the control valve to the neutral position.

Response Control, incorporated in the pump, regulates the speed that the control valve moves to the discharge position, and therefore can control the initial rate of flow from the ram cylinder and the speed of drop of an implement. Movement of the Response Control lever actuates an internal

slide valve (11), which varies the size of an orifice in the intake gallery, from which oil can escape. When the control valve moves to the discharge position, oil has to be displaced from the intake gallery. The oil is prevented from returning through the strainer by a non-return valve (8), therefore it must pass through the inlet gallery orifice. The slide valve (11) controls the size of the orifice and therefore the speed of movement of the control valve.

The Pressure Control system enables the pressure in the ram cylinder to be regulated from 7 to 179 kg/cm<sup>2</sup> (100 to 2550 lb/ft<sup>2</sup>)—MF 148 Tractor and 7 to 211 kg/cm<sup>2</sup> (100 to 3000 lb/in<sup>2</sup>)—MF 165, 168, 185 and 188 Tractors. One of the uses for this system is with semi-trailed implements fitted with depth control wheels. By suitable adjustment of the Pressure Control lever, part of the weight of the implement is supported by the tractor linkage, thus obtaining weight transfer to the tractor rear wheels and increasing traction.

The Pressure Control valve (12) consists of a ball valve, held on a seat by a spring, a secondary relief valve and a diaphragm.

Setting the Pressure Control lever in the LOW position moves the control valve, under the influence of its spring, to the intake position. The pump supplies oil to the ram cylinder, and the lower links rise until the Pressure Control Coupler chain becomes tight. As the chain prevents the lower links from lifting any higher a pressure is created in the system, which moves the control valve towards neutral to reduce the flow. The excess oil escapes through the secondary relief valve.

Moving the Pressure Control lever towards the HIGH position, for more weight transfer, increases the pressure on the spring which seats the ball. Oil in the diaphragm escapes through the secondary relief valve and the diaphragm allows the control valve to move to the full intake position. The pump provides the increase in pressure until the ball valve is lifted. When the desired increase in pressure is achieved, oil enters the diaphragm which moves the control valve to a reduced flow situation.

As the tractor travels over undulations the lower links will rise and fall. When the lower links are pulled down, the excess oil is expelled through the secondary relief valve. When the Pressure Control Coupler Chain goes slack, the pressure in the system drops. Oil escapes from the diaphragm through the secondary relief valve and the control valve moves to the intake position. The lower links quickly rise and re-tension the chain, which again builds up the pressure and lifts the ball valve, and the diaphragm moves the control valve to reduce the flow.

HYDRAULIC SYSTEM (MARK III PUMP)

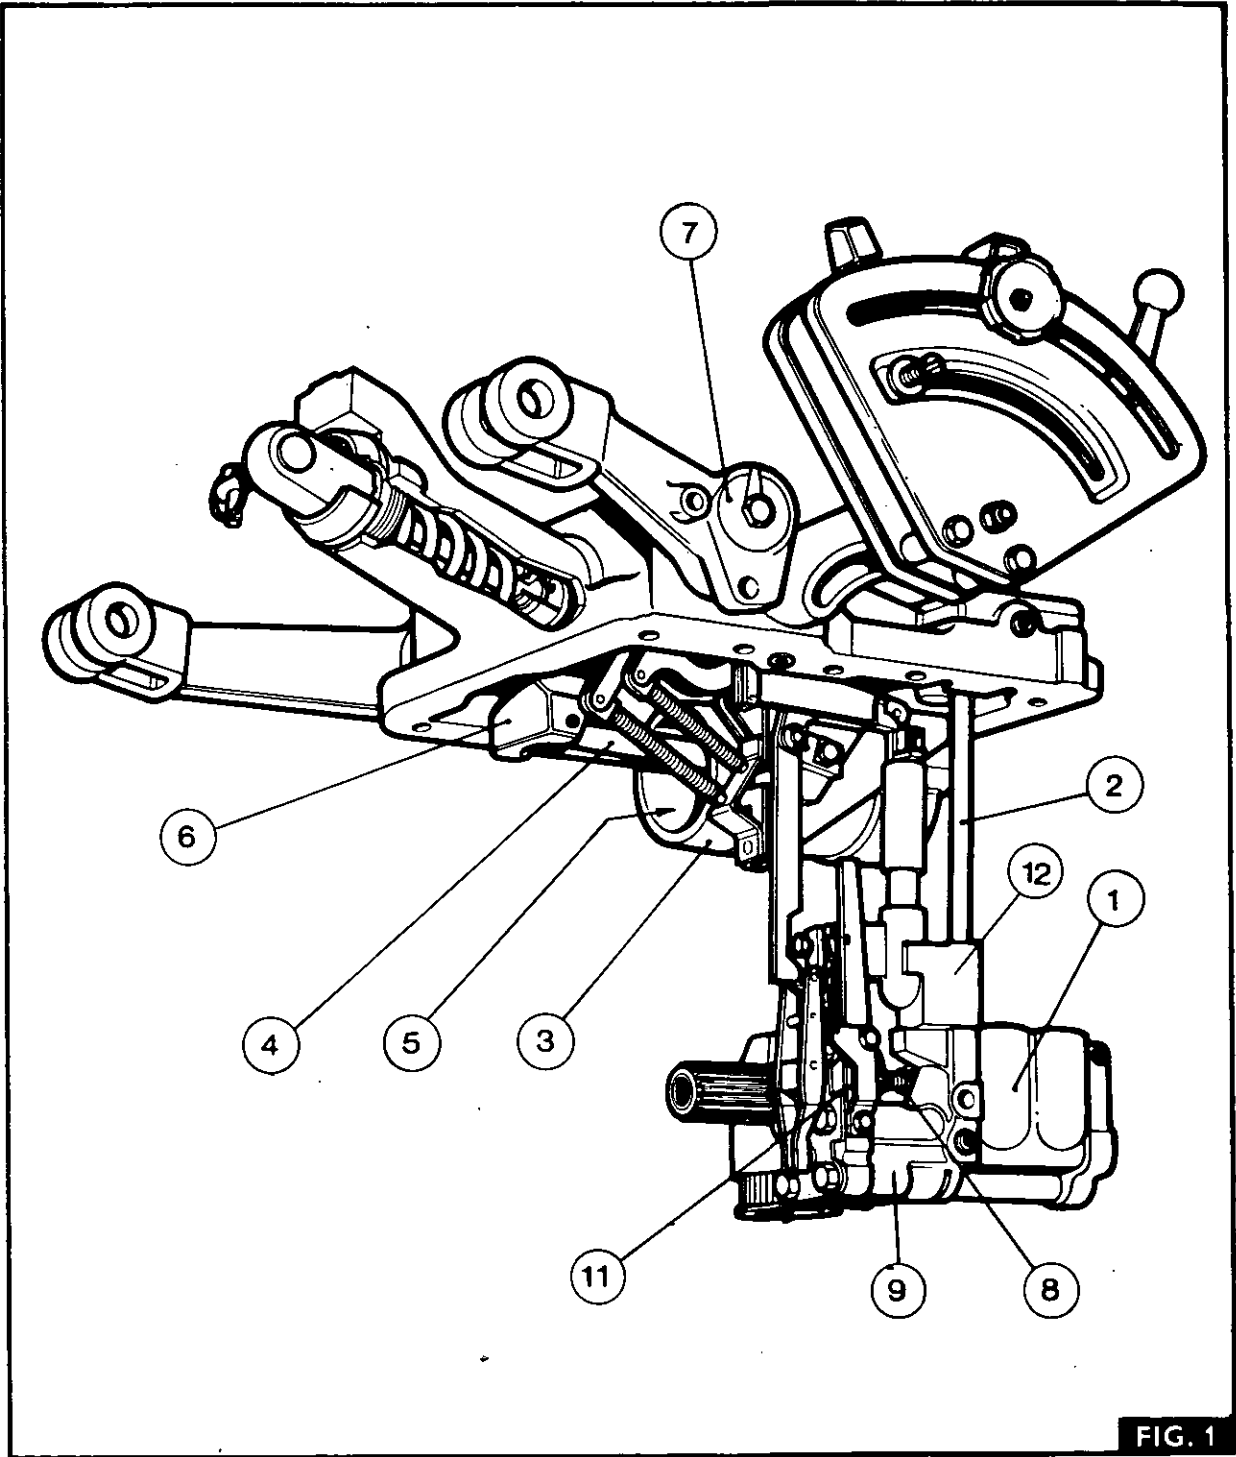


FIG. 1

**HYDRAULIC SYSTEM (MARK III PUMP)****CONTROL SPRING ASSEMBLY****Removal and Refitment** 7A—01—38Special tools required:— MF 163 Wrench.  
Torque Wrench.**Figs. 2 and 3****Removal**

1. Remove the control beam.
2. Fig. 2. Remove the Allen screw (14).
3. Pull back the rubber boot (15).
4. Using MF 163, unscrew the retainer (13) from the lift cover.
5. Fig. 3. Withdraw the control spring assembly from the lift cover, as shown.
6. Remove the nylon plug.

**Refitment**

1. Fig. 3. Slide the control spring assembly into the lift cover.
2. Place the Draft Control lever in the fully DOWN position.
3. Fig. 2. Tighten the retainer (13), using MF 163, until all the end float is eliminated. Do not overtighten the retainer, otherwise the end float will reappear.
4. Refit the rubber boot (15).
5. Fit a new nylon plug, then refit and tighten the Allen screw (14) to a torque of 0,7 kg m (5 lbf ft).
6. Refit the control beam.

**CONTROL SPRING ASSEMBLY****Servicing** 7A—02—38Special tools required:— MF 163 Wrench.  
Torque Wrench.**Figs. 4 and 5****Disassembly**

1. Remove the control spring assembly as stated in operation 7A—01—38.
2. Fig. 4. Drive out the pin (17) and detach the head (18).
3. Remove the retainer (13), control spring (10) and spring seat (19) from the plunger (16).

**Reassembly**

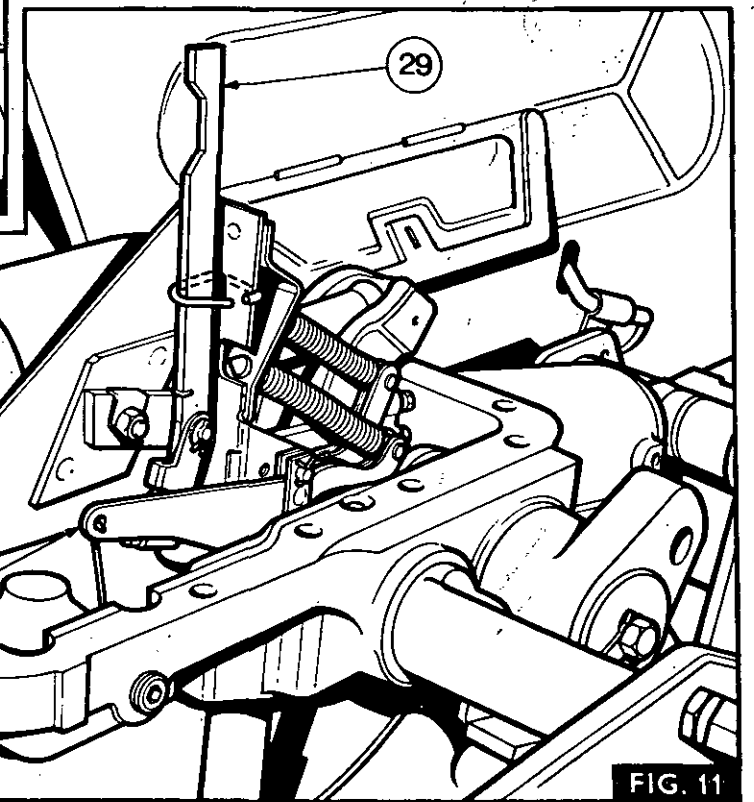
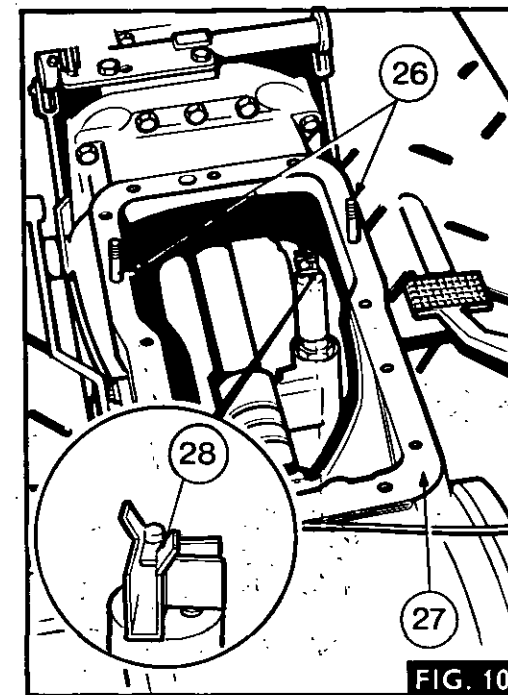
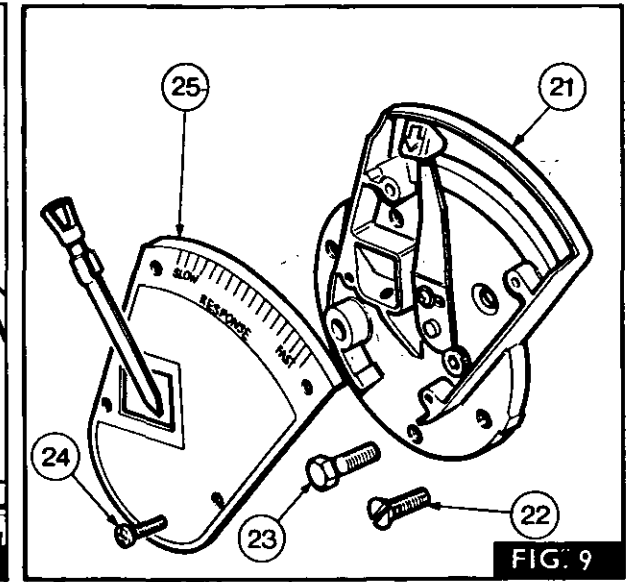
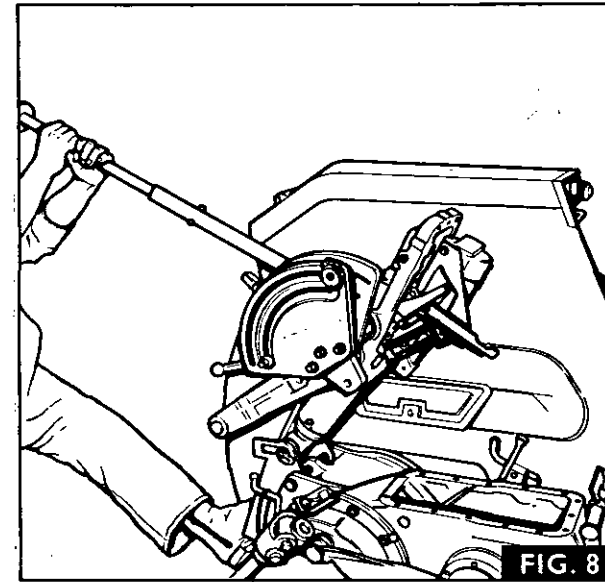
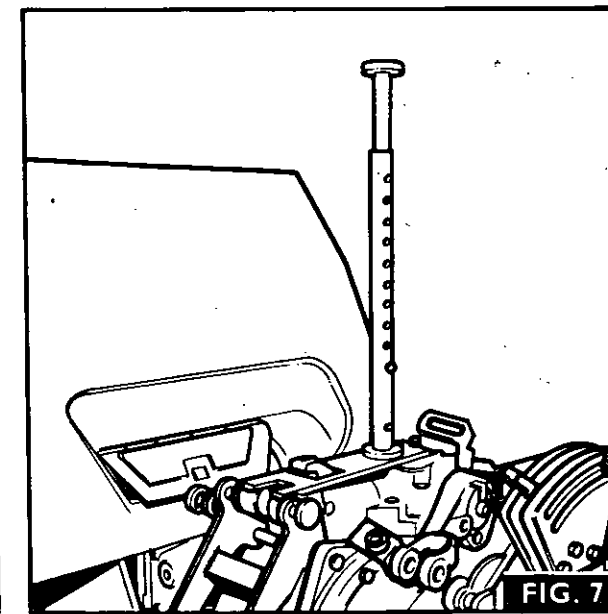
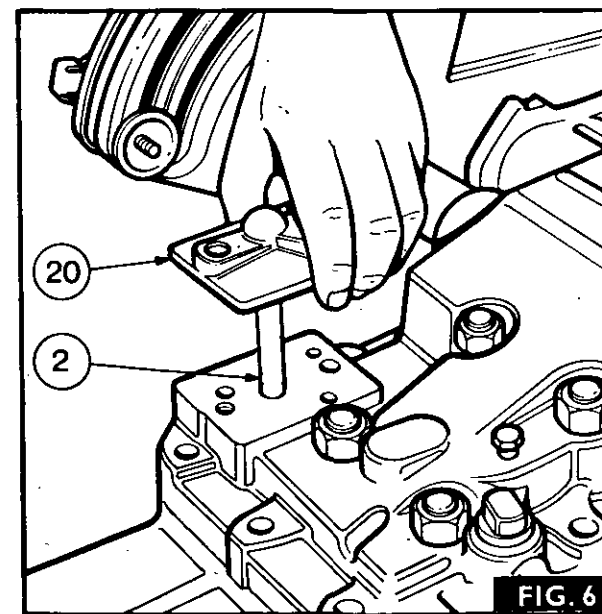
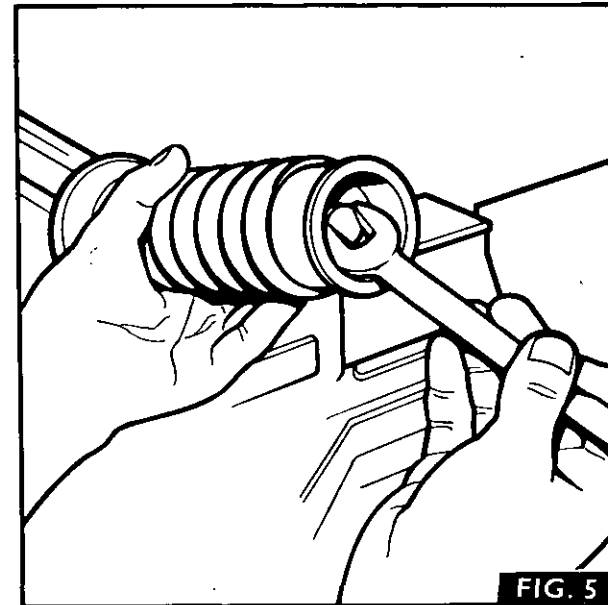
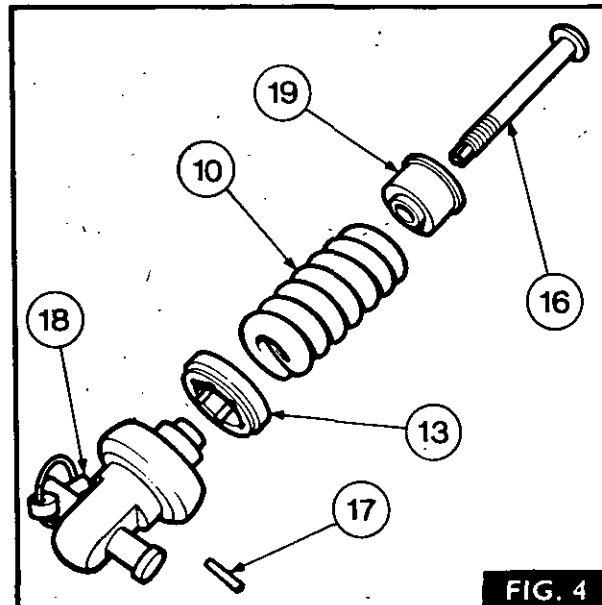
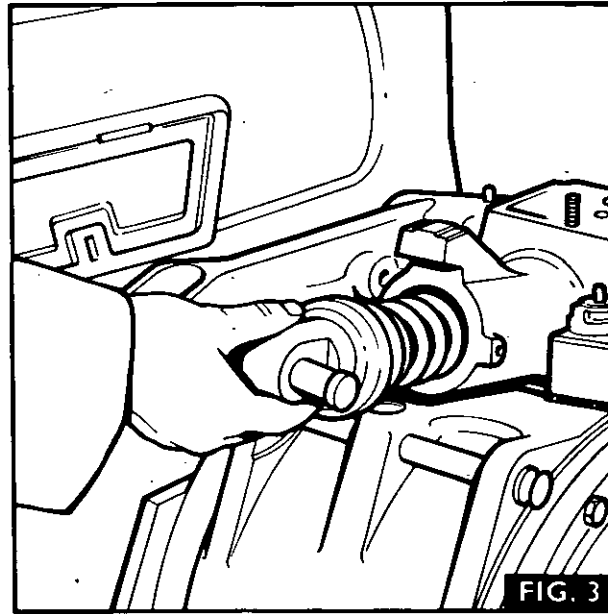
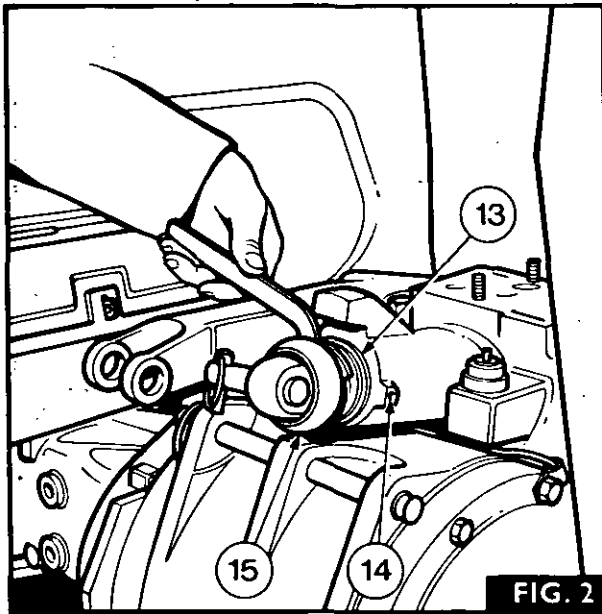
1. Fig. 4. Refit the spring seat (19), spring (10) and retainer (13) to the plunger (16).
2. Fig. 5. Screw the plunger into the head, until all the end float is eliminated and the spring is tight to turn, by hand.
3. Fig. 4. Fit a new securing pin (17).
4. Refit the control spring assembly as stated in operation 7A—01—38.

**HYDRAULIC LIFT COVER****Removal and Refitment** 7A—03—38Special tools required:— MF 163 Wrench.  
MF 148A Pressure Test Kit.  
MF 166 Adapter.  
MF 226A Lift Cover Remover and Replacer.  
MF 226A-3 Lift Cover Adapter.  
MF 272 Ram Arm Fixture.  
MF 273 Hydraulic Setting Fixture.  
MF 333 Draft Control Rod Gauge.  
MF 356 Position and Draft Control Setting Gauge.  
MF 357 Screwdriver Adjuster.  
MF 359 Pressure Control Bleed Pipe.  
1,4 kg (3 lb) weight.  
Torque Wrench.  
Rule.**Figs. 6 to 11****Removal**

1. Remove the seat.
2. Disconnect the lift rods from the lift arms.
3. Remove the control beam.
4. Disconnect the Auto-Hitch (if fitted) at the lift arms.
5. Fig. 6. Fully lower the links, then remove the two bolts and spring washers securing the standpipe cap (20), then remove the cap, withdrawing the standpipe (2).
6. Remove the bolts securing the lift cover to the centre housing.
7. Place the parking brake clear of the lift cover ('S' line tractors only).
8. Fig. 7. Fit MF 226A and MF 226A—3 to the lift cover, as shown.
9. Place the Draft Control lever in the fully UP position and the Position Control lever in the TRANSPORT position.
10. Fig. 8. Taking care not to damage any parts, detach the lift cover from the centre housing as shown, and place the support leg on the ground.
11. Drain the oil to the LOW mark on the dipstick.
12. Fig. 9. Remove the four screws (24) securing the Response Control cover plate (25) and remove the plate.
13. Remove the five bolts (23) and the screw (22) securing the side cover (21) to the centre housing, then remove the cover. (To facilitate side cover removal, it may be necessary to remove the rear footstep bracket).

**Refitment****NOTE—BEFORE REFITTING THE LIFT COVER THE EXTERNAL ADJUSTMENTS SPECIFIED IN OPERATION 7A—09—45 MUST BE CARRIED OUT.**





**HYDRAULIC SYSTEM (MARK III PUMP)**

1. Fig. 10. Fit the two guide studs (26) to the centre housing, as shown.
2. Fit a new lift cover gasket (27).
3. Position the Pressure Control adjuster assembly (28), as shown.
4. Place the lift arms in the down position.
5. Fig. 11. Using suitable pieces of wire retain the vertical lever (29) and the Pressure Control link (30), as shown.
6. Fig. 8. Taking care not to damage any parts, manoeuvre the lift cover assembly into position, over the guide studs, onto the centre housing, ensuring that the Pressure Control link locates in the Pressure Control adjuster assembly.
7. Remove the two guide studs, MF 226A, MF 226A—3 and the two pieces of wire retaining the vertical lever and Pressure Control link.
8. Fig. 6. Carefully locate the standpipe (2) through the lift cover and into the bore in the hydraulic pump.
9. Refit the standpipe cap (20) and secure it with the two bolts and spring washers.
10. Secure the lift cover and the parking brake ('5' line tractors only) to the centre housing and tighten the bolts to a torque of 9 kg m (65 lbf ft).
11. Refit the control beam.
12. Secure the lift rods to the lift arms.
13. Refit the Auto-Hitch (if fitted) to the lift arms.
14. Carry out the internal adjustments, as stated in operation 7A—10—46.
15. Refit the seat.

**HYDRAULIC LIFT COVER****Servicing**

7A—04—41

Special tools required:— See operation  
7A—03—38.

**Figs. 12 to 22****Disassembly**

1. Remove the lift cover as stated in operation 7A—03—38.
2. Fig. 13. Remove the split pin (31) and the washer retaining the Pressure Control link (30), and remove the link.
3. Release the tabwasher, then remove the nut (33), tabwasher and spacer (32) on the slide pivot (37).
4. Release the spring (34) on the vertical lever (29).
5. Fig. 14. Remove the Position Control spring (35).
6. Release the slide pivot (37) from the bolt.
7. Fig. 15. Fit a pair of pins (38) to retain the springs (39) on their rods.
8. Fig. 16. Remove the four nuts securing the ram cylinder (3) to the lift cover, then lift off the ram cylinder, taking care not to damage the vertical lever (29).
9. Fig. 17. Remove the connecting rod (4) and the Allen screw (40).
10. Using a No. 10 32 UNF × 11 mm ( $\frac{7}{8}$  in) bolt remove the pin (41), securing the quadrant support (42) to the lift cover, as shown.
11. Fig. 18. Withdraw the quadrant support (42) and the Belleville spring (43) and shim, simultaneously lifting out the vertical lever (29) and the cams (44 and 45).
12. Fig. 19. Remove the Allen plug (46) in the left hand side of the lift cover, then remove the linkage pivot shaft retaining screw (47).
13. Fig. 20. Withdraw the linkage pivot shaft (48) as shown, then lift out the links (49 and 50).
14. Fig. 12. Remove the bolt (51) and tabwasher, then slide off the right hand lift arm (52).
15. Figs. 12 and 21. Drive the lift shaft (7) and the remaining lift arm (53) out of the lift cover, then remove the ram arm (6). Remove the 'O' rings (54).

**Reassembly**

1. Fig. 12. Place the ram arm (6) in the lift cover, then slide the lift shaft (7), complete with a new 'O' ring (54) into the lift cover and through the ram arm (6), aligning the master splines.
2. Refit the right hand lift arm (52), plus a new 'O' ring (54) aligning the master spline.
3. Refit the bolt (51) and the tabwasher.
4. Fig. 20. Place the Position Control link (50) and the Draft Control link (49) in position, then slide in the linkage pivot shaft (48).
5. Fig. 18. Refit the vertical lever (29) and the cams (44 and 45), simultaneously sliding the quadrant support (42), complete with the shim and the Belleville spring (43)—concave towards the lift cover, into position.
6. Fig. 22. Secure the quadrant support (42) to the lift cover by compressing the Belleville spring and driving in the pin (41).
7. Fig. 19. Ensuring that the linkage pivot shaft (48) is fully located against the side of the lift cover, retighten the Allen screw (47), then refit the plug (46) to the left hand side of the lift cover.
8. Degrease the threads of the Allen screw (40) and the threads in the ram arm (6), then locate the connecting rod (4) in its socket.
9. Apply one drop of Loctite 270 'Stud Lock' to the threads of the Allen screw (40). Screw the Allen screw into the ram arm until it bottoms on the annular groove in the connecting rod, then back it off  $\frac{1}{4}$  turn.
10. Fit a new 'O' ring (55) to the ram cylinder feed port.
11. Fig. 16. Refit the ram cylinder and support bracket assembly to the lift cover, relocating the connecting rod in the piston and the two rods in the holes in the support bracket.
12. Refit the four ram cylinder securing nuts and tighten them to a torque of 16 kg m (120 lbf ft).
13. Fig. 15. Remove the guide rod spring retaining pins (38).
14. Fig. 14. Refit the position Control spring (35).
15. Fig. 13. Locate the spring (34) on the vertical lever (29) and on the slide pivot (37).
16. Fig. 12. Locate the slide pivot (37) on the bolt, then refit the spacer (32), tab washer and the nut (33).
17. Refit the Pressure Control link (30) and secure it with the washer and the split pin (31).
18. Refit the lift cover as stated in operation 7A—03—38.

**HYDRAULIC SYSTEM (MARK III PUMP)****RAM CYLINDER****Servicing** 7A—05—42Special tools required:— See operation  
7A—03—38.**Figs. 12 to 16****Disassembly**

1. Remove the ram cylinder, as stated in items 1 to 8 of operation 7A—04—41.
2. Fig. 12. Remove the bolts (56) securing the support bracket (57) to the ram cylinder (3).
3. Withdraw the piston (5) from the ram cylinder, then if necessary, remove the piston rings (58).

Examine all components for wear, or damage, replacing any defective components. Details of dimensions and tolerances of the ram cylinder are given in the specification.

**Reassembly**

1. If necessary, fit the piston rings (58) to the piston (5).
2. Refit the piston to the ram cylinder (3).
3. Bolt the support bracket (57) to ram cylinder (3) with the bolts (56).
4. Refit the ram cylinder, as stated in items 10 to 18 of operation 7A—04—41.

**HYDRAULIC LINKAGE****Removal and Refitment** 7A—06—42Special tools required:— See operation  
7A—03—38.**Figs 12 to 20 and 22.****Removal**

1. Remove the linkage as stated in items 1 to 8, and 10 to 13 of operation 7A—04—41.

**Refitment**

1. Refit the linkage, as stated in items 4 to 7, and 10 to 18 of operation 7A—04—41.

**QUADRANT AND SUPPORT ASSEMBLY****Removal and Refitment** 7A—07—42Special tools required:— See operation  
7A—03—38.**Figs. 12 to 18 and 22.****Removal**

1. Remove the quadrant and support assembly as stated in items 1 to 8, 10 and 11 of operation 7A—04—41.

**Refitment**

1. Refit the quadrant and support assembly, as stated in items 5 to 7 and 10 to 18 of operation 7A—04—41.

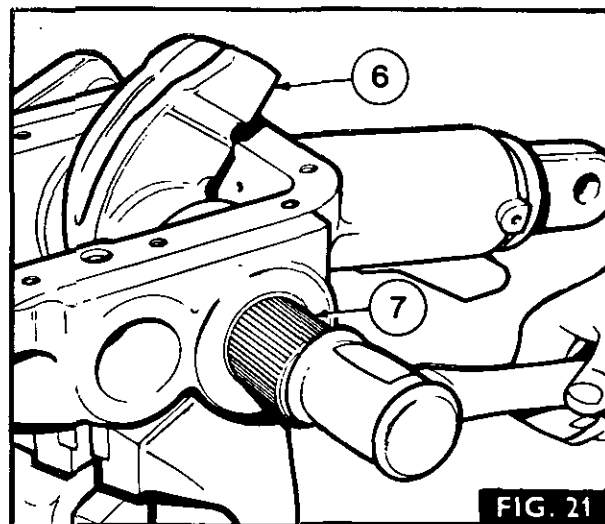
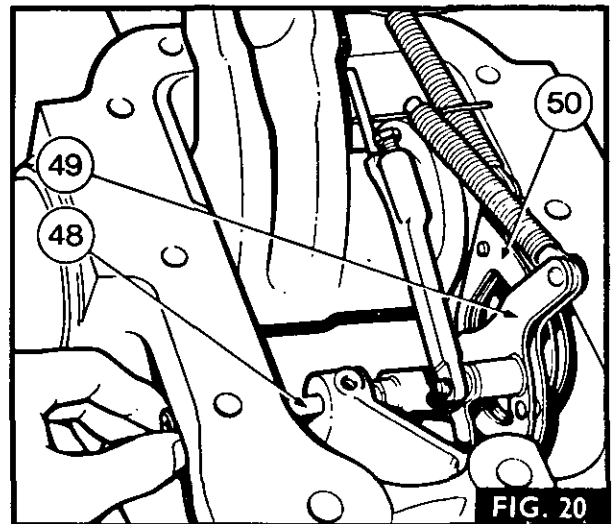
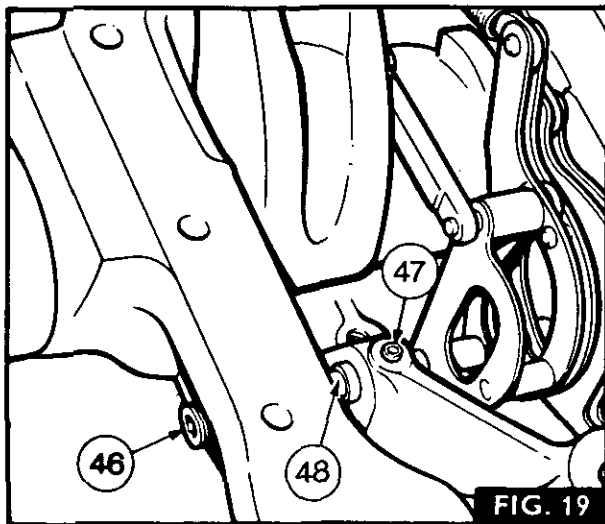
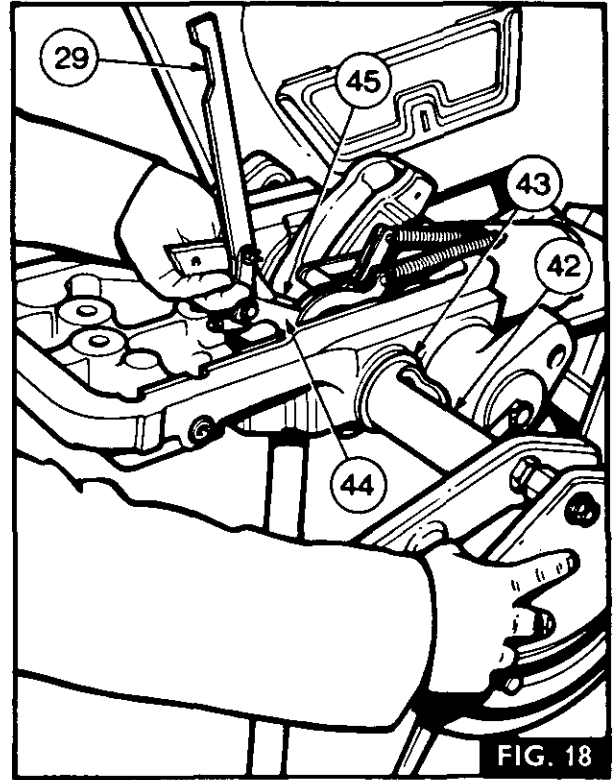
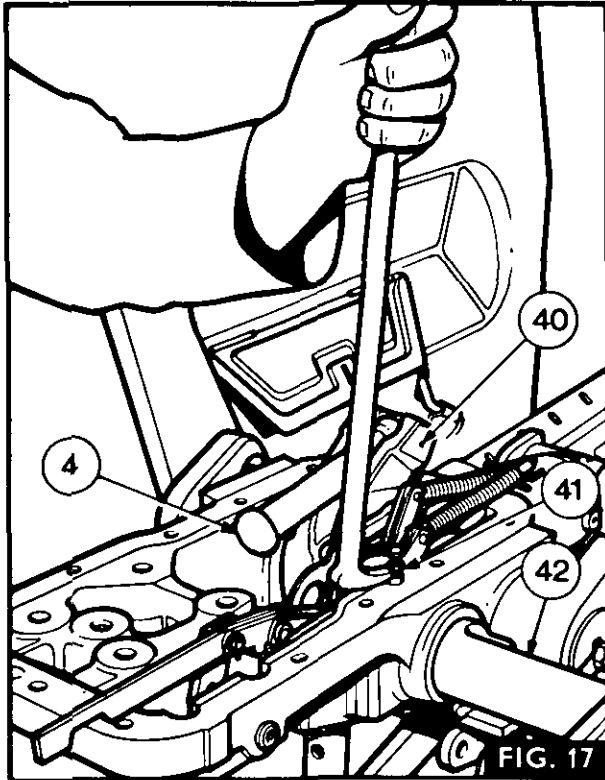
**QUADRANT AND SUPPORT ASSEMBLY****Servicing** 7A—08—42Special tools required:— See operation  
7A—03—38.**Fig. 23.****Disassembly**

1. Remove the quadrant and support assembly, as stated in operation 7A—07—42.
2. Fig. 23. Remove the two bolts (59) and washers securing the outer quadrant (61).
3. Remove the nut (60) securing the lever (64) to the Draft Control shaft (67), and remove the outer quadrant, complete with the lever.
4. Remove the two spacer bolts (74) securing the inner quadrant (66) to the support (42).
5. Drive out the pin (68), and remove the inner quadrant (66), complete with the lever (65).
6. If necessary, remove the levers (64 and 65) and the stop knobs (63) from the quadrants.
7. Withdraw the Draft Control shaft (67) from the support (42).
8. Remove the circlip (70), and withdraw the Position Control shaft (71) from the support.
9. Remove the 'O' rings (72) and the bush (69).

**Reassembly**



1. Fit new 'O' rings (72) to the shafts and the support.
2. Slide the Position Control shaft (71) into the support (42) and refit the circlip (70).
3. Fit the bush (69) into the Pressure Control shaft, then slide the Draft Control shaft (67) into the Pressure Control shaft.
4. If necessary, refit the levers (64 and 65) and the stop knobs (63) to the quadrants. Assemble the friction washers, as shown, in the following order:— steel washer (75), polyurethane washer (76), with the shiny side against the quadrant (61 and 66), nylon washer (77), steel washer (75), and then tighten the screw (62), to give a clearance of approximately 20 mm (0.75 in) between the screw head and the steel washer.
5. Refit the inner quadrant (66), locating the lever on its shaft (71), and secure the quadrant to the support with the two spacer bolts (74).
6. Fit a new pin (68), as shown.
7. Refit the outer quadrant (61), locating the lever (64) on its shaft (67) and secure the quadrant with two bolts (59) and washers.
8. Secure the Draft Control lever (64) to its shaft (67) with the nut (60). Do not overtighten the nut (60) as the pin (68) will shear and the roller (73) will not turn freely.
9. Refit the quadrant and support assembly, as stated in operation 7A—07—42.

HYDRAULIC SYSTEM (MARK III PUMP)





HYDRAULIC SYSTEM (MARK III PUMP)

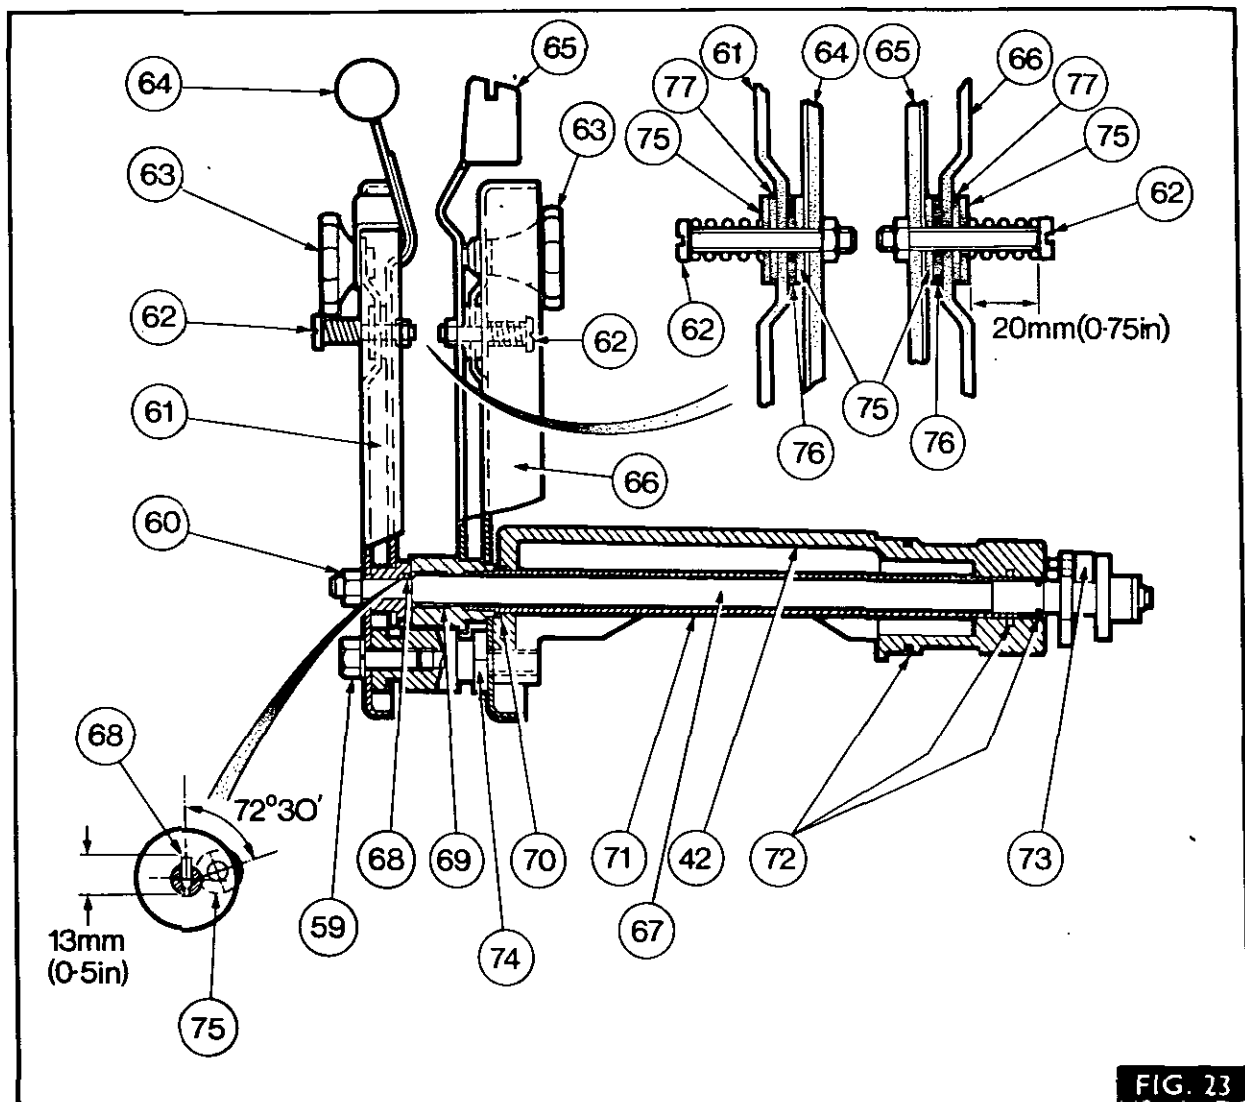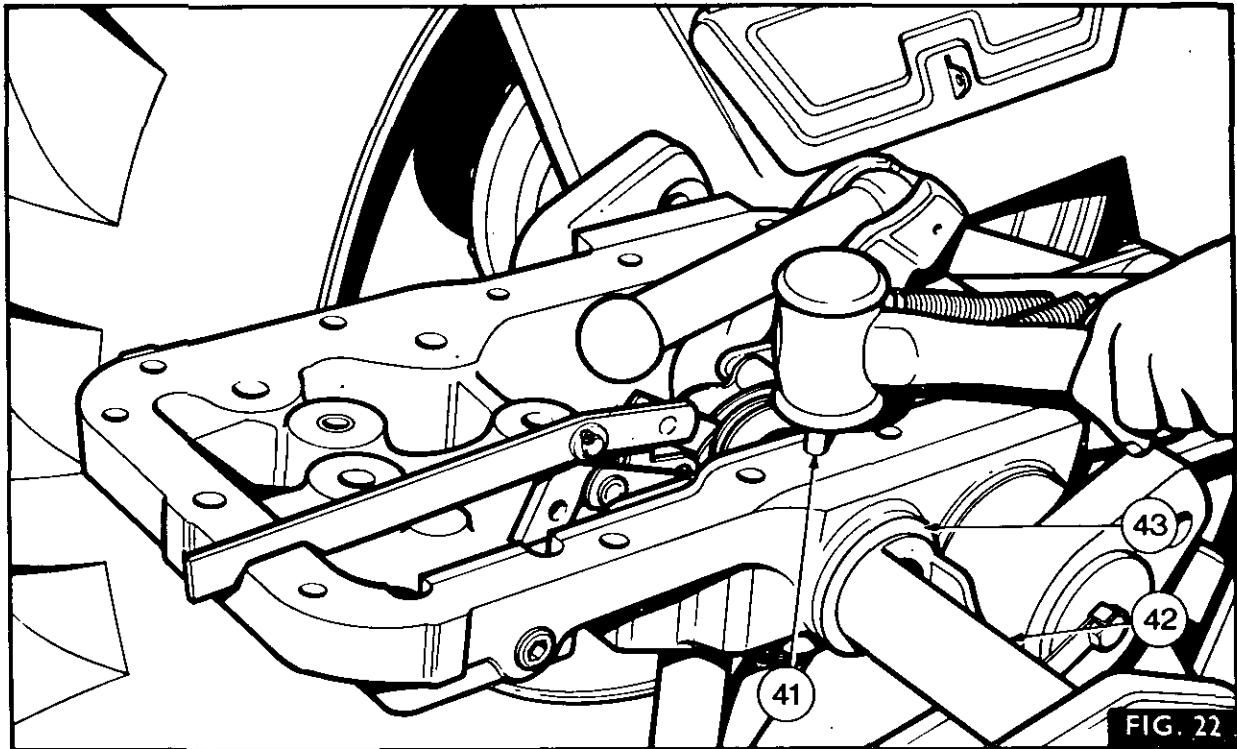

**HYDRAULIC SYSTEM (MARK III PUMP)****HYDRAULIC ADJUSTMENTS****External Adjustments** 7A—09—45Special tools required:— See operation  
7A—03—38**Figs. 12 and 23 to 29****Procedure:—**

1. Remove the lift cover, as stated in operation 7A—03—38

**Control Spring Internal and External End Float**

1. Fig. 24. Remove the Allen screw (14).
2. Pull back the rubber boot (15).
3. Using MF 163, unscrew the retainer (13) from the lift cover.
4. Withdraw the control spring assembly from the lift cover.
5. Remove the nylon plug.
6. Fig. 25. Drive out the pin (17) and screw the plunger (16) into the head (18) until all the end float is eliminated and the spring (10) is tight to turn, by hand.
7. Fit a new securing pin (17).
8. Slide the control spring assembly into the lift cover.
9. Fig. 24. Place the Draft Control lever in the fully DOWN position, and using a suitable wedge (36), ensure that the draft rod (79) is not touching the control spring plunger.
10. Tighten the retainer (13) using MF 163 until all the end float is eliminated. Do not over-tighten the retainer, otherwise the end float will reappear.
11. Refit the rubber boot (15).
12. Fit a new nylon plug, then refit and tighten the Allen screw (14) to a torque of 0,7 kg m (5 lbf ft).
13. Remove the wedge (36).

**Lift Arm End Float**

1. Fig. 12. Release the tabwasher securing the bolt in the left hand arm (53), then slacken the bolt (51).
2. Fully tighten the right hand lift arm retaining bolt and secure with the tabwasher.
3. Tighten the left hand retaining bolt (51) until the lift arms will move freely throughout their range, but without any end float.
4. Secure the bolt with the tabwasher.

**Quadrant Location**

1. Fig. 23. Slacken the two bolts (59) and the spacer bolts (74) securing the quadrants to the support.
2. Locate the inner quadrant (66) in the centre of the elongated holes and secure it with the two spacer bolts (74), then locate the outer quadrant (61) in the centre of the elongated holes and secure it with the two bolts (59).

**Draft Control Rod**

1. Place the Draft Control lever in the fully UP position.
2. Fig. 26. Using MF 333, adjust the setscrew on the Draft Control rod (79) to give a clearance of 5,8 mm (0.230 in) between the setscrew head and the lift cover casting, as shown.

**Draft Control**

1. Fig. 27. Slacken the locknut and unscrew the Allen screw (78), on the vertical lever (29), to the end of the thread.
2. Release the tabwasher and slacken the nut (33) on the vertical lever slide pivot (37).
3. Place the Draft Control lever between the sector marks on the quadrant.
4. Place the Position Control lever in the TRANSPORT position.
5. Position MF 273 (A) on the lift cover and apply a load of 1,4 kg (3 lb) to the end of the vertical lever as shown.
6. Locate MF 356 (B) on the lift cover as shown.
7. Adjust the vertical lever slide pivot (37) until the vertical lever (29) just contacts the pin on MF 356.
8. Tighten the slide pivot nut (33), recheck the vertical lever (29) position and secure the nut with the tabwasher.

**Position Control**

1. Place the Draft Control lever in the fully UP position.
2. Place the Position Control lever in the TRANSPORT position.
3. Fig. 28. Position MF 272 (C) onto the lift cover as shown, then locate the ram arm onto the tool.
4. Position MF 273 (A) on the lift cover and apply a load of 1,4 kg (3 lb) to the end of the vertical lever as shown.
5. Locate MF 356 (B) on the lift cover as shown.
6. Adjust the Allen screw (78) on the vertical lever (29) until the vertical lever just contacts the pin on MF 356.
7. Tighten the locknut and check the position of the vertical lever.

**Pressure Control**

1. Fig. 29. Set the Pressure Control adjuster (28) so that the adjusting screw (30) is in the middle of its travel.
2. Set the diaphragm adjusting setscrew (81) to an initial setting of 14 mm ( $\frac{1}{2}$  in), taken between the lever and the outside head of the setscrew, as shown.
3. Refit the lift cover, as stated in operation 7A—03—38.

**HYDRAULIC SYSTEM (MARK III PUMP)****HYDRAULIC ADJUSTMENTS**

Internal Adjustments 7A—10—46

Special tools required:— MF 148A Pressure Test Kit.  
MF 166 Adapter.  
MF 357 Screwdriver Adjuster.  
MF 359 Pressure Control Bleed Pipe.  
Rule.

Figs. 29 and 30 to 34

**Preparation for Internal Adjustments**

1. Attach a weight of 400 kg (900 lb) to the lower links.
2. Place the Draft Control lever in the fully DOWN position.
3. Connect the pressure test kit MF 148A and adapter MF 166 to the tapped port in the lift cover.
4. Remove the side cover as stated in items 11 to 13 of operation 7A—03—38, then locate MF 359 in the orifice in the Pressure Control valve body (as shown in Fig.31) and place the other end in the side cover aperture, so that the oil is returned to sump.
5. Place the Draft Control lever in the fully UP position.
6. Start the engine and set the engine speed at 'tick-over', then operate the Position Control lever through the quadrant range to expel all the air from the system.  
Warm up the oil in the transmission to a temperature of 50 to 70°C (120 to 169° F).

**Pressure Control Maximum Setting**

1. Place the Draft Control lever in the fully DOWN position.
2. Fig. 30. Remove the rear bolt from the stand pipe cap and fit MF 357.
3. Place the Draft Control lever in the fully UP position.
4. Place the Position Control lever in the CONSTANT PUMPING position.
5. Start the engine and set the engine speed at 1200 rev/min.
6. Using MF 357 adjust the Pressure Control adjusting screw (80, Fig. 29) to give:—  
MF 148 Tractor— 179 kg/cm<sup>2</sup> (2550 lbf/in<sup>2</sup>)  
MF 165, 168, 185 and 188 Tractors—  
211 kg/cm<sup>2</sup> (3000 lbf/in<sup>2</sup>)
7. Fully lower the links and stop the engine, then remove MF 357 and refit the existing bolt.

**Pressure Control Final Adjustment**

1. Fig. 31. Remove the tube, of MF 359, from the side cover aperture and place it in a five litre (one gallon) container.
2. Start the engine and set the engine speed at 1200 rev/min.
3. Place the Draft Control lever in the fully UP position.
4. Place the Position Control lever in the CONSTANT PUMPING position.
5. Adjust the diaphragm setscrew (81, Fig. 29) until a flow of 5 litre/40s (1 Imp. gal/35s) is obtained.
6. Stop the engine, and place the tube, of MF 359, in the side cover aperture, so that the oil is returned to sump.

**NOTE**—THE FOLLOWING METHOD CAN BE USED AS AN ALTERNATIVE, BUT IT MUST BE EMPHASISED THAT IT IS AN APPROXIMATE SETTING AND THE FIRST METHOD SHOULD BE CARRIED OUT AS SOON AS THE OPPORTUNITY ARISES.

1. Start the engine and set the engine speed at 1200 rev/min.
2. Place the Draft Control lever in the fully UP position.
3. Place the Position Control lever in the CONSTANT PUMPING position.
4. Fig. 29. Screw the diaphragm setscrew (81) in until the needle on the gauge begins to fluctuate.
5. Screw the setscrew out until the fluctuations cease, then unscrew a further EIGHT flats.
6. Stop the engine.

**Position Control Setting**

1. Place the Draft Control lever in the fully UP position.
2. Place the Position Control lever in the CONSTANT PUMPING position.
3. Start the engine and set the engine speed at 1200 rev/min.
4. Fig. 32. When the links are fully raised, scribe a line (A) across the top cover casting and the lift arm.
5. Place the Position Control lever in the TRANSPORT position.
6. The links should drop until the scribe lines are 1,6 to 4,7 mm ( $\frac{1}{16}$  to  $\frac{3}{16}$  in) apart.
7. If the distance is incorrect, slacken the bolts (59) and spacer bolts (74) securing the quadrants and rotate the inner quadrant (66) and lever until the setting is correct.
8. Tighten the quadrant spacer bolts (74) and recheck the setting.

**Draft Control Setting**

1. Place the Position Control lever in the TRANSPORT position.
2. Start the engine, and set the engine speed at 1200 rev/min.
3. Using the Draft Control lever set the lower links in the horizontal position.
4. Fig. 33. The Draft Control lever should be in the sector marks on the quadrant, if not, slacken the bolts (59) securing the outer quadrant (61) and rotate the quadrant until the links remain stationary in the horizontal position with the lever in the sector marks.
5. Tighten the quadrant bolts (59) and recheck the setting.
6. Stop the engine and fully lower the links, then remove MF 359, MF 148A and MF 166.

**Response Control**

1. Fig. 34. Refit the Response Control side cover (21), with a new gasket and secure it with the five bolts (23) and the screw (22).
2. Release the locking screw (82) and place the Response Control lever (83), 6 mm ( $\frac{1}{4}$  in) from the SLOW position.
3. Rotate the inner adjusting lever (84), until the cam just contacts the Response Control lever on the pump, and tighten the screw (82).
4. Refit the Response Control cover plate and secure it with the four screws.
5. Add approved oil to the transmission until the required level is reached.

HYDRAULIC SYSTEM (MARK III PUMP)

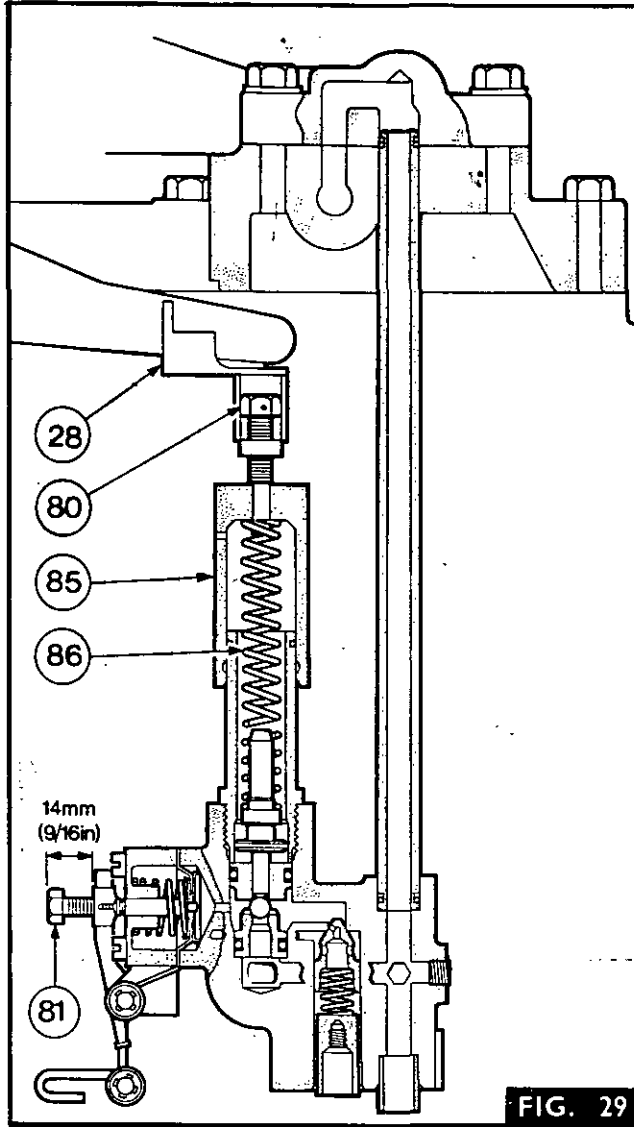


FIG. 29

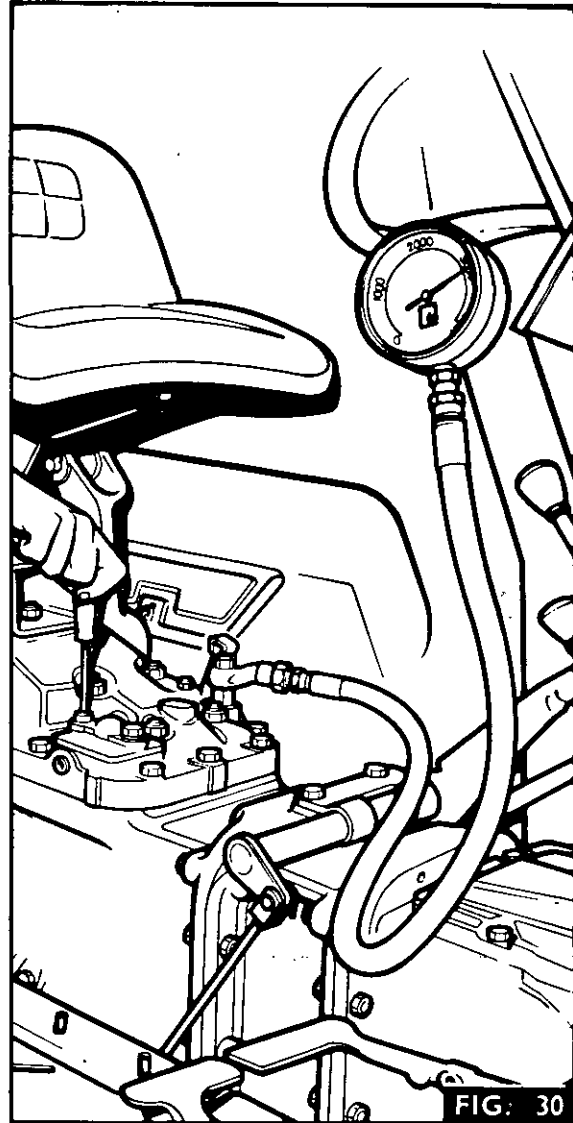


FIG. 30

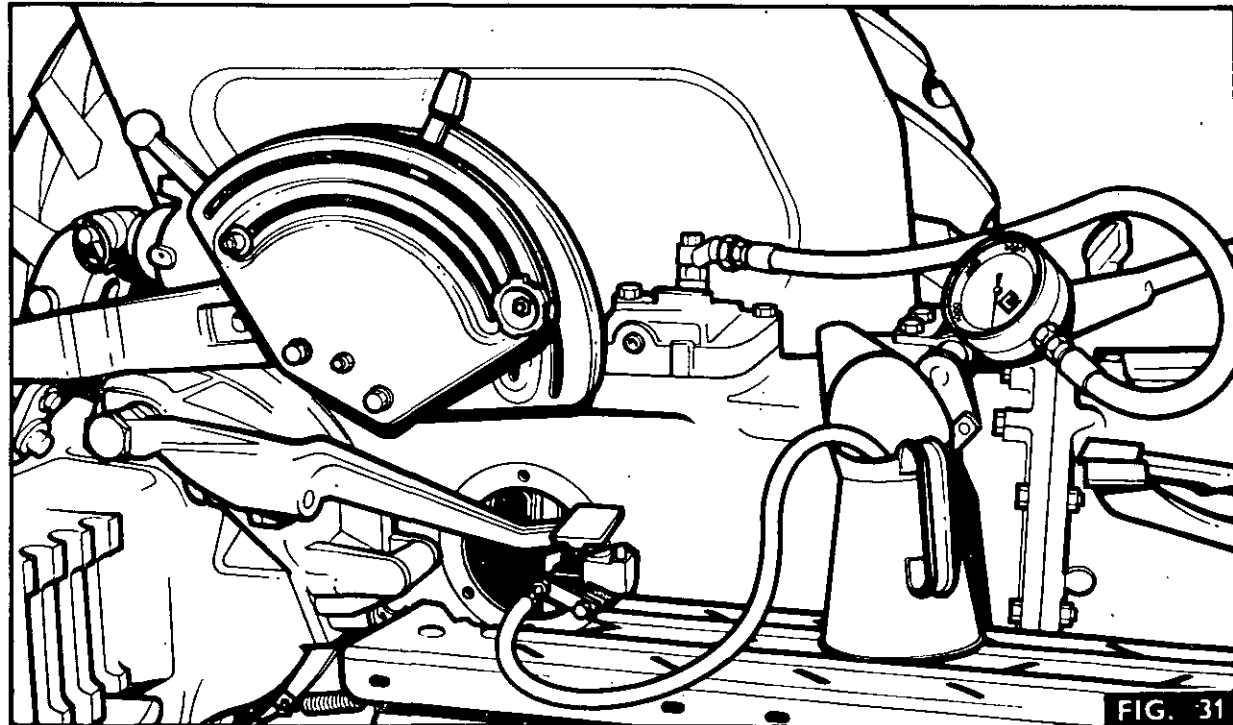


FIG. 31

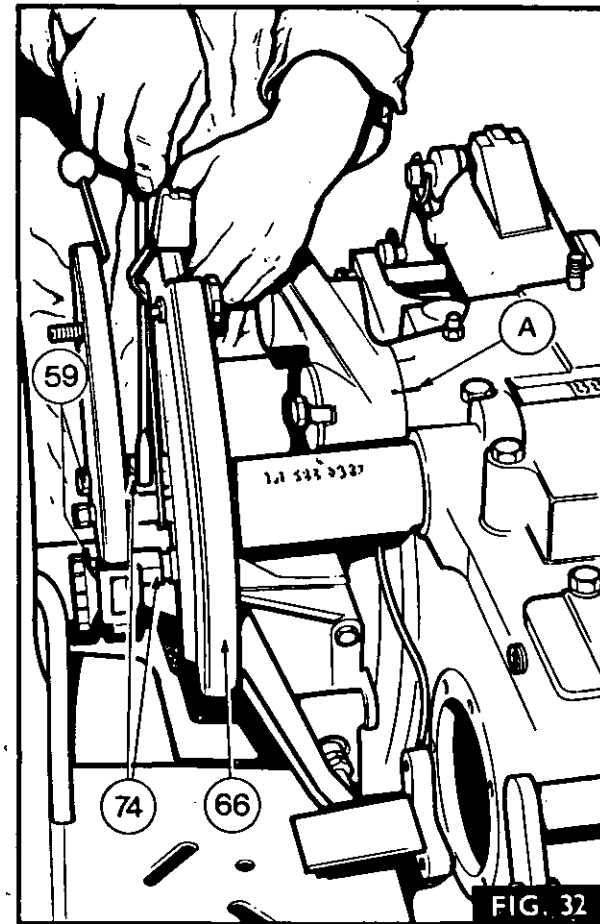


FIG. 32

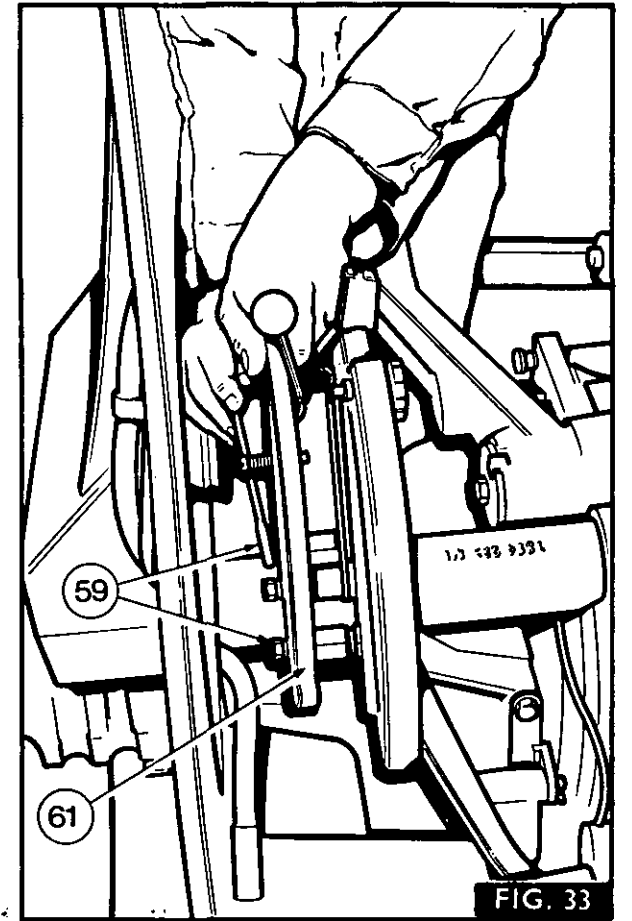


FIG. 33

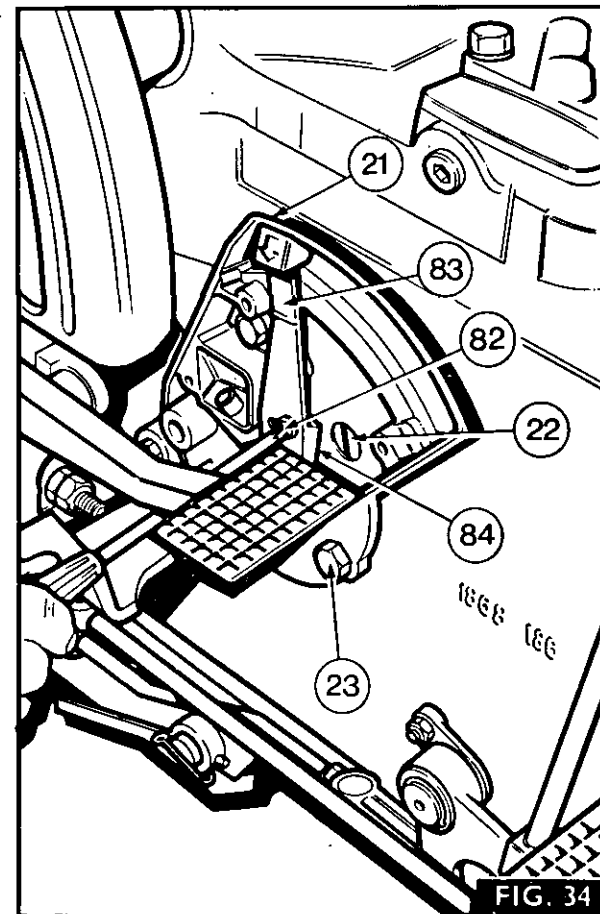


FIG. 34

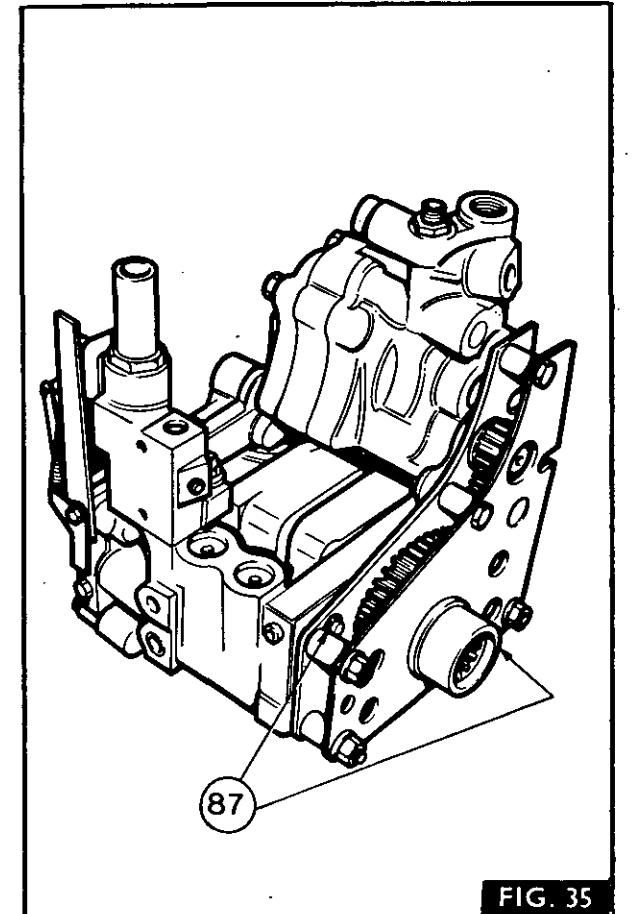


FIG. 35

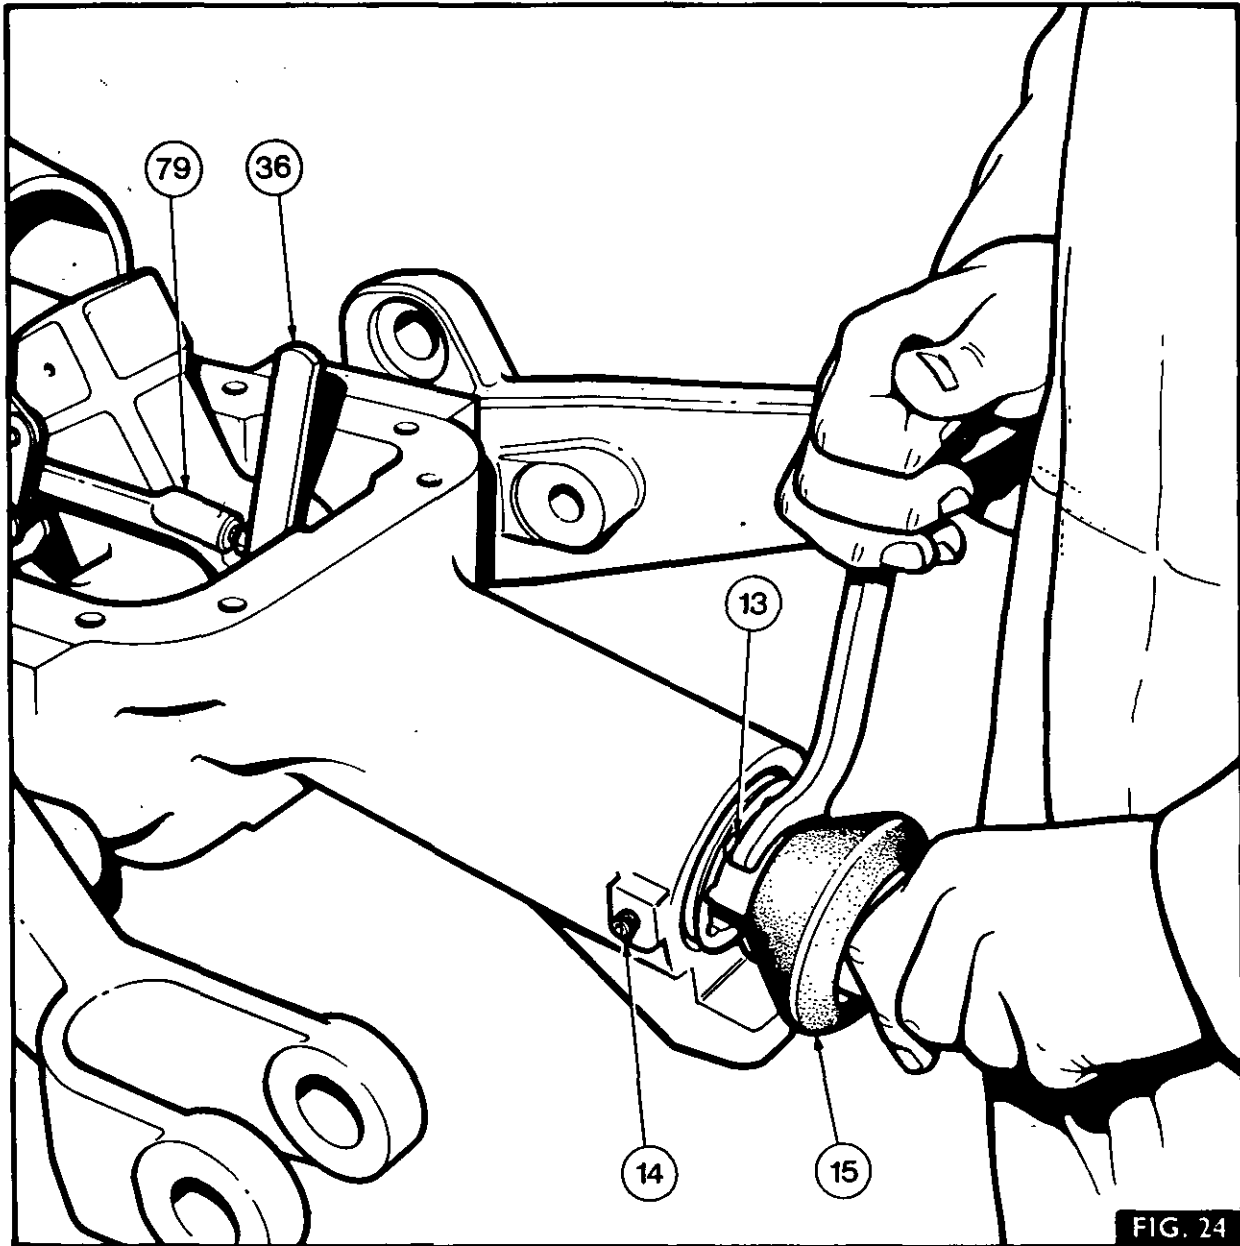


FIG. 24

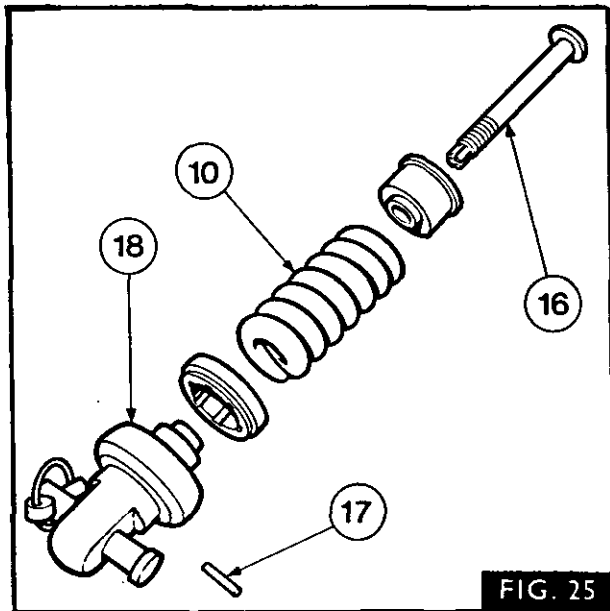


FIG. 25

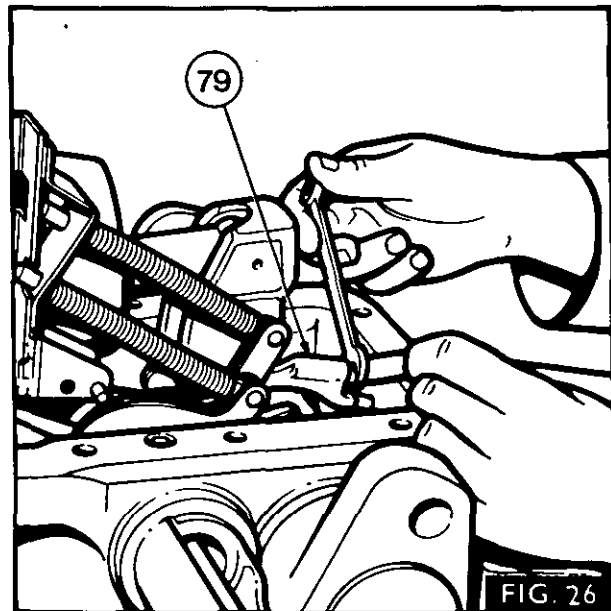


FIG. 26

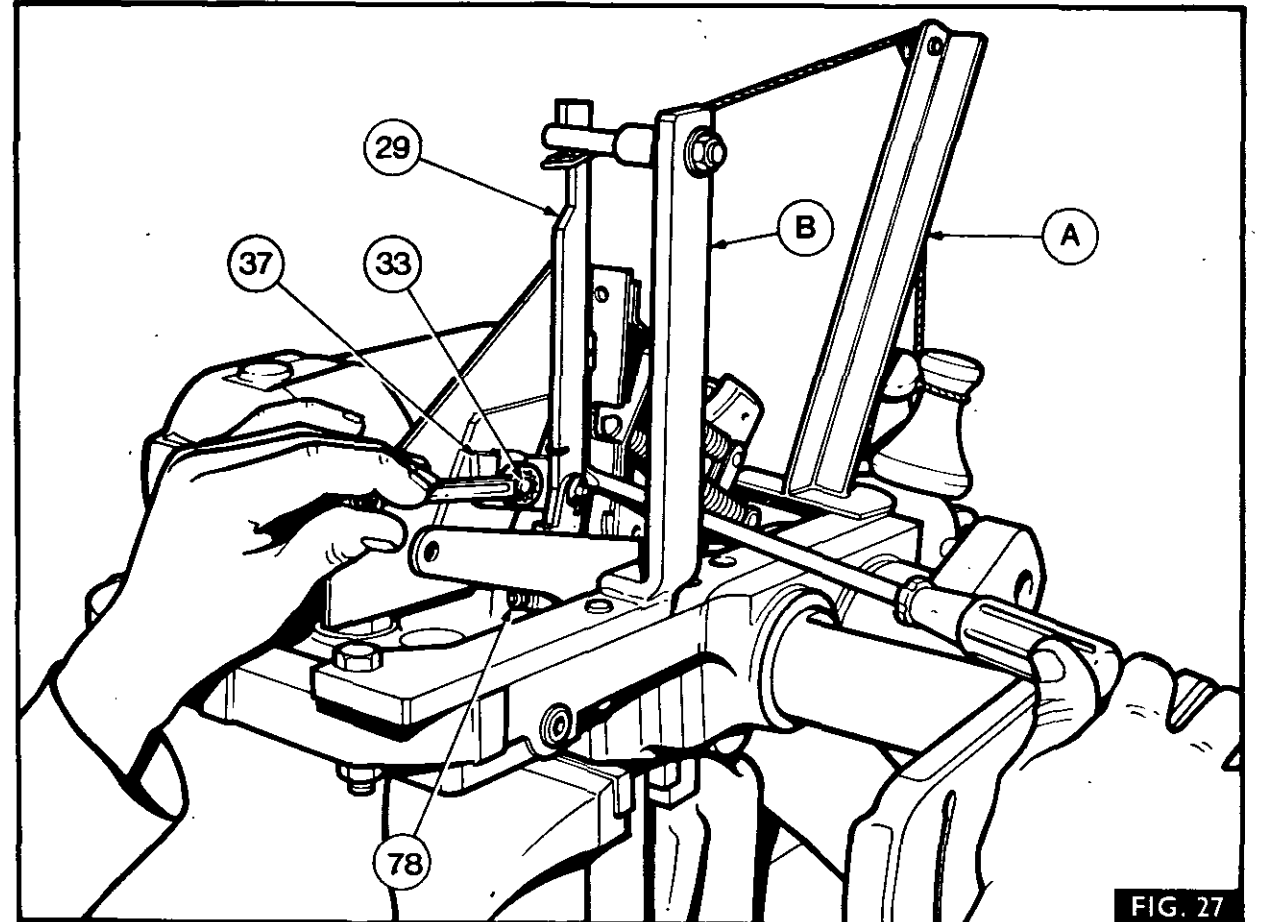


FIG. 27

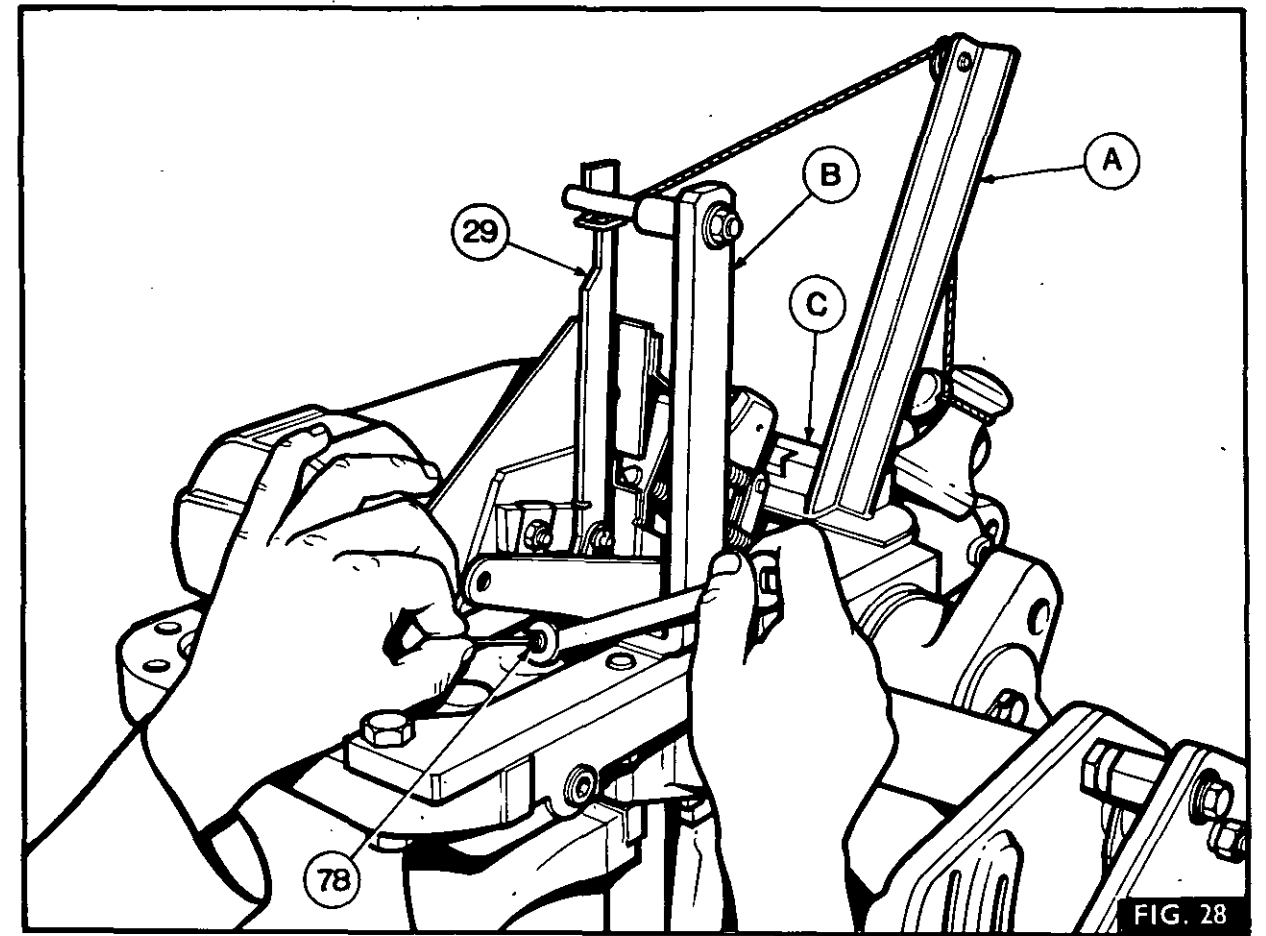


FIG. 28

**HYDRAULIC SYSTEM (MARK III PUMP)****HYDRAULIC PUMP****Removal and Refitment** 7A—11—49Special tools required:— See operation  
7A—03—38**Fig. 29 and 35****Removal***Tractors not fitted with a Multi-Power/Auxiliary Pump*

1. Remove the lift cover, as stated in operation 7A-03-38.
2. Fig. 29. Remove the Pressure Control adjuster (28), tube (85) and spring (86).
3. Remove the split pin from the shear tube and remove the tube and the rear drive shaft.
4. Remove the p.t.o. side cover, as stated in Part 5.
5. Remove the p.t.o. shaft, as stated in Part 5.
6. Remove the two nuts securing each dowel pin and remove the pins.
7. Manoeuvre the hydraulic pump out of the top of the centre housing.
8. Remove the split pin and the coupler from the front of the camshaft.

*Tractors fitted with a Multi-Power/Auxiliary Pump*

1. Remove the lift cover, as stated in operation 7A—03—38.
2. Fig. 29. Remove the Pressure Control adjuster (28), tube (85) and spring (86).
3. Remove the split pin from the shear tube and remove the tube and the rear drive shaft.
4. Remove the p.t.o. side cover, as stated in Part 5.
5. Split the tractor between the centre housing and the gearbox/spacer housing, as stated in Part 3.
6. Remove the auxiliary feed pipe from the auxiliary pump (auxiliary pump tractors only).
7. Remove the two nuts securing each dowel pin and remove the pins.
8. When i.p.t.o. is fitted, move the hydraulic pump, auxiliary pump and the i.p.t.o. unit forwards.
9. Withdraw the hydraulic pump and the Multi-Power/auxiliary pump, as a complete assembly, from the front of the centre housing.
10. Fig. 35. Remove the two 'C' clips (87), and withdraw the Multi-Power/auxiliary pump from the hydraulic pump.

**Refitment***Tractors not fitted with a Multi-Power/Auxiliary Pump*

1. Refit the coupler to the front of the camshaft and secure it with a new split pin.
2. Position the hydraulic pump in the centre housing, locating the pump on the p.t.o. drive shaft.
3. Place the p.t.o. gear in position and refit the p.t.o. shaft, as stated in Part 5.
4. Refit the dowel pins, with new 'O' rings, then locate the dowel pins in the hydraulic pump and secure with two nuts each side.
5. Refit the p.t.o. side cover, as stated in Part 5.
6. Refit the rear drive shaft and shear tube and locate the split pin to give 0,83 to 2,54 mm (0.015 to 0.100 in) end float.
7. Fig. 29. Refit the Pressure Control spring (86), tube (85) and adjuster (28).
8. Refit the lift cover, as stated in operation 7A—03—38.

*Tractors fitted with a Multi-Power/Auxiliary Pump*

1. Fig. 35. Locate the Multi-Power/auxiliary pump on the hydraulic pump and secure it in place with the two 'C' clips (87).
2. When i.p.t.o. is fitted, locate the i.p.t.o. unit on the p.t.o. shaft splines.
3. Position the hydraulic pump and the Multi-Power/auxiliary pump in the centre housing, locating the camshaft splines in the i.p.t.o. unit.
4. Refit the dowel pins, with new 'O' rings, then locate the dowel pins in the hydraulic pump and secure with two nuts each side.
5. Refit the feed pipe to the auxiliary pump (auxiliary pump tractors only).
6. Refit the p.t.o. side cover, as stated in Part 5.
7. Reconnect the centre housing to the gearbox/spacer housing, as stated in Part 3.
8. Refit the rear drive shaft and shear tube and locate the split pin to give 0,38 to 2,54 mm (0.015 to 0.100 in) end float.
9. Fig. 29. Refit the Pressure Control spring (86), tube (85) and adjuster (28).
10. Refit the lift cover as stated in operation 7A—03—38.

**HYDRAULIC PUMP****Servicing**

7A—12—49

Special tools required:— See Operation  
7A—03—38, and  
MF 349 Valve Seat Forming Tool.  
MF 350 Valve Circlip Replacer.  
MF 351 Valve Plug Remover and Replacer.  
MF 352 Control Valve Spring Retainer.  
MF 353 Control Valve Body 'O' Ring Guide.  
MF 354 Control Valve Body Replacer.**Figs 36 to 41.****Disassembly**

1. Remove the hydraulic pump, as stated in operation 7A—11—49.
2. Fig. 36. Remove the clip (139) and the pin retaining the link (140), and detach the link from the lever (125).
3. Remove the clip (124), lever (125) and the two rollers (122) and the pin (123).
4. Remove the four bolts (121) and washers securing the strainer housing (132) to the rear body (99) and remove the strainer housing, complete with the strainer and the Response Control unit.
5. Remove the two bolts (126) and washers securing the end plate (127), and remove the end plate and the gasket (129).
6. Disassemble the strainer assembly by removing the clip (115), nut (116), spring (117), washer (118), 'O' ring (119), strainer (120), cover (130) and the 'O' ring (131).
7. Release the spring (110) from the Response Control lever (108), then remove the two bolts (105 and 106) and washers, and remove the lever (108), retainer (107), bush (104) and the washer (109).
8. Remove the bush (112), spring (113) and the ball (114) from the strainer housing (132).

**HYDRAULIC SYSTEM (MARK III PUMP)**

9. If necessary, disassemble the non-return valve by removing the circlip (138), cap (137), spring (135), retainer (134) and the seal (133) and withdraw the valve (128) from the housing (132).
10. Remove the nut (142) and washer securing the Pressure Control valve (12), and carefully remove the valve.
11. Remove the oscillator end cap (89).
12. Fig. 36 and 37. Using MF 352, compress the collar (93) and remove the retaining ring (92).
13. Fig. 36. Withdraw the control valve (9) from the rear body (99).
14. Taking care that the spring (98) is not ejected, remove MF 352, then remove the collar (93) guide (94), spring (98) and the disc (97).
15. Remove the four nuts (88 and 88a) and detach the front body (90).
16. Withdraw the two valve chambers (154) from the rear body (99), complete with the front cam block (155), pistons (143), cam follower (145), oscillator tube (95) and the rear cam block (144).
17. Separate the valve chambers (154) from the pistons (143) and remove the cam blocks (144 and 155) from the pistons.
18. Withdraw the camshaft (96) from the rear body (99).
19. If necessary, remove the split pin and the clevis pin (91) retaining the cam follower (145) to the oscillator tube (95).
20. Taking care not to damage the rear body (99) and the control valve body (136), drive out the body (136), then remove the 'O' ring (103) back-up washer (102), sleeve (101) and the washer (100). Remove the 'O' ring and the back-up washer from the control valve body.
21. Fig. 36 and 38. Remove the circlip (146), retaining the valve chamber plug (147) then using MF 351, remove the plug as shown.
22. Fig. 36. Remove the back-up washer (148), 'O' ring (149), outlet valve spring (150), outlet valve (151), inlet valve spring (152) and the inlet valve (153) from the valve chamber (154).
23. Repeat items 21 and 22 for the other three valves.
4. Fig. 36 and 39. Position a new circlip (146) in MF 350, then using the tool as shown, secure the plug (147) in the valve chamber with the circlip.
5. Using MF 351, pull the plug up against the circlip.
6. Repeat items 2 to 5 for the other three valves.
7. Fig. 40. Using MF 353, fit a new back-up washer (158) and a new 'O' ring (157) to the control valve body (136), as shown.
8. Fig. 37. Locate the washer (100) and the sleeve (101) in the rear body (99).
9. Fig. 36 and 41. Assemble a new 'O' ring (103) and a new back-up washer (102) to the end of the control valve body (136), then using MF 354, carefully drive the body (136) into the front body (99), aligning the pin at six o'clock.
10. Fig. 36. If necessary, secure the cam follower (145) to the oscillator tube (95) with the clevis pin (91) and a new split pin.
11. Fit new 'O' rings (156) into place on the front and rear bodies (90 and 99).
12. Refit the valve chambers (154) onto the pistons (143), with new piston rings, if necessary.
13. Place the cam follower (145) between the pistons.
14. Place the camshaft (96), with the front and rear cam blocks (155 and 144), into the pistons.
15. Refit the rear body (99), making sure the oscillator tube (95) aligns with the aperture in the rear body.
16. Refit the front body (90), then lubricate the threads of the studs with an approved oil, and secure the front body with the four nuts (88 and 88a) tightened to a torque of 4 kg m (30 lbf ft), ensuring at all times that the pistons move freely.

**NOTE—THE SPECIAL NUTS (88a) MUST BE FITTED TO THE TOP RIGHT HAND AND THE BOTTOM LEFT HAND STUDS.**

**Examination**

Check the condition of all components for wear, or damage, replacing any defective components. Always replace 'O' rings, back-up washers, gaskets and circlips. Lubricate the 'O' rings with an approved oil before fitting.

**Reassembly**

1. If necessary, form new valve seats, using MF 349 as follows:—  
Cut out the old top seat, then the bottom seat using the refacing tool. Using the seat forming tool, form a new top seat by tapping the tool with a hammer, invert the tool and form a new bottom seat in the same manner. Thoroughly clean the valve chambers.
2. Refit the inlet valve (153), inlet valve spring (152), outlet valve (151) and the outlet valve spring (150).
3. Fig. 36 and 38. Assemble a new back-up washer (148) and a new 'O' ring (149) to the plug (147), then using MF 351, push the plug into the valve chamber until the circlip groove can just be seen.
22. If necessary, reassemble the non-return valve by locating the valve (128) in the housing (132) and refitting the seal (133), retainer (134), spring (135), cap (137) and the circlip (138).
23. Locate the ball (114), spring (113) and the bush (112) in the strainer housing (132).
24. Locate the lever (108) in position, then fit the washer (109), bush (104) and the retainer (107) and secure them with the washer and the bolt (106) tightened to a torque of 1 kg m (10 lbf ft).
- NOTE—COAT THE BOLT THREADS WITH HYLOMAR SQ 32M SEALING COMPOUND.**
25. Refit the washer and bolt (105) to secure the retainer (107).

HYDRAULIC SYSTEM (MARK III PUMP)



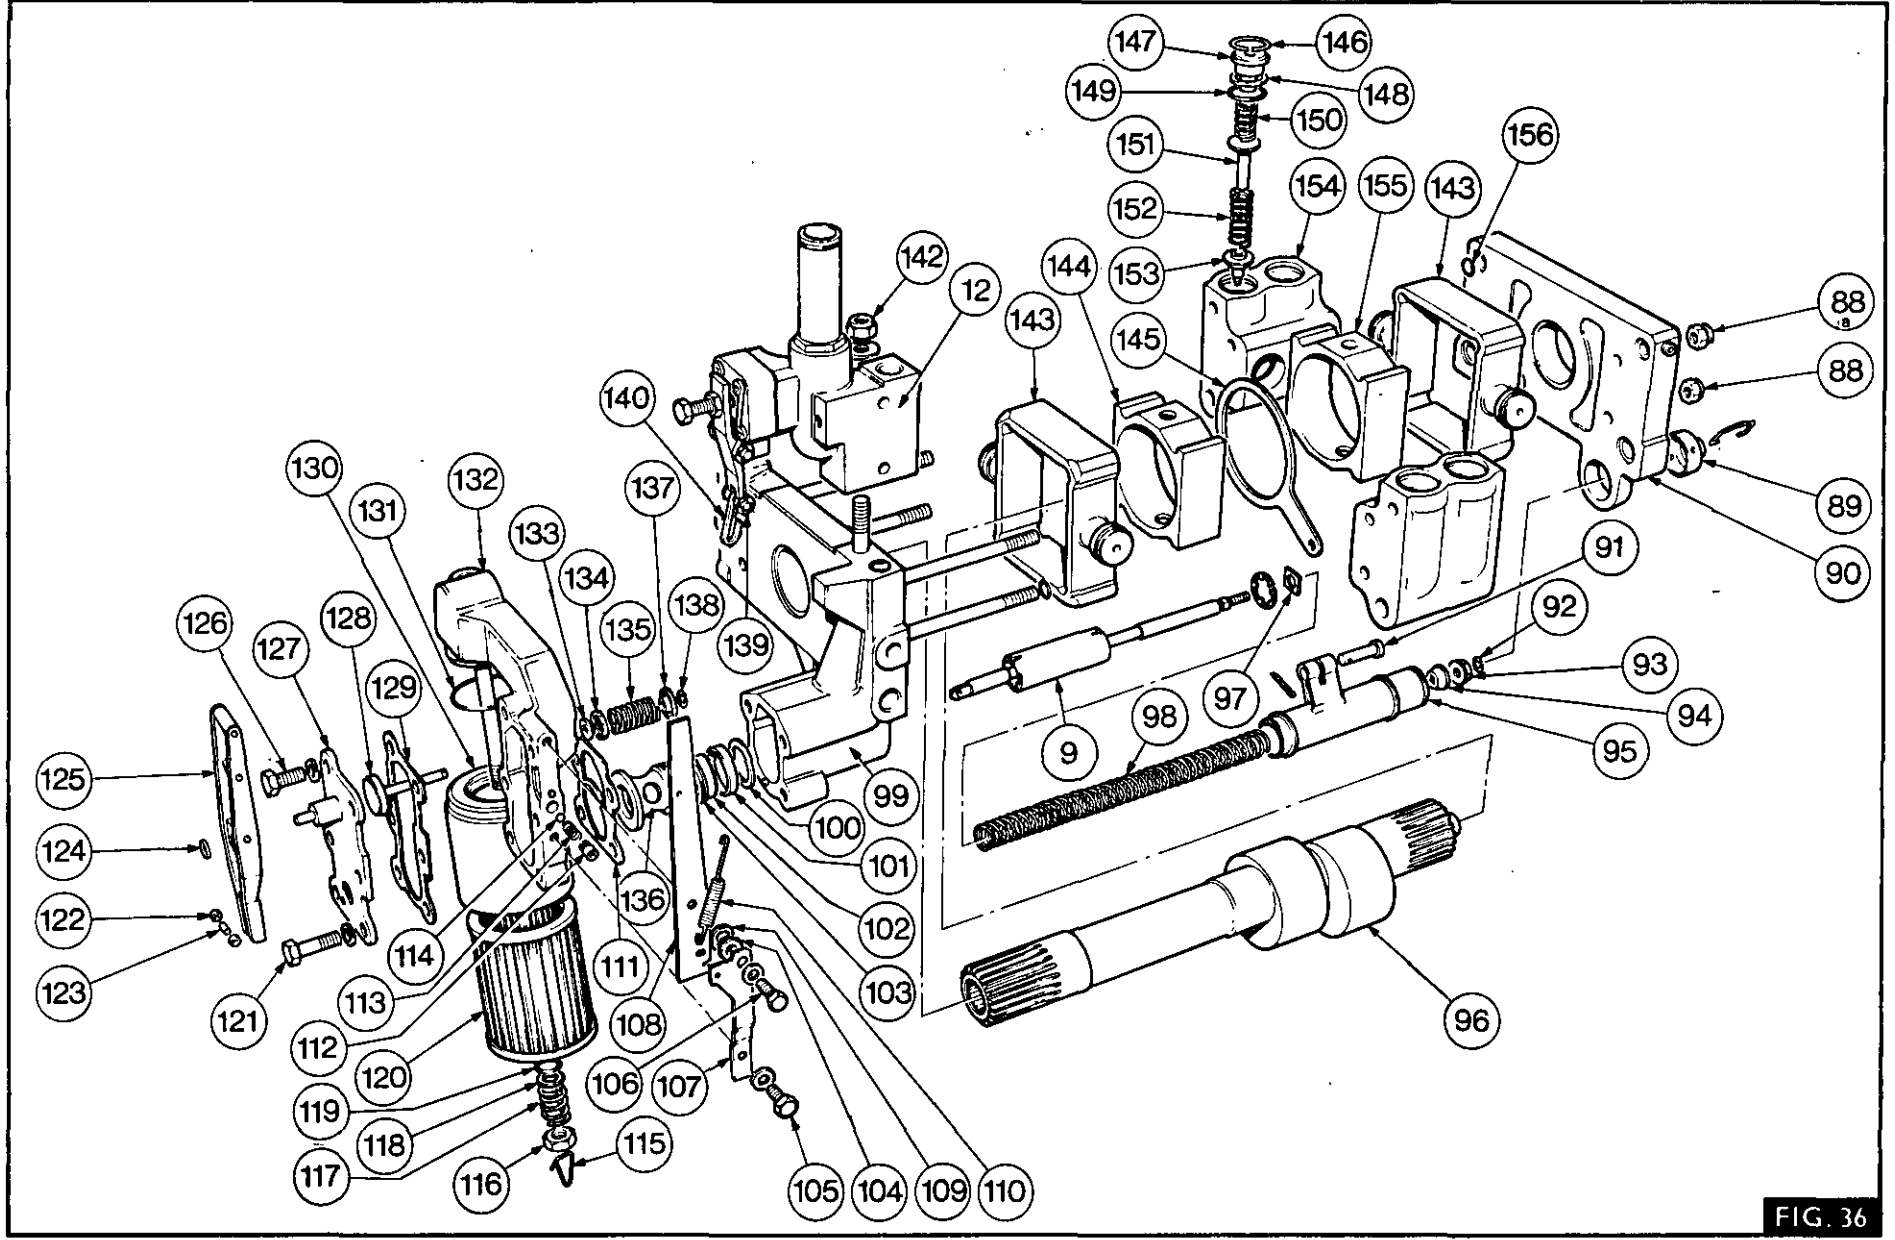
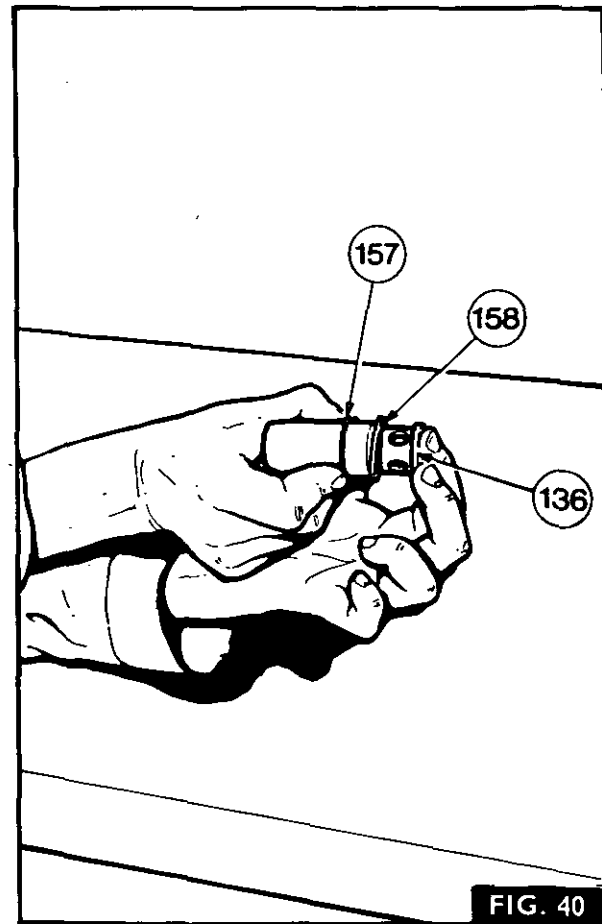
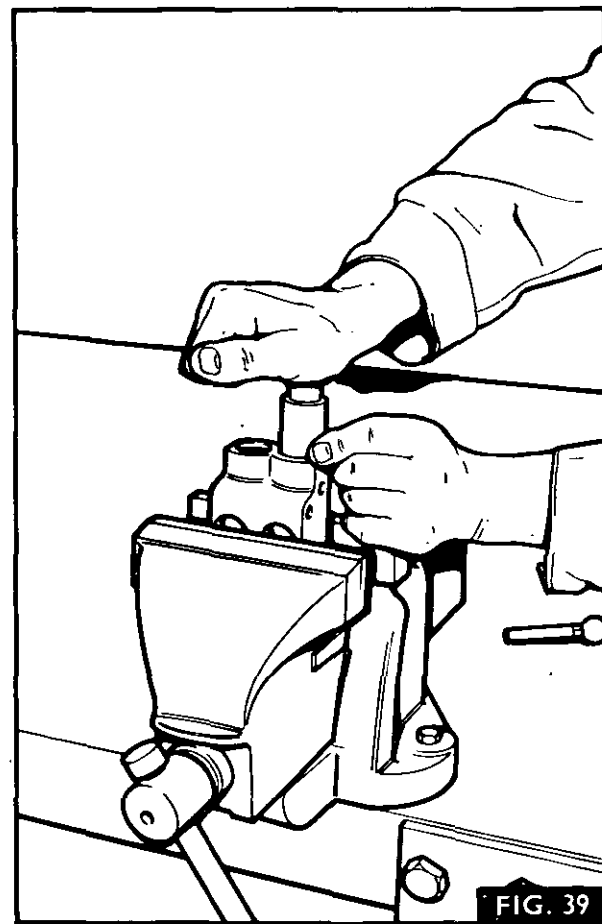


FIG. 36

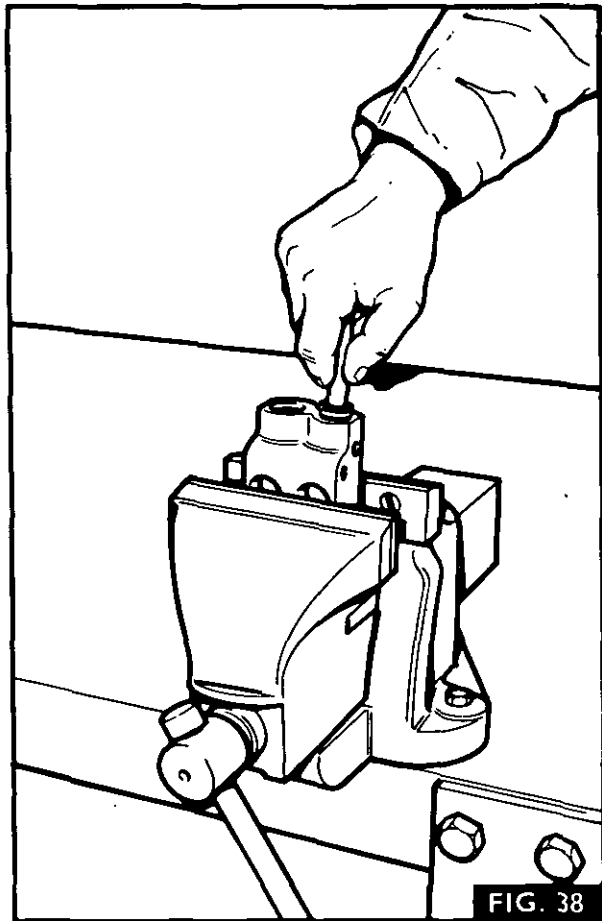

HYDRAULIC SYSTEM (MARK III PUMP)

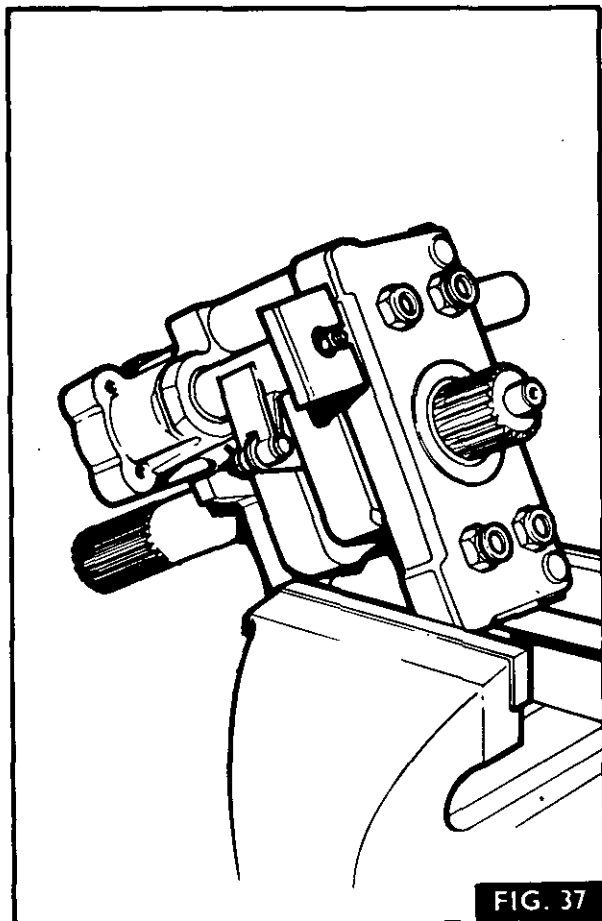

**HYDRAULIC SYSTEM (MARK III PUMP)**

26. Reassemble the strainer housing by locating a new 'O' ring (131) on the strainer housing (132) and refitting the cover (130), strainer (120), a new 'O' ring (119), washer (118), spring (117), nut (116) and the clip (115).
27. Refit the end plate (127), with a new gasket (129) and secure it in position with the two washers and bolts (126). Do not fully tighten the bolts at this stage.  
**NOTE—COAT THE BOLT THREADS WITH HYLOMAR SQ 32M SEALING COMPOUND.**
28. Refit the strainer housing (132), with a new gasket (111), making sure that the pin on the control valve body (136) locates in the strainer housing correctly.
29. Secure the strainer housing to the rear body with the four washers and bolts (121). Torque the bolts (121 and 126) to 2 kg m (15 lbf ft), checking at all times that the control valve continues to slide freely.  
**NOTE—COAT THE BOLT THREADS WITH HYLOMAR SQ 32M SEALING COMPOUND.**
30. Refit the lever (125), two rollers (122) and the pin (123), then refit the clip (124).
31. Attach the link (140) to the lever (126) and secure the outer end with the pin and the two clips (139).
32. Refit the hydraulic pump, as stated in operation 7A—11—49.

**HYDRAULIC PUMP****Control Valve Removal and Refitment 7A—13—53**

Special tools required:— See operation 7A—03—38, and  
MF 352 Control Valve Spring Retainer.  
MF 353 Control Valve Body 'O' Ring Guide.  
MF 354 Control Valve Body Replacer.

**Figs. 36, 39, 40 and 41.**

**Removal**

1. Remove the control valve, as stated in items 1 to 4, 11 to 15 of operation 7A—12—49.
2. Fig. 36. Remove the split pin and the clevis pin (91) securing the oscillator tube (95) and remove the tube.
3. Remove the control valve body, as stated in item 20 of operation 7A—12—49.

**Examination**

Check the condition of all components for wear, or damage, replacing any defective parts. Always replace back-up washers, 'O' rings, gaskets and circlips. Lubricate the 'O' rings with an approved oil before fitting.

**Refitment**

1. Refit the control valve, as stated in items 7 to 9, of operation 7A—12—49.
2. Fig. 36. Refit the oscillator tube (95) to the rear body and secure it to the cam follower (145) with the clevis pin (91) and a new split pin.
3. Refit the control valve as stated in items 16 to 20 and 28 to 32 of operation 7A—12—49.

**PRESSURE CONTROL VALVE****Removal and Refitment 7A—14—53**

Special tools required:— See operation 7A—03—38.

**Fig. 36****Removal**

1. Remove the hydraulic pump, as stated in operation 7A—11—49.
2. Fig. 36. Remove the clip (139) and the pin retaining the link (140) and detach the link from the lever (125).
3. Remove the nut (142) and the washer securing the Pressure Control valve (12) and carefully remove the valve.

**Refitment**

1. Refit the Pressure Control valve (12) and secure it with the washer and the nut (142) tightened to a torque of 4 kg m (30 lbf ft).
2. Attach the link (140) to the lever (125) and secure the other end with the pin and the two clips (139).
3. Refit the hydraulic pump, as stated in operation 7A—11—49.

**PRESSURE CONTROL VALVE****Servicing 7A—15—53**

Special tools required:— See operation 7A—03—38.

**Fig. 42****Disassembly**

1. Remove the Pressure Control valve, as stated in operation 7A—14—53.
2. Fig. 42. Remove the four screws (170) and the springs (169) securing the diaphragm body (166), then remove the body, spring (167) and the diaphragm (168).
3. If necessary, remove the lever (171) and the spring (165) from the diaphragm body (166).
4. Remove the distance piece (162), spring (161) and the valve (160).
5. Unscrew the guide (175), then remove the spring support (174), plunger (176) and the ball (177).
6. Taking care not to damage the valve body, withdraw the guide (173) and the 'O' ring (172), then withdraw the seat (163), back-up washer (159) and the 'O' ring (164).

**Examination**

Examine all the components for signs of wear, damage, scoring or pitting and replace if necessary.

**Reassembly**

1. Fit a new 'O' ring (164) and a new back-up washer (159) to the seat (163), then locate the seat (163) in position.
2. Fit a new 'O' ring (172) to the guide (173), then locate the guide in position.
3. Refit the ball (177), plunger (176), with the tapered end towards the ball, and the spring support (174).
4. Degrease the threads of the guide (173) and the threads in the valve body, then screw the guide into the valve body by half a thread.

**HYDRAULIC SYSTEM (MARK III PUMP)**

5. Apply three equally spaced drops of Loctite 270 'Stud Lock' to the threads of the guide, then tighten the guide to a torque of 4 kg m (30 lbf ft).
6. Refit the valve (160), and the spring (161), then refit the distance piece (162) so that it is flush with the face of the valve body.
7. Assemble the diaphragm (168), spring (167) and the diaphragm body (166) to the valve body and secure them with the springs (169) and the four screws (170).
8. If necessary, refit the lever (171) and the spring (165) to the diaphragm body (166).
9. Refit the Pressure Control valve, as stated in operation 7A—14—53.

**STRAINER HOUSING AND RESPONSE CONTROL**

**Removal and Refitment** 7A—16—54

Special tools required:— See operation 7A—03—38

**Fig. 36****Removal**

1. Remove the strainer housing as stated in items 1 to 4 of operation 7A—12—49.

**Refitment**

1. Refit the strainer housing as stated in items 28 to 32 of operation 7A—12—49.

**STRAINER HOUSING AND RESPONSE CONTROL**

**Servicing** 7A—17—54

Special tools required:— See operation 7A—03—38.

**Fig. 36****Disassembly**

1. Remove the strainer housing, as stated in operation 7A—16—54.
2. Disassemble the strainer housing and the Response Control, as stated in items 5 to 9 of operation 7A—12—49.

**Examination**

Check the condition of all components for wear or damage, replacing any defective components. Always replace 'O' rings and gaskets.

**Reassembly**

1. Reassemble the strainer housing and the Response Control, as stated in items 22 to 27 of operation 7A—12—49.
2. Refit the strainer housing, as stated in operation 7A—16—54.

HYDRAULIC SYSTEM (MARK III PUMP)

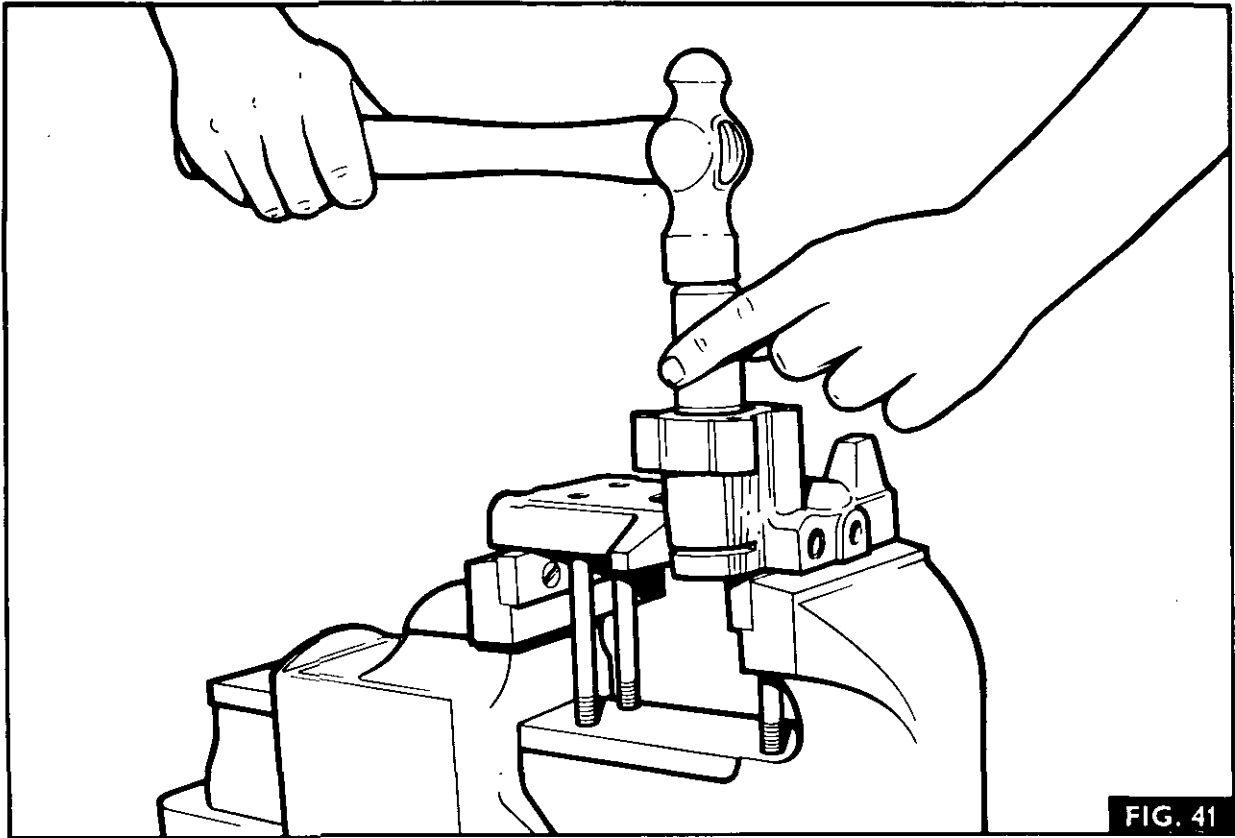


FIG. 41

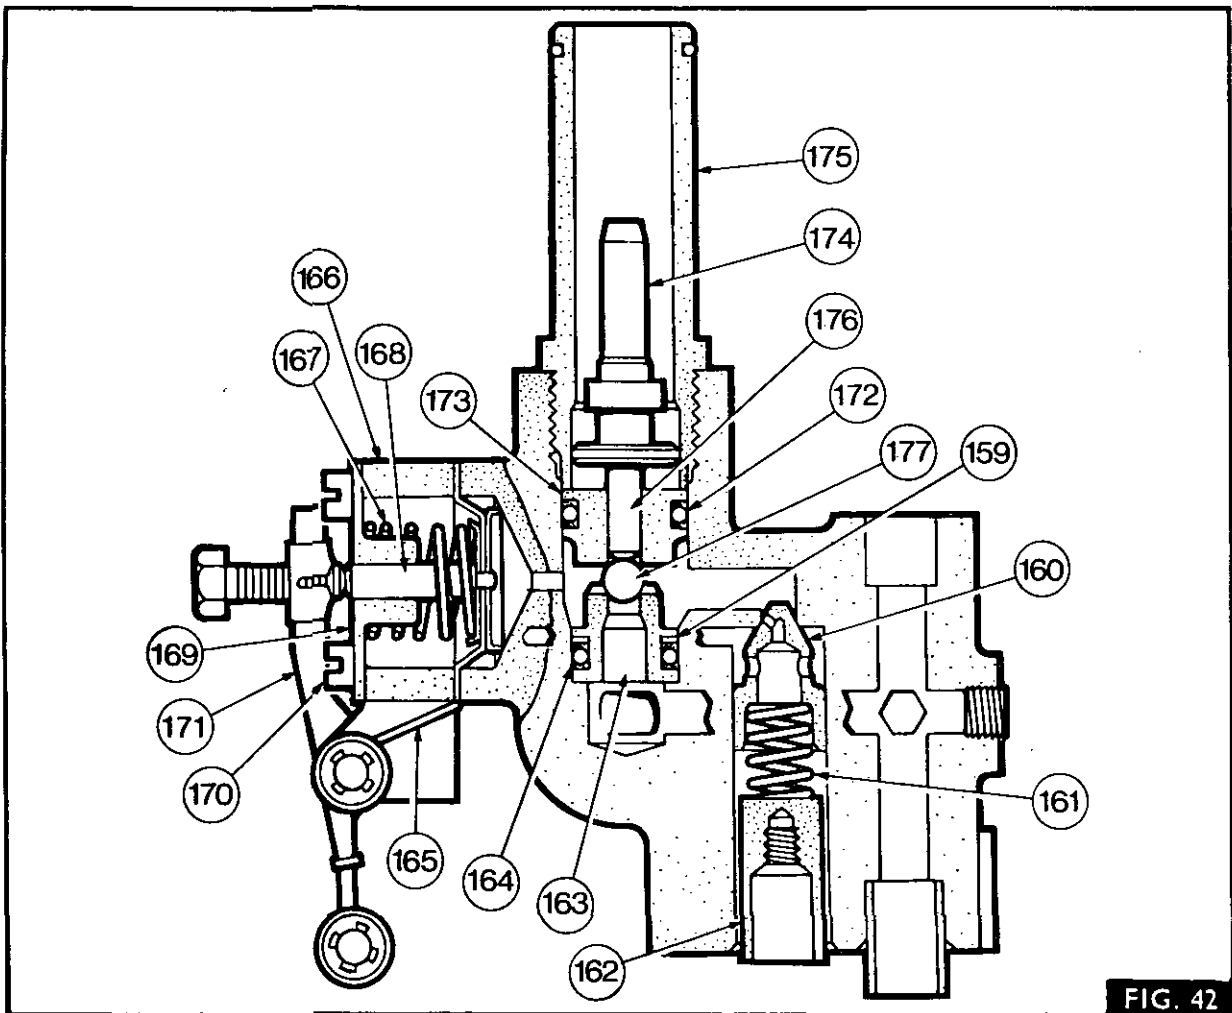


FIG. 42



## AUXILIARY HYDRAULICS

### GENERAL

The auxiliary hydraulic system is available for all Multi-Power tractors. The auxiliary hydraulic pump provides oil for up to three services :- Multi-Power, Independent p.t.o. and Auxiliary (external) services.

A single, or two spool control valve is available for use with auxiliary hydraulic tractors and can be used for both single-acting and double-acting hydraulic services.

Auxiliary hydraulic tractors are normally fitted with a filter as standard equipment and oil cooler is fitted to tractors with spool valves. Some tractors are fitted with the low output (Multi-Power only) type of pump and are not fitted with either a cooler, or a filter.

A combining valve can be fitted, to supplement the output of the auxiliary pump 28,6 lit/min (6.3 Imp gal/min), with the output of the tractor linkage pump of 14,1 lit/min (3.1 Imp gal/min) to give a total output of 42,7 lit/min (9.4 Imp gal/min) at 2000 engine rev/min. The linkage pump output is made available for external services, by screwing the combining valve knob fully out. When using combined flow, the 'Position Control' lever must be placed in the 'Constant Pumping' and the 'Draft Control' lever at the fully raised position. The rear linkage must not be used when the combining valve is open.

The combined flow of both pumps is available to external service provided that the pressure required is not in excess of 169 Kg/cm<sup>2</sup> (2400 lb/in<sup>2</sup>) with the combining valve closed, or 211 Kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>) with the combining valve open.

### OIL COOLER

#### Removal and Refitment 7B-01-02

##### Removal

1. Remove the grille door.
2. Fig. 1. Slacken the two wingnuts (1) and pull the oil cooler forwards.
3. Disconnect the two hoses (2) at the top of the cooler.
4. Mask off the hose connections using suitable plugs or masking tape to prevent the ingress of dirt.
4. Lift the cooler clear of the tractor.

##### Refitment

1. Place the oil cooler in position over the bottom retaining pins.
2. Fig. 1. Reconnect the two pipes (2) to the oil cooler.
3. Push the oil cooler into place and secure it with the two wing nuts (1).
4. Refit the grille door.

### AUXILIARY OIL FILTER UNIT

#### Removal and Refitment 7B-02-02

##### Removal

1. Fig. 2. Mark one of the metal pipes (3) and its mating union on the filter head (5), then disconnect both metal pipes (3).
2. Disconnect both hoses (2) at the filter head.
3. Mask off all open connections using suitable plugs and caps, or masking tape.
4. Remove the two nuts, bolts and spring washers (4) securing the filter head (5) to its bracket.

##### Refitment

1. Place the filter unit in position, then secure it with the nuts, bolts and spring washers.

**NOTE - PLACE SPRING WASHERS UNDER THE BOLT HEADS.**

2. Reconnect the two hoses (2) to the front end of the filter.
3. Refit the two metal pipes (3), aligning the two identification marks.

### AUXILIARY OIL FILTER

#### Servicing 7B-03-02

##### Disassembly

1. Fig. 3. Unscrew the filter housing (10) from the filter head (5).
2. Remove the element (8) sealing rings (7 and 9) and the 'O' ring (6). Thoroughly clean all components with paraffin, then examine the filter head and housing for cracks, or damage. Always fit a new element and seals.

##### Reassembly

1. Fit a new sealing ring (9) to the base of the body, then fit a new element (8).
2. Locate the upper sealing ring (7) in the top of the element.
3. Fit a new 'O' ring (6) to the filter head (5), then screw the body and element assembly on to the head.

### AUXILIARY OR MULTI-POWER PUMP UNIT

#### Removal and Refitment 7B-04-02

Special Tools Required: See operation 7A-14-31

##### Removal

1. Remove the hydraulic pumps, as stated in operation 7A-14-31.
2. Fig. 5. Remove the circlip (23) securing the pump driven gear (36) to the pump drive shaft.
3. Remove the two special bolts (24), spacers (33) and the Allen screw (22) securing the pump drive assembly to the pump.
4. Slide the pump out of the plated drive unit, removing the driven gear (36).

AUXILIARY HYDRAULICS

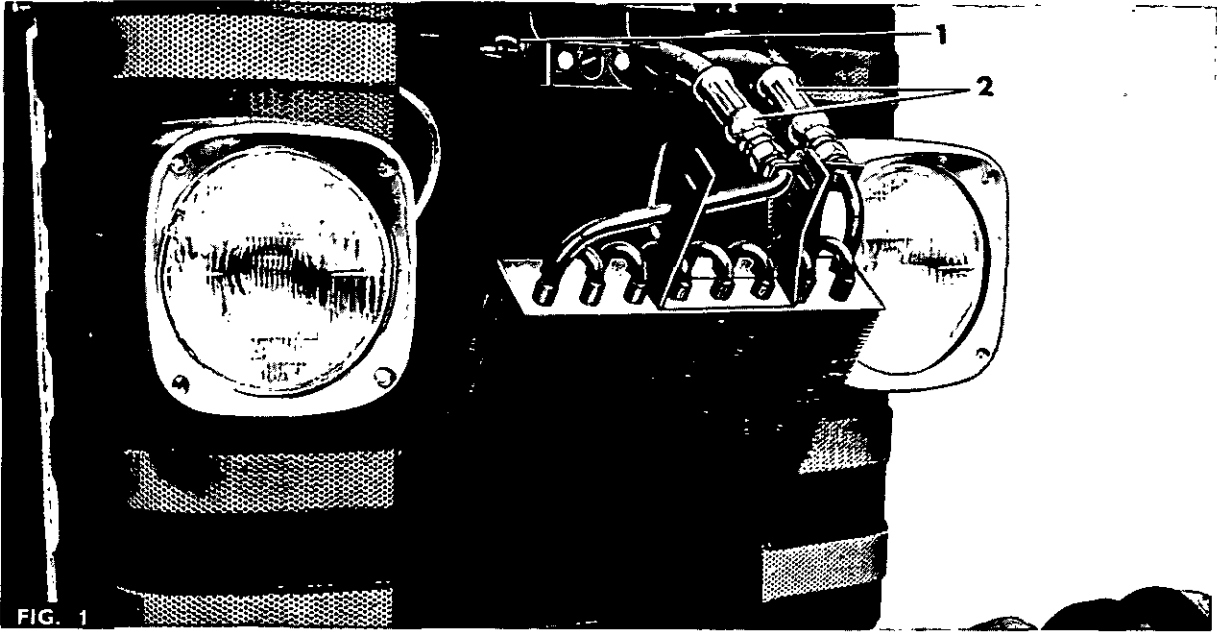


FIG. 1

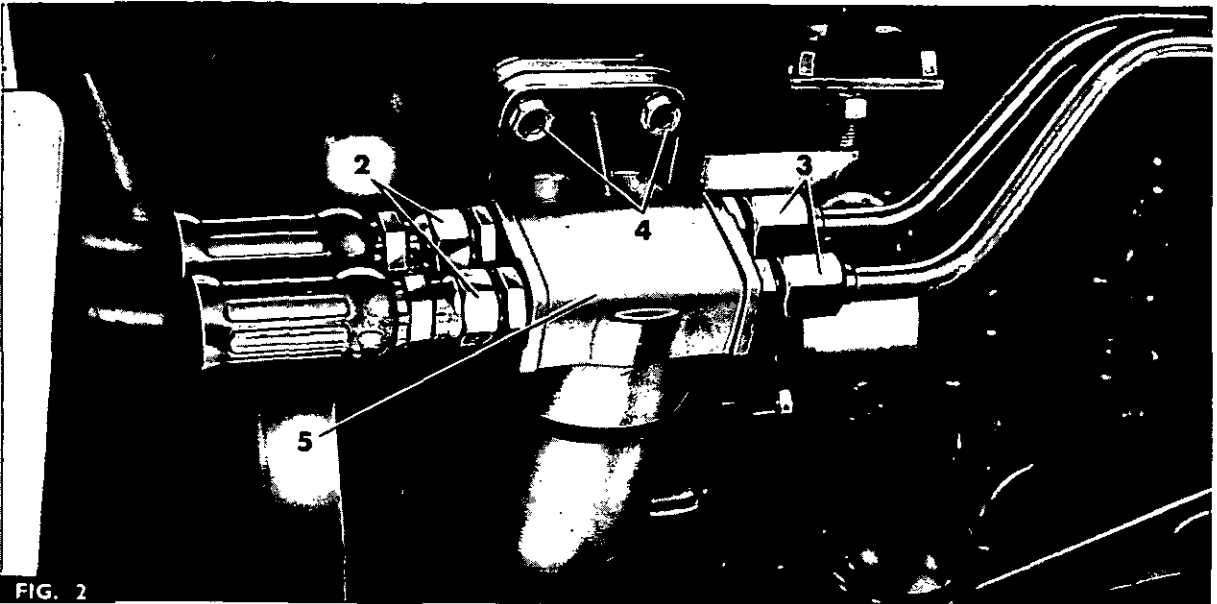


FIG. 2

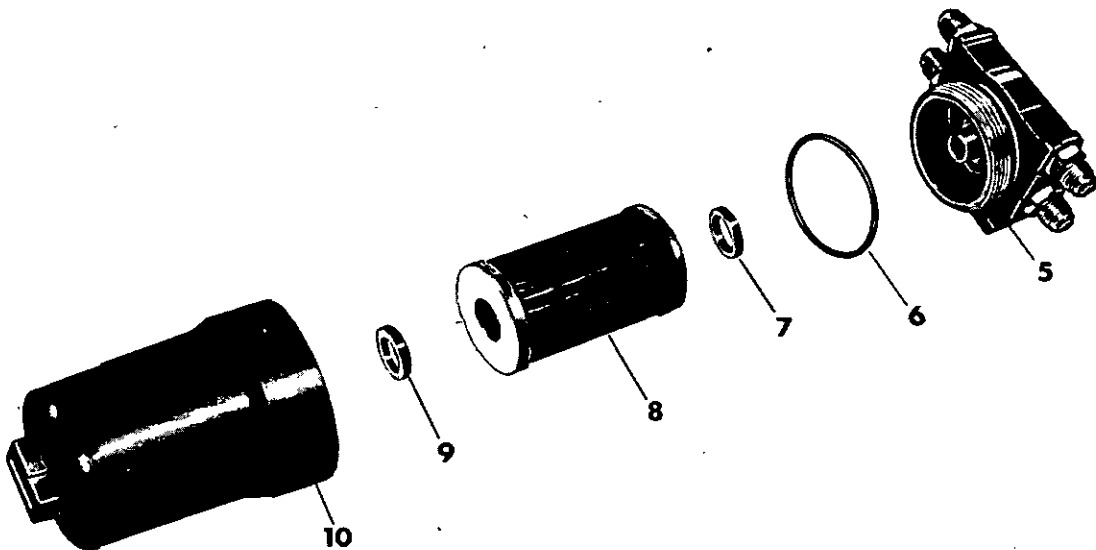


FIG. 3

AUXILIARY HYDRAULICS

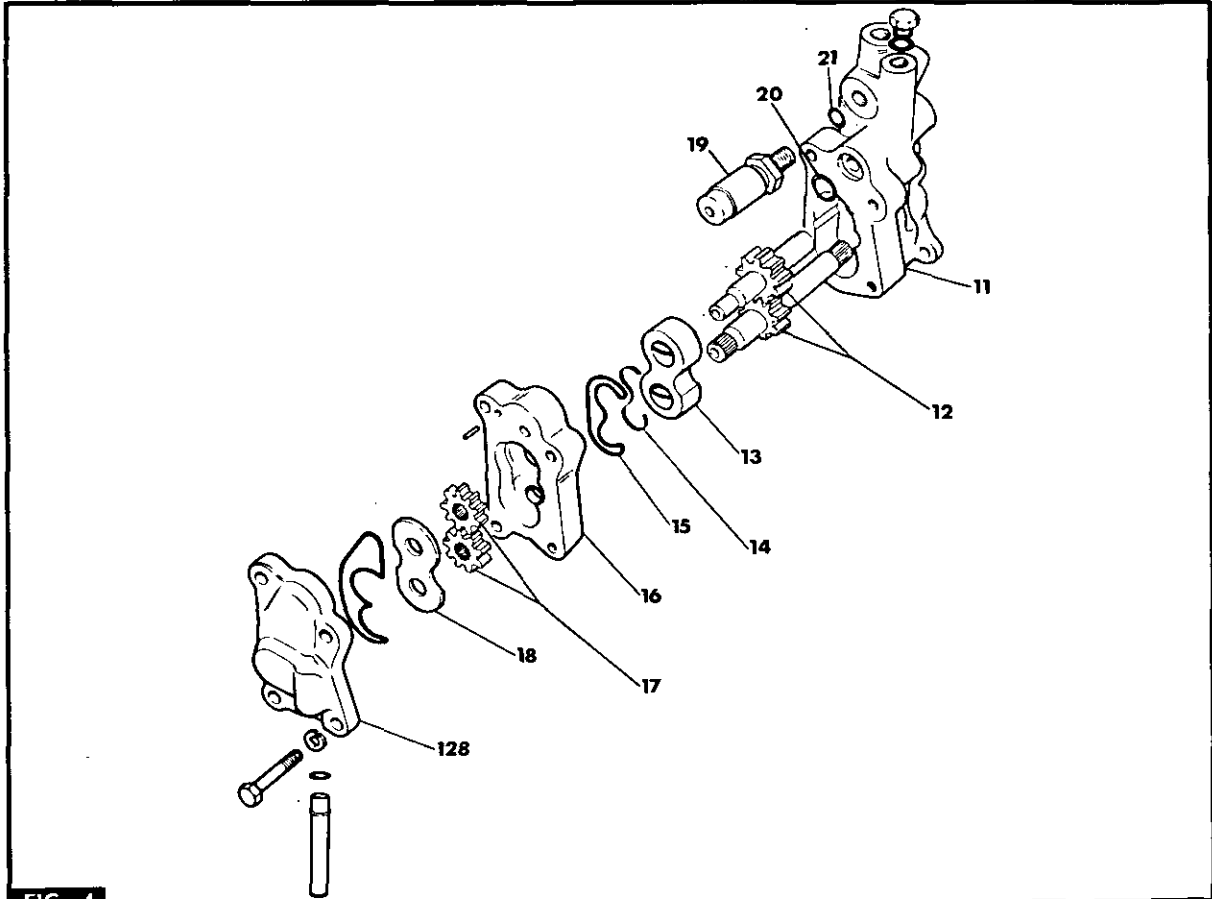


FIG. 4

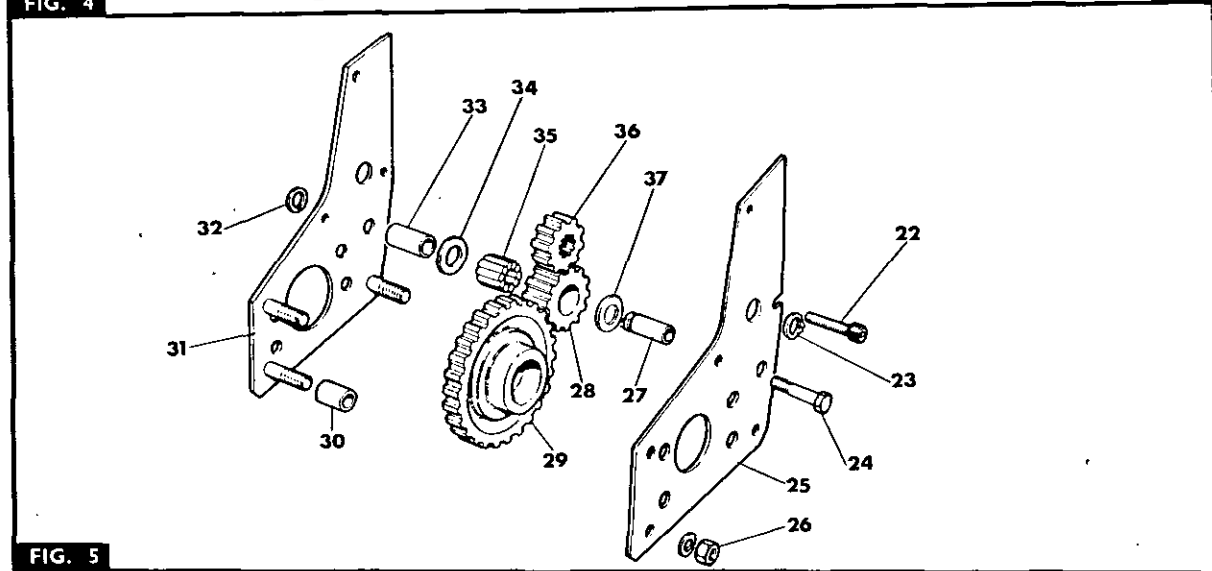


FIG. 5

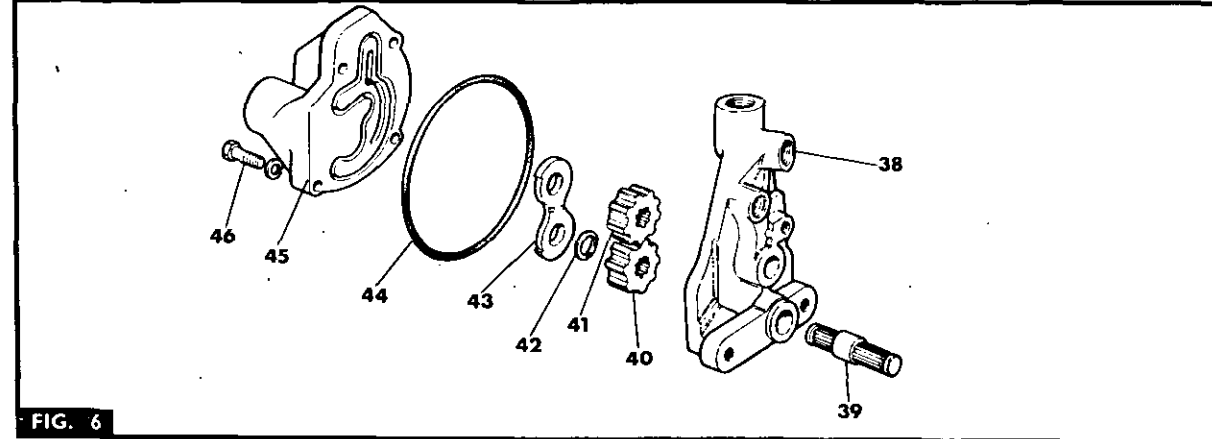


FIG. 6



## AUXILIARY HYDRAULICS

**Refitment**

1. Position the plated drive unit on the auxiliary pump, ensuring that the flat machined on the idler gear shaft (27) abuts against the pump and that the driven gear (36) is correctly mounted on the pump driveshaft.
2. Refit the circlip (23) to the pump driveshaft to secure the driven gear (36).
3. Refit the two special bolts (24), spacers (33) and the Allen screw (22).
4. Tighten the two bolts (24) to a torque of 3,0 Kg-m (22 lb-ft) and the Allen screw (22) to a torque of 2,7 Kg-m (20 lb-ft), then check the backlash between any of the gears. The total backlash between the three gears (two measurements) must be between 0,050 to 0,406 mm (0,002 to 0,016 in).
5. Refit the hydraulic pump as stated in operation 7A-14-31.

**AUXILIARY PUMP****Servicing**

7B-05-05

Special tools Required: See operation 7A-14-31

**Disassembly**

1. Remove the auxiliary pump, as stated in operation 7B-04-02.
2. Fig. 4. Remove the bearing plate (18).
3. Suitably mark each gear in relation to its shaft.
4. Remove the body (16), complete with the gears (17) rubber seal (15) and P.T.F.E seal (14).
5. Remove the 'O' ring (20).
6. Remove the floating bearing (13) and the gears (12) from the body (11).
7. If necessary, remove the main relief valve (19) and the 'O' ring (21).

**Examination:**

**Bearings:** Examine the bearings (13 and 18) for wear on their faces and in their bores. Pay particular attention to the lubricating scrolls. Score marks, between the bearing bores can cause high leakage losses. During major overhaul the bearings should be renewed, but if not badly worn, they can be salvaged, by polishing as follows:

Place a sheet of 'O' grade emery paper, lubricated with paraffin on a true, flat surface (e.g. a surface plate, or sheet of plate glass), then polish the bearing face, using a light, rotary motion.

Outer diameters of the bearings can be lightly polished to obtain free movement in the body.

**Bodies:** Inspect the bodies (11 and 16) for external damage and cracks. Examine bores for wear and damage. The gears always cut a light track on the inlet side of the body bores. The depth of this track must not exceed 0,010 mm (0,004 in). Examine the bearing face in the pump body for wear and damage, as this can cause high leakage losses.

Examine the bearing bores for wear. If they are worn excessively, the pump body must be replaced.

**Gears:** Examine the gears (12 and 17) for scored or worn faces or journals, damaged teeth and surface cracks.

Slight wear or scoring on the journals can be removed by polishing between lathe centres, using 'O' grade emery paper lubricated with paraffin. Check the widths of the drive and driven gears. Their actual width is relatively unimportant, provided that each pair are within 0,005 mm (0,0002 in) of each other and that the journals are within 0,013 mm (0,0005 in) of one another. Spare gears are only available as matched pairs.

Check the gear faces for flatness by smearing a bearing face with engineer's "blue" and rotating the gear against it. This will also reveal any sharp edges on the teeth which can be removed with a fine needle or by stoning.

Under working conditions, hydraulic pressure within the pump loads the gears towards the inlet side of the body, thus cutting the running track. If the bearings, or gear journals wear, the gears move over and deepen the running track. Therefore, if the running track is worn past, or to the limit, for re-use, the fitting of a new floating bearing (13) may not improve the pump efficiency, as the new bearing will hold the gears and prevent them from bottoming in the running track.

Always fit a set of new seals and 'O' rings on reassembly.

**Reassembly**

1. Lightly lubricate the faces and bores of all bearings and gears with clean hydraulic oil.
2. Fig. 4. Fit the gears (12) in the pump body (11).
3. Fit a new 'O' ring (20) to the pump body (11).
4. Fit the floating bearing (13) with its machined recess adjacent to the gears and the relieved radii on the outlet side of the pump. Check that the floating bearing is 0,05 to 0,13 mm (0,002 to 0,0055 in) below the face of the pump body.
5. Fit a new seal (15) to the centre body (16), then fit the new P.T.F.E. seal (14) between the OUTER edge of the rubber seal and the pump body.
6. Refit the centre body to the pump, taking care not to displace the seals.
7. Refit the gears (17) on the shafts, aligning the marks on the shaft.
8. Refit the bearing plate (18) ensuring that the machined recess is adjacent to the gears. Check that bearing plate is 0,05 to 0,18 mm (0,002 to 0,007 in) below the face of the centre body.
9. Refit the pressure relief valve (19) using a new 'O' ring (21).
10. Refit the auxiliary pump, as stated in operation 7B-04-02
11. Carry out hydraulics test as stated in operation 7B-16-31

## AUXILIARY HYDRAULICS

### MULTI-POWER PUMP

**Servicing** 7B-06-06

Special Tools Required: See operation 7A-14-31

#### Disassembly

1. Remove the Multi-Power pump as stated in operation 7B-04-02.
2. Fig. 6. Remove the four bolts (46) from the end plate, then remove the end plate (45) and seal (44).
3. Remove the pressure plate (43) from the body (38).
4. Remove the gears (40 and 41) from the body, then remove the circlip (42) and slide the drive gear (40) off the shaft (39).

#### Examination

Examine the pressure plate (43) for wear on the faces and bores. Score marks between the bearing bores can cause high leakage losses. During major overhaul, the pressure plate (43) should be renewed, but if not badly worn, it can be salvaged, by polishing, as follows:

Place a sheet of 'O' grade emery paper, lubricated with paraffin, on a true, flat surface (e.g. a surface plate, or sheet of plate glass), then polish the bearing plate, using a light, rotary motion.

Outer diameters of the pressure plate can be lightly polished to obtain free movement in the body.

Inspect the body (38) for external damage or cracks and examine the bores for wear, or damage. The gears always cut a light track on the inlet side of the body bores. The depth of this track must not exceed 0,10 mm (0.004 in). Examine the bearing face in the pump body for wear or damage, as this can also cause high leakage losses.

Examine the diameter of the driven gear spigot for wear. This will normally show up as a step on the diameter and if wear has taken place, the running track wear in the body bore will be excessive, necessitating replacement of the body.

Inspect the gears (40 and 41) for scored or worn faces, damaged teeth, or surface cracks. Slight wear or scoring on the gear faces can be polished in a similar manner to that of the bearing plate. Check the width of the gears. Their actual width is relatively unimportant, provided that they are within 0,005 mm (0.0002 in) of each other.

Visually inspect the sealing face of the end plate (45) for damage, cracks, or scoring and check the flatness with a straight edge.

Replace any defective components and fit a new seal (44) and circlip (42).

#### Reassembly

1. Lightly lubricate the faces and bores of the bearings and gears with clean hydraulic oil.
2. Refit the drive gear (40) to the shaft (39), securing it with a new circlip (42).
3. Carefully slide the gears (40 and 41) into the pump body (38).

4. Fit the bearing plate (43) with the relieved edge and recessed face on the outlet side of pump. Check that the bearing plate is 0,05 to 0,18 mm (0.002 to 0.007 in) below the body face.
5. Fit a new seal (44) into the end plate (45), locate the end plate in position and fit the four bolts, tightening them to a torque of 2,75 Kg-m (20 lb-ft).
6. Refit the Multi-Power pump, as stated in operation 7B-04-02 carrying out the hydraulic tests as stated in operation 7B-15-31 before refitting the lift cover.

### PLATED DRIVE UNIT

**Servicing** 7B-07-06

Special Tools Required: See operation 7A-14-31

#### Disassembly

1. Remove the auxiliary, or Multi-Power pump, as stated in operation 7B-04-02
2. Fig. 5. Remove the three nuts (26) and spring washers, then remove the plate (25), and the spacers (30).
3. Lift out the drive gear (29), then remove the thrust washer (37) idler gear (28) complete with needle rollers (35) and second thrust washer (34).
4. Push the idler shaft (27) complete with its circlip (32) out of the side plate (31).

#### Examination

Check the gear teeth for wear, chipping, or other damage. Examine the bores of the gears and the needle rollers for wear. Check the idler shaft and thrust washers for wear, scoring, or pitting.

Replace any defective components.

#### Reassembly

1. Refit the idler shaft (27) to the side plate (31).
2. Fit a thrust washer (34) to the idler shaft.
3. Fit the idler gear (28), needle rollers (35) and the second thrust washer (37).

**NOTE** - PETROLEUM JELLY CAN BE USED TO FACILITATE FITMENT OF THE NEEDLE ROLLERS.

4. Refit the drive gear (29).
5. Refit the three spacers (30) then refit the drive plate (25) and secure it with the three nuts (26) and spring washers. Tighten the nuts progressively and evenly to a torque of 3 Kg-m (22 lb-ft).
6. Refit the auxiliary, or Multi-Power pump, as stated in operation 7B-04-02

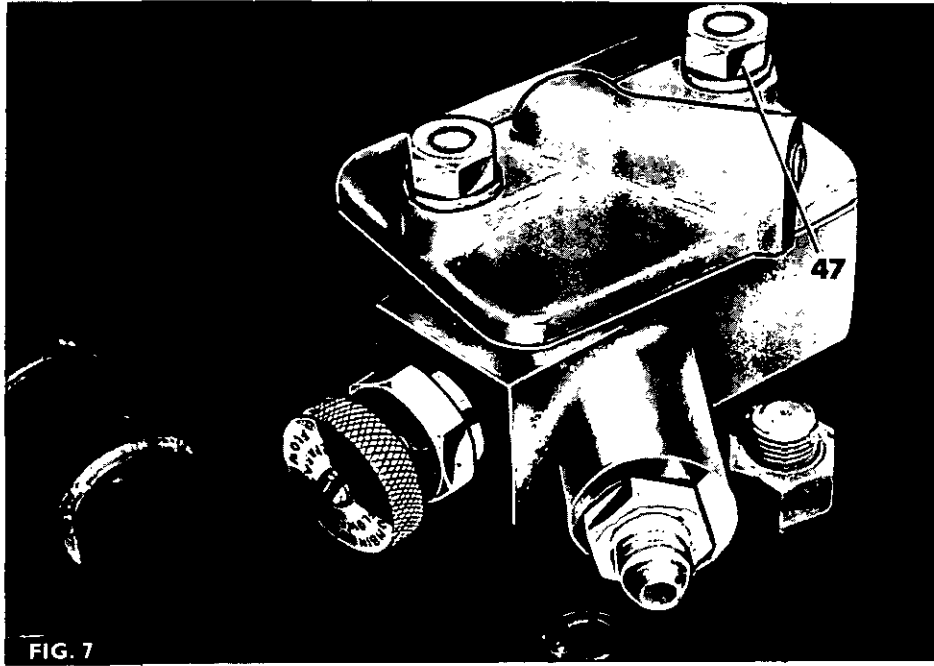


FIG. 7

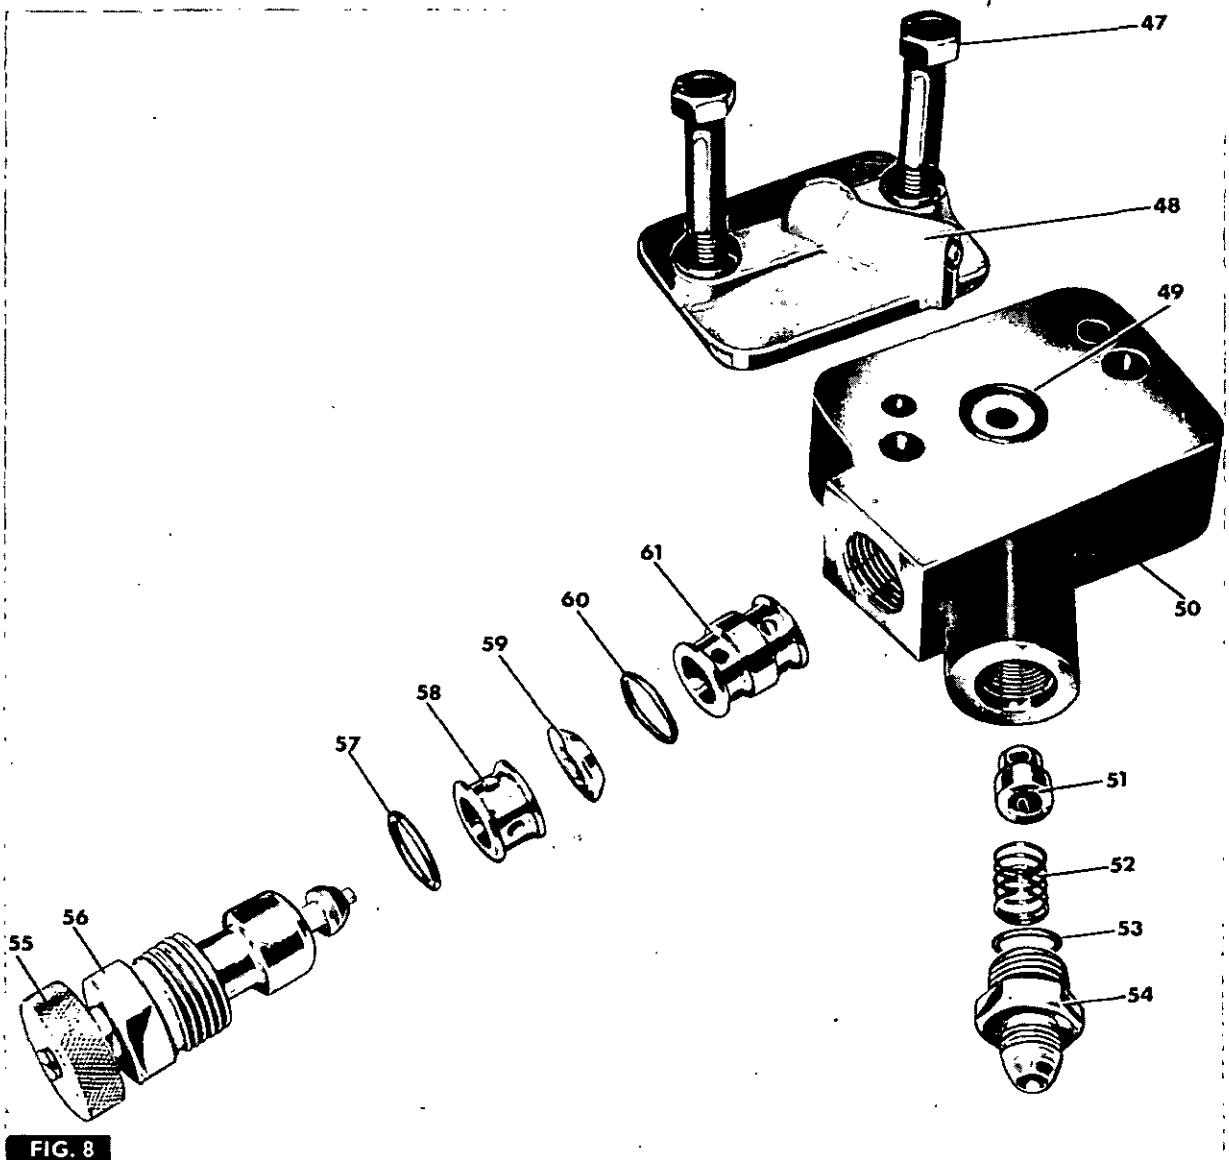


FIG. 8

---

7B-08

---

**AUXILIARY HYDRAULICS**

---

**RESERVED**

## AUXILIARY HYDRAULICS

## COMBINING VALVE

Removal and Refitment 7B-08-09

## Removal

1. Place the 'Draft Control' lever in the 'Down' position and the spool valve lever in 'Drop' to relieve the hydraulic system of pressure.
2. Disconnect the feed pipe from the combining valve.
3. Fig. 7. Remove the two bolts (47) and spring washers securing the combining valve and transfer cap to the lift cover.
4. Remove the transfer cap.
5. Carefully ease the combining valve off the hydraulic standpipe, taking care not to disengage the standpipe from the hydraulic pump.

## Refitment

1. Fit a new 'O' ring to the standpipe and clean the joint face.
2. Fit a new 'O' ring (49) to the top of the combining valve.
3. Carefully locate the combining valve on the standpipe, ensuring that the standpipe is properly located in the combining valve and in the lift pump.
4. Clean both the top face of the combining valve and the transfer cap, then locate the transfer cap on the combining valve and refit the bolts (47) and spring washers.

## COMBINING VALVE

Servicing 7B-09-09

## Disassembly

1. Remove the combining valve, as stated in operation 7B-08-09.
2. Fig. 8. Remove the connector (54) 'O' ring (53), spring (52) and check valve (51) from the combining valve body (50).
3. Slacken the union nut (56), then remove the knob and guide assembly (55), 'O' ring (57) spacer (58) seat (59) 'O' ring (60) and distance piece (61).

## Examination

Examine all components for wear, or damage and replace any defective components. Always fit new 'O' rings.

## Reassembly

1. Refit the distance piece (61) new 'O' ring (60) seat (59) spacer (58) second new 'O' ring (57), then screw in the knob and guide assembly with the nut (55 and 56).

2. Refit the check valve (51) and spring (52). Replace the connector (54) with a new 'O' ring (53).
3. Refit the combining valve, as stated in operation 7B-08-09.

## WOOSTER SPOOL VALVE

Fig. 10. The spool valve is available in two forms; single or twin spool. The design of both valves is basically similar, and performance characteristics are identical; the valve being capable of controlling double-acting rams, single-acting rams, or hydraulic motors, if modified slightly.

The valve body (63) is a cast-iron casting, with cast-in galleries and is bored to accept precision ground spools (62).

The spools protrude from one end of the valve body and engage a bell-crank lever (82), movement of which determines the positioning of the spools and thus the flow of oil. The position of the bell-crank lever is maintained by a spring loaded ball (81) which engages one of the three slots in the radial selector plate (80).

The opposite end of the spool bore is enlarged to house the kick-out mechanism (75). The open ends of the spool bores are sealed by plugs (74) retained by circlips (73). The ball and spring valve (77 and 78), retained by the screwed plug (76) prevents unequal pressure in the hydraulic circuit thereby preventing jerky operation.

## Kick-out Mechanism

Fig. 9. To prevent excessive exhausting of the circuit pressure relief valve, the Wooster spool valve incorporates a mechanism which returns the spool and actuating lever to the neutral position when a pressure of 140,5 Kg/cm<sup>2</sup> (2000 lb/in<sup>2</sup>) is reached. The mechanism is as follows:—

The main spool (62) which slides in the valve body (63) is cross-drilled (A) and bored (B). Screwed into the end of the spool is a tubular spool extension (64) which houses a poppet valve (67) and valve guide (65) which is retained by a pin (66).

The valve guide is cross-drilled (C) to allow oil to flow into the chamber formed by the spool extension (64), but this cross-drilling is blocked off by a spigot on the poppet valve. The poppet valve is held against the end of the valve guide (position shown dotted) by the inner helical spring (68), whose pressure can be adjusted by the screwed plug (69). The tubular spool extension is also cross drilled (D) to allow oil to flow into an annular cavity formed between the two telescopic sleeves (70 and 71). When the spool is in the neutral position, both sleeves are fully extended (right hand sleeves as shown, left hand sleeve shown dotted) and are retained in this position by the outer spring (72).

## AUXILIARY HYDRAULICS

### Operation of the Kick-out Mechanism

Fig. 9. When the spool actuating lever is moved from the neutral position to either the raising or lowering position, oil is directed by the spool to various parts and galleries within the valve which determine whether lifting or lowering will occur. When the spool is moved the cross drilling (A) will always align with the port receiving oil from the hydraulic pump(s). Oil flows down the cross-drilling (A) along the spool centre bore (B) and into the valve guide (65). If the pressure is sufficient, it will lift the poppet valve (67) off its seat, against the pressure spring (68) and allow the oil to flow through the cross-drilling (D) into the annular chamber between the sleeves (70 and 71) where it can go no further. The pressure of oil will now continue to increase until the combined force of the oil pressure and the outer spring (72) force the left hand sleeve (70) back into the extended position (shown dotted) thus moving the spool and actuating lever back into the neutral position.

Figure 9 shows the spool set in the raising position. The action when lowering is generally similar, except that the left hand sleeve remains in its original position, and the right hand sleeve moves with the spool.

The kick-out mechanism will operate in all cases except when lowering a single acting ram, where no pressure is created in the system.

### GENERAL NOTES WHEN FITTING AND OPERATING AUXILIARY HYDRAULICS

1. All hydraulic systems must have a correctly adjusted pressure relief valve. Adjusting relief valves to open at a higher pressure than is normally recommended is dangerous and can also cause extensive damage to components within the system.
2. All components which come into contact with the hydraulic fluid must be kept scrupulously clean. Even minute particles of dirt or grit can cause extensive damage to pumps, seals, rams and motors.
3. The pressure relief valve should not be allowed to blow continuously, as this can cause overheating and frothing of the hydraulic fluid, thus reducing the lubricational properties of the oil, allowing air bubbles to enter the system and may cause the oil to become so thin that it can aggravate leaks past seals.
4. Always ensure that the hydraulic system contains sufficient fluid to supply the whole system. Lack of oil will result in vapour locks and jerky operation.
5. All unions must be kept tight and all seals must be effective, for the system to work efficiently.
6. If any of the services fail to function, never remove a hose to see whether fluid is flowing. Switch off the tractor engine first, fit a pressure gauge and check the flow.
7. When fitting hydraulic hoses, always route them in such a manner that no kinking or twisting of the hose occurs. Kinking and twisting of hoses restricts flow, reduces

efficiency and in extreme cases, can cause over-heating of the hydraulic fluid.

### WOOSTER SPOOL VALVE OPERATION

The following set of flow diagrams are intended as a guide to the correct methods of arranging auxiliary hydraulic equipment to give the best performance in the field. Every possible variation of machine and flow cannot be shown in this publication. Indeed, if they were, they would serve only to confuse rather than clarify.

All equipment described in the following diagrams is of the type described in section seven of this manual, except where stated.

#### Flow within the Wooster Spool Valve

The following description of flows within the valve is intended as a guide which should enable fitters to trace a fault within the valve by checking for flow at various lever positions.

In all of the following illustrations, up to three different colours are used, and illustrate the condition of the hydraulic oil as follows :

- RED – Oil under pressure
- YELLOW – Oil flowing back to pump or sump
- BLUE – No flow (hydraulic lock)

In some cases, the point at which pressurised flow ends and free flow begins is obscure. Under these circumstances, pressurised flow is shown all through the valve (e.g. neutral). In some cases, flow back to pump and pressurised flow combine to flow back to pump. In these cases, only YELLOW will be shown from where the flows combine (e.g. single-acting lowering).

#### Neutral (Fig. 10)

When the actuating lever on the spool valve is in the Neutral (central) position, oil (red) flows into the spool valve through the inlet port (G). Due to the positioning of the spool(s) the oil then flows straight through the cross-porting (E) into the exhaust port (F) and then back to the pump. When the spool is in neutral position, the port(s) connecting the ram or motor (H and I) are cut off from the oil flow and can neither lift nor lower. Even though there is a direct flow from the inlet to the exhaust port, there will be a certain amount of back-pressure within the system which will lift the ball valve (78) and allow oil to completely fill the valve. The position of the switch valve (79) is not important.

#### Double-Acting Raising (Lever Back) (Fig. 11)

Oil (red) is fed from the inlet port (G) into the spool bore. As one spool is in the neutral position, no oil is fed into either of its ports. The oil pressure then lifts the ball valve (78) and oil flows along the cross-drilling to the 'LIFT' port (H). The oil then flows into the ram and extends it. As the ram extends, oil (yellow) is forced from the opposite side of the ram and is fed back into the valve through the DROP port (I). Spool positioning is such that the oil flows along the return gallery to the exhaust port (J). The switch valve (79) must be fully closed, as shown.

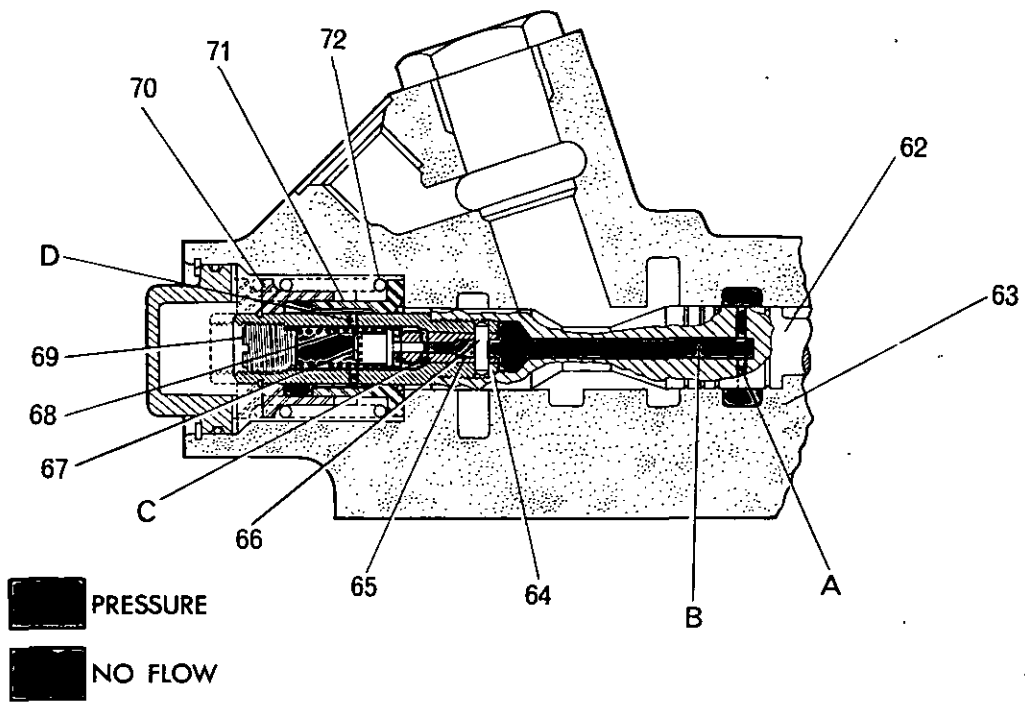


FIG. 9

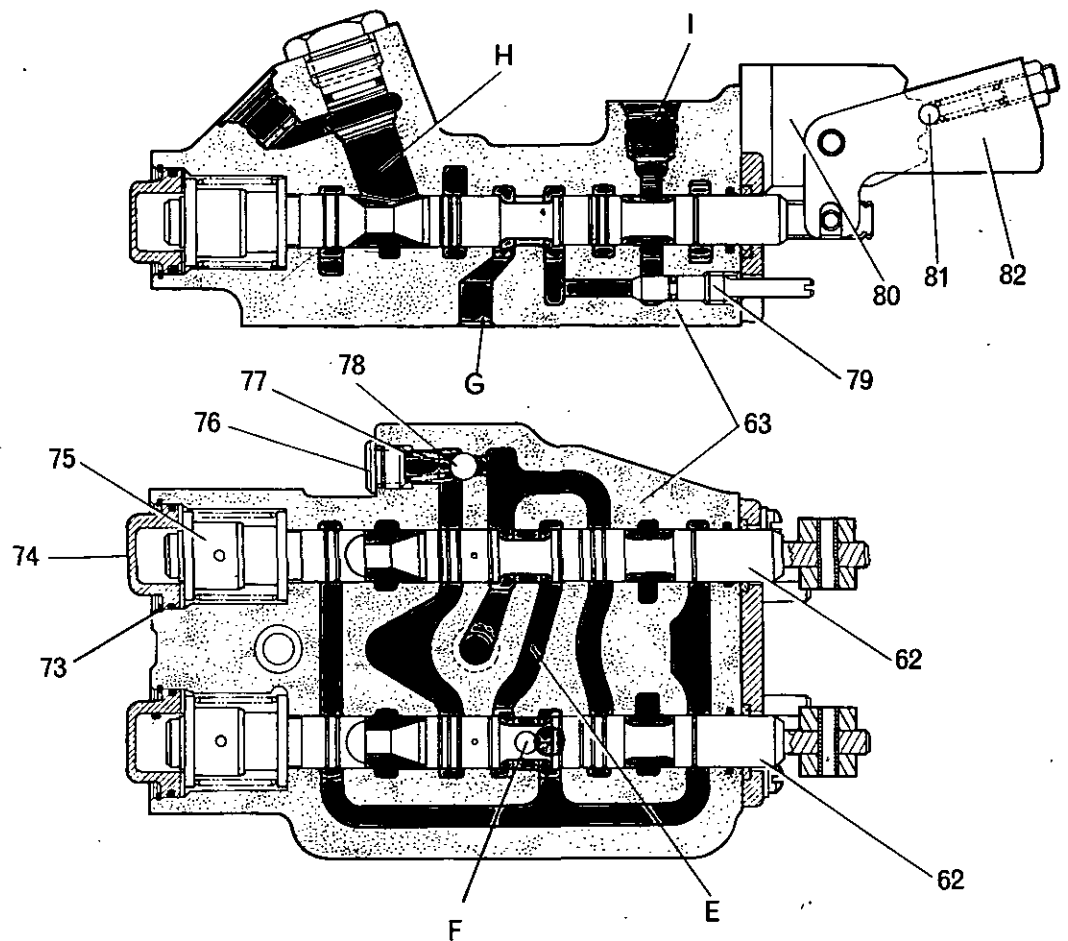


FIG. 10

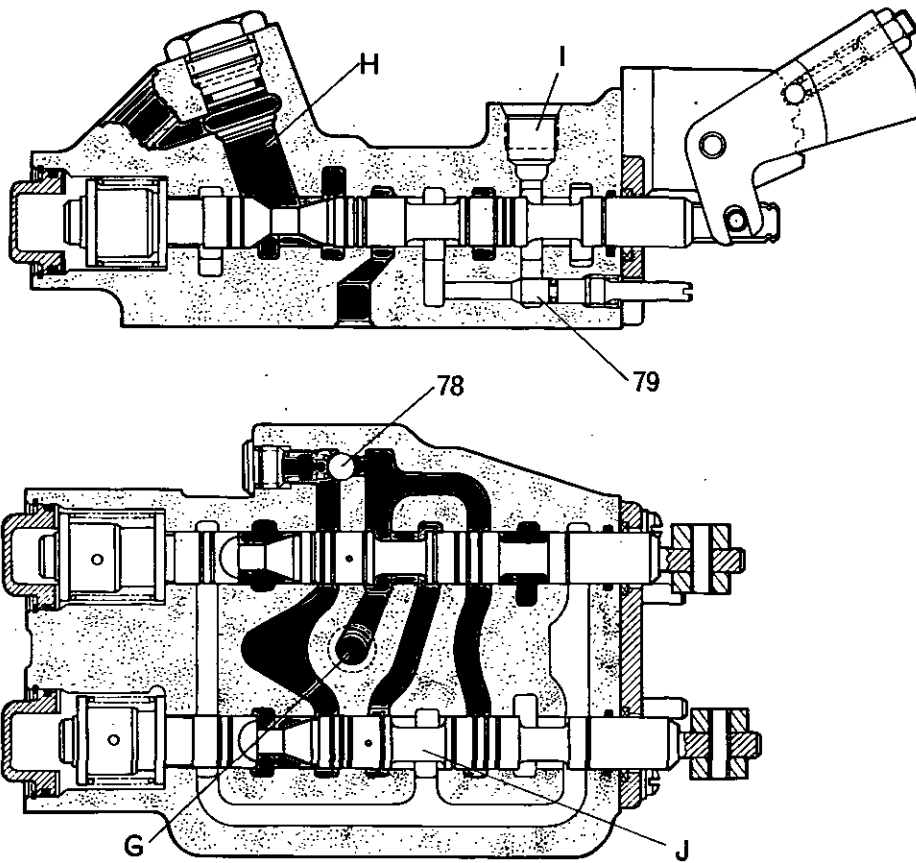





FIG. 11

-  PRESSURE.
-  FLOW.
-  NO FLOW.

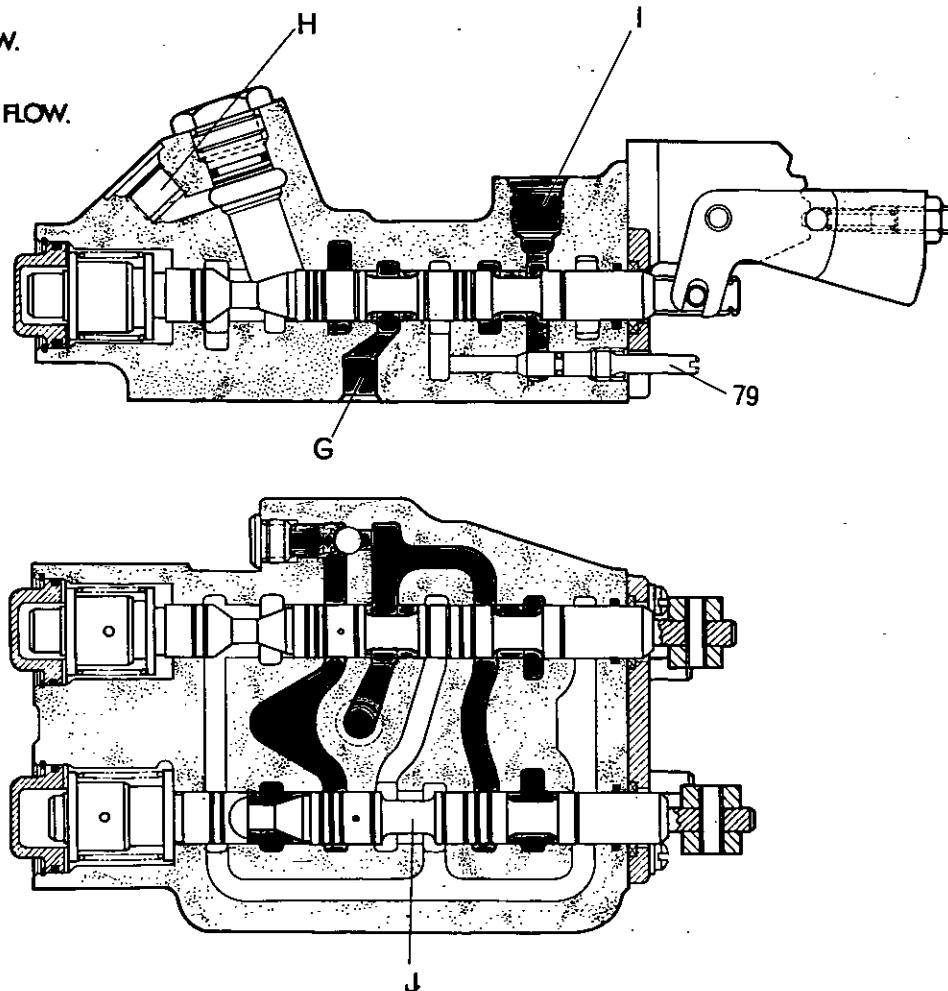


FIG. 12



AUXILIARY HYDRAULICS

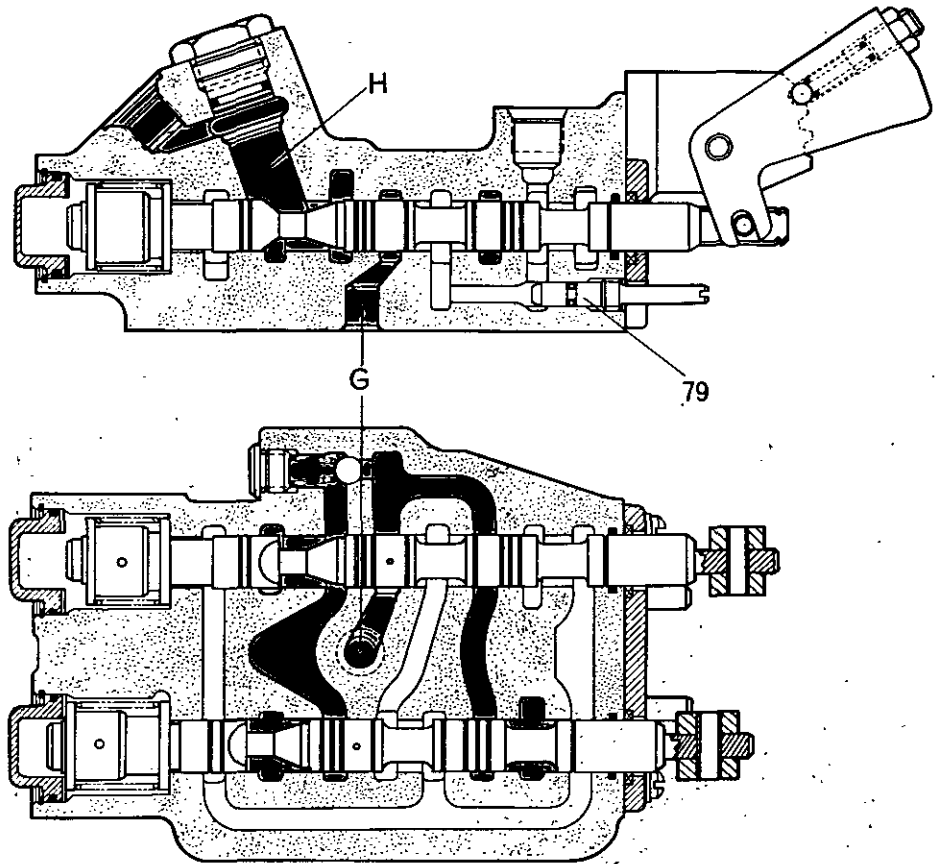


FIG. 13

- PRESSURE
- FLOW
- NO FLOW

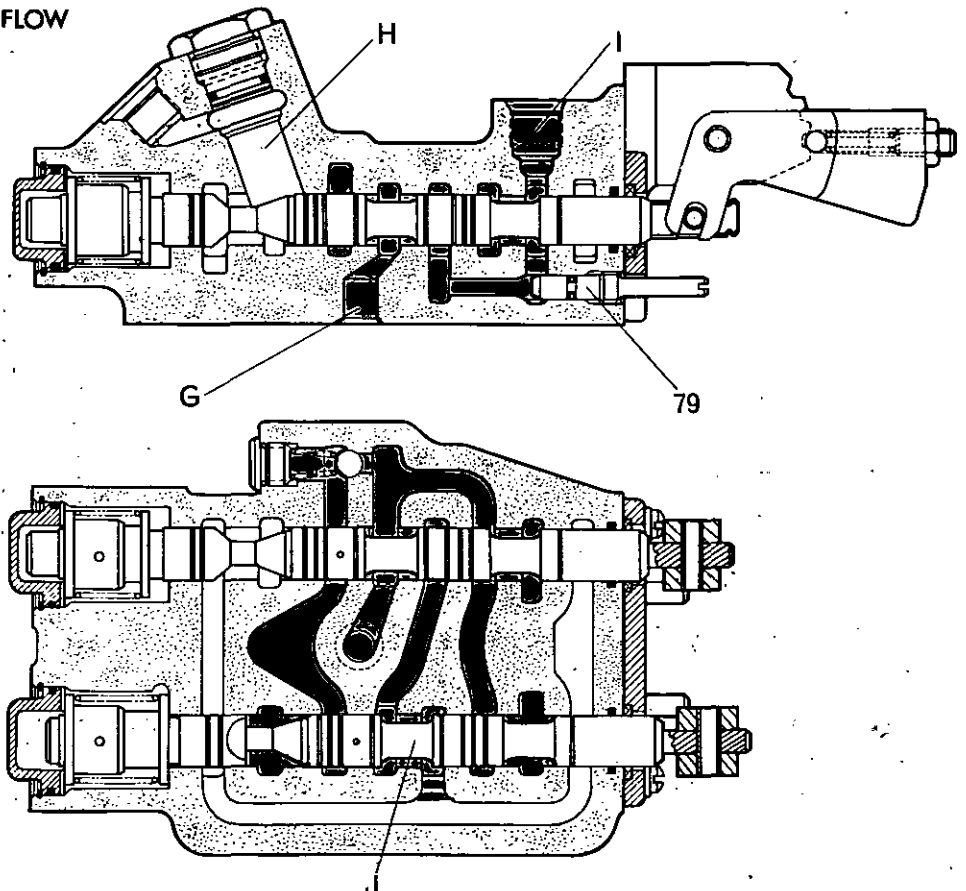


FIG. 14

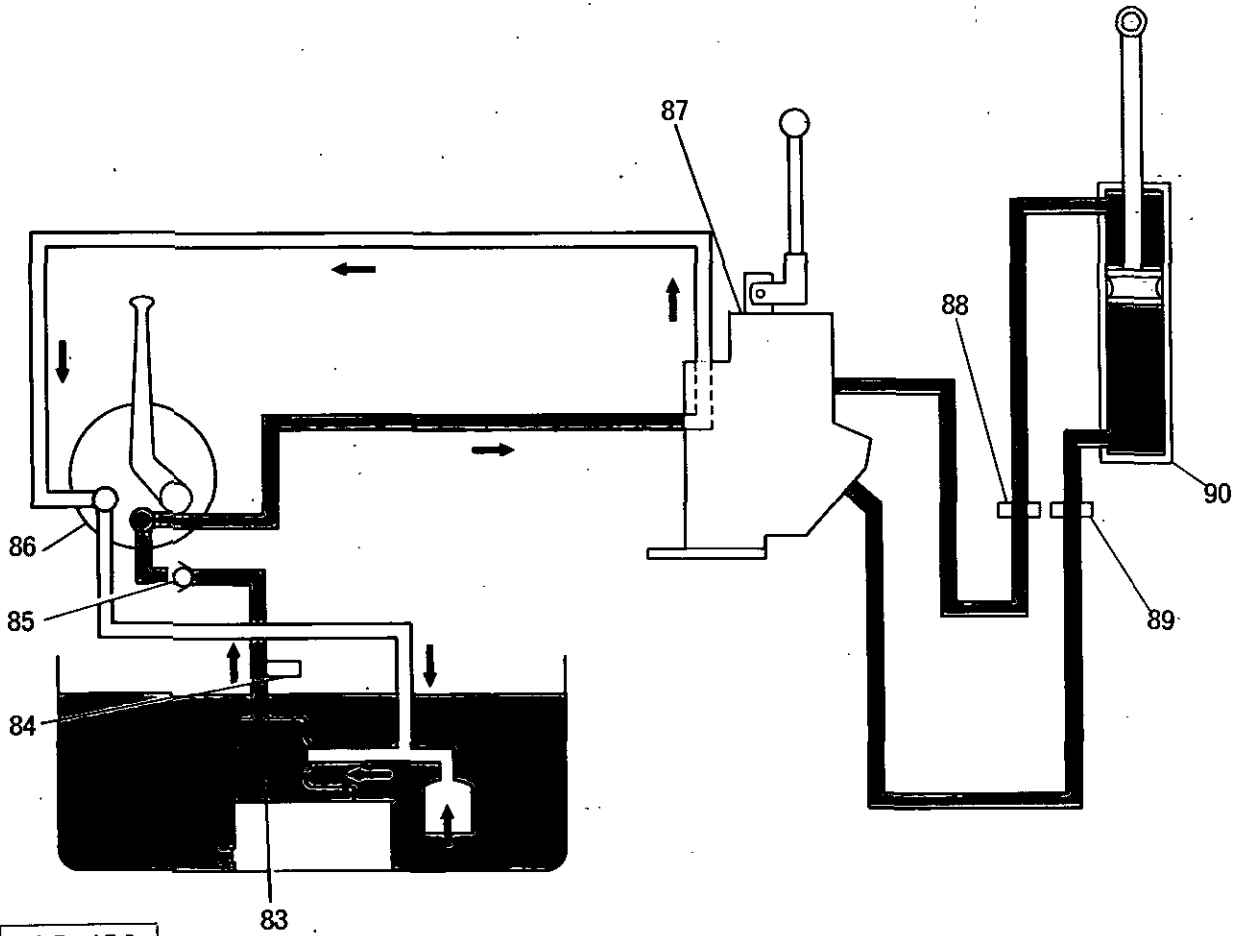





FIG. 15A

-  PRESSURE
-  FLOW
-  NO FLOW

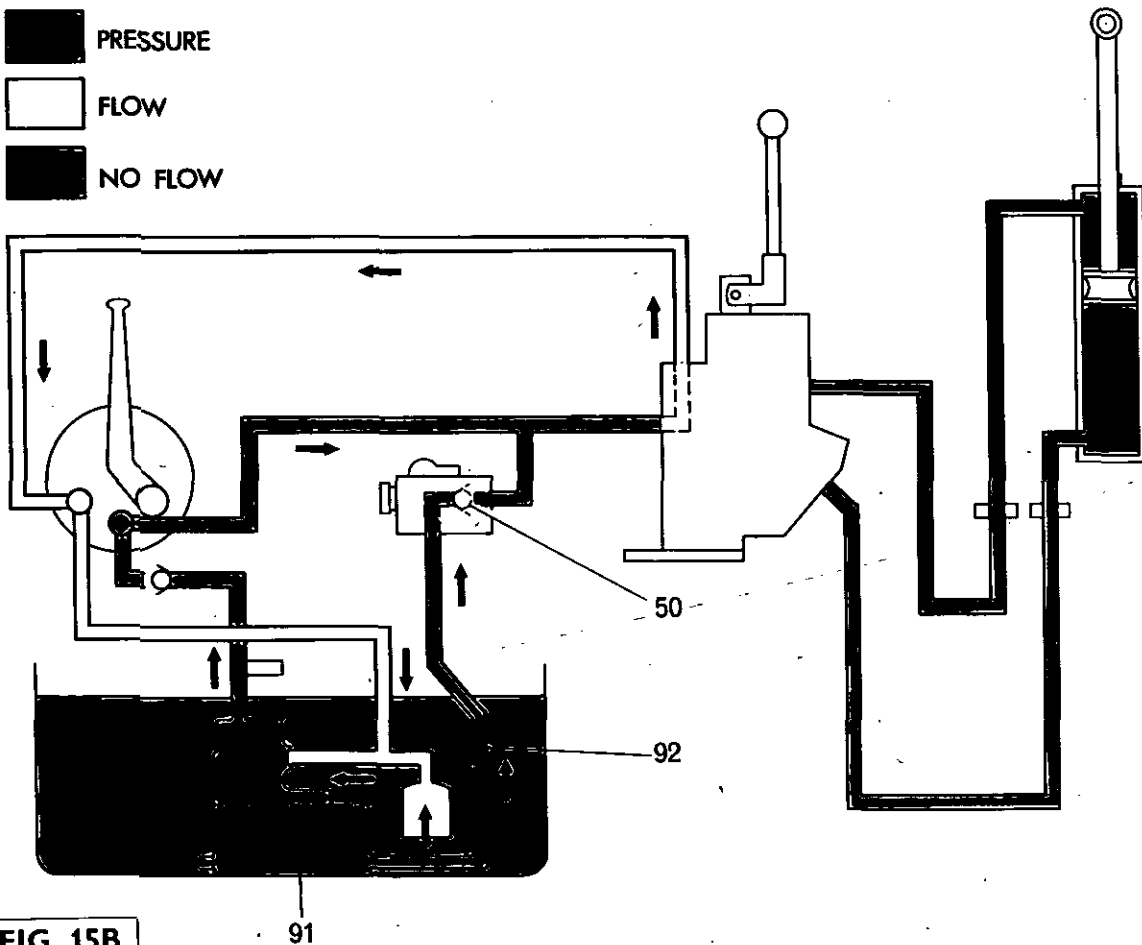


FIG. 15B

AUXILIARY HYDRAULICS

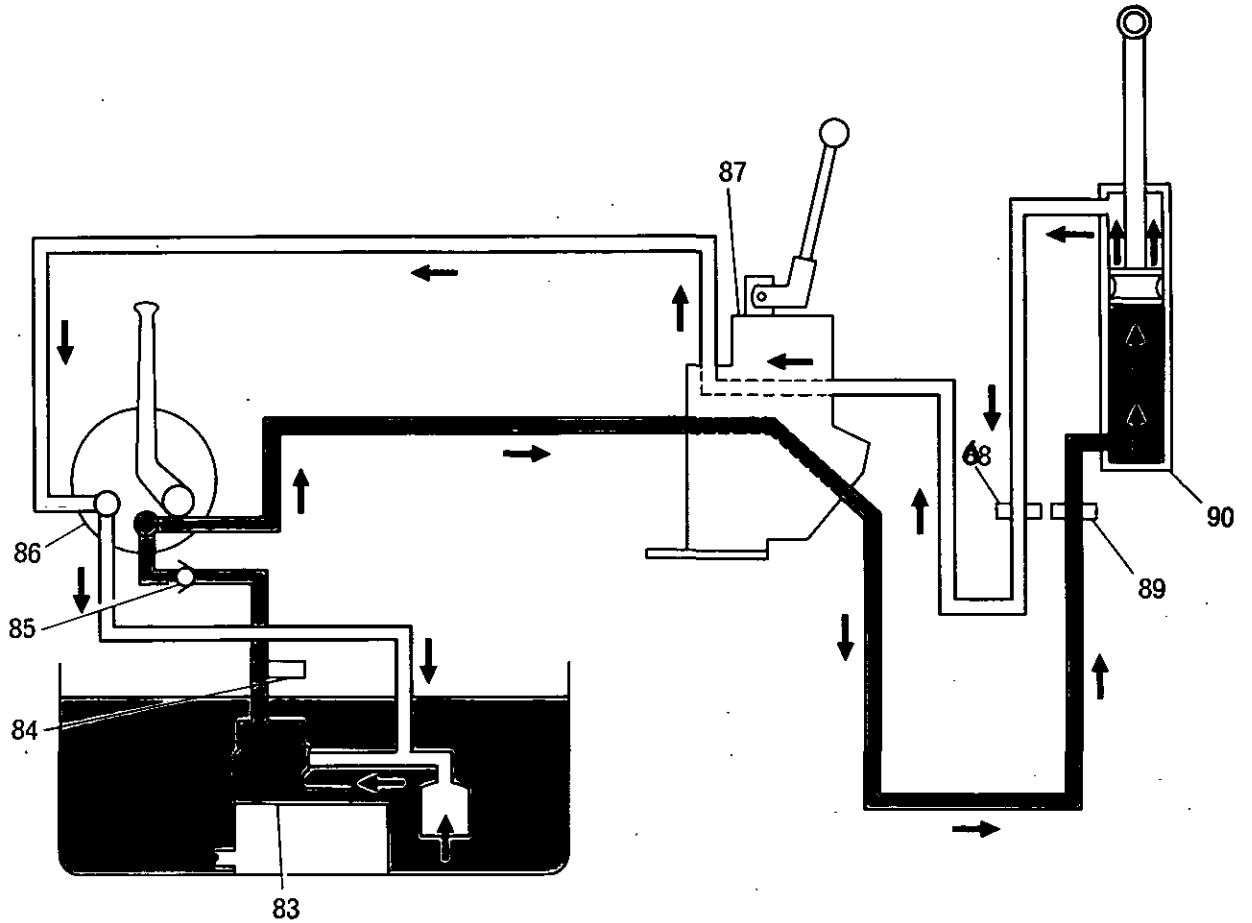





FIG. 16A

-  PRESSURE
-  FLOW
-  NO FLOW

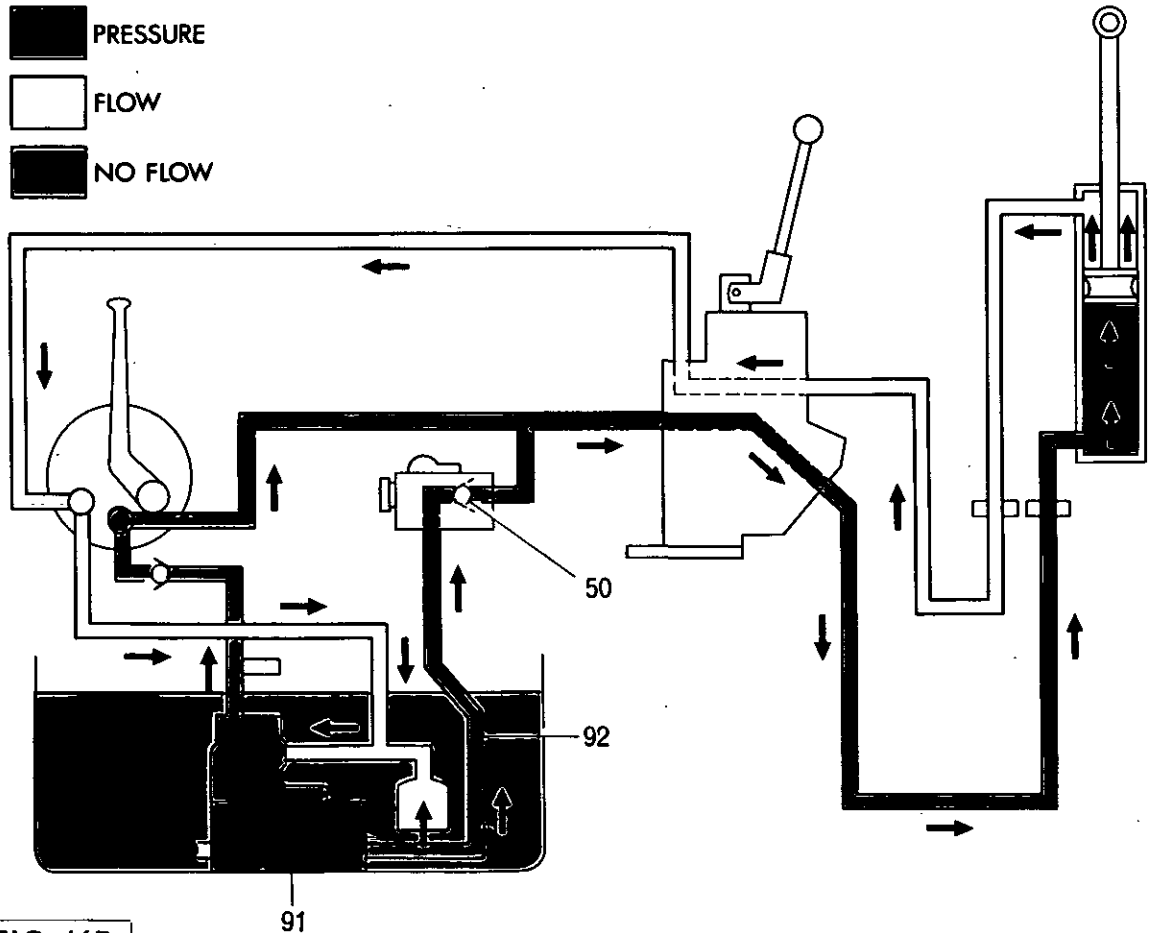


FIG. 16B

AUXILIARY HYDRAULICS

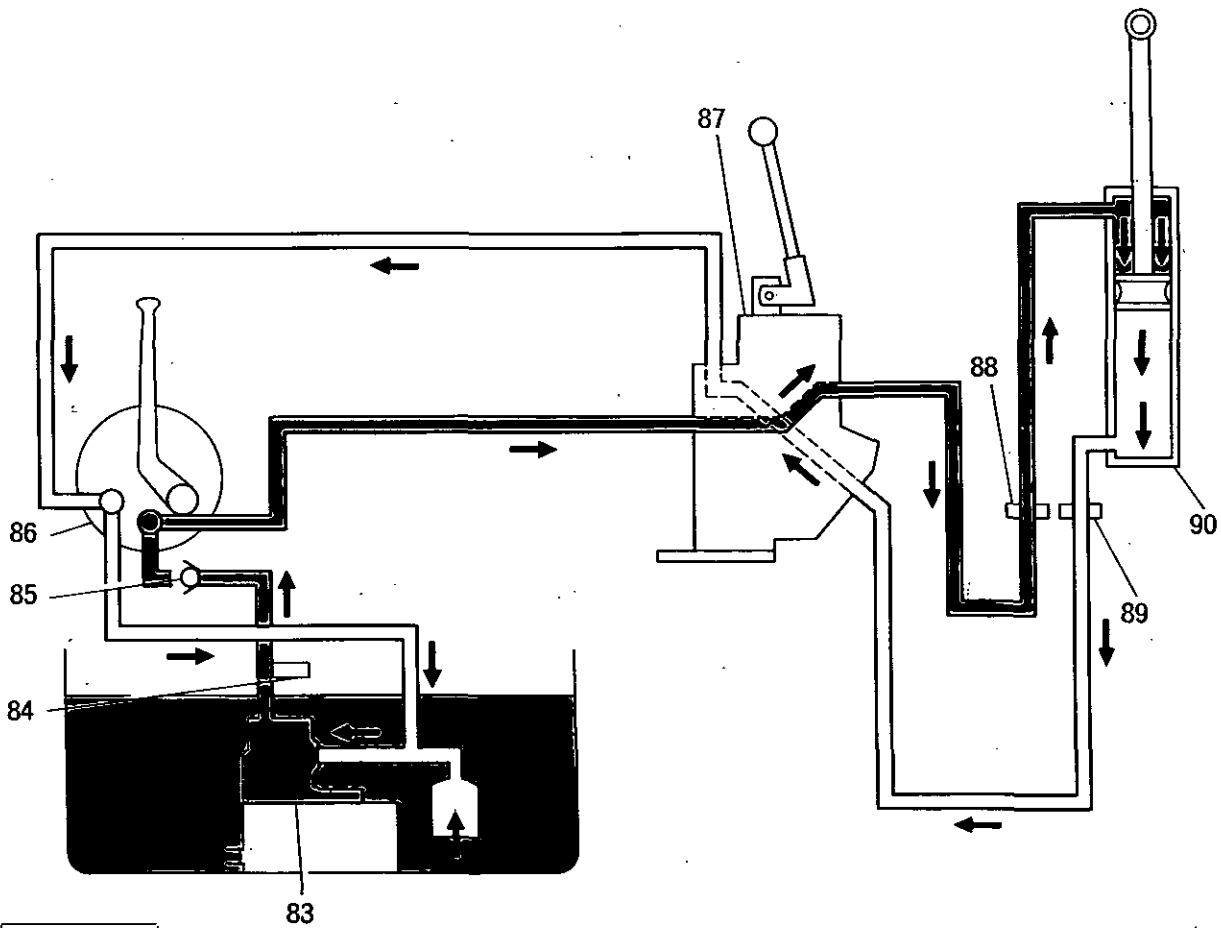


FIG. 17A

- PRESSURE
- FLOW
- NO FLOW

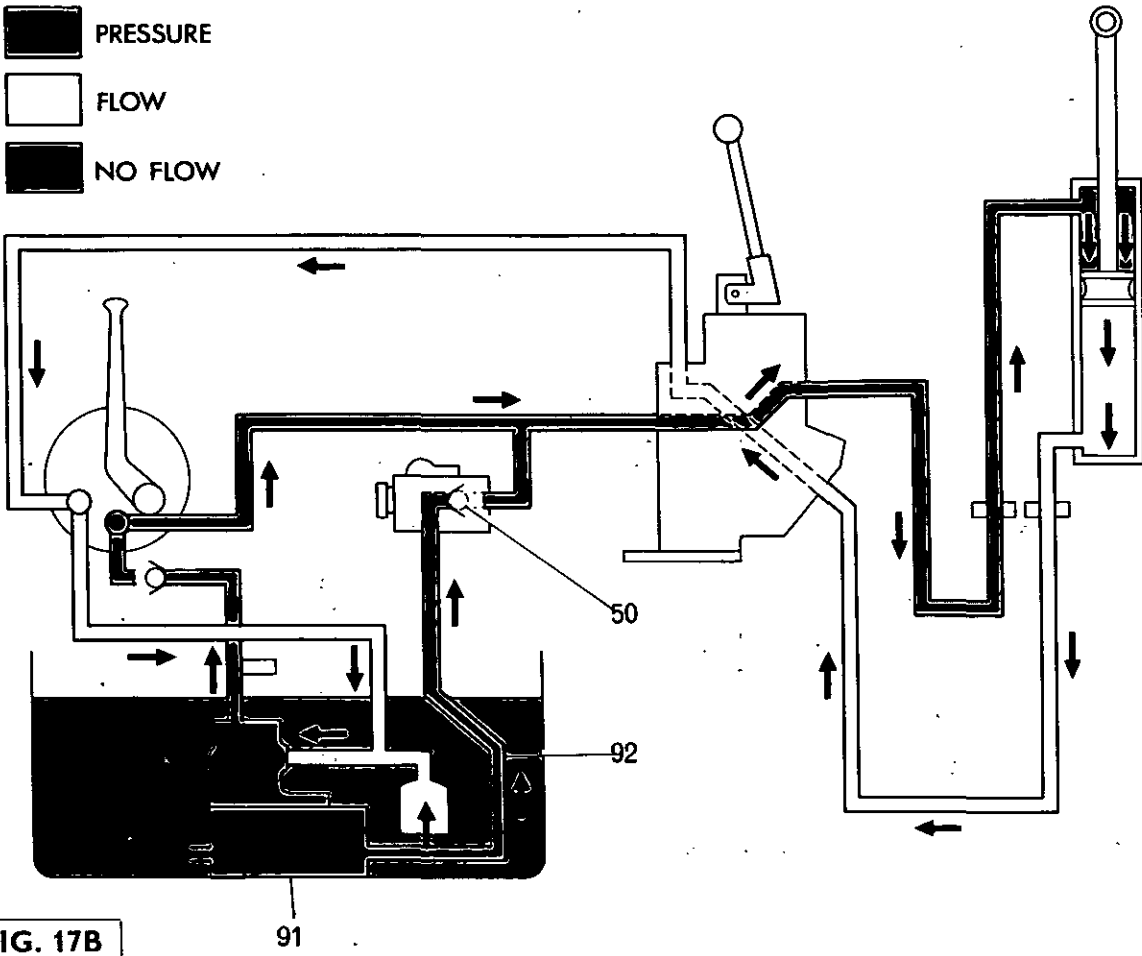


FIG. 17B

## AUXILIARY HYDRAULICS

**Double-Acting Lowering (Lever Forward) (Fig. 12)**

When the lever is pushed forward, oil (red) is fed from the inlet port (G), out of the 'DROP' port (H) to the ram, thus expelling oil (yellow) from the opposite side of the ram back to the 'LIFT' port (I). The oil then flows along the return gallery to the exhaust port (J). The switch valve (79) must be fully closed, as shown for double-acting operation.

**Single-Acting Neutral (Lever Central) (Not illustrated)**

The neutral flow for single-acting is similar to that for double-acting except that the 'DROP' port (H Fig. 4) is blanked off by the self-sealing quick release hose coupling.

**Single-Acting Raising (Lever Back) (Fig. 13)**

For single-acting operation the switch valve (79) must be unscrewed five full turns from 'fully in' position. Oil (red) flows from the inlet port (G) into the spool bore. The oil is directed by the spool to the 'LIFT' port (H) where the oil then flows to the ram and extends it. As the 'DROP' port is blanked off, there is no flow from the ram back to the spool, and consequently, no flow back to pump from the valve. The oil (blue) in the return gallery, to all intents and purposes, does not flow.

**Single-Acting Lowering (Lever Forward) (Fig. 14)**

With the actuating lever placed in the forward position, the position of the spool is such that oil (red) enters the valve through the inlet port (G) and is directed by the spool to the 'DROP' port (I). As the 'DROP' port is blanked off, and the switch valve (79) is open, the oil returns straight into the exhaust port (J). Oil (yellow) is also flowing from the ram as it contracts, and enters through the 'LIFT' port (H). Due to the position of the spool, the oil is directed from the 'LIFT' port into the return gallery, where it flows into the exhaust port (J) and combines with the pump flow, to flow back to tank (shown as yellow).

**CIRCUIT FLOWS**

The following flows, although purely diagrammatic, are intended as a guide to the correct methods of setting up hydraulic circuits on tractors fitted with the auxiliary pump. Each particular flow will have a two-part illustration; part A being for the auxiliary pump alone and part B for the combined auxiliary and linkage pumps, as the basic flow is similar once the flows have combined.

There are non-return valves incorporated in the circuit to prevent damage if one of the pumps malfunctions. The relief valve is fitted between the auxiliary pumps and non-return valve in the auxiliary pump circuit and thus allows the full 211 Kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>) to be used for short periods. The non-return valve in the linkage pump circuit is in the combining valve.

**Key to All Circuit Diagrams**

Fig. 15A to 21B

- |    |                          |                                       |
|----|--------------------------|---------------------------------------|
| 83 | Auxiliary Hydraulic Pump |                                       |
| 84 | Pressure relief valve.   |                                       |
| 85 | Non-return valve.        |                                       |
| 86 | P.t.o. side cover        |                                       |
| 87 | Wooster spool valve.     |                                       |
| 88 | Upper 'Pioneer' coupler  | (yellow, or blue identification tag). |

- |    |                           |                                     |
|----|---------------------------|-------------------------------------|
| 89 | Lower 'Pioneer' coupler   | (red, or white identification tag). |
| 90 | Double-acting ram         |                                     |
| 91 | Tractor linkage lift pump |                                     |
| 92 | Tractor standpipe         |                                     |
| 50 | Combining valve           |                                     |
| 93 | Single-acting ram         |                                     |
| 94 | Special balance pipe      |                                     |
| 95 | Hydraulic motor           |                                     |

**Double-Acting Ram-Wooster Spool Valve****Neutral (Lever Central)** Fig. 15A and 15B

Oil (red) is drawn into the auxiliary pump through the filter and pumped, under pressure, to the manifold on the p.t.o. side cover. The oil is then piped into the Wooster spool valve inlet port, where, due to spool positioning, it flows straight out again through the exhaust port on the valve (see Fig. 12). The oil (now yellow) flows down the return pipe to the p.t.o. cover, where it is piped back into the hydraulic pump. As approximately 25% of the oil delivered by the pump is required to operate the Multi-power and does not return to the pump, the required quantity is drawn through the filter.

When the combined pumps are employed as shown in Figure 5B oil (red) flows from the linkage lift pump, up the standpipe to the combining valve, which if open, will allow the oil to be piped to the tee-piece on the spool valve, and thus supplement the output of the auxiliary pump. When combined pumps are employed, the oil pumped by the tractor linkage pump will also be returned to the auxiliary pump. There will therefore, be very little intake through the filter into the auxiliary pump.

**Double-Acting Ram-Wooster Spool Valve****Raising (Lever Back)** (Fig. 16A and 16B)

Oil (red) is drawn into the pump(s) and is piped via either the p.t.o. side cover, or the combining valve to the tee-piece union on the spool valve. The oil, directed by the spool position, flows from the valve out of the 'LIFT' port to the quick release coupling hose which has either a white (L.H.) or red (R.H.) coloured identification tag. Connected to the quick release coupling is the ram hose, along which the oil flows to the ram. When the oil pressure exceeds the load, the ram extends. Oil (yellow) is forced from the opposite side of the ram and flows along the second ram hose, which is connected to the upper quick release coupling [yellow (L.H.) or blue (R.H.) identification tags]. The oil re-enters the spool valve through the 'DROP' port, and is routed through the valve, back through the p.t.o. side cover to the auxiliary pump.

**Double-Acting Ram-Wooster Spool Valve****Lowering (Lever Forward)** Fig. 17A and 17B

Oil (red) is drawn into the pump(s) and is piped to the spool valve tee-piece union, via either the p.t.o. side cover or the combining valve. The oil is directed by the spool to the 'DROP' port on the valve, which is connected to another quick release coupling hose [yellow (L.H.) or blue (R.H.) identification tags].

The oil flows through the quick-release coupling, and along the ram hose to the ram which contracts. As the ram contracts, the oil (yellow) on the opposite side of the ram is forced back along the hose to the other quick release coupling hose [white (L.H.) or red (R.H.) identification tags] and into the valve through the 'LIFT' port. The oil then flows from the valve, through the p.t.o. side cover and into the pump, to be re-circulated.

## AUXILIARY HYDRAULICS

### Single-Acting Ram-Wooster Spool Valve

**Neutral (Lever Central)** Fig. 18A and 18B  
The neutral flow for single-acting rams is generally similar to that for double-acting, except that only one ram hose is employed. The self-sealing, quick release coupling prevents flow from the 'DROP' port hose. The switch valve must be unscrewed five full turns from the 'fully in' position.

### Single-Acting Ram-Wooster Spool Valve

**Raising (Lever Back)** Fig. 19A and 19B  
Oil (red) is drawn into the pump(s) and is pumped, under pressure, to the spool valve, via either the tractor standpipe and combining valve, or the p.t.o. side cover. The oil is channelled through the valve to the 'LIFT' port. From the 'LIFT' port the oil flows along the quick release coupling hose, (white or red identification tag) to the ram hose and finally into the ram. The ram extends. The return pipe from the valve to the pump may contain some oil (blue), but as very little of this will be drawn back into the pump, a condition of 'no flow' may be considered to exist.

### Single-Acting Ram-Wooster Spool Valve

**Lowering (Lever Forward)** Fig. 20A and 20B  
When the valve actuating lever is placed in the forward position, filtered oil (red) is drawn from the pump(s) and is routed to the spool valve, via either the tractor standpipe and combining valve, or the p.t.o. side cover. The oil flows into the valve and is routed to the 'DROP' port. As this is blanked off, but the switch valve is open, the oil flows to the return port. The oil (yellow) in the ram is forced out as the ram contracts, due to gravity or spring pressure, and the oil flows back along the quick release coupling hose to the 'LIFT' port. As the spool is in the lowering position, the oil flows into the return gallery and combines with the pump flow, to flow back to the auxiliary pump.

### Hydraulic Motor (Single-Acting Operation) (Lever Back)

Fig. 21A and 21B  
Oil (red) is drawn into the pump(s) and flows to the spool valve via either the p.t.o. side cover, or the tractor standpipe and combining valve. The oil flows from the 'LIFT' port on the valve, along the quick release coupling hose (white or red tag) to the motor hose. The oil flows into and drives the motor, the exhausted oil (yellow) flowing back to the upper quick release coupling hose (yellow or blue tag). The oil can either flow through the valve back to the return hose, or through the balance hose to the return pipe and then back to the pump. The by-pass hose is required to prevent burst seals when stopping the motor, i.e. when the valve is placed in the neutral position, the flow of oil to and from the motor, which is rotating at speed, will continue. Its momentum will allow it to carry on running for a short time, during which it will draw oil from the pressure side of the motor and attempt to transfer it to the non-pressure side. As the oil cannot escape, the seals in the circuit will fail. The balance pipe allows the oil to flow back to the pump without this pressure building up.

## IMPLEMENTS WITH THEIR OWN SPOOL VALVES

When fitting machines with their own valves, certain precautions must be taken to ensure safe, efficient operation.

A pressure relief valve must be fitted.

If the machine is to be removed from the tractor, the p.t.o. side cover must be restored to its original condition. The manifold, banjo bolts, washers and gaskets (Figure 22) must be refitted.

### NEVER UNDER ANY CIRCUMSTANCES, FIT BLANKING PLUGS IN PLACE OF THE MANIFOLD AND BANJO BOLTS

#### Operation

Precise instructions as to the correct operational technique cannot be given, due to the wide range of equipment and differing procedures. Manufacturers of such equipment usually provide more specialised instructions and should be consulted if these are not readily available.

## WOOSTER SPOOL VALVE

### Kit Fitment

7B-10-18

### Auxiliary Hydraulic Tractors

#### Assembly

1. Remove the seat.
2. Remove the top bolts and nut securing each trumpet housing to the centre housing.
3. Place the 'Draft Control' lever in the 'DOWN' position.
4. Fig. 35. Remove the two bolts (47) securing the transfer cap (48) then carefully ease off the transfer cap, ensuring that the standpipe is not displaced from its location in the hydraulic pump.
5. Fit the combining valve, as stated in operation 7B-08-09
6. Drain the transmission oil to the 'MIN' mark on the dipstick.
7. Remove the two bolts securing the L.H. footplate to its rear support bracket.
8. Remove the UPPER bolt securing the L.H. footplate rear support bracket to the centre housing, then slacken the lower bolt and swing the bracket downwards to clear the side cover.
9. Remove the two banjo bolts and the manifold from the p.t.o. side cover.
10. Fig. 23. Fit the two unions (93 and 94) to the p.t.o. side cover, as shown.
11. Refit the footplate rear support bracket to the p.t.o. side cover, but do not refit the footplate to bracket bolts.

AUXILIARY HYDRAULICS

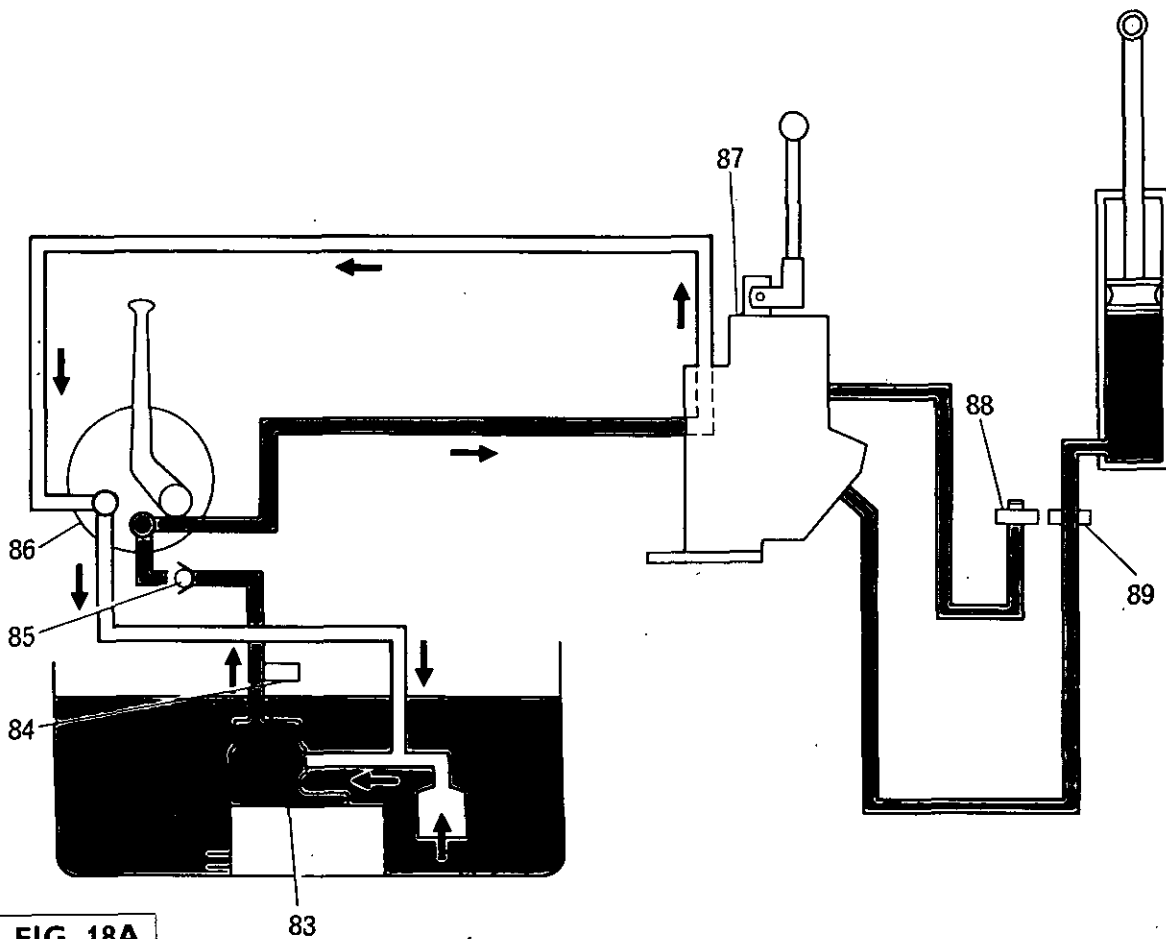


FIG. 18A

- PRESSURE
- FLOW
- NO FLOW

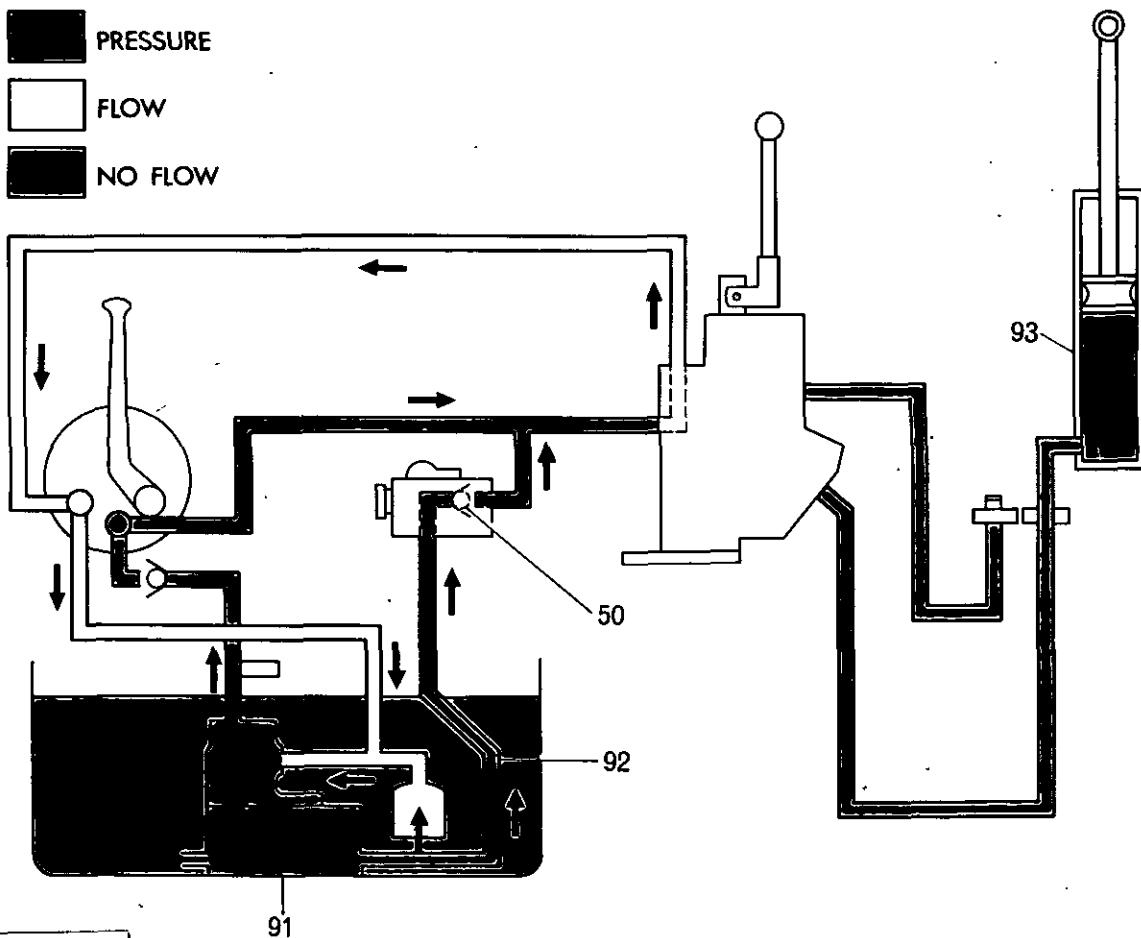


FIG. 18B

AUXILIARY HYDRAULICS

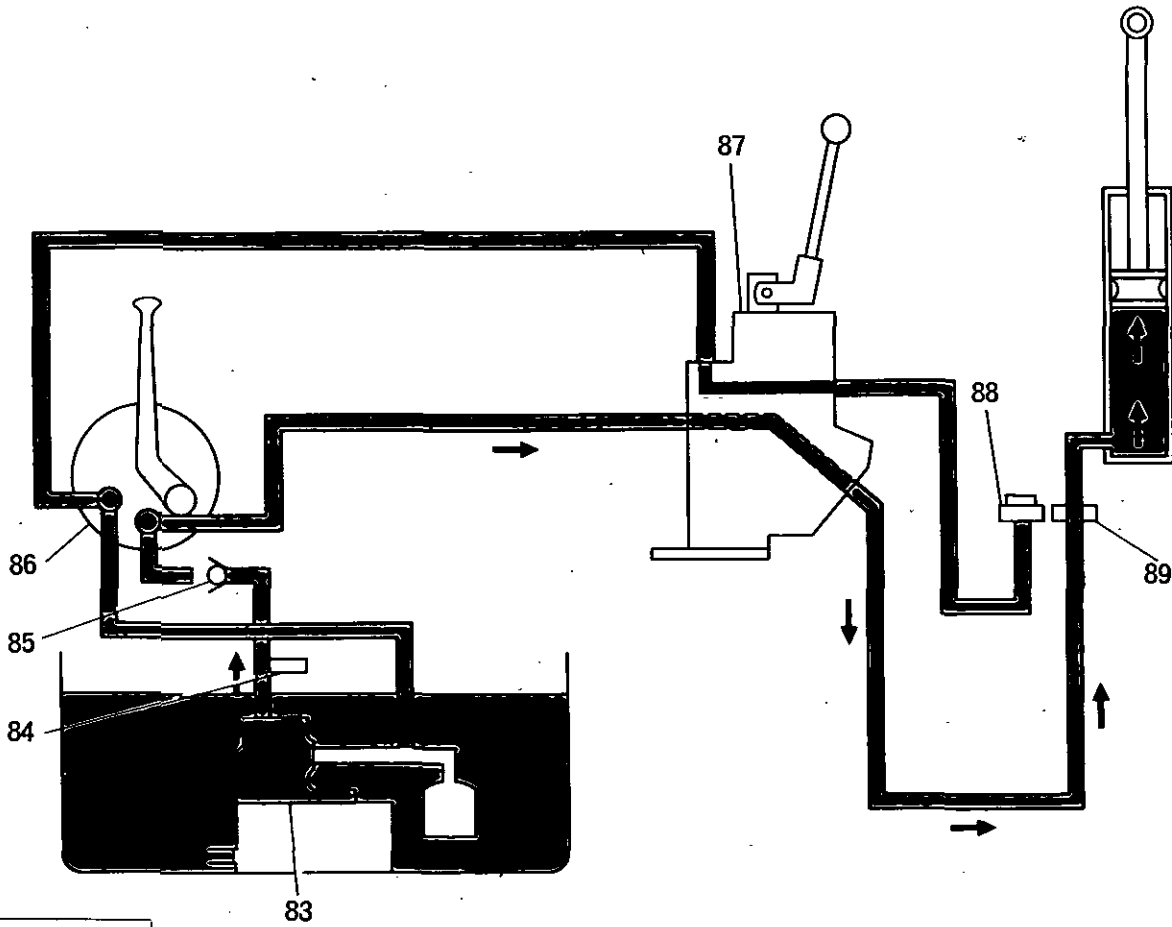





FIG. 19A

-  PRESSURE
-  FLOW
-  NO FLOW

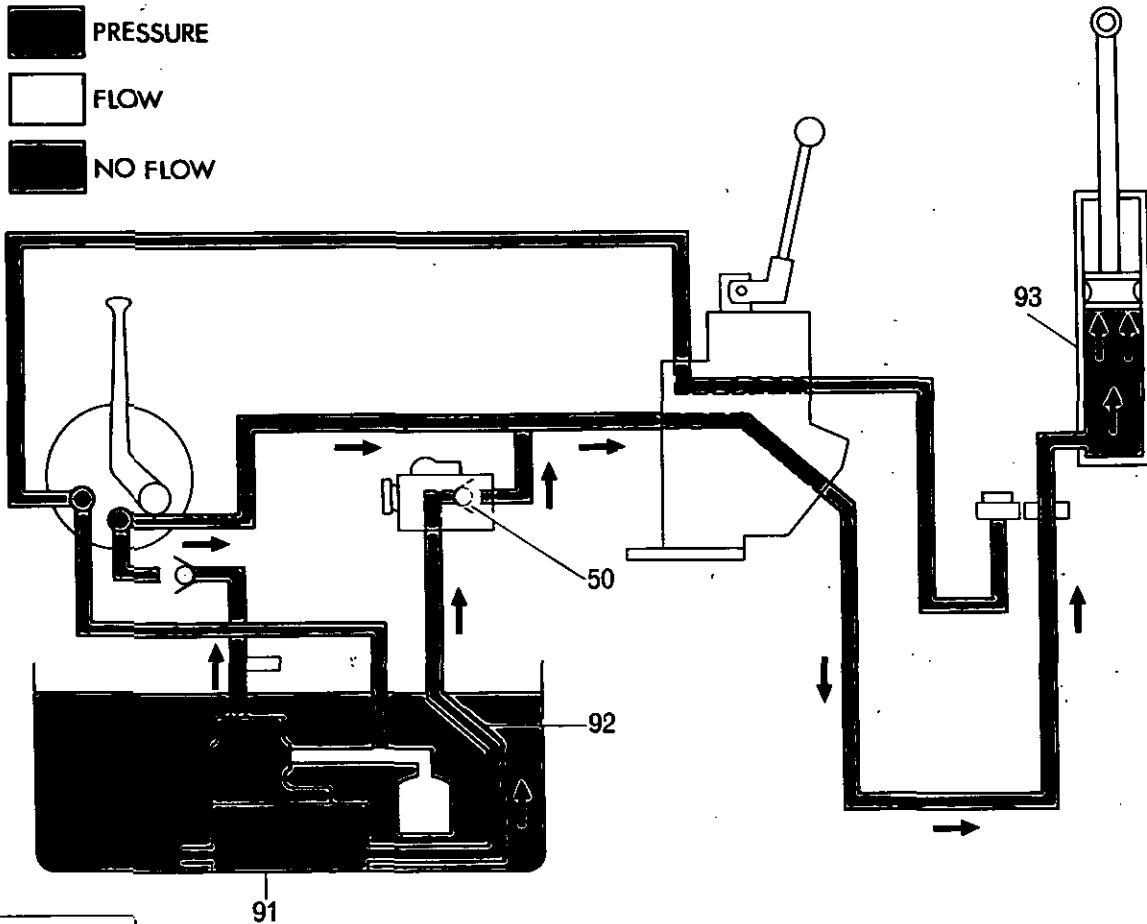


FIG. 19B



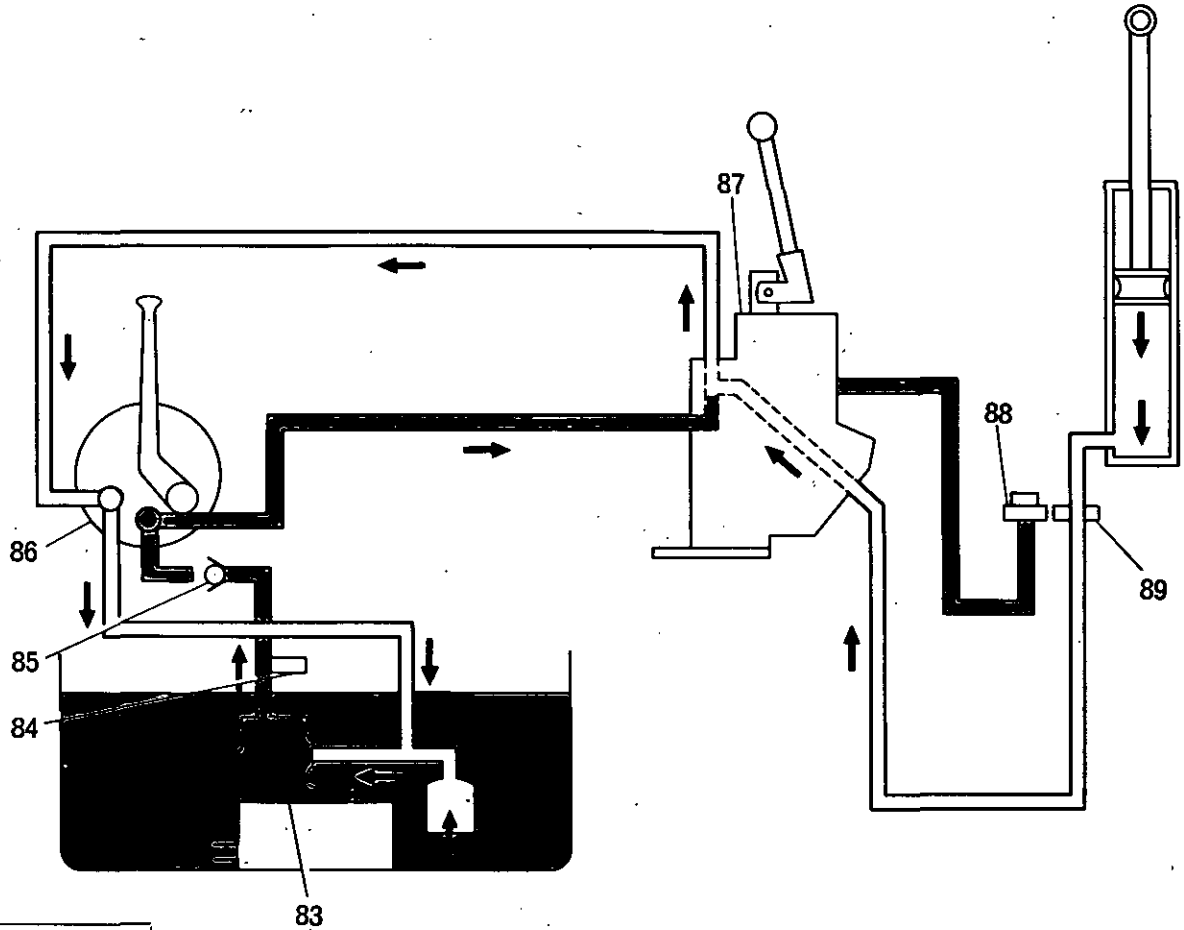


FIG. 20A

- PRESSURE
- FLOW
- NO FLOW

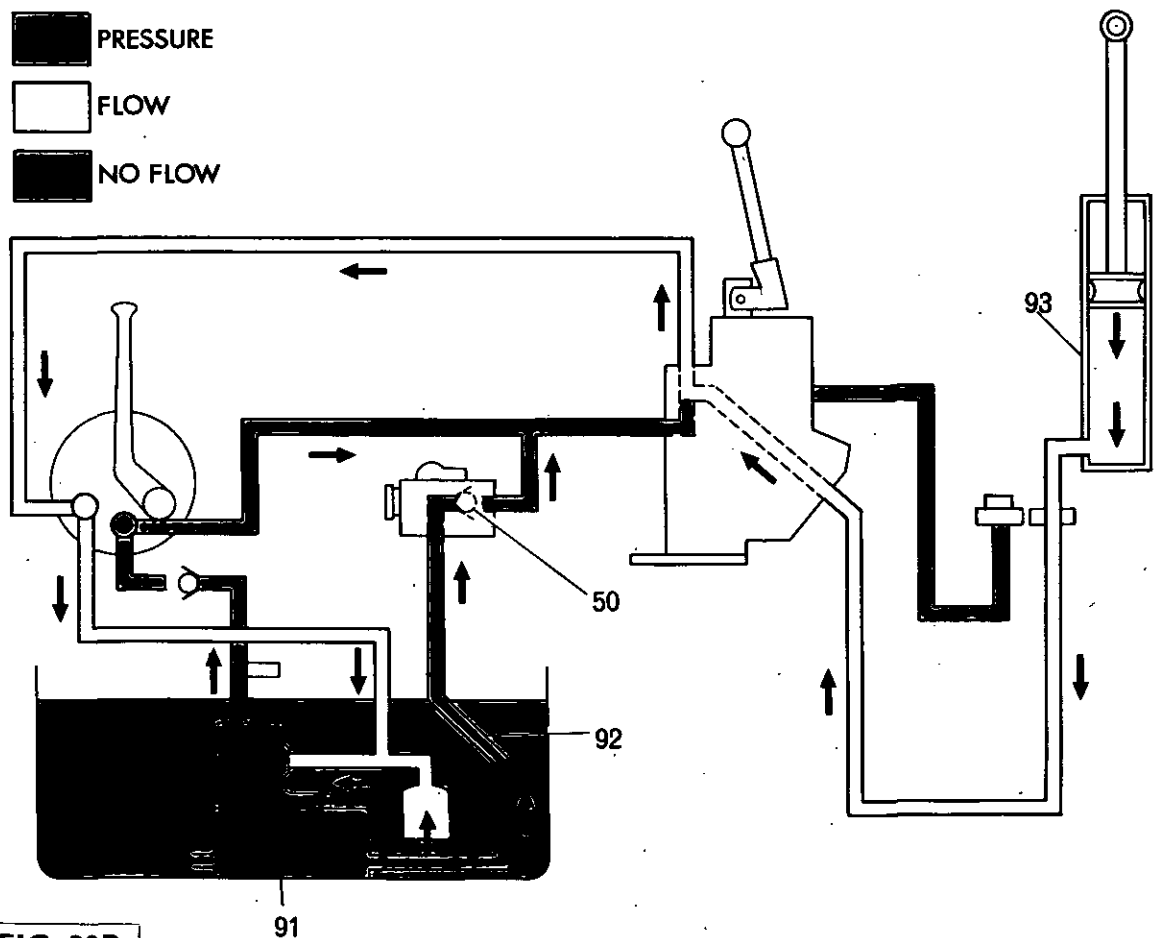


FIG. 20B

AUXILIARY HYDRAULICS

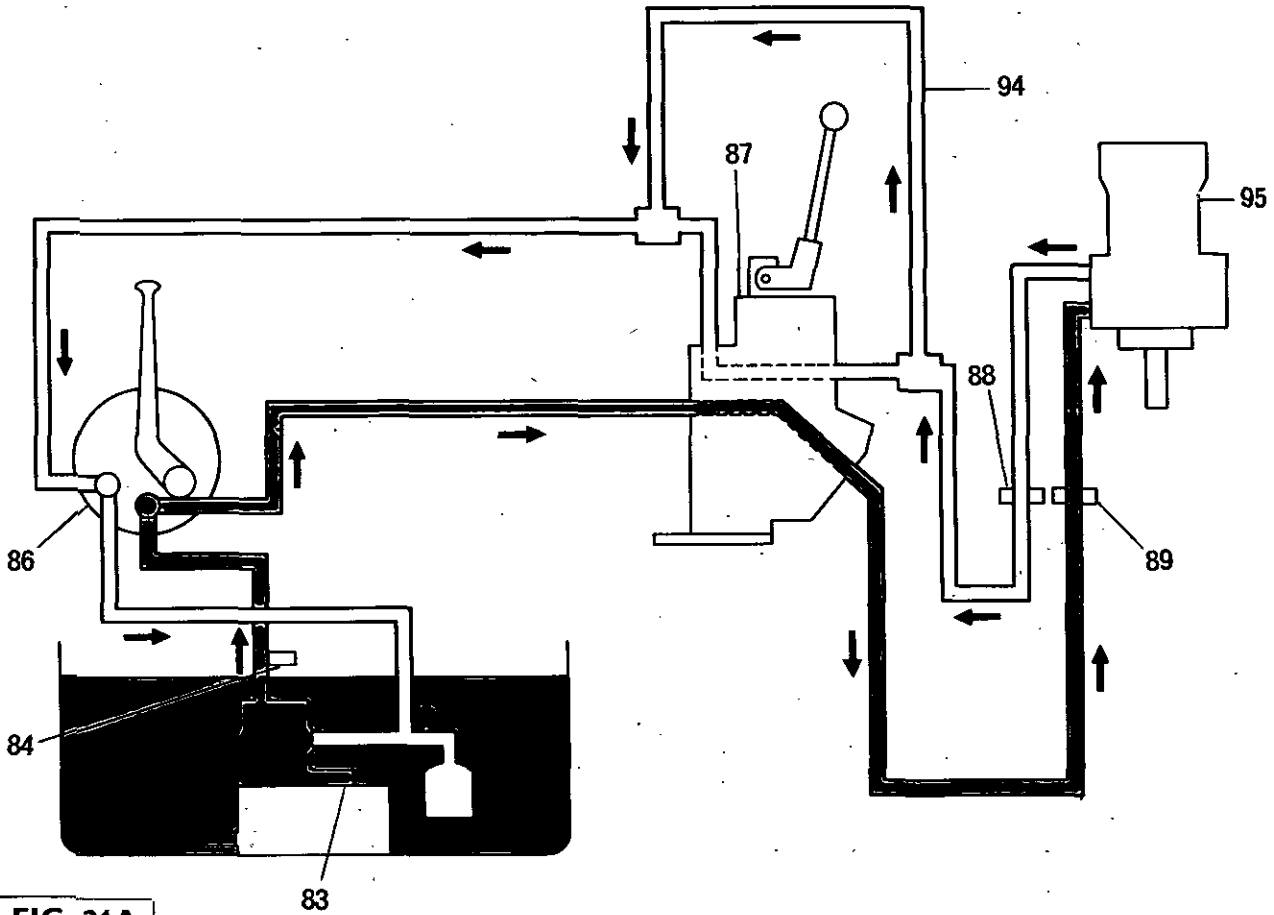





FIG. 21A

-  PRESSURE
-  FLOW
-  NO FLOW

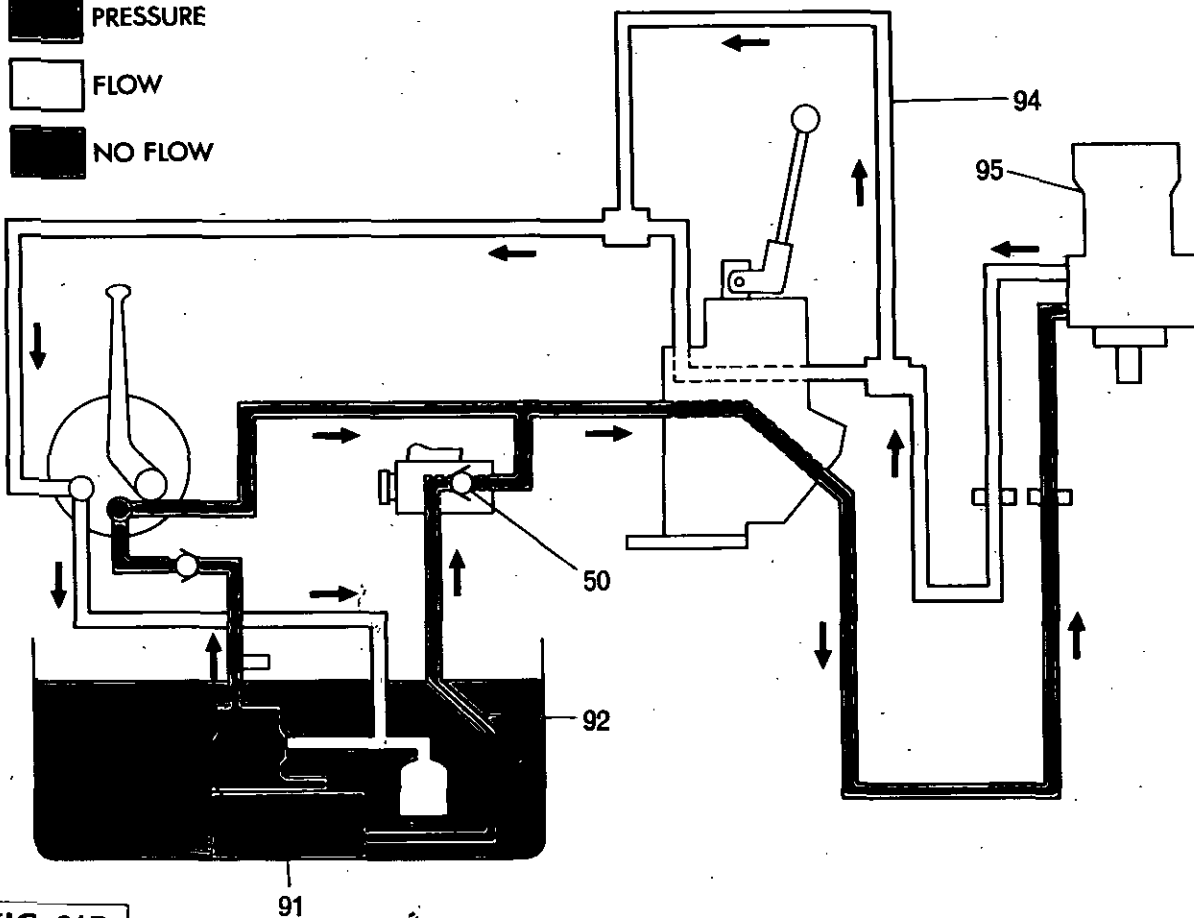


FIG. 21B

AUXILIARY HYDRAULICS

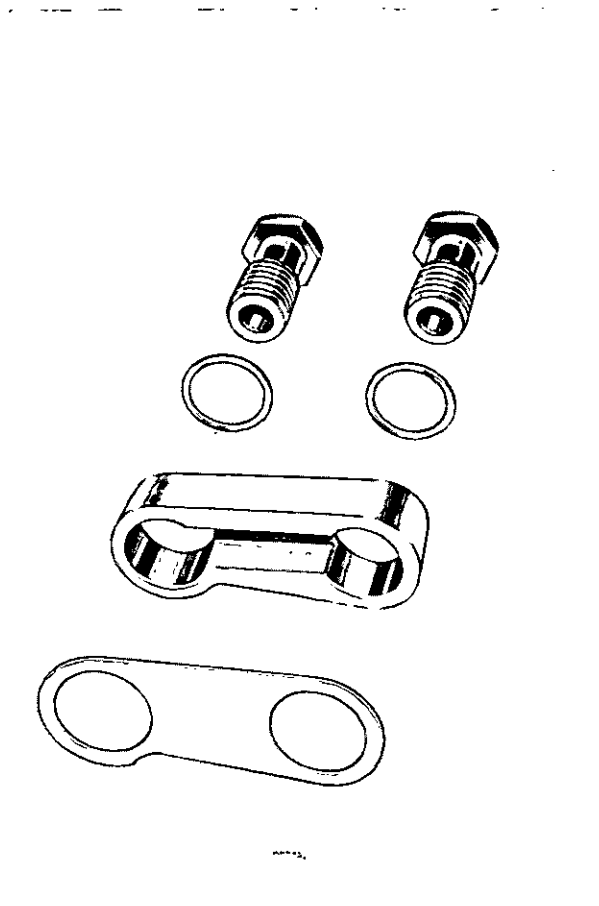


FIG. 22

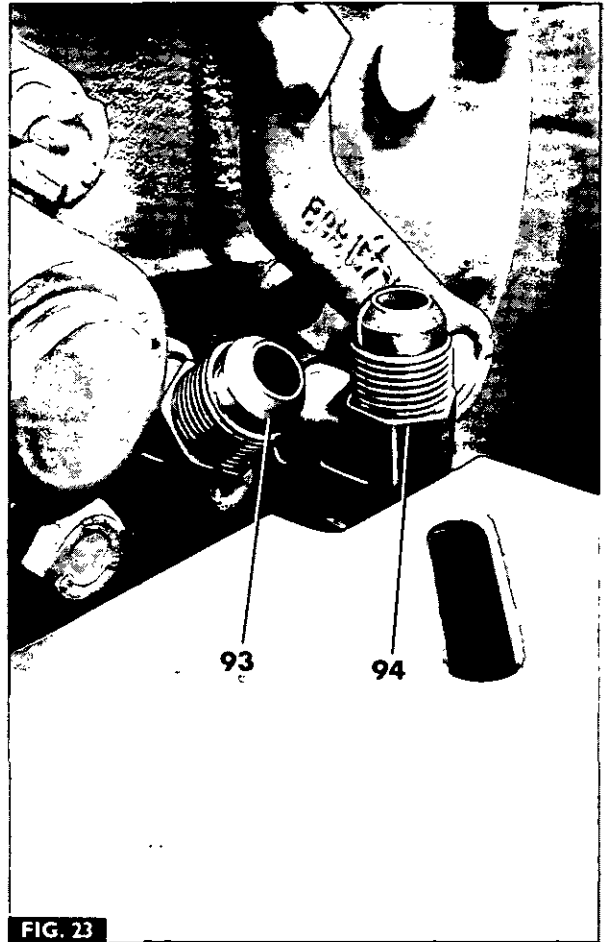


FIG. 23

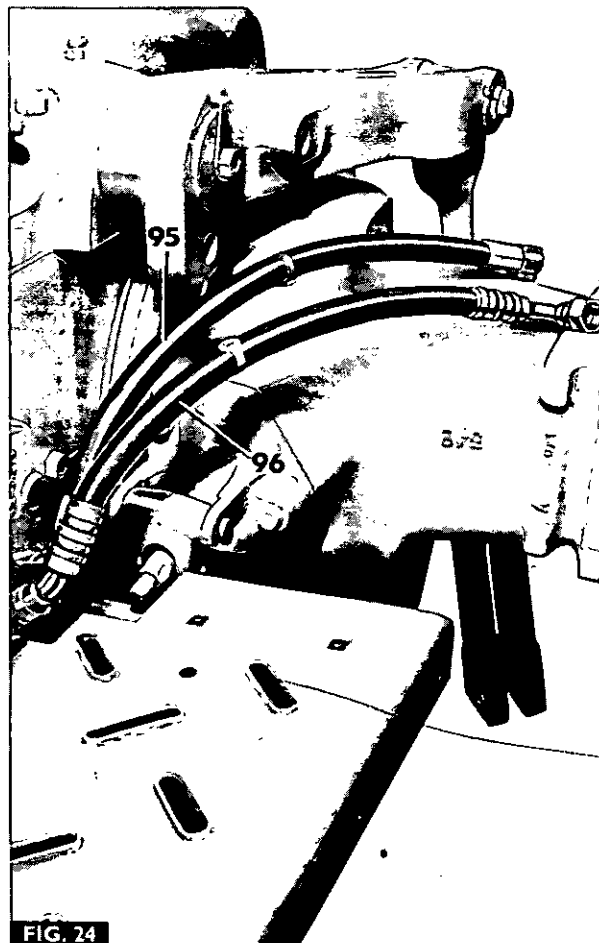


FIG. 24

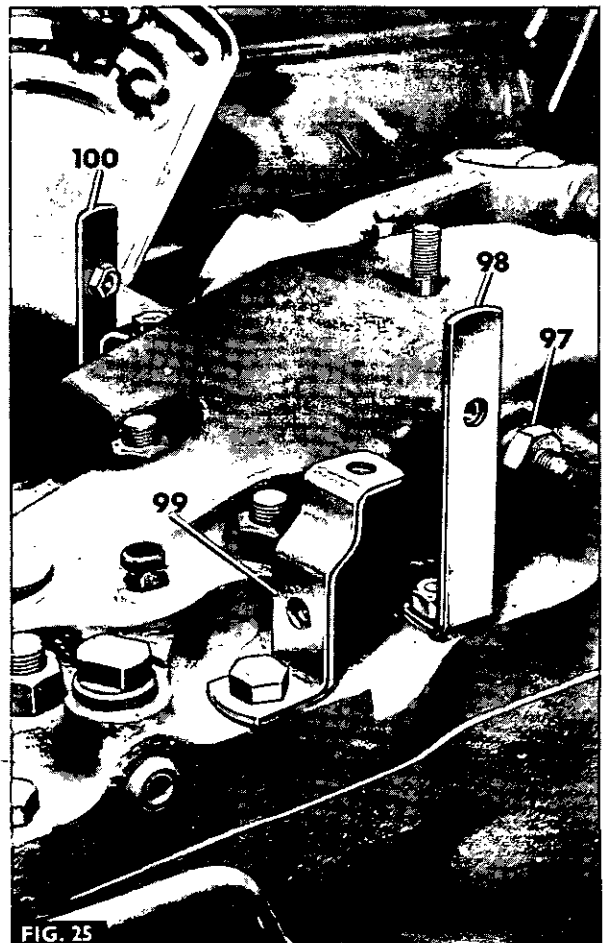


FIG. 25

AUXILIARY HYDRAULICS

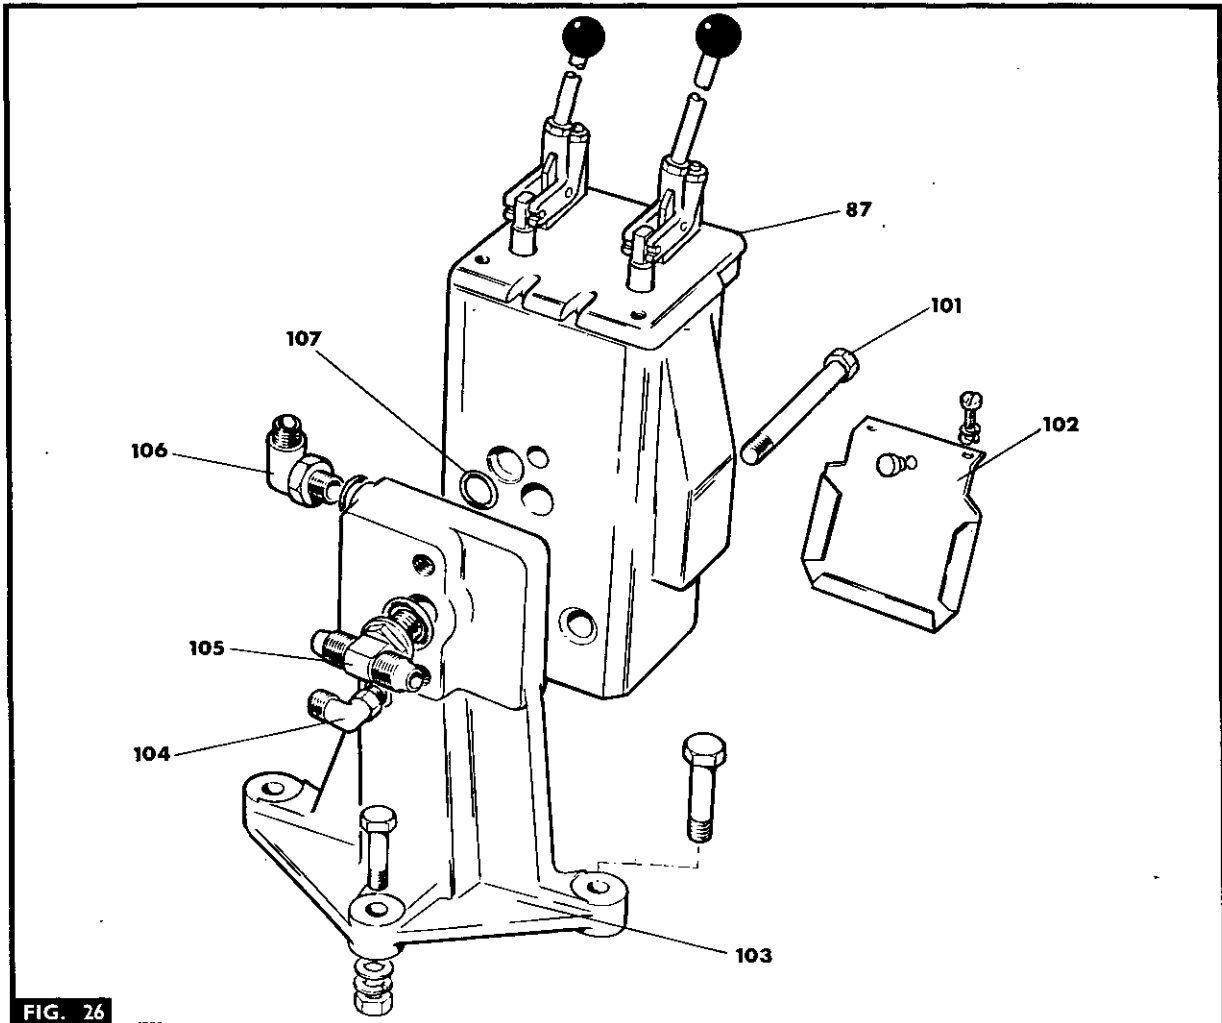


FIG. 26

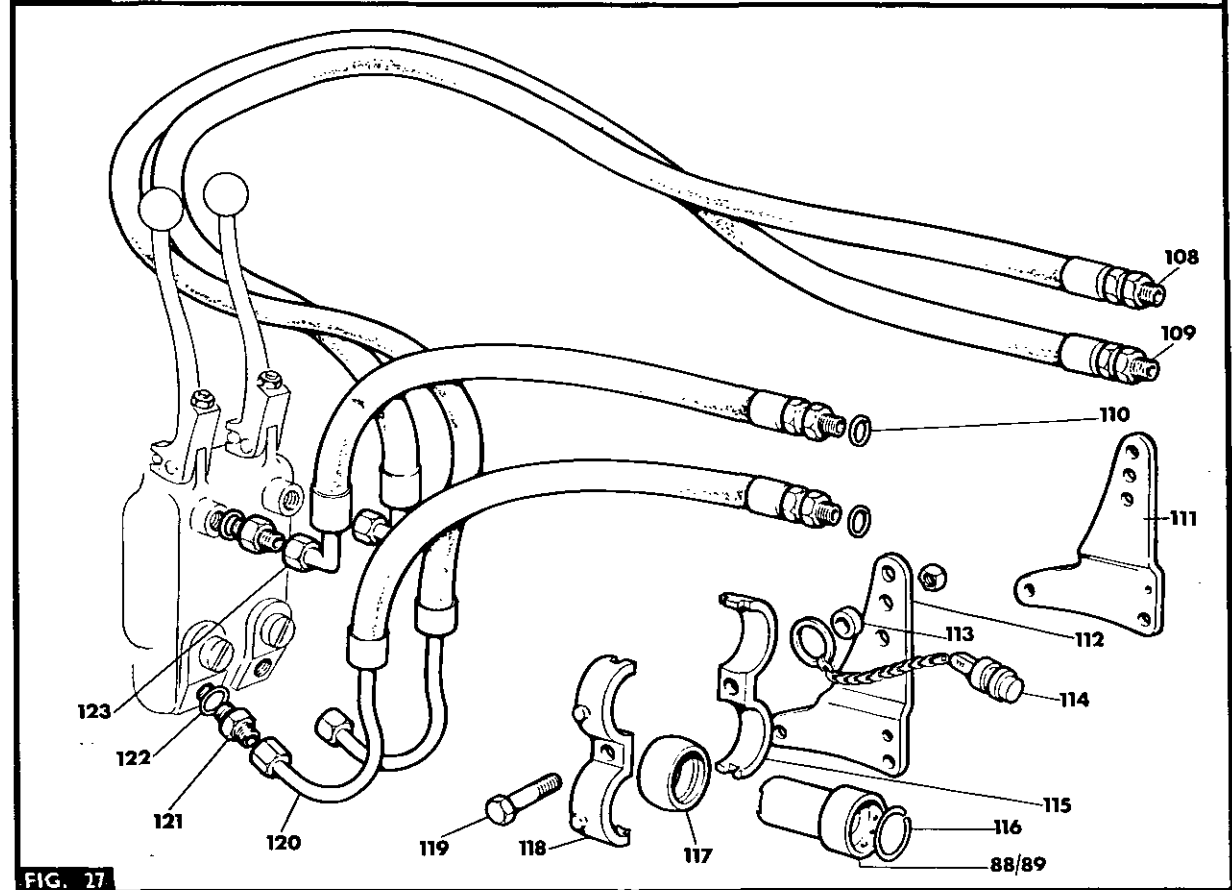


FIG. 27

## AUXILIARY HYDRAULICS

12. Fig. 24. Fit the feed and return hoses (95 and 96) to the two unions, as shown.
13. Fig. 25. Remove the Allen plug from the lift cover, just forward of the cross shaft, then fit the union (97) with an 'O' ring.
14. Remove the lift cover bolts shown, and fit the hose clamps (98, 99 and 100), securing them with three new bolts: two of  $\frac{7}{16}$ UNC x 108 mm (4 $\frac{1}{4}$  in) and one of  $\frac{7}{16}$ UNC x 57 mm (2 $\frac{1}{4}$  in). Re-torque the lift cover bolts to 9,0 Kg-m (65 lb-ft).
15. Fig. 26. Clean the front face of spool valve (87) and the mating face of the manifold (103), then fit an 'O' ring (107) to each of the three ports on the valve body. Place the body and manifold together and fit the two Allen screws (101) to secure them.
16. Fit an 'O' ring to the tee-piece (105), then screw the tee-piece into the upper hole on the front of the manifold.
17. Fit an 'O' ring to the smaller 90° elbow (104) then screw the elbow into the lower hole in the front of the manifold.
18. Fit an 'O' ring to the larger 90° elbow (106), then screw the elbow into the side of the manifold.

**NOTE** – THE TEE-PIECE AND THE ELBOWS MUST, WHEN FULLY SCREWED IN, FACE IN THE DIRECTIONS SHOWN IN FIG. 26.

19. Fit the plate (102), securing it with two screws, plus flat and spring washers. Press in the rubber grommet.
20. Figs. 27 and 28. Place the spool valve, front face downwards on a bench, then fit the four adapters (121) using 'O' rings (122) to the four tapped ports in the valve body.
21. Fit the four hoses as follows: Short hose with 90° connector (123) to 'DROP No. 1', Long hose with 90° connector to (108) to 'DROP No.2'; Short hose with curved connector (120) to 'LIFT No.1'; and the long hose with the curved connector (109) to 'LIFT No. 2'.
22. Slide a 'Pioneer' coupler (88/89) into each gimbal ring (117) and secure them with the snap rings (116).
23. Using an 'O' ring (110) for each, screw the 'Pioneer' couplers on to the hoses.
24. Fig. 29. Assemble the 'Pioneer' couplers in pairs, with two clamps (115 and 118), a spacer (113) and a pair of plugs and chains (114) per side. Slide the bolt (119), through the clamps and spacer, then locate the plug chain rings over the spacer, before bolting the assembly to the brackets (111 and 112), through the middle hole in the bracket.

**NOTE** –THE BRACKETS (111 AND 112) ARE 'HANDED' (LEFT AND RIGHT) AND THE TWO SHORT HOSES MUST BE FITTED TO THE L.H. BRACKET (112). ALSO, THE HOSES WITH THE 90° CONNECTORS MUST BE PLACED IN THE UPPER CLAMP SOCKETS.

25. Fit a colour code tag to each hose as follows:

| L.H.  |        | R.H.  |      |
|-------|--------|-------|------|
| Upper | Yellow | Upper | Blue |
| Lower | White  | Lower | Red  |

26. Fig. 28. Fit the triangular plate (124) as shown, and secure it with a bolt (125) nut and spring washer through the R.H. hole in the base of the manifold.
27. Place the spool valve on the footplate and secure it with one bolt, flat washer, spring washer and nut. DO NOT yet fully tighten the nut.
28. Fig. 30. Fit the leak off pipe (126) to the union on the lift cover then connect it to the 90° elbow (104) on the front of the manifold.
29. Fit the feed pipe (127) connecting it to the union (54) on the combining valve and to the tee-piece (105) on the manifold.
30. Connect the feed pipe (95) (rear connector on side cover) to the tee-piece (105), as shown.
31. Connect the return pipe (96) to the 90° elbow (106) on the side of the manifold.
32. Fit the remaining two bolts, flat washers, spring washers and nuts to secure the manifold and valve to the footplate.

**NOTE** – DO NOT FORGET TO FIT THE FENDER WIRING TAG.

33. Fig. 29. Locate the 'Pioneer' coupler support brackets (111 and 112) on the studs on the trumpet housings, then refit the bolts and nuts.
34. Fig. 30. Fit the clamps to the components already fitted (98, 99 and 100) to secure the hoses to the lift cover.
35. Fig. 29. Fit the sealing plugs (114) to each of the 'Pioneer' couplers.
36. Refit the tractor seat.

**Adjustment**

7B-11-25

Fig. 30. To change from single acting, to double acting operation, screw the switch valve (A) fully in. To change to single-acting operation, screw the switch valve out five full turns.

**WOOSTER SPOOL VALVE****Kit Fitment**

7B-12-25

**(Non-Auxiliary Hydraulic Tractors)**

This operation is almost identical to operation 7B-10-18 except that the feed pipe (95 Fig. 30) is not used, its connections being blocked off by a banjo bolt at the p.t.o. side cover and by a cap on the tee-piece (105).

**Selector Valve**

Fig. 31

The selector valve provides the facility to select any one service of three, leaving the remaining two isolated, and is of the six port, spring offset type.

## AUXILIARY HYDRAULICS

The valve body (129), has cast-in galleries and is precision bored to accept the spool (131). The spool, has attached at one end, an operating lever, (132) secured by a roll pin (130). The external ports are EXT 1 (128), EXT 2 (134), and a port (R) (135) which must remain plugged. For convenience, EXT 1 port has twin outlet points to enable a pair of single acting services to operate simultaneously, as for example, with a front end, loader.

An instruction plate is affixed to the top of the valve by the two valve securing bolts (133) and plain washers.

### OPERATION

Operation of the valve lever moves the spool (131) through an axial and fore and aft plane against the return spring, positioning of the spool also being governed by a cam formed on the front edge of the body.

Fig. 32. With the lever in the LINKAGE position (i.e. Vertical), oil flows from the hydraulic pump standpipe into the valve inlet port (K) and passes along the gallery into the linkage lift ram cylinder, through port (L). The tractor lower links can be operated in the normal manner. The other ports EXT 1 (128) and EXT 2 (134) are isolated.

Fig. 33. With the lever in EXT 1 (i.e. lever left) the oil flow is diverted by the spool (131) into the EXT 1 ports (128). The oil in the lift ram cylinder is "locked-in" by the spool. The lower links will be maintained in the fully raised position (i.e. Transport). EXT 2 port (134) is isolated. To prevent the lower links from dropping due to ram cylinder leakage (when EXT 1 is selected), a compensating valve, consisting of a ball (141) and spring (139) is incorporated between the EXT 1 port (128) and the ram cylinder port (L). When the ram cylinder pressure is less than in the EXT 1 port, the ball (141) will lift off its seat; oil will flow from the inlet port (K) through the cross drilling (M), past the ball and into the second cross drilling (N) to the lift ram chamber (L), thus maintaining ram cylinder pressure. When the pressure has equalised, the spring (139) will push the ball back on to its seat.

**NOTE - THE COMPENSATING VALVE OPERATES ONLY WHEN EXT 1 IS SELECTED.**

Fig. 34. Movement of the lever to the EXT 2 position (i.e. lever to the right) permits oil to flow from the inlet port (K) where the flow is diverted by the spool to the EXT 2 port (134). The flow to EXT 1 (128) and the ram cylinder is isolated.

To protect the ram cylinder from induced, high pressure from an outside source, when isolated (e.g. a heavy implement being transported on the three point linkage "bouncing" due to rough ground) a relief valve (144) is fitted. This relief valve opens at 225 Kg/cm<sup>2</sup> (3200 lb/in<sup>2</sup>).

### SELECTOR VALVE

Kit Fitment 7B-13-26

1. Place the 'Draft Control' lever in the 'Down' position.
2. Fig. 35. Remove the two bolts (47) and spring washers securing the transfer cap (48), then carefully ease off the transfer cap, ensuring that the standpipe is not displaced from its location in the hydraulic pump.
3. Fit a new back-up washer and 'O' ring to the top of the standpipe and an 'O' ring to the port.
4. Fig. 36. Fit an 'O' ring (145) to the lift ram cylinder port, as shown.
5. Place the selector valve gasket in position, ensuring that the oilways are clear, then carefully locate the selector valve on the standpipe, fit the instruction plate plain washers and special 7/16 UNC x 73 mm (2 7/8 in) bolts (133). Tighten the bolts to 5,5 Kg-m (40 lb-ft).

**NOTE - OVERTIGHTENING OF THE BOLTS CAN CAUSE THE SPOOL TO STICK; ALSO LEAKAGE.**

### SELECTOR VALVE

Servicing 7B-14-26

#### Disassembly

1. Place the 'Draft Control' lever in the 'Down' position.
2. Disconnect any hoses, then plug or mask any ports and connections to prevent the ingress of dirt.
3. Fig. 31. Remove the bolts (133), plain washers and the instruction plate, then carefully remove the valve from the standpipe.
4. Drive out the roll pin (130) and remove the lever (132).
5. Fig. 32. Using a soft faced drift, gently tap the spool (131) towards the rear of the valve, to force out the welsh plug (136). Withdraw the spool from the valve body (129), complete with the return spring (138).
6. Remove the seals (142 and 143) from the body.
7. Remove the screw (137) and remove the spring (139) and ball (141).
8. Fig. 36. Only if necessary, remove the relief valve plug (146).
9. Fig. 32. Remove the ball (150), poppet (151), spring (152) and second poppet (147).
10. If the relief valve has been removed, remove the valve seat (149), complete with its 'O' ring (148). This operation requires the use of a small wire extractor hook (see Fig. 37).

#### Examination

Check all components for wear or damage, paying particular attention to the spool and bore, also the relief valve poppet. Always fit new 'O' rings and seals.

#### Reassembly

1. Fig. 32. If necessary, fit a new 'O' ring (148) to the valve seat (149) then slide the valve seat into the body (129).

AUXILIARY HYDRAULICS

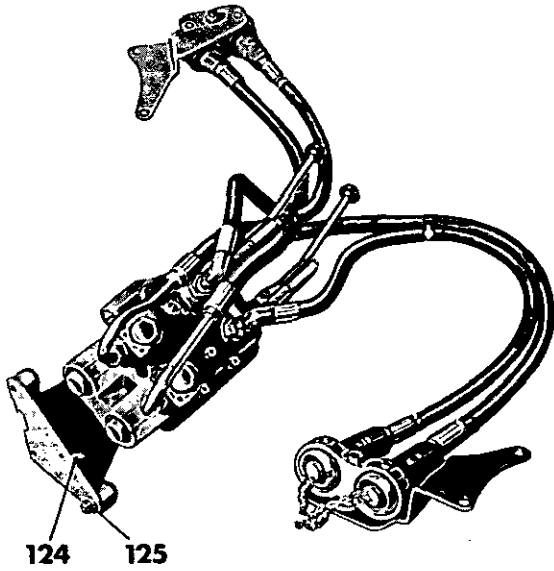


FIG. 28

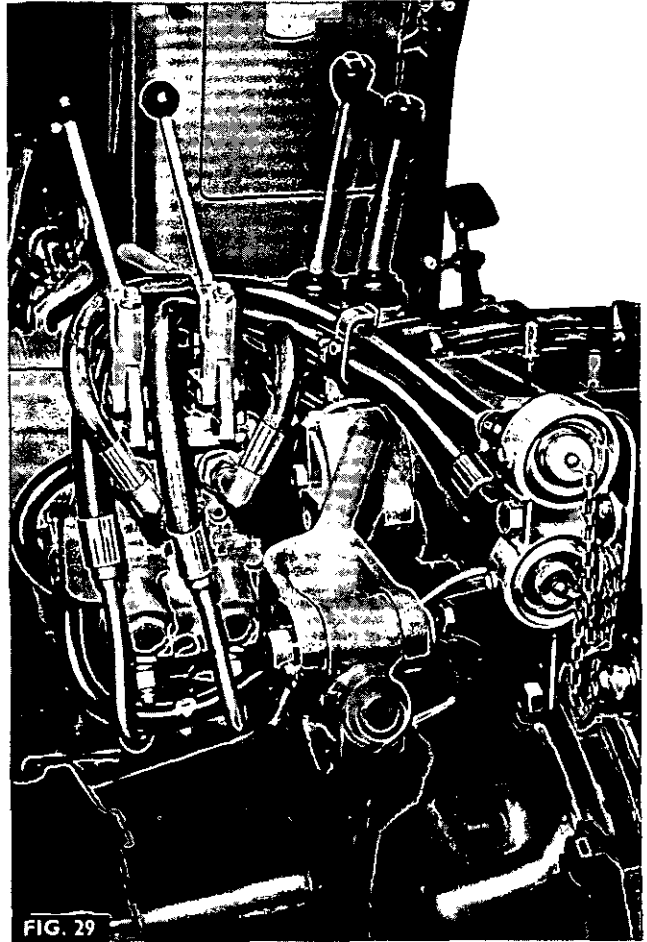


FIG. 29


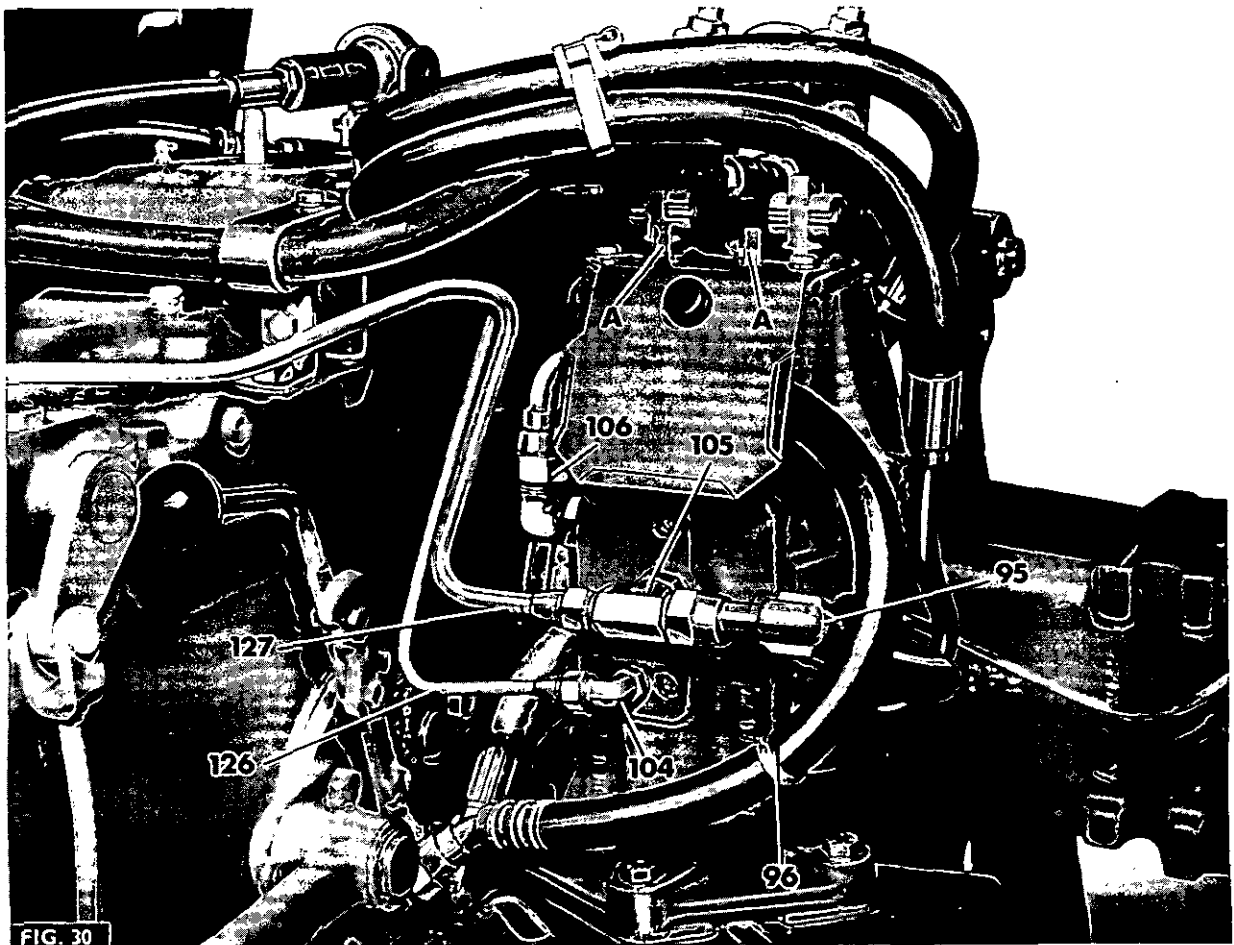


FIG. 30

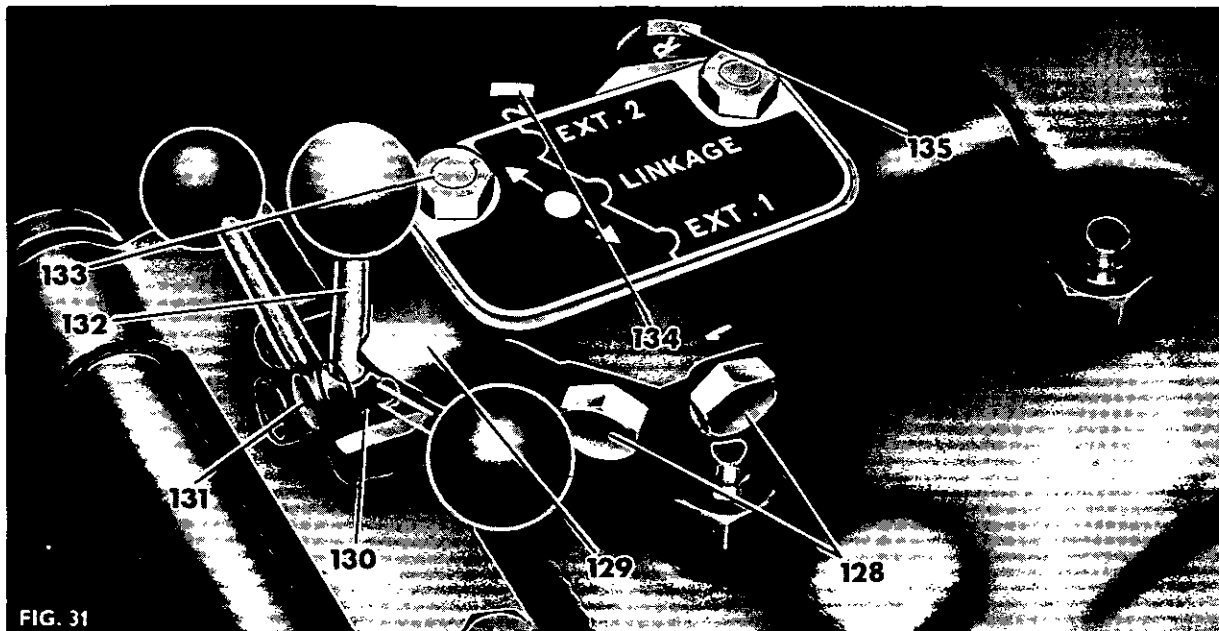AUXILIARY HYDRAULICS





AUXILIARY HYDRAULICS

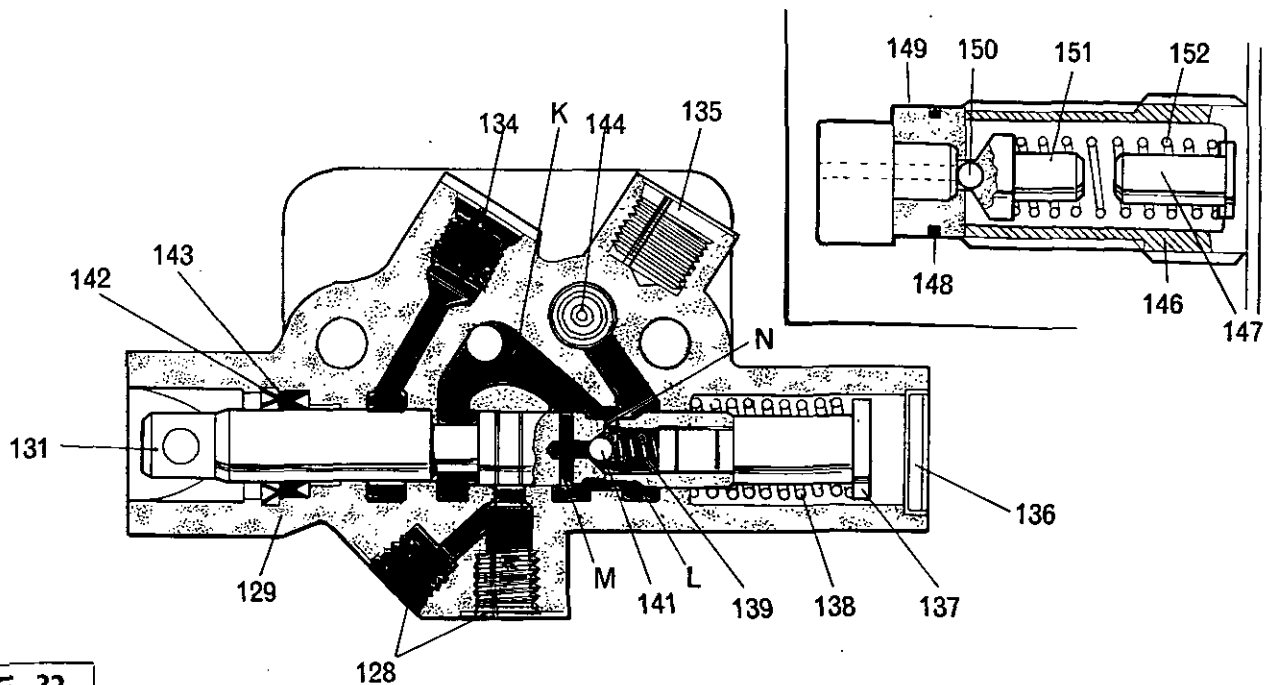


FIG. 32

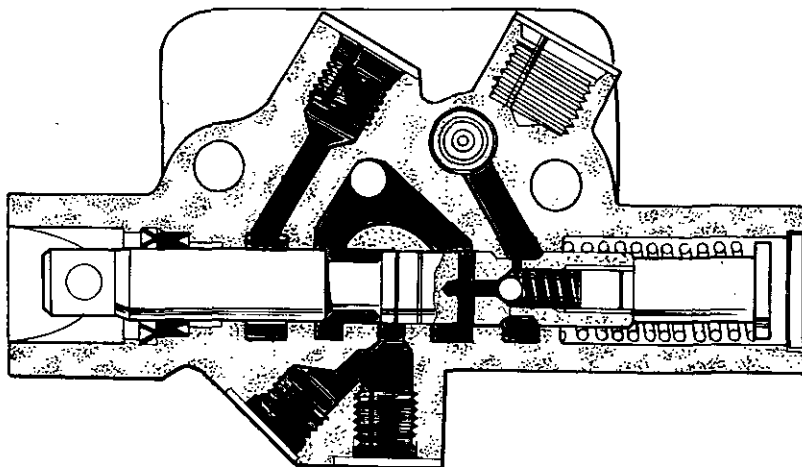


FIG. 33

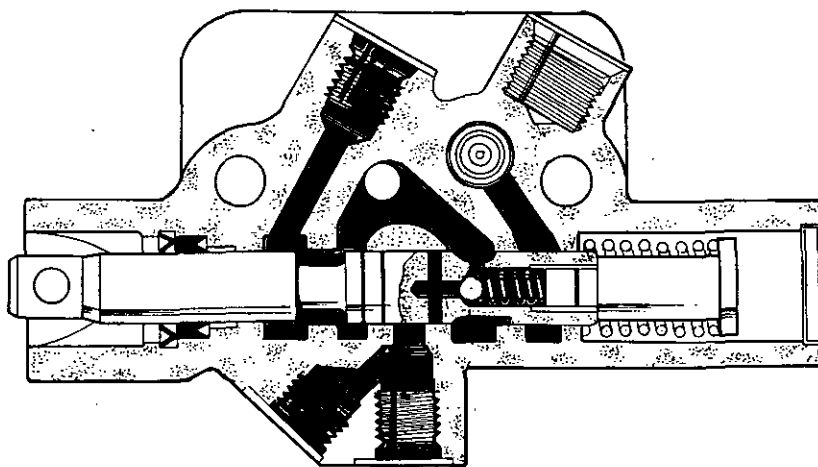


FIG. 34

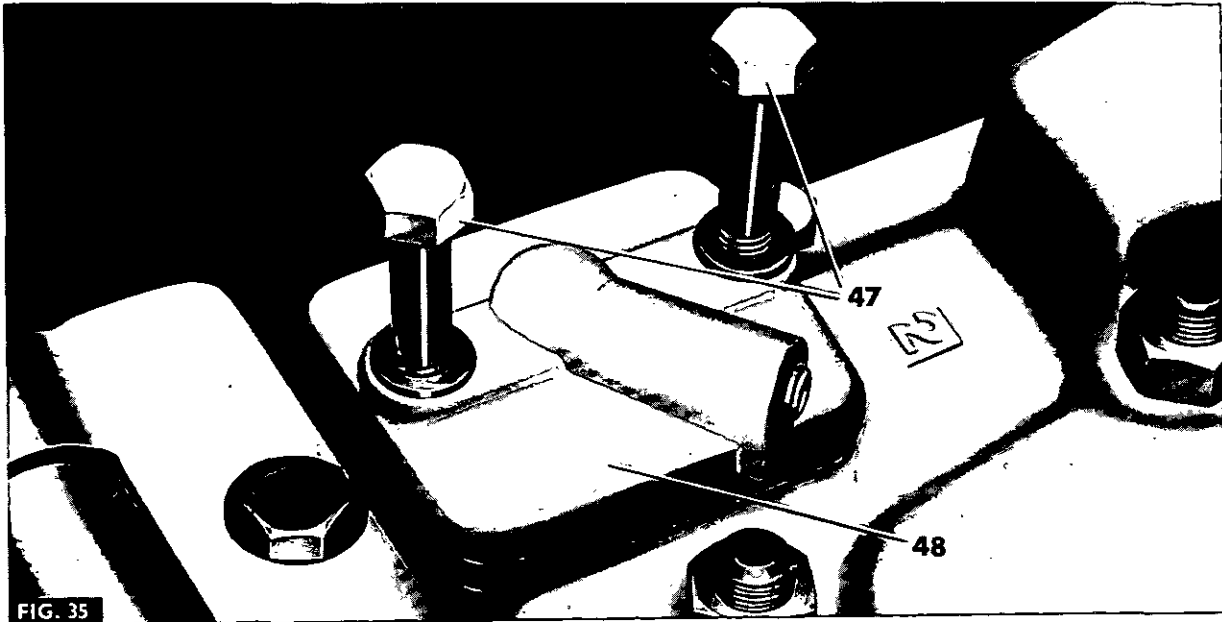


FIG. 35

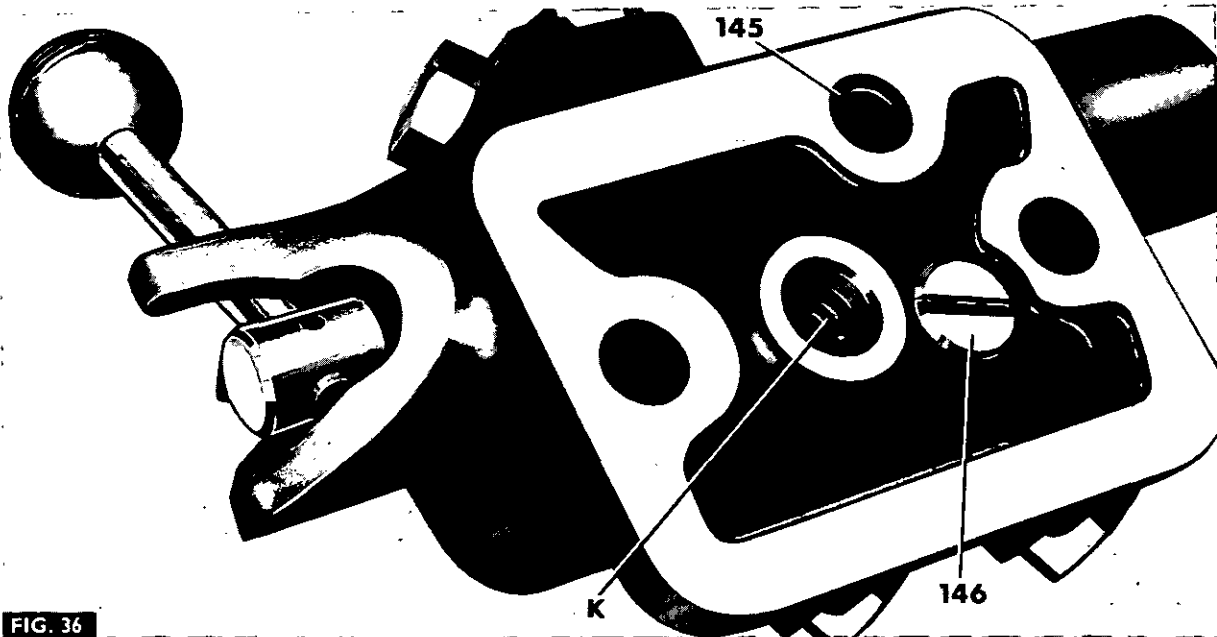


FIG. 36

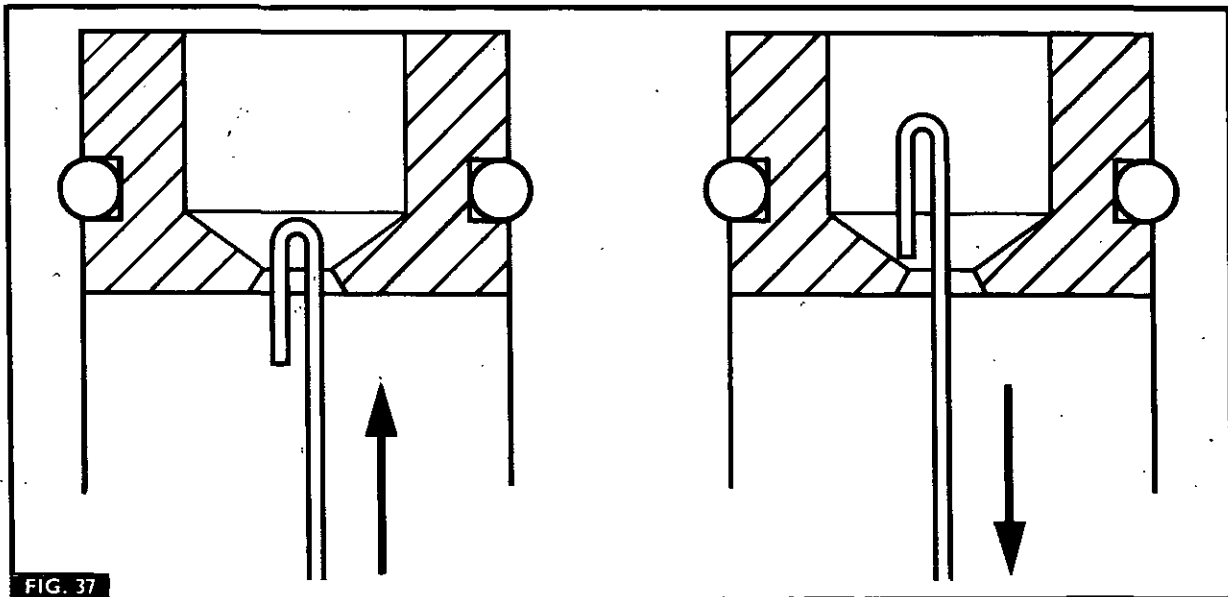


FIG. 37

## AUXILIARY HYDRAULICS

2. Invert the body (129) and locate the ball (150) in the seat, then fit the poppet (151) spring (152), second poppet (147) and screw in the plug (146).
3. Refit the ball (141), spring (139) to the spool, and apply Loctite 'Hydraulic Seal' (grade brown) to the threads of the screw (137), then fit the screw to the spool.
4. Fit the distributor seal (143) into the valve body, with its flat face towards the front.
5. Place the spool return spring (138) in the rear of the valve body, then, insert the spool (131) through the spring (138) into the spool bore, taking care not to damage, or dislodge the seal (143).
6. Fit the wiper ring (142) to the valve with its flat face to the rear. This operation can be facilitated by the use of a piece of tube, approximately 20 mm (0.8 in) outside diameter, with a wall thickness of 1.2 mm (18 SWG) and radiused at one end to suit the ring. This tube can then be used to drive home the wiper ring against the distributor seal.
7. Push the spool (131) against the spring from the rear, taking care not to displace the seals, until the lever (132) can be inserted into the spool. Select EXT 2, the new roll pin (130) can then be easily driven into position to secure the lever.
8. Carefully tap a new welsh plug (136) into the rear of the spool bore.
9. Refit the selector valve to the tractor, as stated in operation 7B-13-00.

## HYDRAULIC TESTS

When carrying out all pressure and flow tests, clean, fresh oil, of the recommended grade must be used and should be warmed to a temperature of 50°C (120°F) by running under load, before testing. The use of either excessively hot, or cold oil can seriously affect the instrument readings and pump performance.

Special Tools Required: See operation 7A-14-31  
 MF 260 Gauge  
 MF 810-4/1 Adapter  
 MF 260-4/1 Adapter  
 MF 260-4/1 Cap  
 Elbow Part No. 357 197 X 1

## Relief Valve

1. Remove the lift cover, as stated in operation 7A-14-31.
2. Fig. 38 Disconnect the Multi-Power feed pipe from the union on the top front of the pump and fit the cap MF 260-4/4 in its place, as shown.
3. Remove the plug from the top of the pump and fit the elbow, Part No. 357 197 X 1, adapter MF 810-4/1 and the MF 148A gauge:
4. Start the tractor engine. With the oil at the correct temperature the gauge should indicate minimum pressures as follows:
 

|                           |  |
|---------------------------|--|
| 500 to 550 engine rev/min | 46 Kg/cm <sup>2</sup><br>(650 lb/in <sup>2</sup> ) |
| 2000 engine rev/min       | 53 Kg/cm <sup>2</sup><br>(750 lb/in <sup>2</sup> ) |
5. Switch off the tractor engine.

## Multi-Power Operating Pressure

1. Carry out the relief valve test, as stated in previous column.
2. Remove the cap MF 260-4/4 from the outlet union on the pump and refit the Multi-Power feed pipe.
3. Fig. 39. Remove the MF 148A gauge and adapter MF 810-4/1 and fit in their place, adapter MF 260-4/1 and plug MF 260-4/4 as shown, then screw in the MF 260 gauge.
4. Start the tractor engine and select Multi-Power 'HIGH'. With the oil at the correct temperature, the gauge should indicate the following minimum pressure:
 

|                     |   |
|---------------------|---|
| 2000 engine rev/min | 13 Kg/cm <sup>2</sup><br>(190 lb/in <sup>2</sup> ). |
|---------------------|---|
5. Switch off the tractor engine.
6. Remove the MF 260 gauge, adapter MF 260-4/1, and elbow, Part No. 357 197 X 1 from the pump then refit the plug and washer.
7. Refit the lift cover as stated in operation 7A-14-31.

## High Capacity Pump

7B-16-31

Special Tools Required: MF 260 Gauge  
 810 Test Kit  
 MF 148A Gauge  
 MF 260-4 Adapters and  
 Plugs

## Multi-Power Relief Valve

1. Fig. 40. Release the rear Multi-Power pipe as shown and fit adapter MF 810-4/1 and the MF 148A gauge, as shown.
2. Start the tractor engine. With the oil at the correct temperature, the gauge should indicate the following minima:
 

|                           |  |
|---------------------------|--|
| 500 to 550 engine rev/min | 46 Kg/cm <sup>2</sup><br>(650 lb/in <sup>2</sup> ) |
| 2000 engine rev/min       | 53 Kg/cm <sup>2</sup><br>(750 lb/in <sup>2</sup> ) |
3. Switch off the tractor engine, then remove the MF 148A gauge.

## Multi-Power Flow Test

1. Carry out the Relief Valve test as stated above.
2. Release the clamp securing the two Multi-Power pipes to the steering box.
3. Fig. 41. Release the second Multi-Power pipe and fit another MF 810-4/1 adapter, then attach the 810 kit as shown (INLET hose to REAR pipe). Fit 70 Kg/cm<sup>2</sup> (1000 lb/in<sup>2</sup>) gauge to the 810 kit.
4. Start the engine and screw in the restrictor on the 810 kit until 21 Kg/cm<sup>2</sup> (300 lb/in<sup>2</sup>) is indicated on the gauge.
5. Press the diverter button and time the flow of 4.5 litres (1 Imp gal), into a suitable measure. Time taken should not exceed:
 

|                                 |
|---------------------------------|
| 72 seconds @ 500 to 550 rev/min |
| 40 seconds @ 1000 rev/min       |

 Switch off the engine

## AUXILIARY HYDRAULICS

### Filter By-Pass Valve

1. Carry out the Relief Valve and Flow tests as stated on page 31.
2. Fig. 42. Remove the two pipes from the front of the filter and fit the two MF 260-4/4 caps, as shown.
3. Start the engine and select Multi-Power 'LOW'.
4. Fully unscrew the restrictor on the 810 kit. The pressure indicated should be between 6,3 and 8,4 Kg/cm<sup>2</sup> (90 to 120 lb/in<sup>2</sup>) at 500 to 550 engine rev/min.
5. Stop the tractor engine.
6. Remove the MF 260-4/4 caps, the 810 kit and the MF 810-4/1 adapters from the tractor, then reconnect the relevant pipes and retighten the pipe clamp.

### Multi-Power Operating Pressure

1. Fig. 43. Disconnect a Multi-Power pipe, as shown then fit adapter MF 260-4/1 and the MF 260 gauge.
2. Start the tractor engine and select Multi-Power 'HIGH'. With the oil at the correct temperature, the gauge should indicate the following minimum pressures:
 

|                     |   |
|---------------------|---|
| 2000 engine rev/min | 13 Kg/cm <sup>2</sup><br>(190 lb/in <sup>2</sup> ). |
|---------------------|---|
3. Switch off the engine and remove the MF 260-4/4 adapter and the MF 260 gauge.
4. Reconnect the Multi-Power pipes.

### By-Pass Test – MF 260 Gauge.

The by-pass valve can be tested using the MF 260 gauge, MF 260-4/1 adapter and MF 260-4/4 caps, as shown in fig 44 if required, or if the 810 kit is not available. Procedure and pressures are identical to those referred to when using the 810 kit .

### Auxiliary Relief Valve.

1. Fit the 'Pioneer' adapters MF 810-1/1 to the 810 gauge.
2. Fig. 45. Attach both couplers to the quick couplers as shown (INLET hose to the LOWER quick coupler).
3. Screw the 280 Kg/cm<sup>2</sup> (4000 lb/in<sup>2</sup>) gauge into the 810 kit then screw the restrictor knob fully in.
4. Start the tractor engine and run at 2000 rev/min.
5. Pull the spool valve lever rearwards and hold it there. The pressure should be 169 Kg/cm<sup>2</sup> (2400 lb/in<sup>2</sup>).
6. Release the lever and unscrew the restrictor valve.

### Flow Check

1. Screw in the combining valve knobs fully.
2. Pull the spool valve lever fully rearwards and adjust the restrictor until 70 Kg/cm<sup>2</sup> (1000 lb/in<sup>2</sup>) is indicated.
3. Press the diverter button and time the flow of 4,5 litres (1 Imp gal) into a suitable measure, then release the diverter button. The flow at 2000 engine rev/min should not take longer than 10 seconds.

### Spool Valve 'Kick-out'

1. Fully unscrew the restrictor knob.
2. Pull the spool valve lever rearwards.
3. Screw in the restrictor until the lever 'Kicks-out' and note the maximum pressure. The 'Kick-out' should operate at 112 to 127 Kg/cm<sup>2</sup> (1600 to 1800 lb/in<sup>2</sup>).
4. The 'Kick-out' mechanism can be adjusted, if necessary, by screwing the grub screw (69 Fig. 9) in or out.
5. Remove the 810 kit from the tractor.

AUXILIARY HYDRAULICS

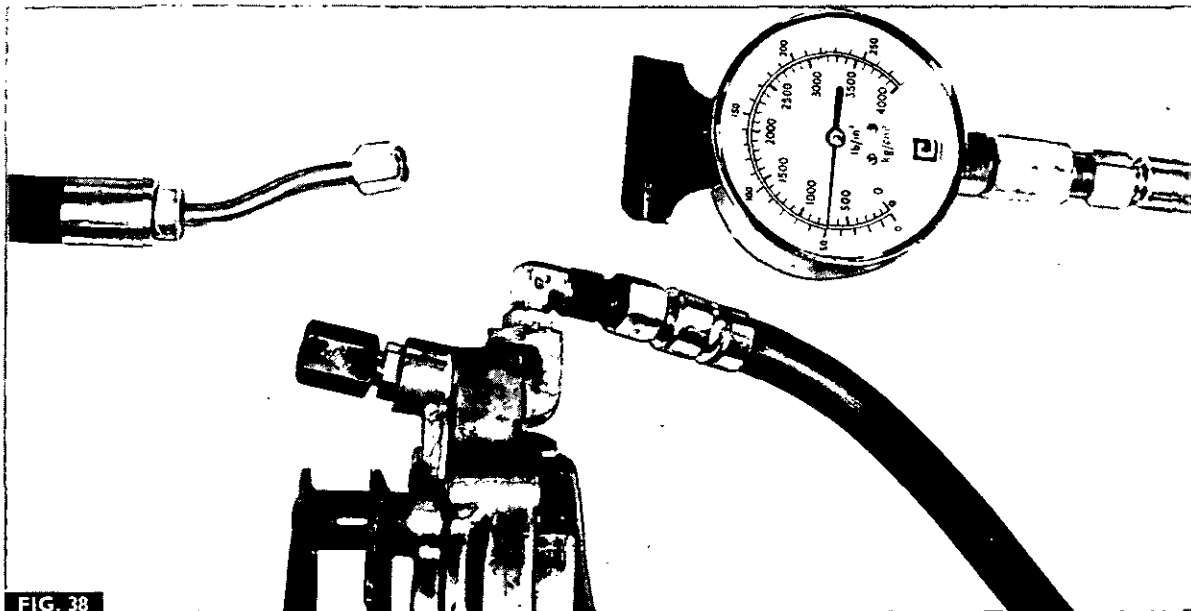


FIG. 38

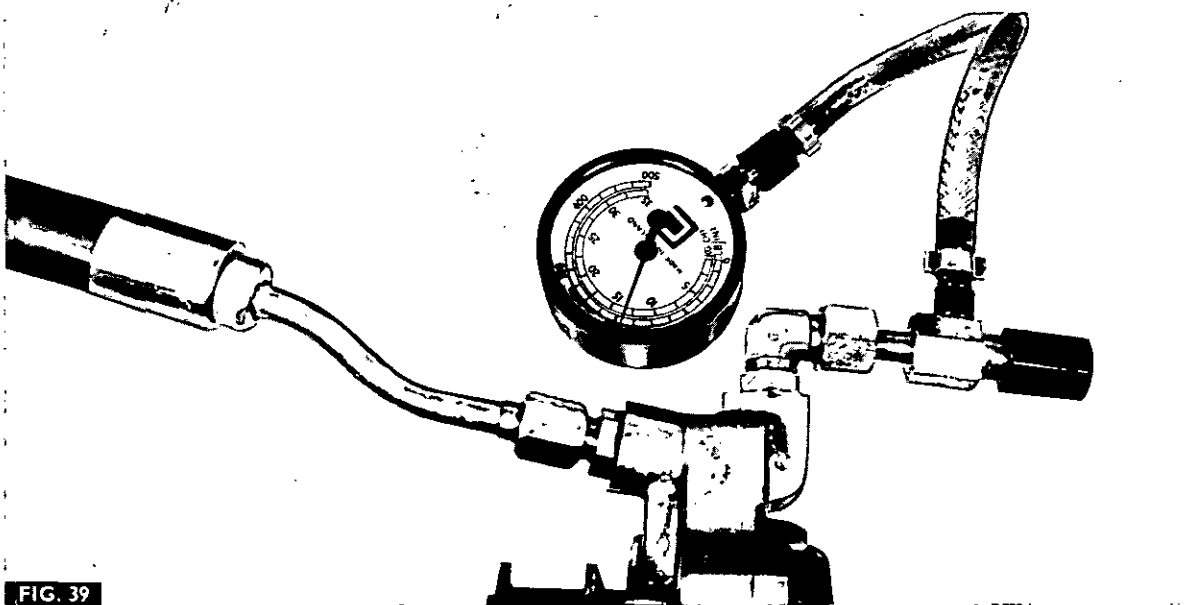


FIG. 39

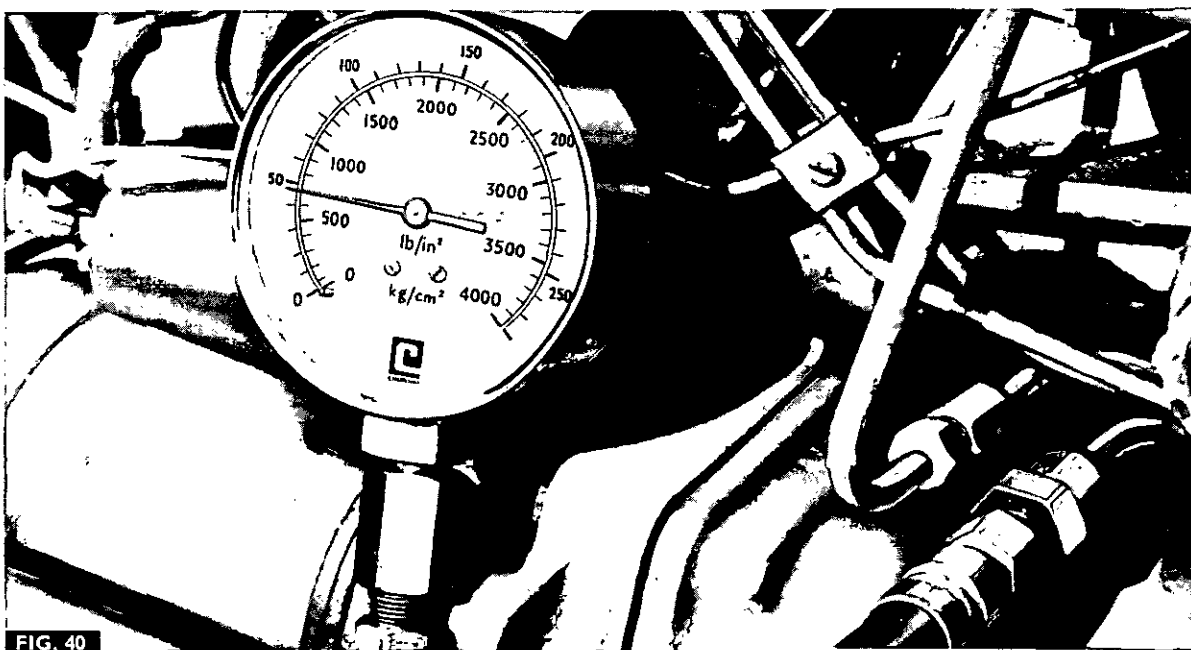


FIG. 40

AUXILIARY HYDRAULICS

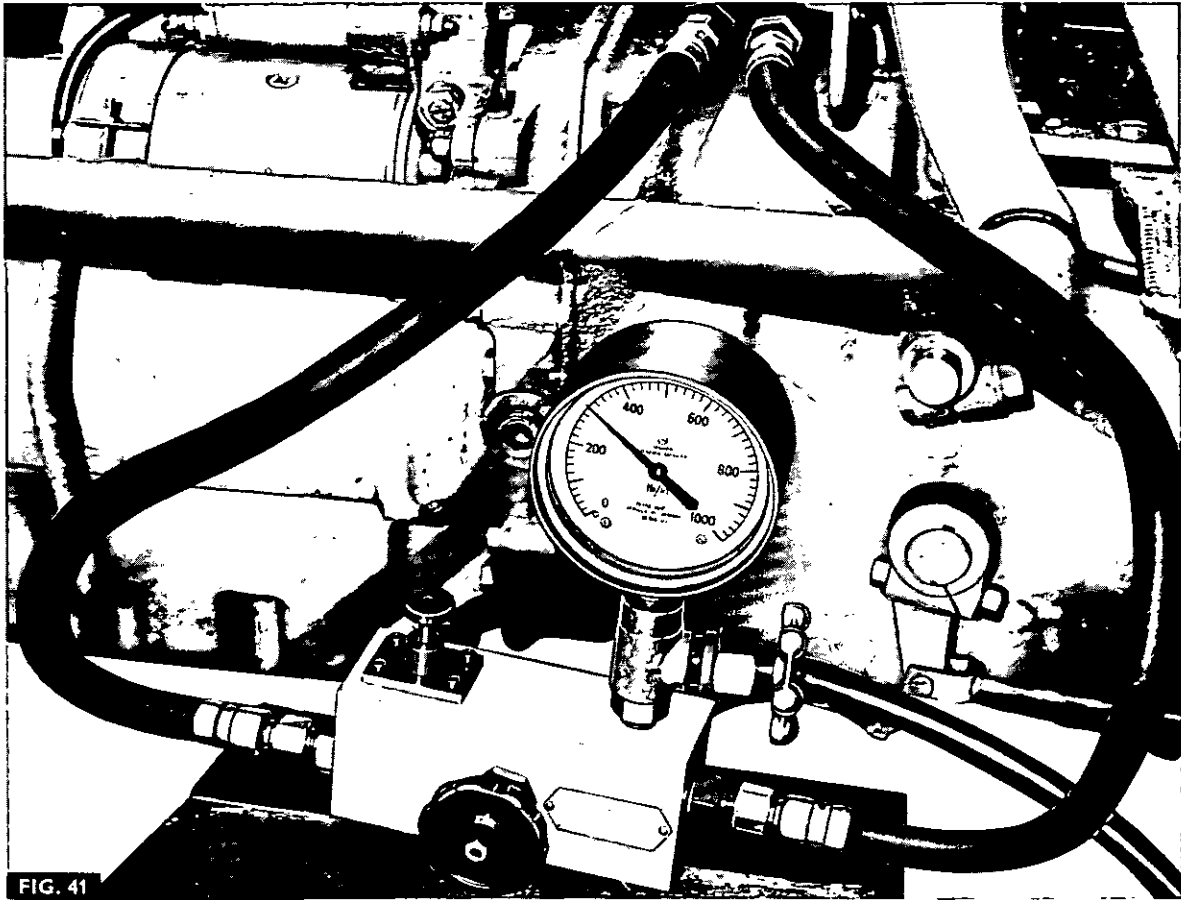


FIG. 41

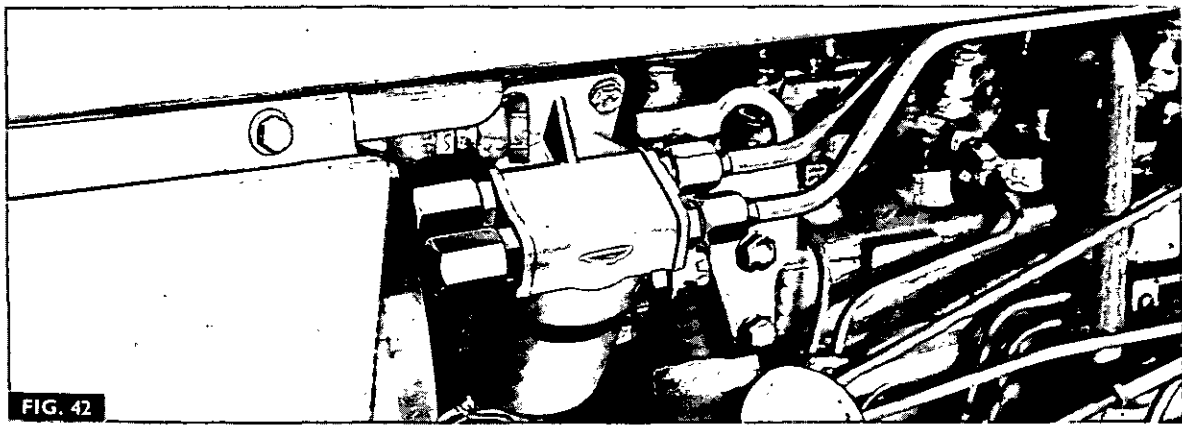


FIG. 42

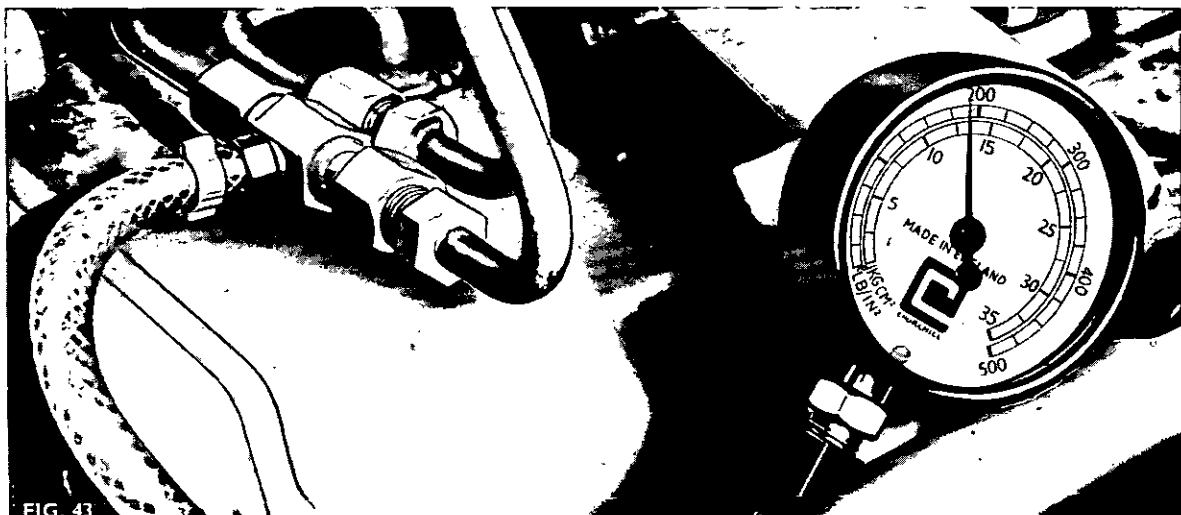


FIG. 43

AUXILIARY HYDRAULICS

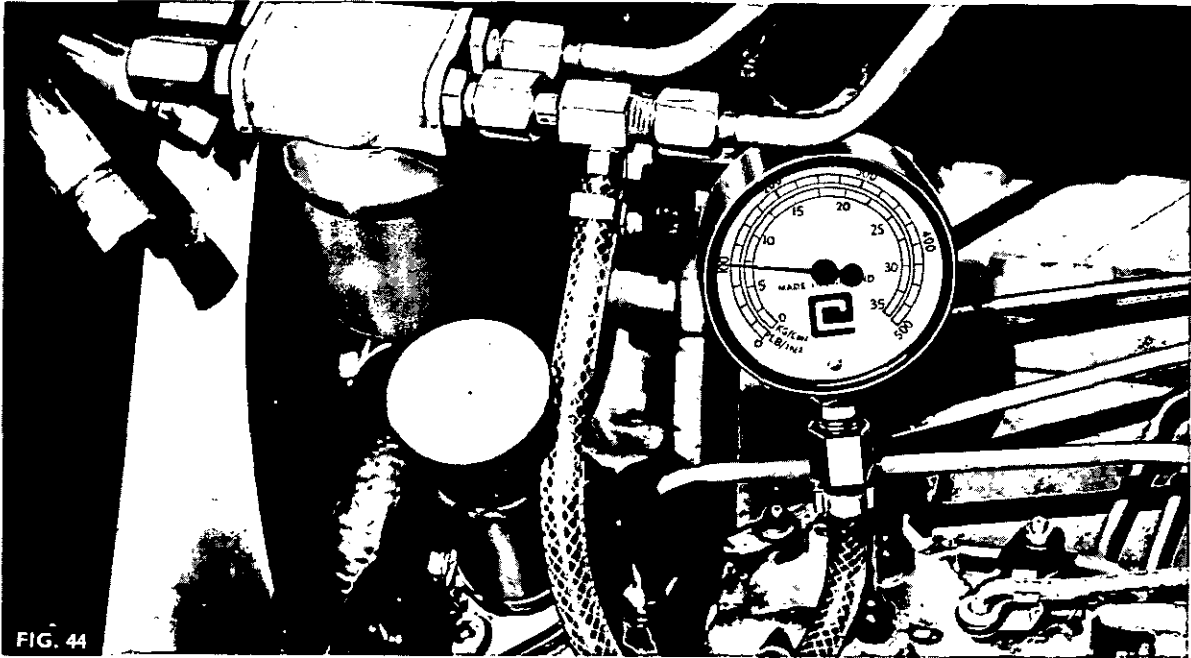


FIG. 44

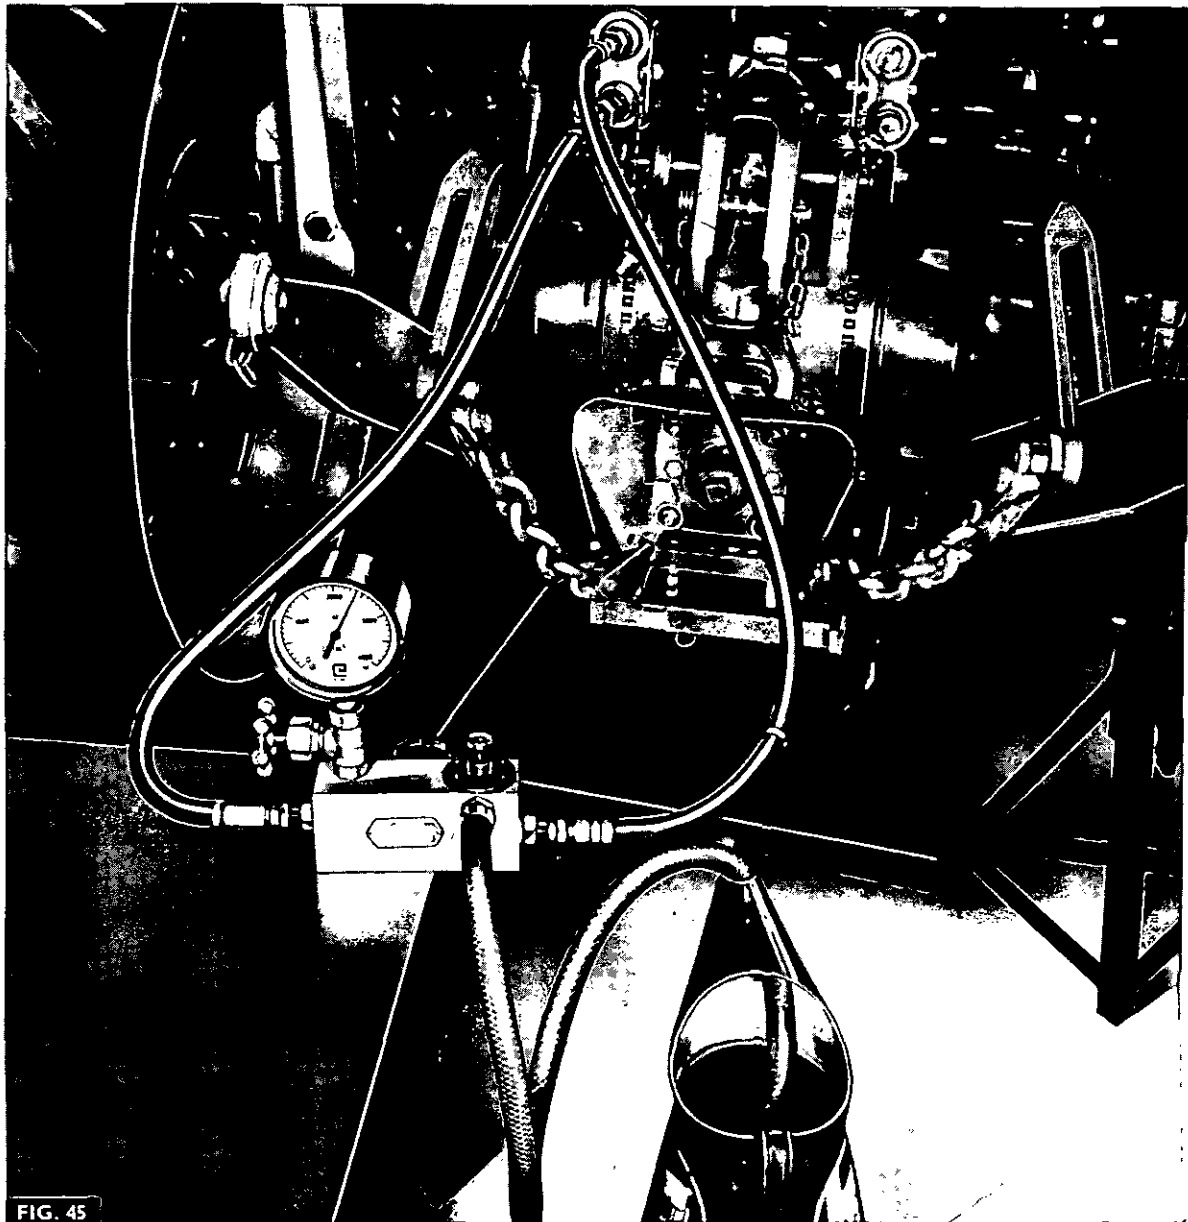


FIG. 45

## KONTAK SPOOL VALVES

## Part 7 Section B

| Operation No. | Table of Contents                                    | Page No. |
|---------------|--|----------|
|               | KONTAK SPOOL VALVE                                   | 38       |
|               | Function   | 38       |
|               | Adjustments  | 38       |
| 7B-17-38      | Spool Valve Fitting Instructions                     |          |
|               | HYDRAULIC SELECTOR VALVE                             | 38       |
|               | Function   | 38       |
| 7B-18-41      | Selector Valve Fitting Instructions                  |          |
|               | LINKAGE PUMP FEED HOSE KIT                           | 41       |
|               | Function   | 41       |
| 7B-19-41      | Feed Hose Kit Fitting Instructions                   |          |
|               | AUXILIARY HYDRAULIC FEED HOSE KIT                    | 41       |
|               | Function   | 41       |
| 7B-20-41      | Feed Hose Kit Fitment (Early Type P.t.o. Side Cover) |          |
| 7B-21-42      | Feed Hose Kit Fitment (Later Type P.t.o. Side Cover) |          |
|               | COMBINED FLOW FEED HOSE KIT                          | 42       |
|               | Function   | 42       |
| 7B-22-42      | Feed Hose Kit Fitment (Early Type P.t.o. Side Cover) |          |
| 7B-23-45      | Feed Hose Kit Fitment (Later Type P.t.o. Side Cover) |          |
|               | OUTLET HOSE KIT                                      | 46       |
|               | Function   | 46       |
| 7B-24-46      | Outlet Hose Kit Fitment                              |          |
|               | SPOOL VALVE ASSEMBLY                                 | 46       |
| 7B-25-46      | Spool Valve Unit Removal and Refitment               |          |
| 7B-26-46      | Spool Block Removal and Refitment                    |          |
| 7B-27-49      | Spool Block Servicing                                |          |



## AUXILIARY HYDRAULICS

### KONTAK SPOOL VALVE

#### FUNCTION

The Kontak spool valve is capable of controlling the following services:—

1. Single Acting Rams.
2. Double Acting Rams.
3. Hydraulic Motors.

#### Single Acting Rams

To operate single acting rams, only the LOWER 'Pioneer' quick release couplers are used.

To extend the ram, pull the lever rearwards.

To lower the ram, push the lever forwards.

**NOTE – TO SET THE VALVE FOR SINGLE ACTING OPERATION, SEE ADJUSTMENTS.**

#### Double Acting Rams

When operating double acting rams, the LOWER 'Pioneer' quick release coupler should be connected to the hose which feeds the side of the ram which causes it to EXTEND.

To extend the ram, pull the lever rearwards.

To lower the ram, push the lever forwards.

#### Hydraulic Motors

Although not specifically designed for use with hydraulic motors, these valves can be used satisfactorily, if the following points are observed:—

1. ALWAYS connect the motor feed hose to the LOWER coupler.
2. NEVER connect the motor return hose to the quick couplers. Always connect the return hose directly to either the 'R' port on the selector valve (tractor working off the linkage pump only) or to the FRONT port on the p.t.o. side cover (auxiliary pump, or combined flow applications).
- \*\* 3. Always contact your Distributor or Dealer when fitting hydraulic motors, to ensure that the hydraulic circuit is completely satisfactory.

**\*\*NOTE – A SPECIAL SPOOL VALVE UNIT, FOR USE FOR REVERSIBLE HYDRAULIC MOTORS IS MANUFACTURED BY KONTAK LTD. FOR DETAILS OF THIS SPECIAL VALVE AND OTHER SPECIALISED APPLICATIONS (E.G. DETENTS, KICK-OUT ETC.,) PLEASE CONTACT KONTAK DIRECT.**

#### ADJUSTMENTS

##### For Single Acting Operation

- \*\* 1. Fig. 1. Remove the special  $\frac{7}{8}$ –14 UNF plug (1) from the bottom of the spool valve.
2. From the spool valve kit, fit the standard  $\frac{7}{8}$ –14 UNF plug (2) (without a spigot), to the hole at the bottom of the spool valve.

**NOTE – ENSURE THAT THE NEW PLUG HAS AN 'O' RING FITTED.**

- \*\* 3. If the outlet hose kit is not being fitted, also fit the  $\frac{3}{4}$ –16 UNF plug (11) from the kit, to the lower, outlet port on the spool valve.

**DO NOT LOSE, OR DISCARD THE SPECIAL  $\frac{7}{8}$ –14 UNF PLUG (1), AS THIS MAY BE REQUIRED AT A LATER DATE FOR THE VALVE TO BE USED FOR DOUBLE ACTING OPERATION.**

##### For Double Acting Operation:—

1. If necessary, remove the standard  $\frac{7}{8}$ –14 UNF plug (2) (without a spigot) from the bottom of the spool valve.
2. Fit the special  $\frac{7}{8}$ –14 UNF plug (with a spigot and two 'O' rings) to the hole at the bottom of the spool valve.
- \* 3. If the outlet hose kit is to be fitted, if necessary, remove the  $\frac{3}{4}$ –16 UNF plug (11) from the outlet port on the spool valve.

**WARNING – NEVER TRY TO OPERATE THE VALVE FOR DOUBLE ACTING OPERATION WITH THE PLUG (3) SCREWED INTO THE LOWER OUTLET PORT.**

#### FITTING INSTRUCTIONS

7B-17-38

1. Fig. 1. Thoroughly degrease the threads on the operating levers and the cranks, then apply two drops of Loctite Grade AV 'Stud Lock' (Red) to the threads before assembly. Screw the operating lever(s) (4) into the crank(s) on the spool assembly (5). Tighten the locknut(s) (6).
2. Locate the spool assembly (5) against the mounting bracket (7) and secure it with three  $\frac{3}{8}$  UNF x 70 mm (2 $\frac{3}{4}$  in) bolts (8), plus flat washers, lock washers and nuts.
3. Attach the location plate (9) to the bottom of the mounting bracket (7), through the inner hole (nearest the tractor, when fitted), using a  $\frac{3}{8}$  UNF x 32 mm (1 $\frac{1}{4}$  in) bolt (10) plus a flat washer, lockwasher and nut.
4. If necessary, fit the new p.t.o. handle and assemble the feed and return hoses to the p.t.o. side cover, as stated in the following operations.
5. Remove the two bolts securing the L.H. footplate to its rear mounting bracket.
6. Locate the spool valve mounting bracket and secure it to the footplate, with two  $\frac{3}{8}$  UNF x 38 mm (1 $\frac{1}{2}$  in) bolts (11) through the footplate mounting bracket holes and a further  $\frac{3}{8}$  UNF x 32 mm (1 $\frac{1}{4}$  in) bolt (10) through the front hole into the footplate, plus a flat washer, lockwasher and nut for each.
7. Adjust the position of the operating levers (4) to clear the seat and to suit the operator.

#### HYDRAULIC SELECTOR VALVE

(This information supersedes that stated in Operation 7B-13-26).

#### FUNCTION

The hydraulic selector valve is used to feed oil to any one of three services, leaving the other two isolated. The three services are:—

| Lever Position | Tractor Linkage                | Port 1         | Port 2         |
|----------------|--------------------------------|----------------|----------------|
| LINKAGE        | Operates Normally              | Isolated       | Isolated       |
| 'EXT 1'        | Links Fully Raised             | Flow Available | Isolated       |
| 'EXT 2'        | Links remain at Pre-set Height | Isolated       | Flow Available |

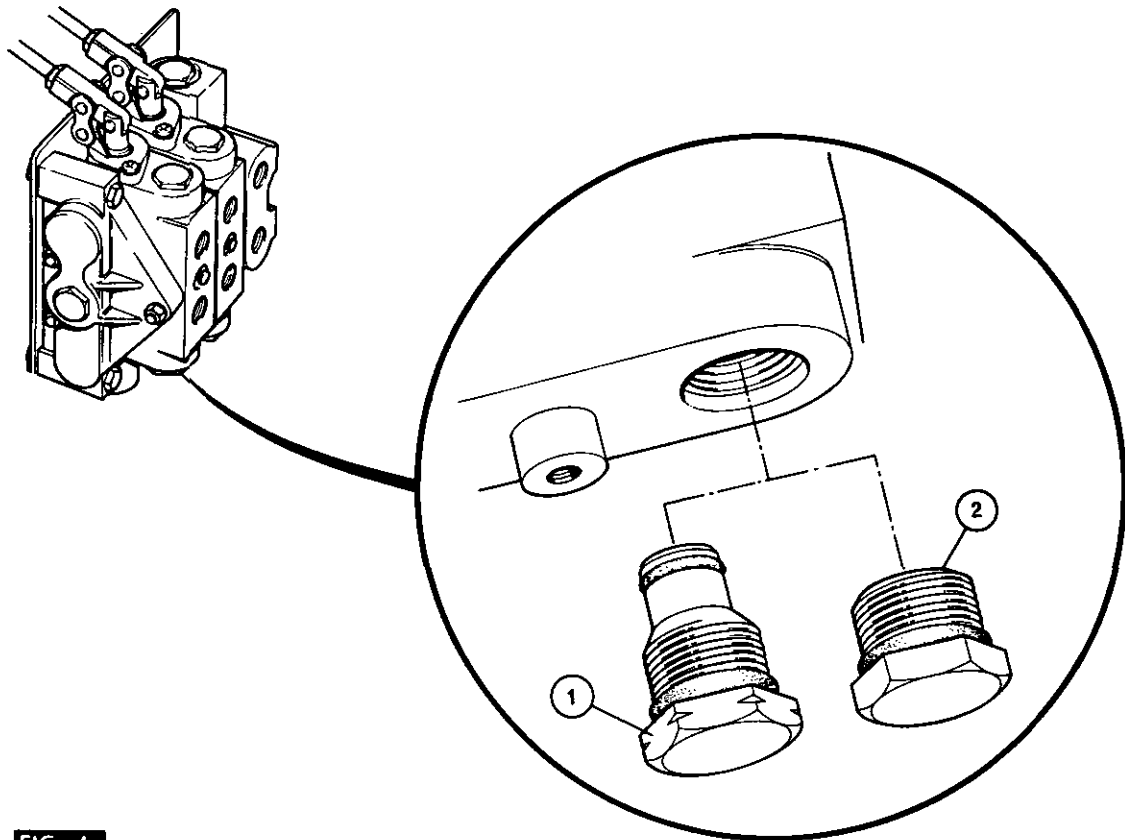


FIG. 1


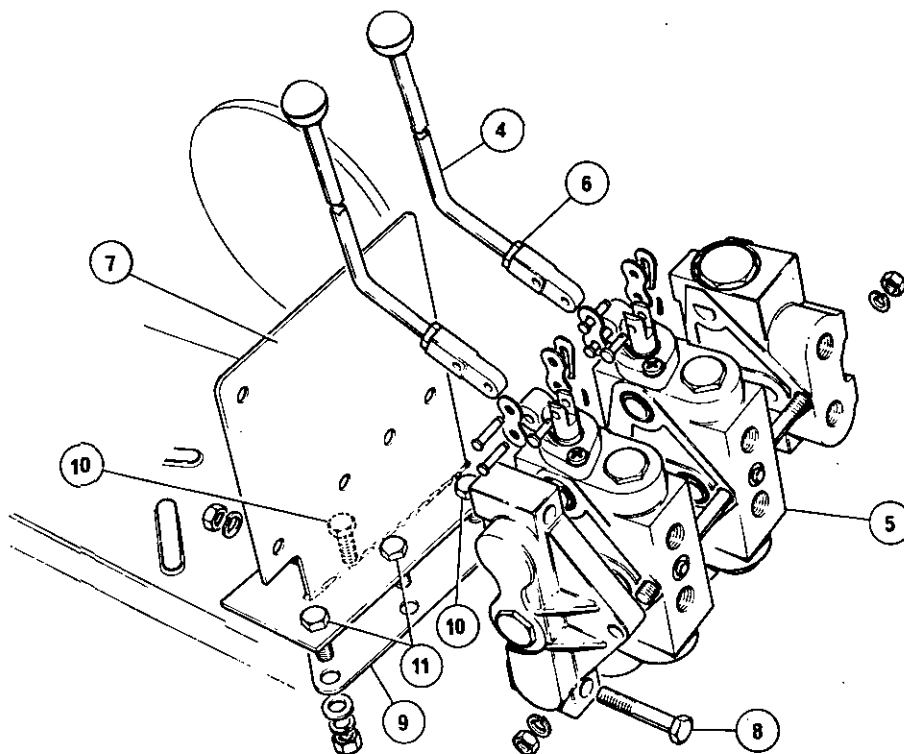
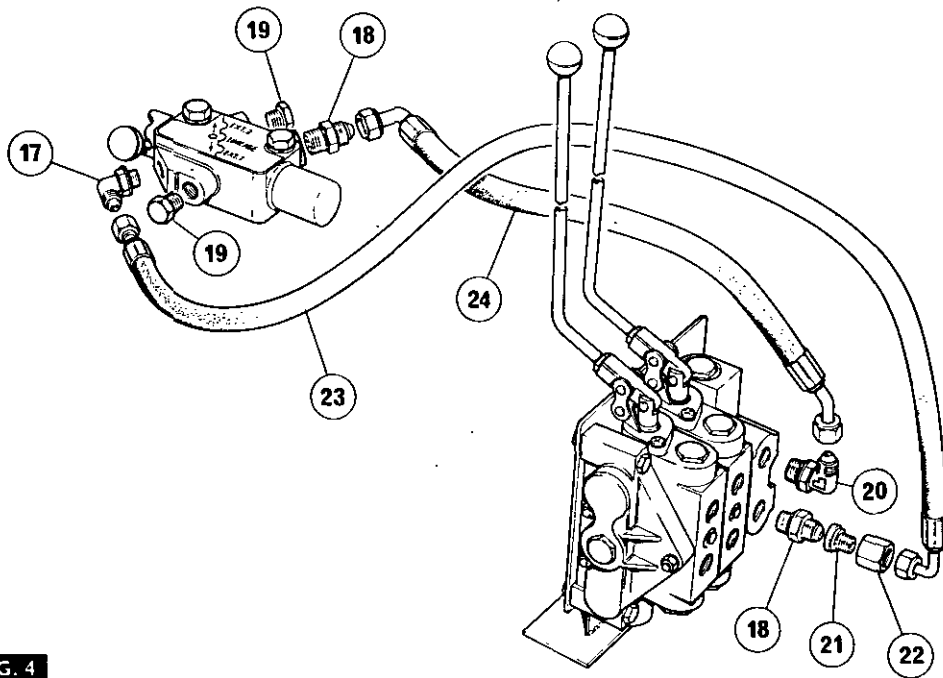


FIG. 2

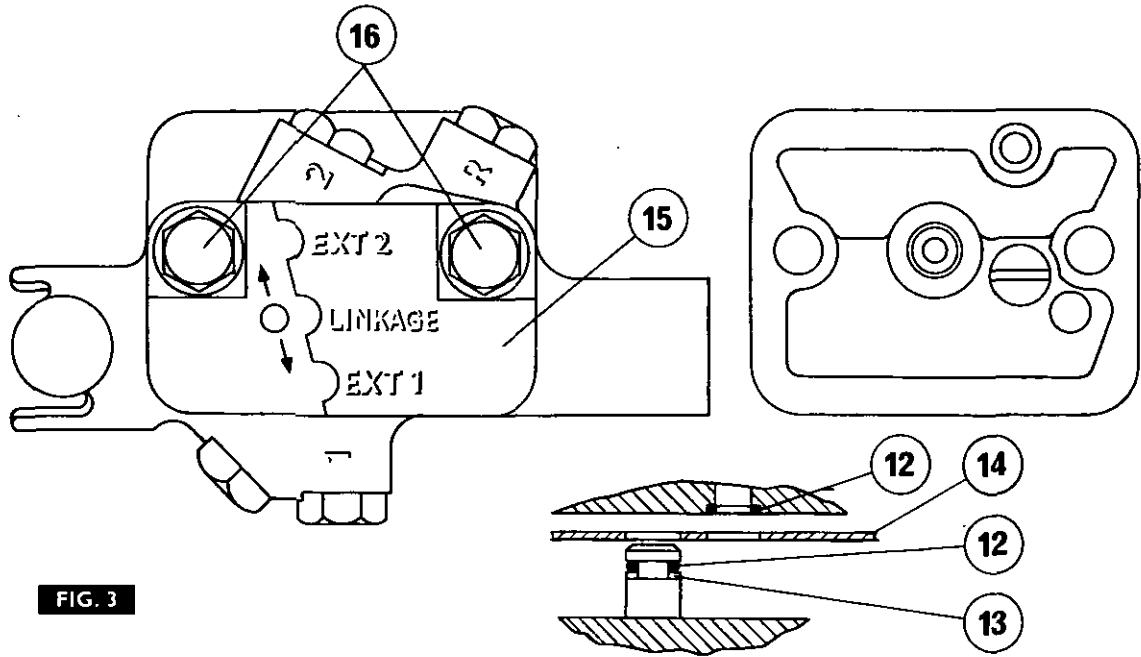

## AUXILIARY HYDRAULICS

Flow available: 14,1 lit/min (3.1 Imp. gal/min or 3.72 U.S. gal/min).  
 Max. Pressure: 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>).  
 Hydraulic H.P.: 6.4 @ 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>).

## FITTING INSTRUCTIONS 7B-18-41

1. Place the 'Draft Control' lever in the 'Down' position.
2. Remove the two bolts and spring washers securing the transfer cap to the lift cover, then carefully ease off the transfer cap, ensuring that the standpipe is not displaced from its location in the hydraulic pump.
3. Fig. 3. Remove the old 'O' ring and back-up washer (12 and 13 respectively), from the standpipe.
4. Fit a new 'O' ring (12) and back-up washer (13) to the standpipe.
5. Clean the bottom face of the selector valve, then fit an 'O' ring (12) to the shallow recess in the bottom face of the selector valve.
6. Place the selector valve gasket (14) in position, making sure that all of the holes are clear, then locate the selector valve on the standpipe.
7. Fit the instruction plate (15), then fit the two special  $\frac{7}{8}$  UNC x 73 mm ( $2\frac{7}{8}$  in). bolts (16), with a flat washer and a lockwasher for each.
8. Carefully torque the bolts to 3,5 kgm (25 lb ft)

**NOTE** — DO NOT USE THE EXISTING TRANSFER CAP BOLTS. ALSO, DO NOT OVERTIGHTEN THE BOLTS, AS THIS CAN CAUSE LEAKAGE OF THE SELECTOR VALVE, AND MAY CAUSE THE SPOOL TO STICK.

The various plugs, connectors and elbows should be fitted as stated in operations 7B-19-41; 7B-22-42 or 7B-23-45.

## LINKAGE PUMP FEED HOSE KITS

## FUNCTION

This feed hose kit supplies oil to the spool valve and permits oil to return to the 'R' Port on the selector valve.

## ADJUSTMENTS

If the tractor linkage has to be kept at a pre-set height above the ground, the following changes must be made to the arrangement of the supply hose kit:—

1. Fit the  $\frac{9}{16}$  —18 UNF plug (19), from the selector valve kit to front Port 1, in place of the  $\frac{9}{16}$  —18 UNF 90° elbow (17).
2. Fit the  $\frac{9}{16}$  —18 UNF 90° elbow (17) to Port 2.
3. In place of the feed hose (23), make up a new longer hose, connecting it to the reducing adapter (21) at the lower R.H. port on the back of the spool valve and to the 90° elbow (17) at Port 2.

Flow Available: 14,1 lit/min (3.1 Imp.gal/min or 3.72 U.S. gal/min).

Max. Pressure: 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>)  
 Hydraulic H.P.: 6.4 @ 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>)

FITTING INSTRUCTIONS 7B-19-41  
Fig. 4

1. Assemble and fit the spool valve to the tractor, as stated in operation 7B-17-39.
2. Fit the hydraulic selector kit, as stated in operation 7B-18-40.
3. Screw the  $\frac{9}{16}$  —18 UNF 90° elbow (17) into front Port 1 of the selector valve.
4. Screw the  $\frac{3}{4}$ —16 UNF straight connector (18) into the 'R' Port on the selector valve.
5. Fit a  $\frac{9}{16}$  —18 UNF blanking plug (19) into rear Port 1 and Port 2 of the selector valve.
6. Screw the  $\frac{3}{4}$ —16 UNF 90° elbow (20) into the R.H. upper port at the back of the spool valve. Lock the elbow to face vertically upwards.
7. Screw the  $\frac{3}{4}$ —16 UNF straight connector (18) into the lower R.H. port on the spool valve.
8. Insert the reducing adapter (21) into the tube nut (22), then screw the nut on to the straight connector (18).
9. Attach the hose with  $\frac{9}{16}$  —18 UNF end fittings (23) with its straight end to the 90° elbow (17) on the selector valve and its 90° end to the reducing adapter (20) on the spool valve.
10. Attach the hose with  $\frac{3}{4}$ —16 UNF end fittings (24) with its 45° end to the 90° elbow (20) at the upper R.H. port of the spool valve and its 90° end to the straight connector (18) at the 'R' Port on the selector valve.

## AUXILIARY HYDRAULIC FEED HOSE KIT

## FUNCTION

This feed hose kit supplies oil to the spool valve and allows oil to return to the front port on the side cover.  
 Flow Available: 28,6 lit/min (6.3 Imp. gal/min or 7.56 U.S. gal/min).

Max. Pressure: 169 kg/cm<sup>2</sup> (2400 lb/in<sup>2</sup>).  
 Hydraulic H.P.: 8.8 @ 140 kg/cm<sup>2</sup> (2000 lb/in<sup>2</sup>).

## Tractors with Early Type P.t.o. Side Cover

**NOTE** — THE P.T.O. COVER REFERRED TO IN THESE INSTRUCTIONS WAS FITTED TO ALL TRACTORS WITH THE HIGH CAPACITY MULTI-POWER PUMP FROM 1965 ONWARDS UNTIL THE CUT-IN OF INDEPENDENT P.T.O. IN DECEMBER 1971 WHEN ONLY NON-I.P.T.O. MULTI-POWER TRACTORS CONTINUED TO HAVE THIS TYPE OF SIDE COVER UNTIL FINAL CESSATION OF PRODUCTION IN MARCH 1972. THIS SIDE COVER IS IDENTIFIED BY HAVING THE FRONT PORT SLIGHTLY ABOVE THE REAR ONE. THE COVER IS MANUFACTURED FROM CAST-IRON.

FITTING INSTRUCTIONS 7B-20-41  
Fig. 5

1. If necessary, fit the p.t.o. lever extension kit 884 391 M91 (25) to the p.t.o. lever (not supplied with kit).
2. Remove the manifold from the p.t.o. side cover.
3. Screw a  $\frac{3}{4}$ —16 UNF special 90° elbow (31A) into the REAR port on the p.t.o. side cover. Lock it in position pointing downwards. Screw a  $\frac{3}{4}$ —16 UNF straight connector (18) into the special 90° elbow (31A).

## AUXILIARY HYDRAULICS

4. Screw the  $\frac{3}{4}$ -16 UNF 45° elbow (27) into the FRONT port on the p.t.o. side cover. Lock it in position pointing vertically upwards.

**NOTE** - THE FOOTPLATE MAY NEED TO BE TRIMMED SLIGHTLY TO CLEAR THE 45° ELBOW AND ITS HOSE.

5. Attach the feed hose (28) to the 90° elbow (26) on the REAR port of the p.t.o. side cover.
6. Attach the straight end of the return hose (29) to the 45° elbow (27) on the FRONT port of the side cover.
7. Assemble the spool valve unit and attach it to the tractor footplate, as stated in operation 7B-17-39.
8. Screw a  $\frac{3}{4}$ -16 UNF 90° elbow (20) into the upper and lower R.H. ports on the back of the spool valve. Lock the upper elbow to point vertically upwards and the lower elbow to point downwards and at approximately 30° away from the tractor.
9. Route the feed hose (28) under the tractor footplate, and connect it to the lower 90° elbow (20) on the back of the spool valve.
10. Route the return hose (29) across the front of the spool valve bracket and over the top of the valve, then connect its 90° end to the upper 90° elbow (20) on the back of the valve.
10. Attach the 90° end of the return hose (28) to the straight connector (18) on the front port of the side cover.
11. Assemble the spool valve unit and attach it to the tractor footplate, as stated in operation 7B-17-39.
12. Screw a  $\frac{3}{4}$ -16 UNF 90° elbow (20) into the upper and lower R.H. ports on the back of the spool valve. Lock the upper elbow to point vertically upwards and the lower elbow to point downwards and at approximately 30° away from the tractor.
13. Route the feed hose (29) under the tractor footplate and connect it to the lower 90° elbow on the back of the spool valve.
14. Route the return hose (28) over the footplate, then connect its straight end to the upper 90° elbow (20) on the back of the valve.

### AUXILIARY HYDRAULIC FEED HOSE KIT

#### Tractors with Later Type P.t.o. Side Cover

**NOTE** - THE P.T.O. SIDE COVER REFERRED TO IN THESE INSTRUCTIONS IS FITTED TO ALL TRACTORS WITH I.P.T.O. FROM FIRST PRODUCTION (DECEMBER 1971) AND TO ALL HIGH CAPACITY PUMP MULTI-POWER TRACTORS BUILT FROM MARCH 1972. THIS TYPE OF P.T.O. SIDE COVER IS IDENTIFIED BY HAVING THE FRONT PORT BELOW THE REAR ONE. THE COVER IS MANUFACTURED FROM LIGHT ALLOY AND A LONGER, CAST ALLOY, P.T.O. LEVER IS ALSO FITTED.

#### FITTING INSTRUCTIONS

7B-21-42

Fig. 6

1. Drive out the roll pin securing the p.t.o. lever and remove the lever.
2. Fit the new, extended p.t.o. lever (30), supplied in the kit and secure it with the new roll pin.
3. Remove the manifold from the p.t.o. side cover.
4. Thread a 1 in-12 UNF locknut (31) on to one of the manifold banjo bolts, then screw the bolt into the FRONT port pipe.
5. Pull the snap ring off the front port pipe, then screw the locknut into position. Remove the manifold banjo bolt.
6. Remove the snap ring from the REAR port pipe then fit a second locknut (31).
7. Screw a  $\frac{3}{4}$ -16 UNF 90° elbow (20) into the REAR port on the p.t.o. side cover. Lock it in position pointing vertically upwards.
8. Screw a  $\frac{3}{4}$ -16 UNF straight connector (18) into the FRONT port on the side cover.
9. Attach the feed hose (29) to the 90° elbow (20) on the REAR port of the p.t.o. side cover.

### COMBINED FLOW FEED HOSE KIT

#### FUNCTION

The combined flow hose kit supplies oil to the spool valve from both the selector valve and from the side cover. Oil is returned from the spool valve to the front port on the side cover.

#### ADJUSTMENT

If the tractor hydraulic linkage has to be kept at a preset height above the ground, the following changes must be made to the arrangement of the supply hose kit:-

1. Fit the  $\frac{9}{16}$ -18 UNF plug (19), from the selector valve kit, to front Port 1, in place of the non-return valve (33) and 90° elbow (34).
2. Fit the non-return valve and 90° elbow (33 and 34) to Port 2 of the selector valve.
3. In place of the feed hose (23), make up a new, longer hose, connecting it to the reducing adapter (22) at the lower R.H. port on the back of the spool valve and to the  $\frac{9}{16}$ -18 UNF 90° elbow (34) at Port 2.

Flow Available: 42.6 lit/min (9.4 Imp. gal/min or 11.3 U.S. gal/min).

Max. Pressure: 211 kg/cm<sup>2</sup> (3000 lb/in<sup>2</sup>) but with only 14 lit/min flow.

Hydraulic H.P.: 12.95 @ 140 kg/cm<sup>2</sup> (2000 lb/in<sup>2</sup>)

#### Tractors with Early Type P.t.o. Side Cover

For details of types and tractor identifications, see 'Auxiliary Hydraulic Feed Hose Kit' on page 7B-41.

#### FITTING INSTRUCTIONS

7B-22-42

Fig. 7

1. If necessary, fit the p.t.o. lever extension kit 884 391 M91 (25) (not supplied in the kit) to the p.t.o. lever.
2. Remove the manifold from the p.t.o. side cover.
3. Screw a  $\frac{3}{4}$ -16 UNF 45° elbow (27) into the FRONT port on the side cover. Lock the elbow to point vertically upwards.

**NOTE** - THE FOOTPLATE MAY NEED TO BE TRIMMED TO PERMIT FITMENT OF THE 45° ELBOW (27).

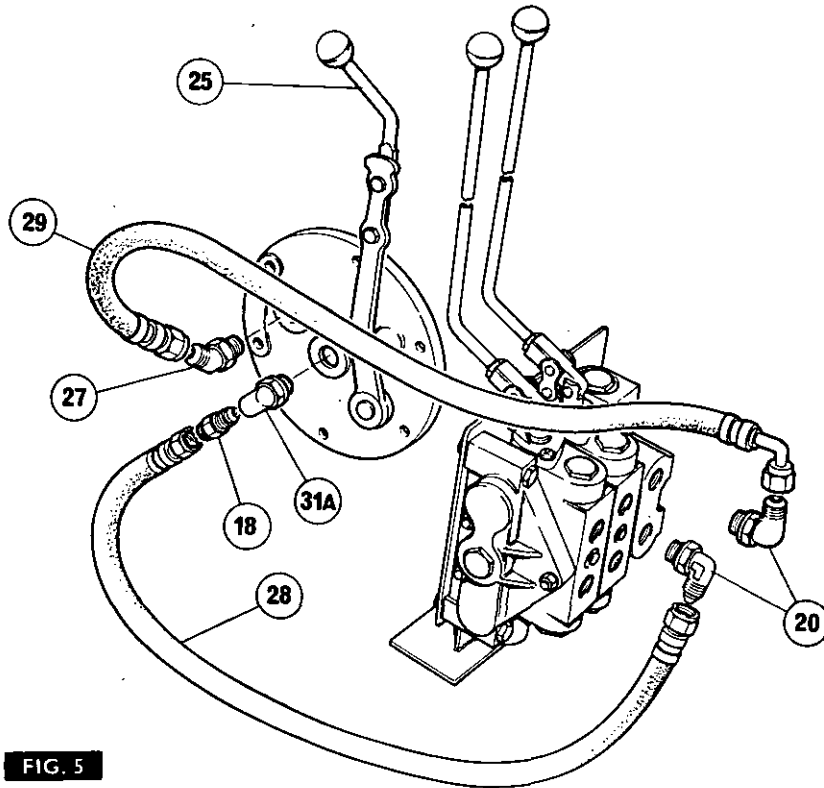


FIG. 5

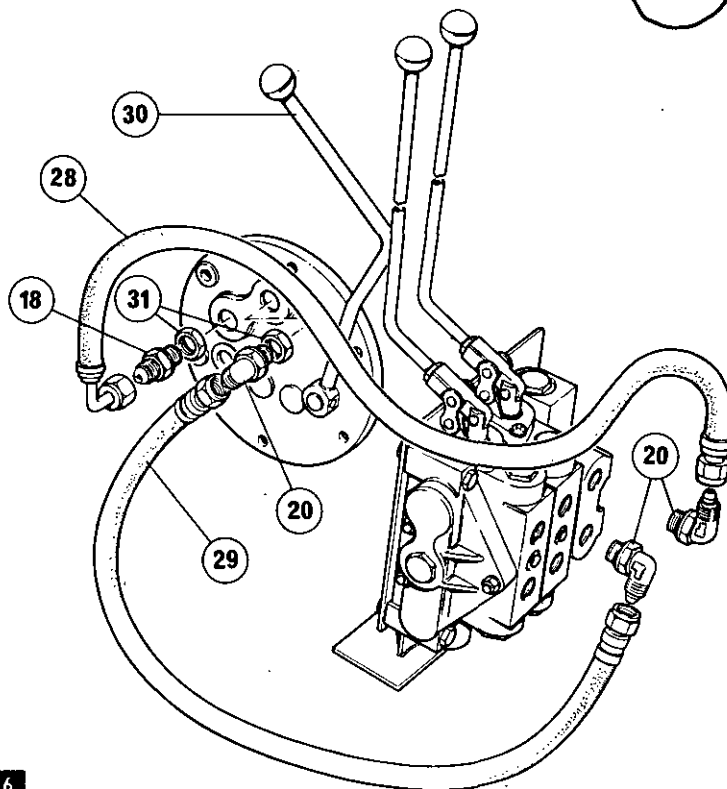
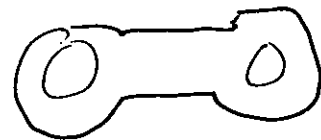


FIG. 6

AUXILIARY HYDRAULICS

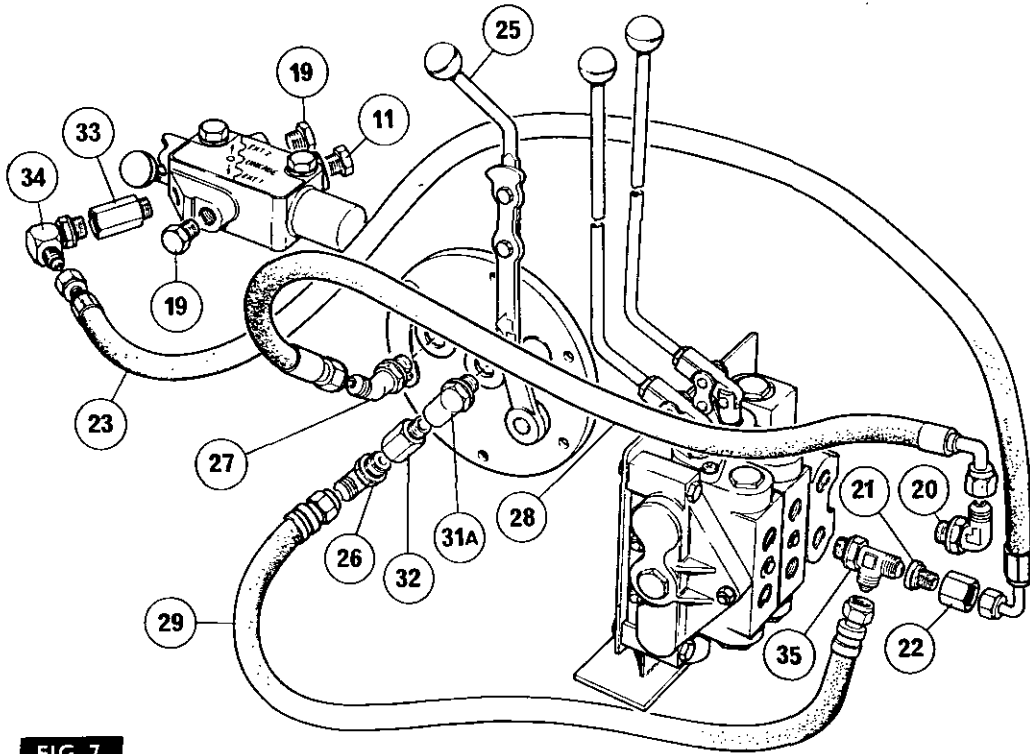


FIG. 7

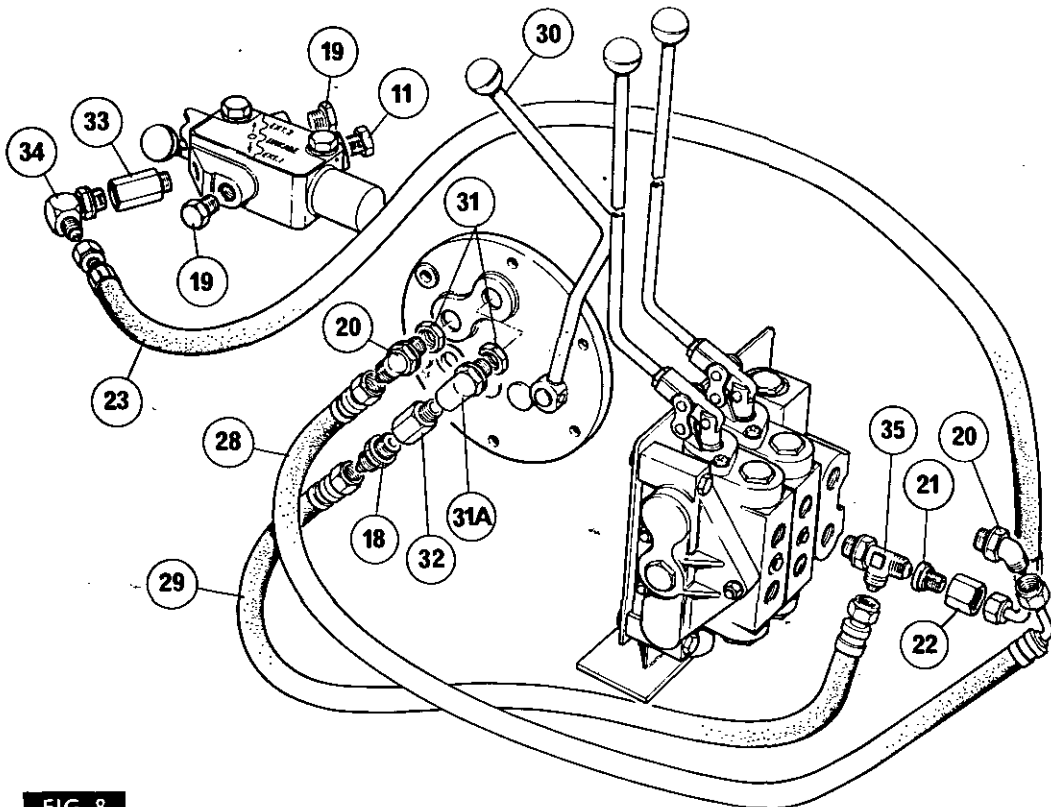


FIG. 8

## AUXILIARY HYDRAULICS

4. Screw the special  $\frac{3}{4}$ -16 UNF 90° elbow (31A) into the REAR port on the p.t.o. side cover. Lock the elbow to face downwards and approximately 45° forwards.
  5. Screw the larger ( $\frac{3}{4}$ -16 UNF) non-return valve (32) into the special 90° elbow (31A) at the REAR port on the side cover.
  6. Screw the special  $\frac{3}{4}$ -16 UNF 90° elbow (26) into the non-return valve (32). Lock this elbow to face outwards, away from the tractor.
  7. Attach the feed hose (29) to the 90° elbow (26).
  8. Attach the straight end of the return hose (28) to the 45° elbow (27) at the FRONT port of the side cover.
  9. Fit the selector valve kit, as stated in operation 7B-18-40.
  10. Assemble the spool valve unit and bolt it to the tractor footplate as stated in operation 7B-17-38.
  11. Screw the smaller ( $\frac{9}{16}$ -18 UNF) non-return valve (33) into front Port 1 on the selector valve.
  12. Screw the  $\frac{9}{16}$ -18 UNF 90° elbow (34) into the non-return valve (33). Lock the elbow to face rearwards.
  13. Attach the straight end of the selector valve feed hose (23) ( $\frac{9}{16}$ -18 UNF end fittings) to the 90° elbow (34).
  14. Fit a  $\frac{9}{16}$ -18 UNF plug (19) to rear Port 1 and Port 2 of the selector valve.
  15. Fit a  $\frac{3}{4}$ -16 UNF plug (11) to the 'R' port on the selector valve.
  16. Screw the  $\frac{3}{4}$ -16 UNF tee-piece (35) into the lower, R.H. port on the back of the spool valve. Lock the tee piece with its 90° angle union pointing downwards and approximately 20° away from the tractor.
  17. Screw a  $\frac{3}{4}$ -16 UNF 90° elbow (20) into the upper R.H. port on the back of the spool valve. Lock the elbow to point vertically upwards.
  18. Insert the reducing adapter (21) through the tube nut (22), then screw the nut on to the horizontal portion of the tee-piece (35).
  19. Route the side cover feed hose (29) under the footplate and attach it to the vertical portion of the tee-piece.
  20. Route the return hose (28) across the front of the spool valve mounting bracket, then over the spool valve and attach its 90° end to the 90° elbow (20) at the upper R.H. port on the back of the spool valve.
  21. Attach the 90° end of the selector valve feed hose (23) to the reducing adapter (21).
4. Thread a 1 in-12 UNF locknut (31) on to one of the manifold banjo bolts, then screw the manifold banjo bolt into the FRONT port pipe on the p.t.o. side cover.
  5. Pull the snap ring off the port pipe, then screw the locknut (31) into position. Remove the manifold banjo bolt.
  6. Remove the snap ring from the REAR port pipe, then fit a second locknut (31).
  7. Screw a  $\frac{3}{4}$ -16 UNF 90° elbow (20) into the FRONT port on the p.t.o. side cover. Lock the elbow to face downwards and approximately 45° forwards.

**NOTE - THE FOOTPLATE MAY NEED TO BE TRIMMED TO PERMIT FITMENT OF THE 45° ELBOW (27).**

8. Screw the special  $\frac{3}{4}$ -16 UNF 90° elbow (31A) into the REAR port on the side cover. Lock the elbow to face downwards.
9. Screw the larger ( $\frac{3}{4}$ -16 UNF) non-return valve (32) into the special 90° elbow (31A).
10. Screw a  $\frac{3}{4}$ -16 UNF straight connector (18) into the non-return valve (32).
11. Attach the straight end of the return hose (28) to the 90° elbow (20) at the FRONT port on the side cover.
12. Attach the feed hose (29) to the straight connector (18) on the non-return valve (32) (REAR port).
13. Fit the selector valve kit, as stated in operation 7B-18-41.
14. Assemble the spool valve unit and bolt it to the footplate, as stated in operation 7B-17-38.
15. Screw the smaller ( $\frac{9}{16}$ -18 UNF) non-return valve (33) into front Port 1 of the selector valve.
16. Screw the  $\frac{9}{16}$ -18 UNF 90° elbow (34) into the non-return valve (33). Lock the elbow to face rearwards.
17. Attach the straight end of the selector valve feed hose ( $\frac{9}{16}$ -18 UNF end fittings) to the 90° elbow (34).
18. Fit a  $\frac{9}{16}$ -18 UNF plug (19) to rear Port 1 and Port 2 of the selector valve.
19. Fit a  $\frac{3}{4}$ -16 UNF plug (11) into the 'R' port on the selector valve.
20. Screw the  $\frac{3}{4}$ -16 UNF tee-piece (35) into the lower, R.H. port on the back of the spool valve. Lock the tee-piece, with its 90° angle union pointing downwards and approximately 20° away from the tractor.
21. Screw a  $\frac{3}{4}$ -16 UNF 90° elbow (20) into the upper R.H. port on the back of the spool valve. Lock the elbow to point downward and approximately 20° towards the tractor.
22. Insert the reducing adapter (21) through the tube nut (22), then screw the nut on to the horizontal portion of the tee-piece (35).
23. Route the side cover feed hose (29) under the footplate and connect it to the 90° angle of the tee-piece (35).
24. Route the return hose (28) under the footplate and connect it to the 90° elbow (20) at the R.H. upper port on the back of the spool valve.
25. Attach the 90° end of the selector valve feed hose (23) to the reducing adapter (21).

**COMBINED FLOW FEED HOSE KIT****Tractor with Later Type P.t.o. Side Cover**

For details of types of tractors and identifications, see 'Auxiliary Hydraulic Feed Hose Kit' on page 7B-42.

**FITTING INSTRUCTIONS** 7B-23-45

Fig. 8

1. Drive out the roll pin securing the p.t.o. lever and remove the lever.
2. Fit the new, extended, p.t.o. lever (30), supplied in the kit and secure it with the new roll pin provided.
3. Remove the manifold from the p.t.o. side cover.



## AUXILIARY HYDRAULICS

### OUTLET HOSE KIT

#### FUNCTION

##### Quick Release Pinion Couplers

To fit an implement hose to a 'Pioneer' coupler, grasp the coupler, forward of the gimbal clamp and pull the coupler rearwards.

Holding the coupler in this position, insert the implement hose end adapter. Release the coupler and check for correct engagement.

**WARNING – KEEP THESE COUPLERS CLEAN AND PLUGGED, WHEN NOT IN USE.**

#### FITTING INSTRUCTIONS

7B-24-46

Fig. 9

1. Assemble the spool valve unit and feed hose kit, as stated previously.
2. Screw a  $\frac{3}{4}$ -16 UNF straight connector (18) into the upper L.H. port (single or twin spool valve) and into the upper, centre port (twin spool only).
3. Screw the extended  $\frac{3}{4}$ -16 UNF straight connector (36) into the lower port(s).
4. Attach the 90° end(s) of the outlet 'feed' hose(s) (37 or 38) to the upper straight connector(s) (18). (These are the smaller diameter hoses).
5. Attach the 90° end(s) of the outlet 'return' hose(s) (39 and 40) to the lower straight connector(s) (18 and 36). (These are the larger diameter hoses).
6. Fig. 10. Remove the two top fixings from the L.H. trumpet housing, then locate the L.H. coupler mounting bracket (41) and refit the nut and bolt.
- 6A. Twin Spool Only:— Repeat operation (6) for the R.H. coupler mounting bracket.
7. Slide a 'Pioneer' coupler (42) through each gimbal ring (43) and secure each with a retaining ring (44).
8. Fit an 'O' ring (45) to each outlet hose end, then screw a 'Pioneer' coupler assembly on to each hose.
9. Assemble the 'Pioneer' couplers in pairs, with two clamps (46) a spacer (47) and a pair of plugs (48). Slide a  $\frac{7}{8}$  UNF x 75 mm (3 in) bolt (49) through the brackets and the spacer, then locate the loops of the plugs (48) over the spacer, before bolting the assembly to the mounting bracket (41) (centre hole).
- 9A. Twin Spool Only:— Repeat operation 9 for the R.H. pair of hoses.

**NOTE – THE HOSE FROM THE UPPER PORT IS THE BOTTOM HOSE IN THE CLAMP.**

10. Remove the lift cover bolt, immediately to the rear of the L.H. lift arm.
- 10A. Twin Spool Only:— Also remove the lift cover bolt, immediately to the rear of the R.H. lift arm.
11. Fig. 9. Secure the hose clamp bracket(s) (50) to the lift cover with the new  $\frac{7}{8}$  UNC x 108 mm ( $4\frac{1}{4}$  in) bolt(s) (51). Torque the bolts to 9,0 kg m (65 lb ft).

12. Secure the hoses, in pairs, to the clamp bracket(s), using the 'U' clamp(s) (52), plus a  $\frac{1}{4}$  UNF x 41 mm ( $1\frac{5}{8}$  in) bolt (53) and a  $\frac{1}{4}$  UNF locknut.

**NOTE – IF NECESSARY, BEND THE BRACKET(S) (50) TO ENSURE A STRAIGHT HOSE RUN BETWEEN THE CLAMP(S) AND THE COUPLERS. ALSO, DO NOT CLAMP THE HOSES TIGHTLY, AS THEY MUST BE FREE TO SLIDE IN THE CLAMPS TO PERMIT COUPLING AND UNCOUPLING.**

13. Twin Spool Only:— Remove the tractor seat.
14. Twin Spool Only:— Fit the hose retaining plate (54) over the seat location studs, locating the two R.H. hoses between the bend in the end of the plate and the front of the lift cover.
15. Refit the tractor seat.
16. Fit the plastic plugs (48) into the 'Pioneer' couplers.

#### SPOOL VALVE ASSEMBLY

##### SPOOL VALVE UNIT

##### REMOVAL AND REFITMENT

7B-25-46

Fig. 2

##### Removal

1. Disconnect all of the feed, return and outlet hoses from the spool valve.
2. Remove the three bolts (8), nuts and spring washers, then lift off the valve.

##### Refitment

1. Align the valve against the mounting bracket (7), then refit the three bolts (8), nuts and spring washers.
2. Reconnect all of the feed, return and outlet hoses.

##### SPOOL BLOCK REMOVAL AND REFITMENT

7B-26-46

Fig. 11

##### Removal

1. Remove the spool valve from the tractor, as stated in operation 7B-25-46.
2. Remove the three nuts and studs (54) securing the spool valve assembly.
3. Part the end plates (55 and 56) from the spool blocks (57) and remove the 'O' rings (58 and 59).
4. Thoroughly clean the mating faces of the spool blocks and the end plates.

##### Refitment

1. Fit four new 'O' rings (58 and 59) to the recesses in the L.H. plate and the spool blocks.
2. Place the valve on a flat surface, with the feed ports uppermost, then align the valve sections and refit the three studs (54), nuts and lock-washers.

AUXILIARY HYDRAULICS

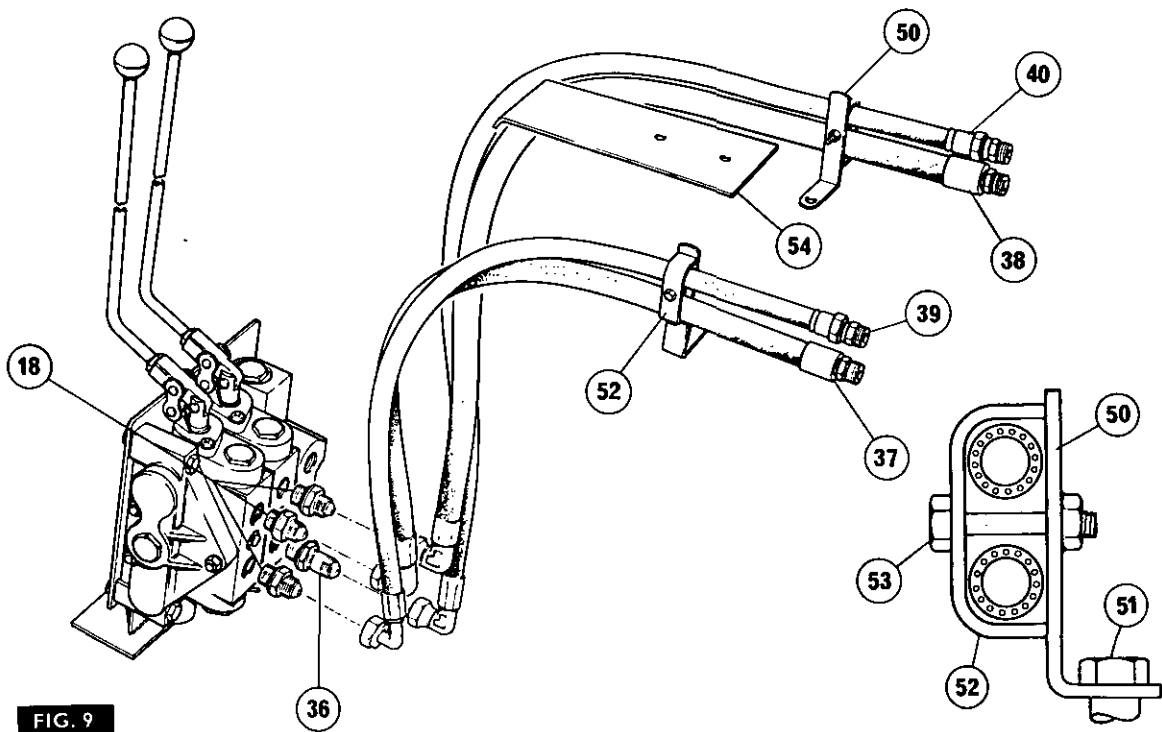


FIG. 9

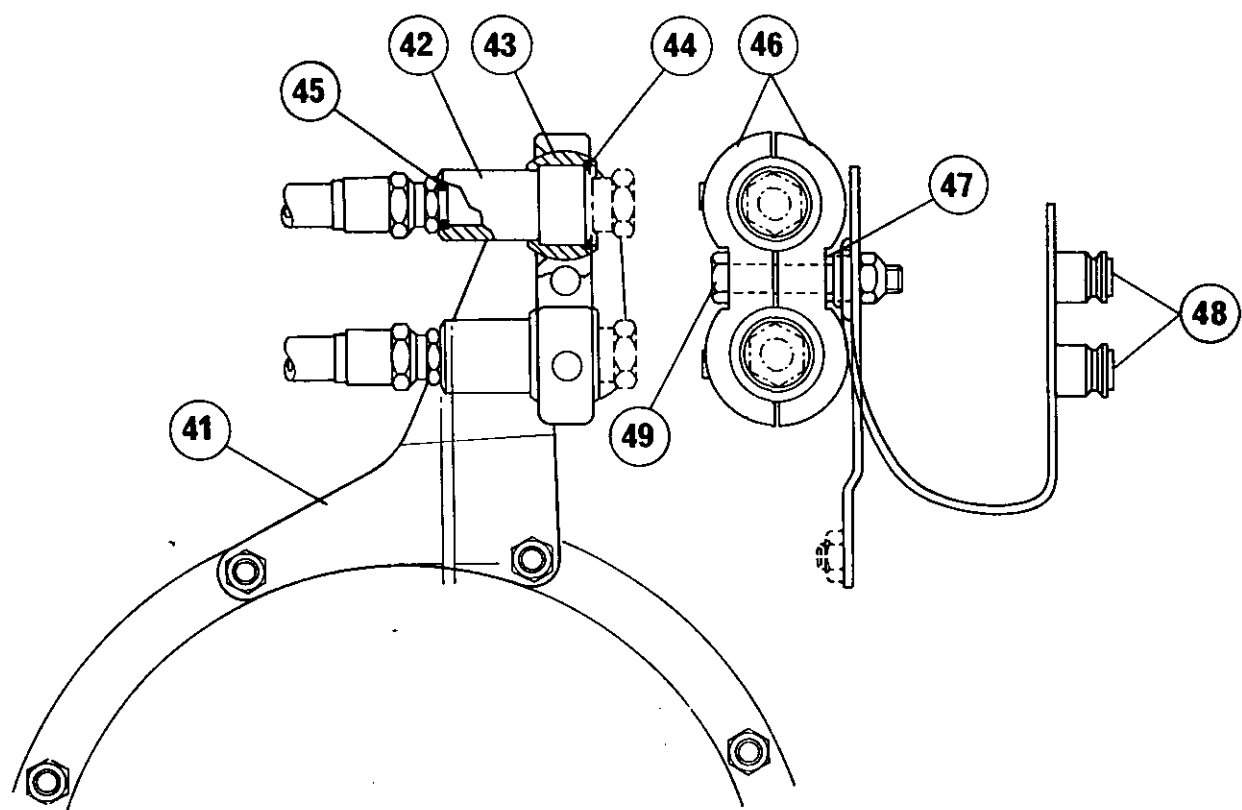


FIG. 10

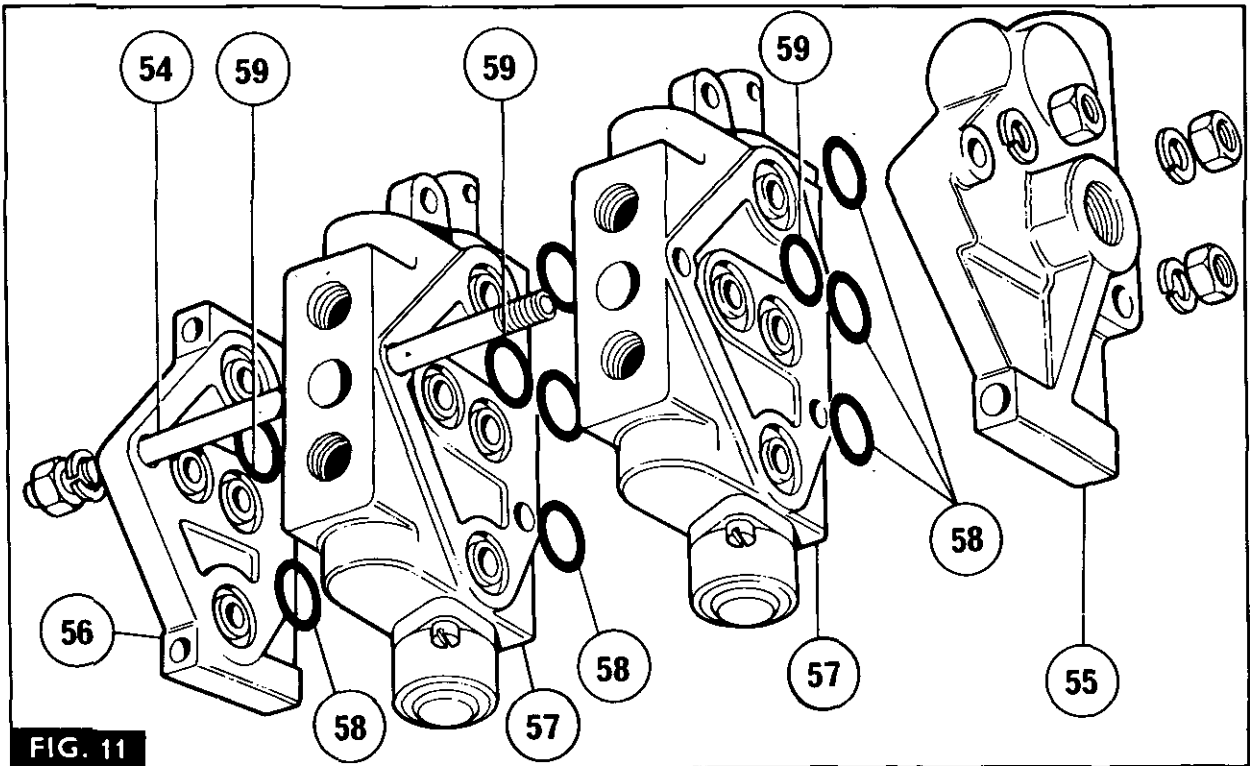


FIG. 11

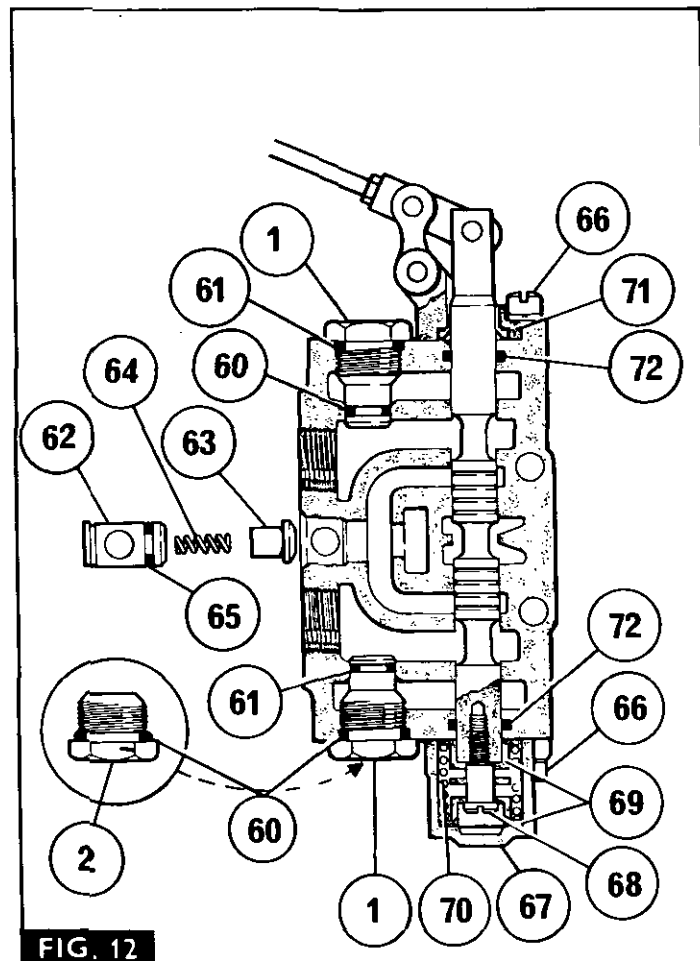


FIG. 12

## AUXILIARY HYDRAULICS

3. Torque the nuts to 2 kg m (15 lb ft).  
**DO NOT OVERTIGHTEN THE NUTS AS THIS COULD CAUSE THE SPOOLS TO STICK.**
4. Refit the spool valve to the tractor, as stated in operation 7B-25-46.

**SPOOL BLOCK SERVICING** 7B-27-49

Fig. 12

**Disassembly**

1. Split the spool block from the main assembly as stated in operation 7B-26-46.
2. Remove the upper plug (1) from the spool block.
3. If a double-acting plug (1) is fitted, remove both 'O' rings (60 and 61) or, conversely, if the single-acting plug (2) is fitted, remove the 'O' ring (61).
4. Remove the lower plug (1) and remove both 'O' rings (60 and 61).
5. Withdraw the check valve body (62) from the spool block, then remove the poppet (63) and spring (64). Remove the 'O' ring (65) from the valve body (62).
6. Remove the centreing spring cover retaining screws (66), then lift off the cover (67).
7. Remove the retaining screw (68) spring guides (69) and spring (70).
8. Remove the upper cover screws (66) and remove the cover. Remove the seal (71). **DO NOT MOVE THE SPOOL FROM ITS CENTRAL POSITION.**
9. Gently rotate and pull the spool towards the top end of the spool block, until the lower 'O' ring (72) is uncovered. **DO NOT COMPLETELY REMOVE THE SPOOL.**
10. Remove the lower 'O' ring (72) from its groove in the spool block.
11. Gently rotate and push the spool downwards away from the pull rod end of the spool block, until the upper 'O' ring (72) is uncovered. **DO NOT COMPLETELY REMOVE THE SPOOL.**

12. Remove the upper 'O' ring from its groove.

**Examination**

Check the condition of the check valve poppet and its seat in the spool block. Poor seating of the poppet can result in jerky operation.

Check that the spool slides smoothly in the spool block but **DO NOT REMOVE THE SPOOL COMPLETELY.** Always fit new 'O' rings and a new seal (71).

**Reassembly**

1. Fit a new 'O' ring (72) into the upper groove, then very carefully rotate and push the spool upwards until the lower groove is exposed.
2. Fit a new 'O' ring (72) to the lower groove, then carefully centralise the spool.
3. Thoroughly degrease the threads in the end of the spool and the retaining screw (68).
4. Apply one drop of Loctite 'Hydraulic Seal' (Brown) to the threads of the retaining screw (68), then assemble the spring guides (69) and the spring (70) on to the screw (68) and refit the screw to the spool.
5. Refit the centreing spring cover (67) and screw (66).
6. Slide a new seal (71) on to the spool, then refit the upper cover.
7. Fit a new 'O' ring (65) to the check valve body (62).
8. Fit the spring (64) and poppet (63) to the check valve body, then slide the body into the spool block.
9. Fit new 'O' rings (60 and 61) to the lower plug (1) then refit the cover plug to the spool block.
10. Dependent upon whether a single acting plug (2), or a double-acting plug (1) is fitted, fit either one (61) or two (60 and 61) new 'O' rings, then refit the plug.
11. Reassemble the spool to the block, as stated in operation 7B-26-46.

## LINKAGE AND DRAWBARS

## Part 7 Section C

| Operation<br>No. | Table of Contents  | Page<br>No. |
|------------------|--|-------------|
|                  | GENERAL  |             |
| 7C-01-02         | TOP LINK<br>Adjustment Procedure                               | 02          |
|                  | LOWER LINKS  | 02          |
| 7C-02-02         | LIFT RODS<br>Lift Rod Float                                    | 02          |
|                  | L.H. Lift Rod  | 02          |
| 7C-03-02         | R.H. Levelling Box and Lift Rod<br>Levelling Box Servicing     | 02          |
|                  | CHECK CHAINS   | 07          |
|                  | Check Chain Anchor Bracket                                     | 07          |
| 7C-04-07         | CONTROL BEAM<br>Removal and Refitment                          | 07          |
| 7C-05-07         | STABILISERS<br>Stabiliser Kit Fitment                          | 07          |
| 7C-06-07         | HEAVY DUTY SWINGING DRAWBAR<br>Drawbar Kit Fitment             | 07          |
| 7C-07-08         | Adjustment   |             |
|                  | AUTO-HITCH   | 08          |
| 7C-08-08         | Operation<br>Hitch Kit Fitment                                 | 08          |
| 7C-09-13         | Adjustment<br>Auto-Hitch used as a Swinging Drawbar            | 13          |
|                  | Linkage Check Bracket  | 13          |
| 7C-10-13         | LINKAGE DRAWBAR<br>Fitment                                     |             |
| 7C-11-13         | PRESSURE CONTROL COUPLER<br>Modification of Implement Drawbars | 13          |
| 7C-12-14         | Fitment<br>Coupler To Implement Attachment                     | 14          |
|                  | Operation  | 14          |

## LINKAGE AND DRAWBARS

### GENERAL

Fig 1. The three point linkage controls the movements of the mounted and semi-mounted implements. The linkage comprises five main components:— top link (1), lower links (3), lift rods (2), check chains (4) and control beam (5).

### TOP LINK

Fig 2. The top link is of the three-piece, barrel, turnbuckle type and is adjustable for length between the dimensions stated in the specification section.

#### Adjustment Procedure 7C-01-02

1. Fig 2. Release the locking clip (6).
2. Rotate the barrel (7) until the required length is achieved. Do not permit the ball ends to rotate.
3. Return the spring clip to the engaged position, to retain the ball ends in the correct plane.

### LOWER LINKS

The lower links (3) carry the implement and are also used when attaching the Pressure Control coupler or the linkage drawbar. Vertical, but not lateral movement of the lower links determines the height of the implements from the ground, or its depth of penetration.

### LIFT RODS

The lift rods (2) connect the lift arms to the lower links. The L.H. lift rod is normally set to its correct length on assembly and is not adjusted thereafter. The R.H. lift rod incorporates a bevel gear levelling box, which allows the upper portion of the rod to be screwed into, or out of, the lower portion of the lift rod, thus adjusting the height of the R.H. lower link in relation to the left.

#### Lift Rod Float 7C-02-02

The lift rods have provision for implement 'float' when wide implements are in use. To adjust the lift rods, proceed as follows:

1. Fig. 3A — Non Float — The lift rod lower fork should be set as shown.
2. Fig. 3B.— Float — Adjust the lift rod lower fork by reversing the fork as shown.

**NOTE.** — THE LIFT ROD BOLTS MUST ALWAYS BE FITTED TO THE FORWARD HOLE IN THE LOWER LINKS AND THE LOCKNUTS SHOULD BE ADJUSTED SO THAT THE LIFT ROD BOLTS CAN ROTATE.

#### Fitting of Implements

Careful attention must be paid when fitting implements not specifically designed for this tractor, to ensure that there is adequate clearance and no possibility of any of the linkage or implement fouling while lifting and lowering. When an implement is fitted which requires extra lift range, the lift rods must be relocated. For the normal lift height and heavy loads, the linkage must be fitted as shown in figure 4. For extra range with lighter loads the lift rod must be moved forwards to the front hole in lower link and

the upper of the two holes in the lift rod used, as shown in figure 5. The check chains and the chain stabilisers must, however, remain in the rear hole. To retain the check chains and stabilisers, a special bolt kit is available, which comprises two new bolts, four locknuts and four spacers which occupy the space normally taken by the lift rods. For availability of this kit, please consult your Distributors and Dealers.

### L.H. Lift Rod

Fig 6.

The L.H. Lift rod should be adjusted for length on assembly with the thread top on the upper rod just beginning to show from the lower fork. At this setting the distance between centres should be 683 mm ( $26\frac{7}{8}$  in.)

Other than daily greasing of the nipple on the lift rod, no other servicing is required.

### R.H. Levelling Box and Lift Rod

Fig 7.

The R.H. Lift rod is adjustable for length to allow the implement to be levelled during, or after attachment. Adjustments are made by rotating the handle (13) which drives through a bevel gearbox to the lift rod. The lift rod screws into, or out of the lower lift fork. The nominal length of the R.H. lift rod is 683 mm ( $26\frac{7}{8}$  in.) and the range of adjustment is  $\pm 38$  mm ( $1\frac{1}{2}$  in.).

### Levelling Box Servicing

7C-03-02

#### Disassembly

1. Fig 8. Remove the complete levelling box from the tractor by removing the split pin and clevis pin from the knuckle on the levelling box.
2. Unscrew the levelling gear shaft (19) out of the lower fork.
3. Using a 5 mm ( $\frac{3}{16}$  in) diameter drill, remove one head from the double countersunk rivet (14) which secures the bevel gear (12) to the handle spindle (13).
4. Withdraw the levelling handle (13) and bevel gear (12) from the levelling box (9).
5. Remove the split pin (21) and the clevis pin (10) from the levelling box and remove the knuckle (8).
6. Remove the circlip (18) and the thrust washer (17) from the gear shaft.
7. Using a soft faced mallet, tap the end of the gear shaft (19) to force the dished expansion plug (11) out of the levelling box.
8. Slide the gear shaft (19) out of the levelling box, then remove the bearing (16).

The spring (20) and the grease nipple need not be removed.

#### Examination

Examine all components and replace any which are worn, or damaged.

When reassembling, always fit a new rivet (14), dished expansion plug (11), bearing (16), thrust washer (17) circlip (18) and split pins (21).

#### Reassembly.

1. Fit the new bearing (16) into the levelling box (9), then slide the gear shaft (19) into place, securing it with the new thrust washer (17) and circlip (18).
2. Drive a new dished expansion plug (11) into the levelling box, using a suitable drift.

LINKAGE AND DRAWBARS

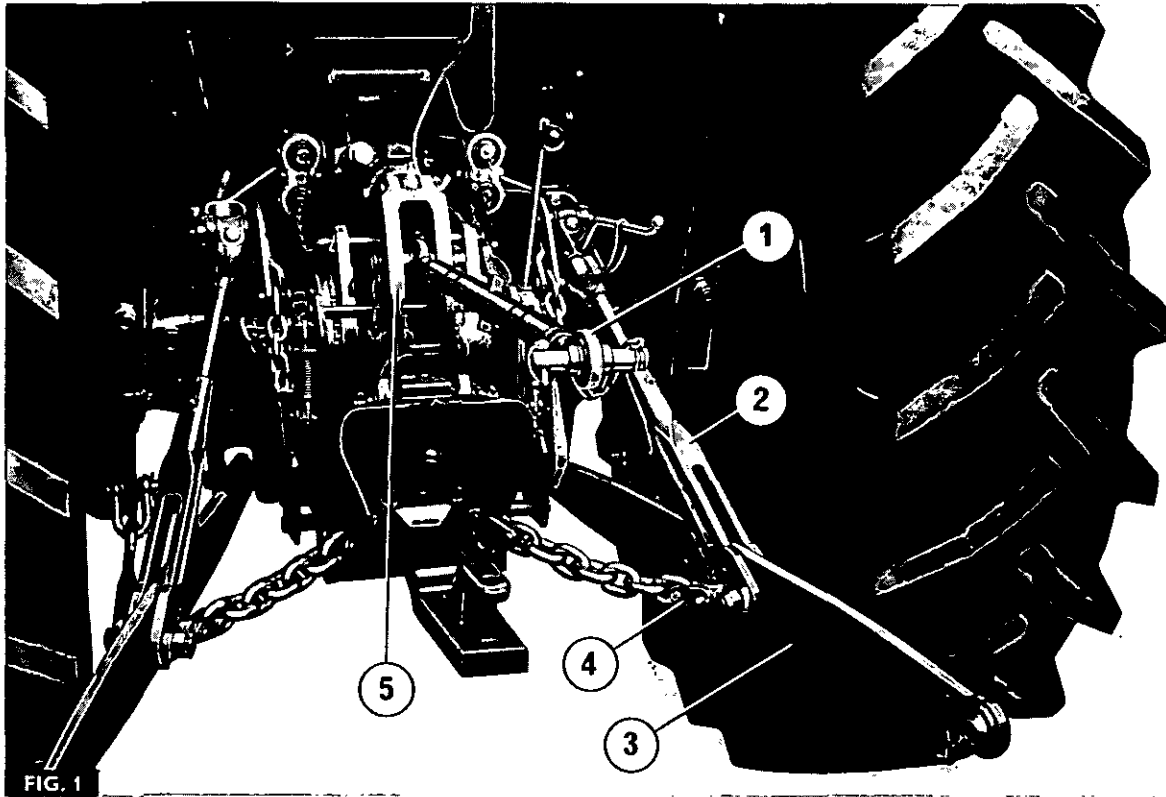


FIG. 1

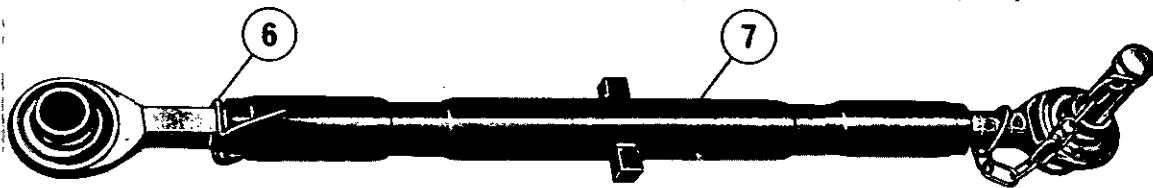


FIG. 2

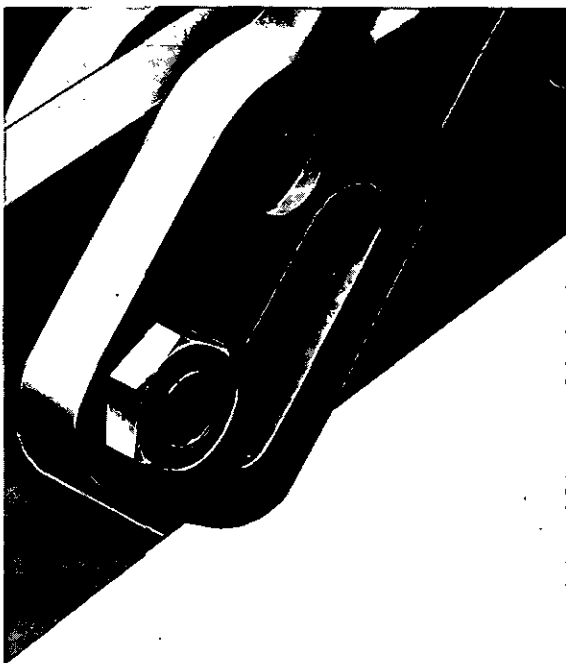


FIG. 3A



FIG. 3B

LINKAGE AND DRAWBARS

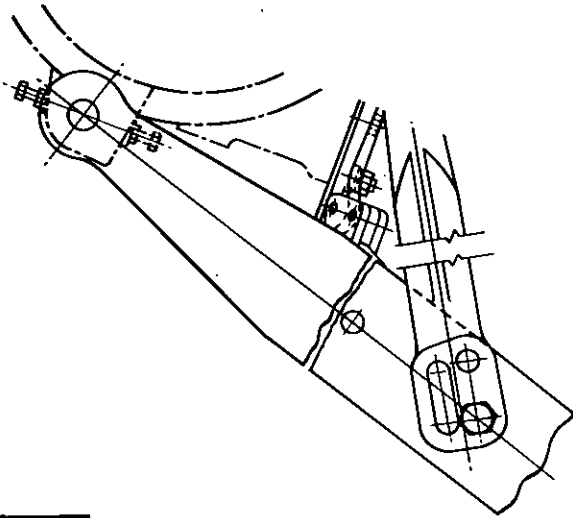


FIG. 4

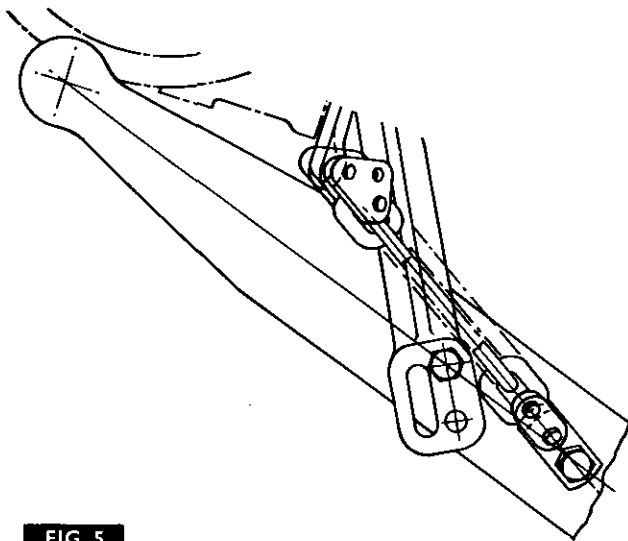


FIG. 5

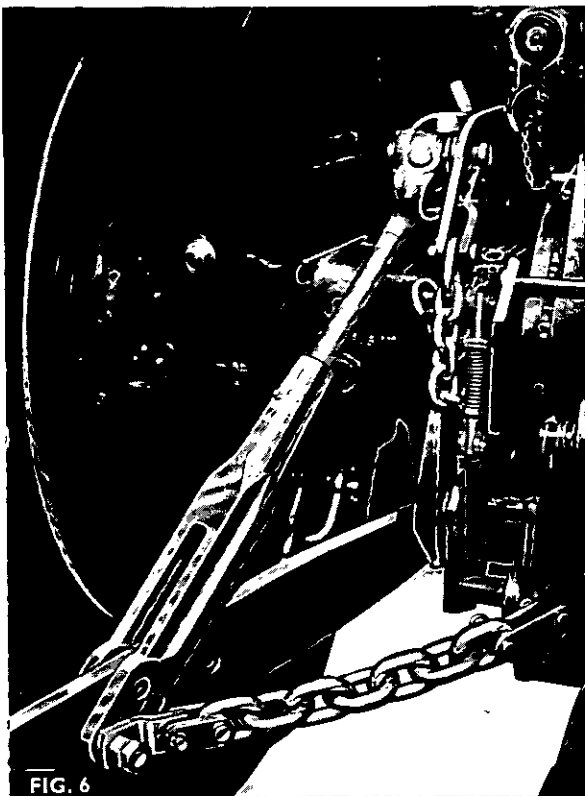


FIG. 6

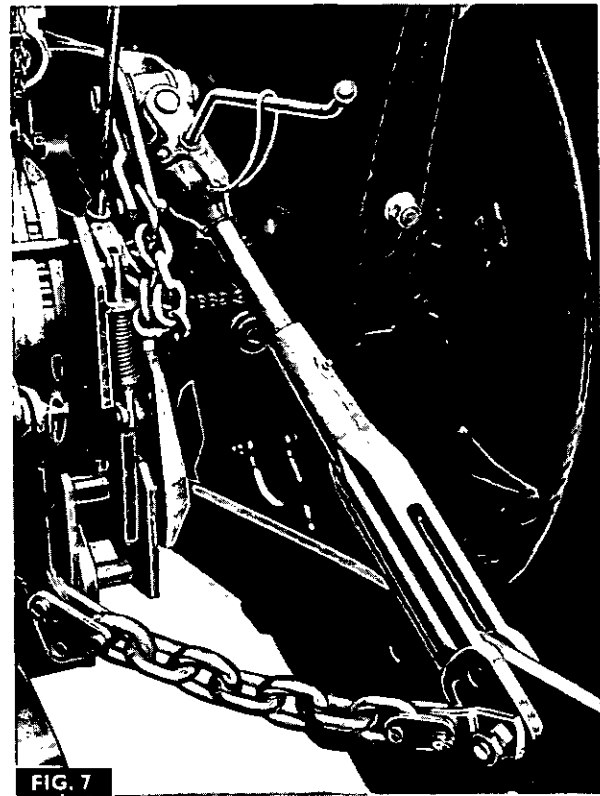


FIG. 7



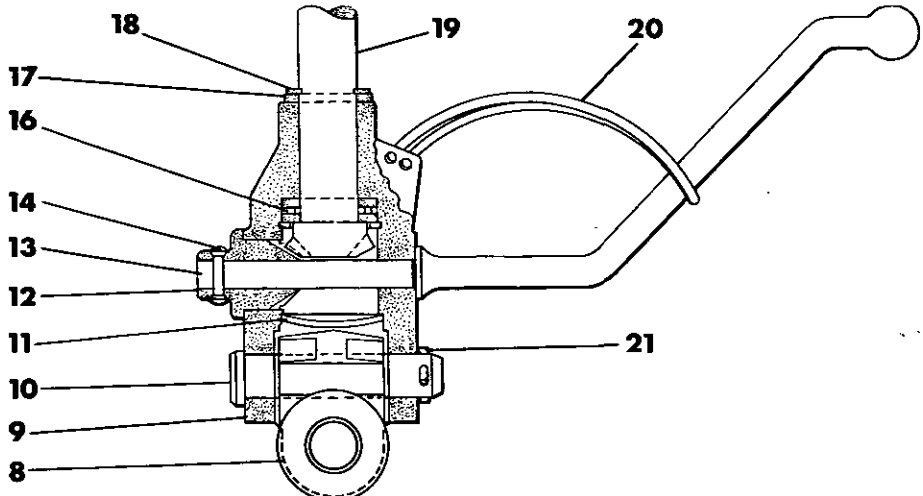
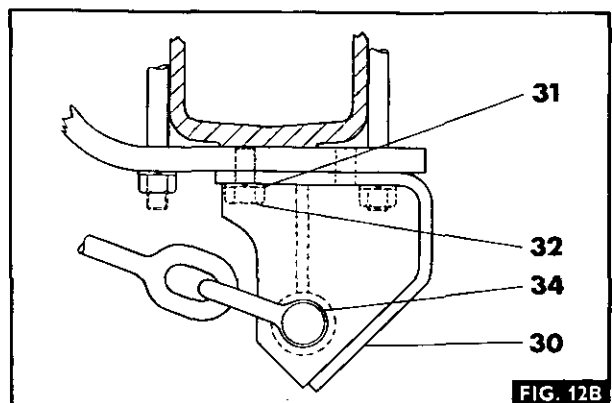
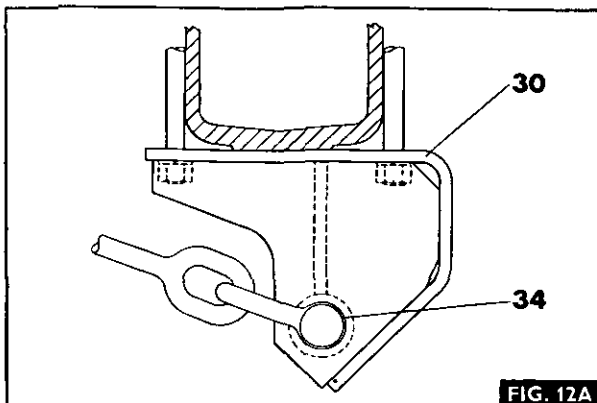





FIG. 8

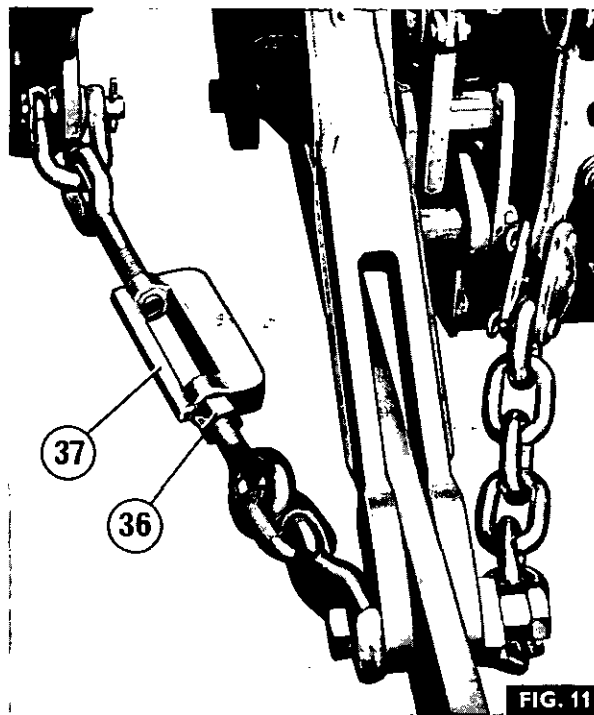

LINKAGE AND DRAWBARS

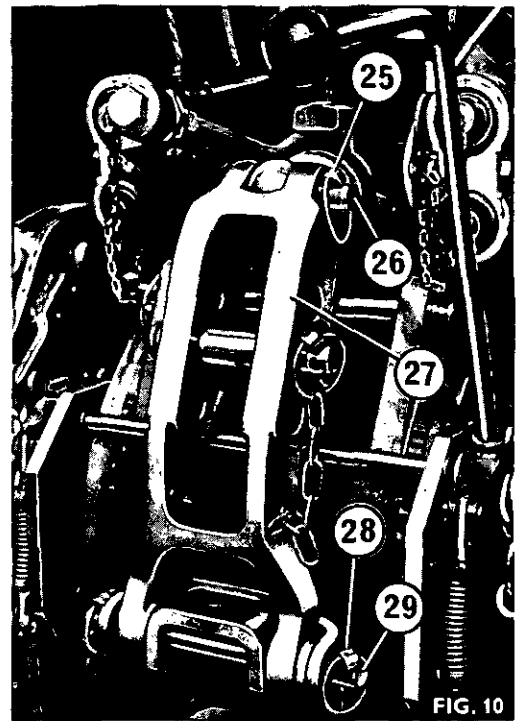

LINKAGE AND DRAWBARS

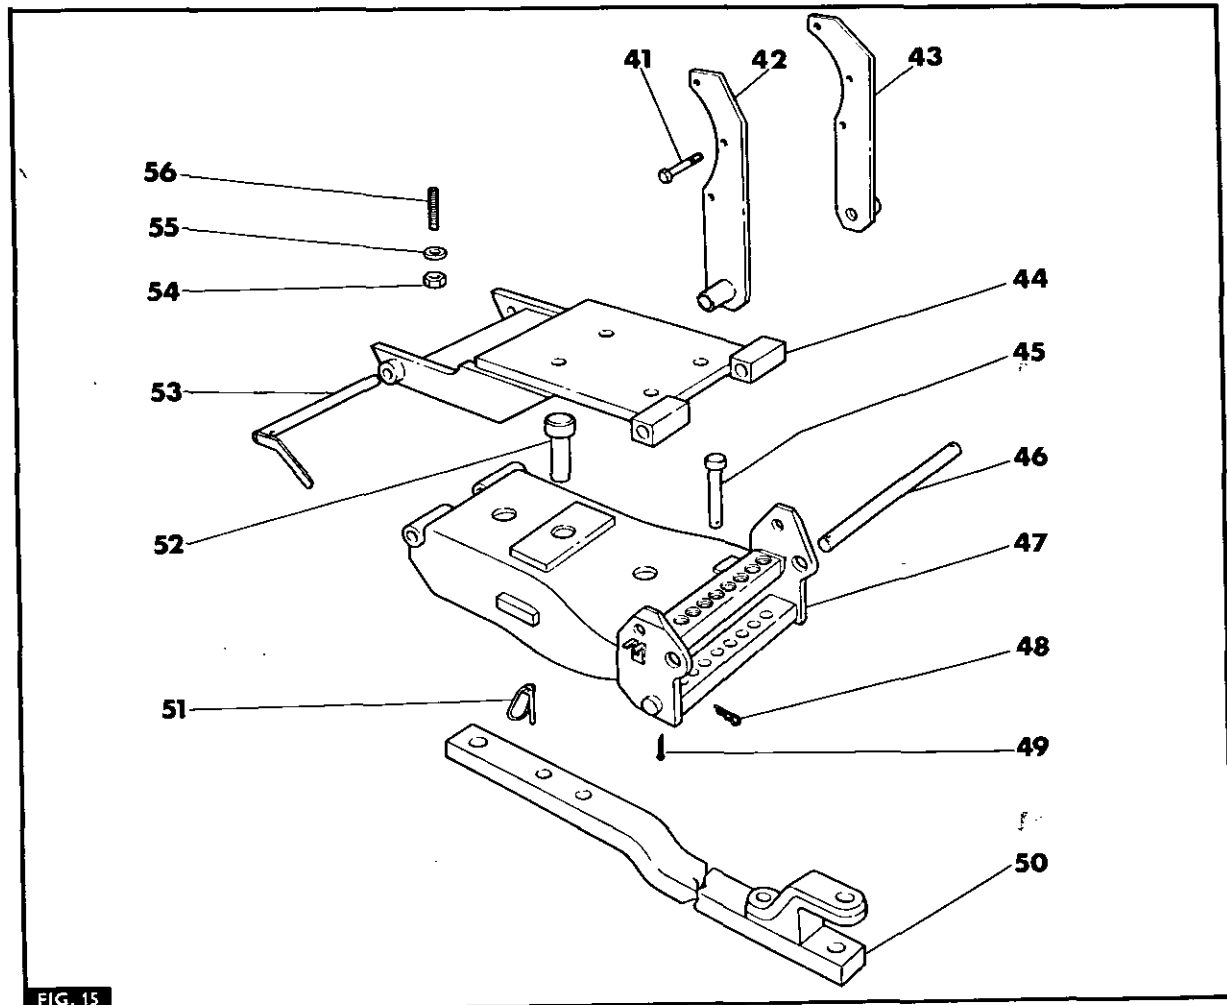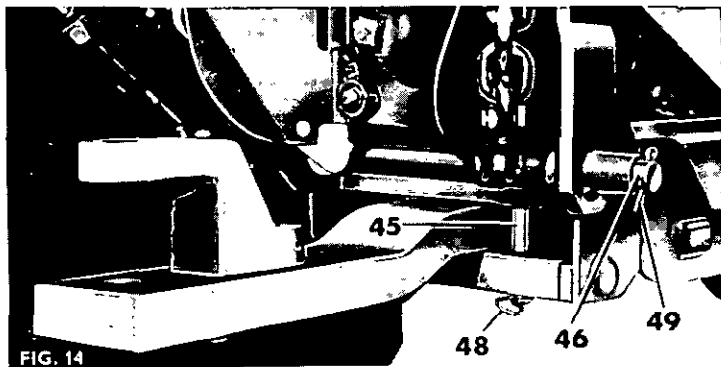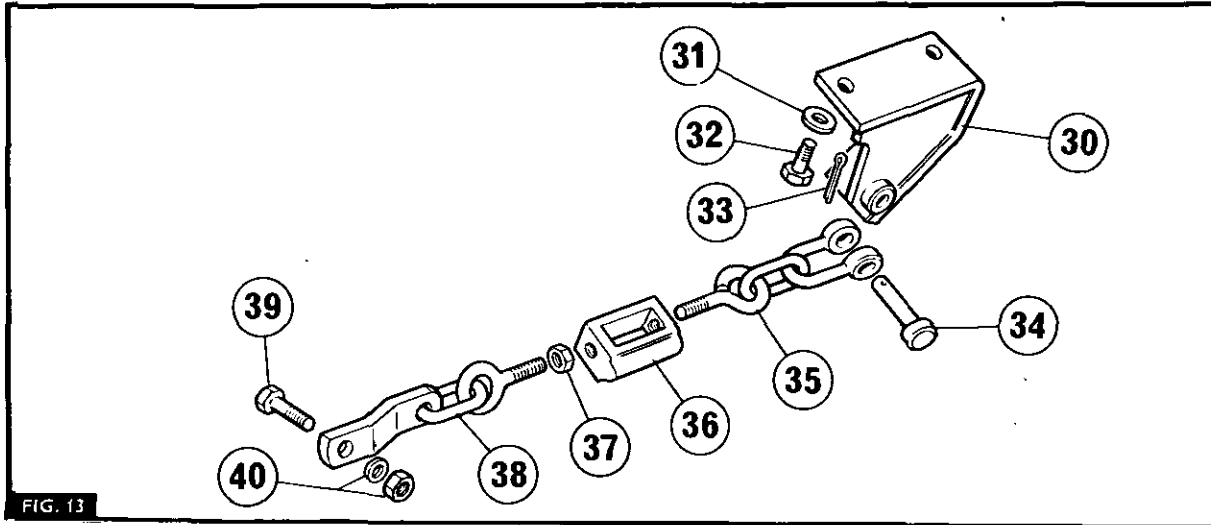

3. Refit the levelling handle (13) to the levelling box, then refit the bevel gear (12) and secure it by fitting and peining the new rivet (14).
4. Refit the knuckle (8) securing it with the clevis pin (10) and a new split pin (21).
5. Charge the levelling box with a recommended grease, until grease exudes past the seals.
6. Screw the gear shaft into the lower fork and adjust for length, then refit the knuckle, clevis pin and a new split pin to the lift arms.

**CHECK CHAINS.**

Fig 9.

The check chains restrict the movement of the lower links in a transverse plane, preventing the lower links or the implement they are carrying from striking the tractor's rear tyres. The check chains are attached to the rear of the tractor centre housing by the check chain anchor bracket and to the lower links by cranked brackets secured to the lower links by the lift rod retaining bolts.

The check chains comprise the following components: Fig 9. A pair of slightly cranked, parallel side links (24) at the lower end of the chain, five plain chain links (23) and a pair of slightly cranked triangular links (22) at the anchor bracket end.

Check chain length:— 390 mm (15 $\frac{3}{8}$  in).

**Check Chain Anchor Bracket.**

The one piece check chain anchor bracket with four stud, plus two bolt fixing, are standard equipment on all MF188 tractors, as shown. The check chain anchor bracket also acts as the lower pivot point for the control beam.

**CONTROL BEAM.**

Fig 11.

The control beam connects the top link to the tractor hydraulic linkage, when using Draft Control and thus governs the action of the implement.

**Control Beam Removal and Refitment.** 7C-04-07

1. Fig 10. Remove the lynch pin (25) and withdraw the pin (26) securing the control beam to the control spring pull rod.
2. If necessary, remove one of the swinging drawbar support brackets to permit removal of the lower pin.
3. Remove the lynch pin (28) from the opposite end of lower pivot pin (29) to that from which the drawbar support bracket had been removed, then withdraw the lower pin, complete with the other lynch pin.

**STABILISERS.**

Fig 11.

Stabilisers are fitted to prevent transverse movement of the lower links where an implement must be retained in a constant position relative to the tractor centre-line, to ensure accurate alignment, either with the crop rows, or the p.t.o. shaft. Adjustments are made by slackening the locknut (36) and rotating the turnbuckle (37) to give the required length, then retightening the locknut. Before working with soil engaging implements the chains should be adjusted to permit 50 mm (2 in) of sideways movement at the end of each lower link.

**Stabiliser Kit Fitment,**

7C-05-07

Two chain stabiliser kits are available for MF188 tractors: A kit for tractors fitted with the U.K. safety frame and a separate kit for tractors without the safety frame. Basic assembly for both kits is similar and is dealt with by one set of fitting instructions:—

- 1A. Non Safety Frame Tractors:— Remove both nuts and washers from the fender attachment bolts.
- 1B. Safety Frame Tractors:— Remove the nut and washer from the FRONT fender attachment bolt only.
- 2A. Fig 12A. Non Safety Frame Tractors:— Locate the brackets (30) on the fender bolts and, then refit the nuts and washers.
- 2B. Fig 12B. Safety Frame Tractors:— Locate the brackets (30) on the front fender attachment bolts and refit the nut and lockwasher, then fit the bolt (32) and washer (31) through the rear hole in the bracket and through the safety frame member.

**NOTE.— THE BRACKETS ARE MARKED 'L' and 'R' TO INDICATE L.H. AND R.H. FITMENT'**

3. Tighten the nuts and bolts to a torque of 17 kg-m (125 lb-ft). This is especially important for tractors with safety cabs.
4. Fig 13. Assemble the front chain (35) turnbuckle (36) locknut (37) and rear chain (38) together for each side of the tractor.
5. Fit the eyes of the rear chains (38) to the holes in the lower links and secure them with the bolts (39) plus nuts and washers (40).
6. Align the shackles of the front chains (35), with the holes in the brackets (30), then secure them with the clevis pins (34) and split pins (33).
7. Adjust the stabilisers for length, then liberally smear the threaded portions of the chains with grease to ensure ease of adjustment at a later date.

**HEAVY DUTY SWINGING DRAWBAR**

Fig 14.

The swinging drawbar conforms to British Standards, having a clevis hitch point at 356 mm (14 in) from the p.t.o. shaft. The maximum static load permissible at this setting is 1170 kg (2600 lb). An alternative position, which places the drawbar clevis at 254 mm (10 in) from the p.t.o. shaft is provided. At this setting the maximum static load is 1620 kg (3600 lb).

**Swinging Drawbar Kit Fitment.**

7C-06-07

1. Check the contents of the kit against the list provided.
2. Clean the base of the centre housing adjacent to the four  $\frac{3}{4}$  UNC tapped holes and clean out the holes themselves.
3. Fig 15. Screw the  $\frac{3}{4}$  UNC ends of the four studs (57) fully into the tapped holes in the centre housing.
4. Fig 16. Locate the mounting bracket (44) on the four studs, then secure it with the four nuts (54) and spring washers (55). Tighten the nuts to 27,5 kg-m (200 lb-ft).  
The use of a hydraulic jack to raise the mounting bracket, will facilitate this operation.
5. Fig 15. Slide the drawbar assembly (50) into the mounting frame (47), fitting the drawbar pin (52), the locating pins (45) and the hairpins (48).

## LINKAGE AND DRAWBARS

6. Remove the three rearmost bolts securing each trumpet housing.
7. Fit the two support brackets (42 and 43) to the trumpet housings, using the six new bolts (41) provided.
8. Place the mounting frame and drawbar assembly on a jack and raise it into position secure it with the front support pin (53) and the rear pin (46), securing the front pin with a linch pin (51) and the rear pin with two split pins (49).

### Adjustments

7C-07-08

**Offset:** Figs. 15 and 17. Remove the split pin (49) and withdraw the support bar (46), thus freeing the drawbar frame. Remove the two hairpins (48) and the locating pins (45) and reset the drawbar in the required position. Refit the locating pins (45), the hairpins (48) to secure the drawbar, then refit the rear pin (46) and the split pin (49).

**Length:** Remove the split pin (49) and the support bar (46). Push the drawbar anchor pin (52) upwards this freeing the drawbar. Adjust the drawbar for length, refit the anchor pin (52), raise the drawbar frame, then refit the rear pin (46) and the split pin (49).

**Height:** The drawbar can be inverted, but the clevis adapter must always be placed on the top.

### AUTO-HITCH

Fig 18.

The Auto-Hitch is a supplementary lifting mechanism fitted to the swinging drawbar frame to enable implements fitted with a ring type drawbar attachment to be easily coupled to the tractor.

The hitch hook can, if required be replaced by the swinging drawbar by simply lowering the hitch, removing the pin and sliding out the hook, then replacing it by the drawbar.

### Operations

**Raising :-** The quadrant control levers should be positioned as follows :-

'Draft Control' lever - 'Transport' i.e. fully back.  
Position Control lever - Move to 'Transport' (adjacent to 'Constant Pumping') The tractor lift arms will rise, lifting the hitch hook. When the 'Transport' position is reached, the latches will engage automatically, thus relieving the tractor linkage of weight.

**Lowering :-** Leave the 'Draft Control' lever in 'Transport'.

Move the 'Position Control' lever to 'Constant Pumping'; this will raise the hook frame clear of the latches. Pull the release lever rearwards to disengage the latch hooks, then, continuing to hold the release lever, move the 'Position Control' lever to 'Down'. The hitch will then lower.

### Auto-Hitch Fitment

7C-08-08

1. Unpack the kit and check the contents against the packing list and figure 19.
2. Fig 15. Place a hydraulic jack under the drawbar frame, then remove the six bolts (41) securing the support brackets (42 and 43) to the centre housing.

3. Lower the drawbar frame to the ground, then remove the split pins (49), securing the support brackets to the support bar (46). Slide off the support brackets.
4. Fig 20. Assemble one hook support bracket (57), to the centre housing, tightening the Allen screws to 11 kg-m (80 lb-ft).
5. Slide the cross shaft (58) through the bush in the hook support bracket already fitted, then fit the other hook support bracket.
6. Remove the masking tape from the spigots on the support brackets, then slide the latch hooks (59) on to the spigots. Secure each hook with a large washer (60) and split pin.
7. Fig 21. Assemble the cross shaft levers (61) on to the cross shaft (58) shimming them on each side with one thick washer (62) and an equal number of thin washers (63).
8. Fit the ball (64) to the handle (65), then fit the handle to the R.H. cross shaft lever, securing it with a roll pin (66) through either the centre hole (tractors with De Luxe seat) or the upper hole (tractors with the Spring Suspension seat).
9. Secure the cross shaft (58) to the cross shaft levers (61) with a roll pin (66) on each side. Ensure that the cross shaft can rotate freely.
10. Assemble the springs (67) to the pull rods (68).
11. Locate the pull rods (68) in the support brackets (57), then fit the clevis pins (69) through the hooks (59) and the cross shaft levers (61) by compressing the springs. Secure the clevis pins with the four small split pins.
12. Fig 22. Pull the support bar (46) partially clear, as shown, then fit a latch (70) to the drawbar frame.
13. Repeat operation 12 on the opposite side.
14. Centralise the support bar (46) and fit the two long, large split pins through the holes in the ends of the support bar.
15. Remove the split pin and clevis pin securing each lift arm to the lift rod knuckle.

**WARNING.** - AS THE CLEVIS PIN IS REMOVED, THE LOWER LINK AND LIFT ROD WILL DROP.

16. Fig 23. Locate lift arm extension (71) against the lift arm, then loosely fit the long bolt (72) a spring washer and nut.

**NOTE.** - THE LIFT ARMS HAVE TO BE MANOEUVURED UP AND DOWN TO ALLOW THE BOLT TO CLEAR THE TRUMPET HOUSING DURING FITMENT.

17. Raise the lower links and lift rods and fit the new, longer clevis pins (73), securing them with split pins.
18. Fully tighten the lift arm extension bolts (71).
19. Fig 24. Screw a nut on to the threaded portion of each lift chain (74) then screw an eye (75) on to each chain.
20. Attach the chains to the lift arm extensions using the pins (76) and split pins.
21. Place a strip of metal 1 mm x 25 mm x 150 mm ( $\frac{1}{16}$  in x 1 in x 6 in) on top of the drawbar frame, above the locating pins (45), then jack up the frame, as shown until the strip of metal is trapped between the frame and the drawbar mounting bracket.
22. Start the tractor engine, select 'Constant Pumping' with the 'Position Control' lever and 'Transport' with the 'Draft Control' lever. The lower links will fully raise.

LINKAGE AND DRAWBARS

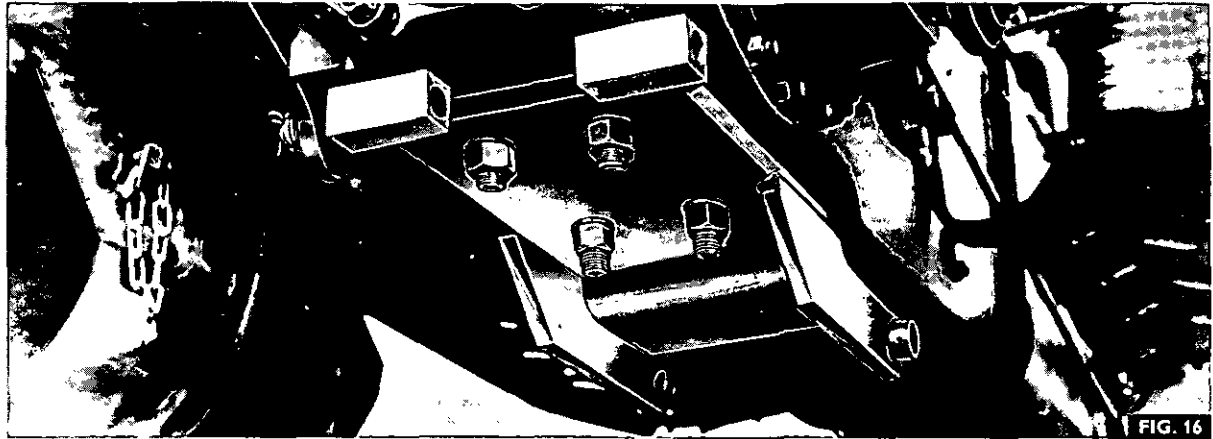


FIG. 16

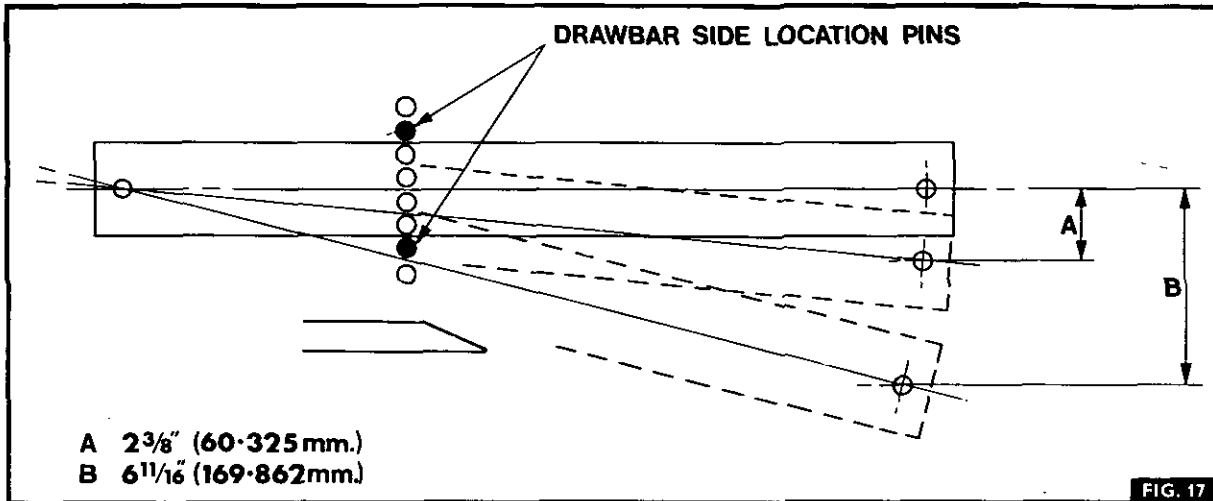


FIG. 17

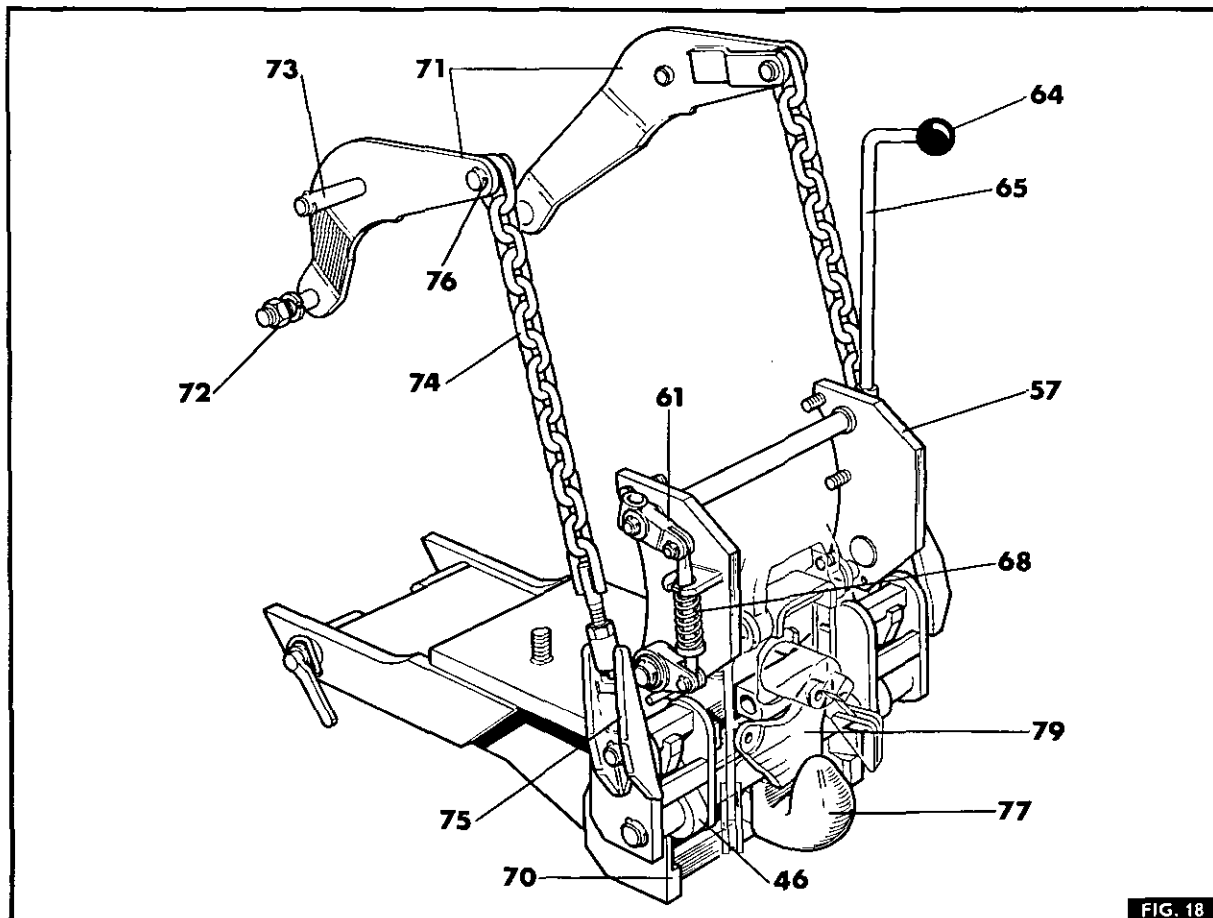


FIG. 18

LINKAGE AND DRAWBARS

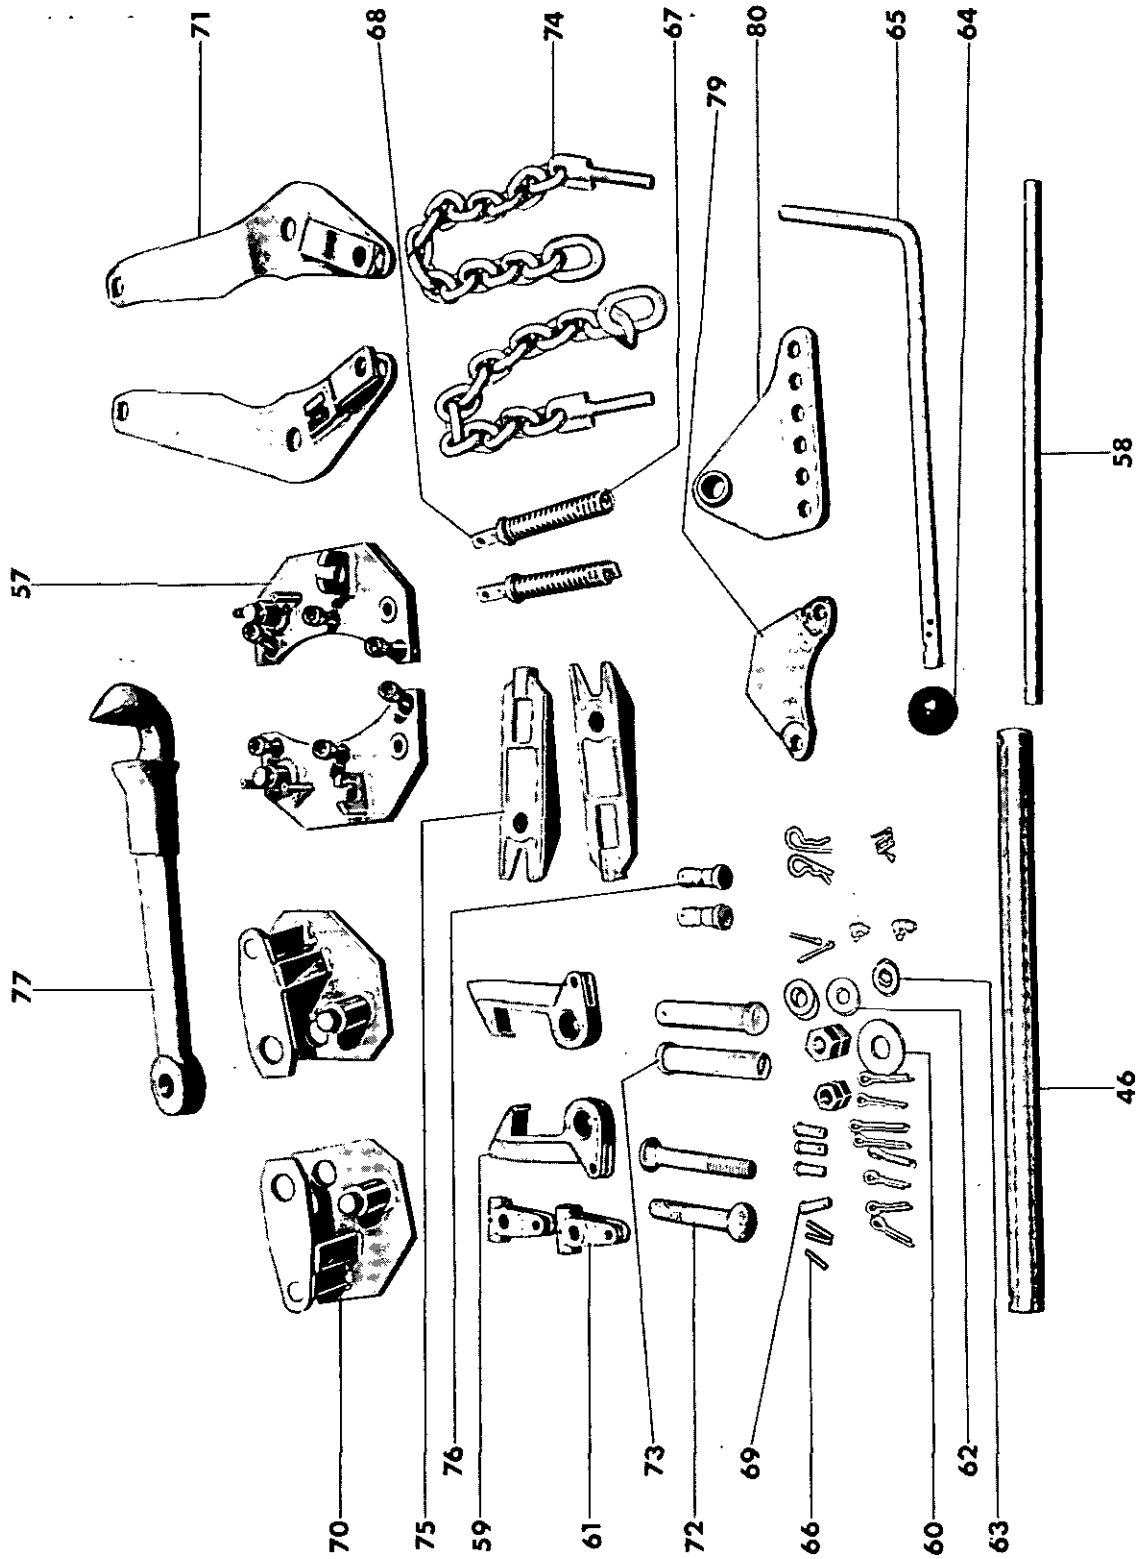


FIG. 19

LINKAGE AND DRAWBARS

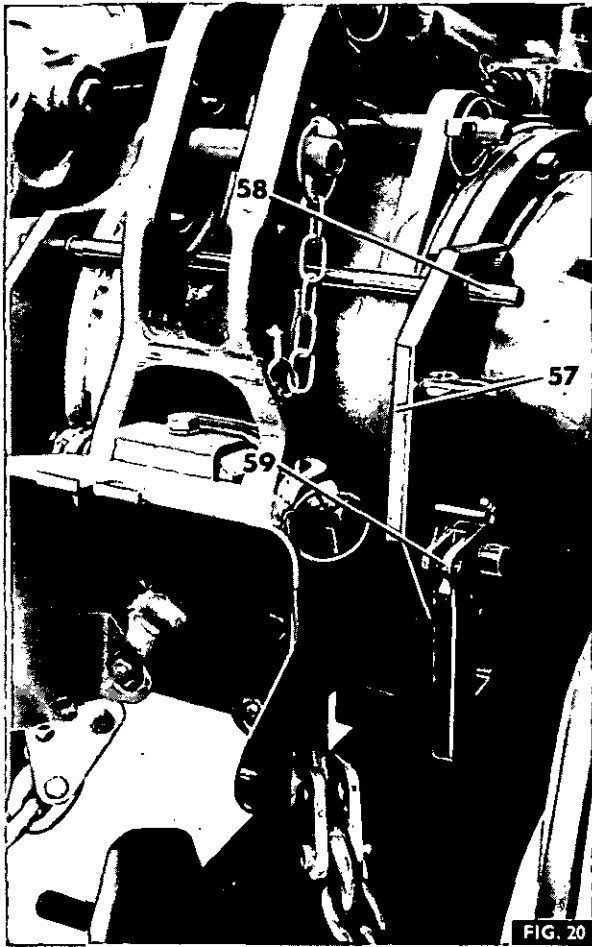


FIG. 20

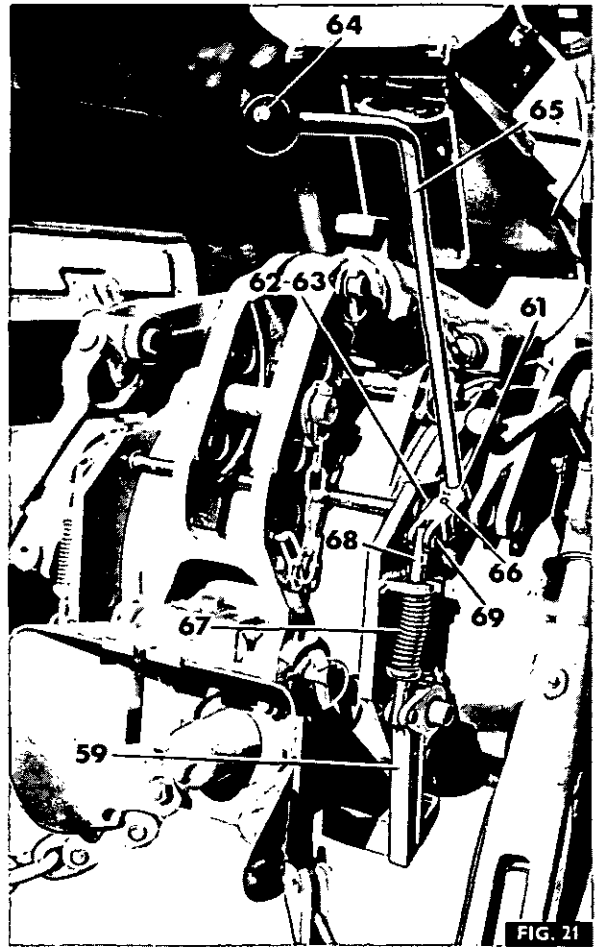


FIG. 21

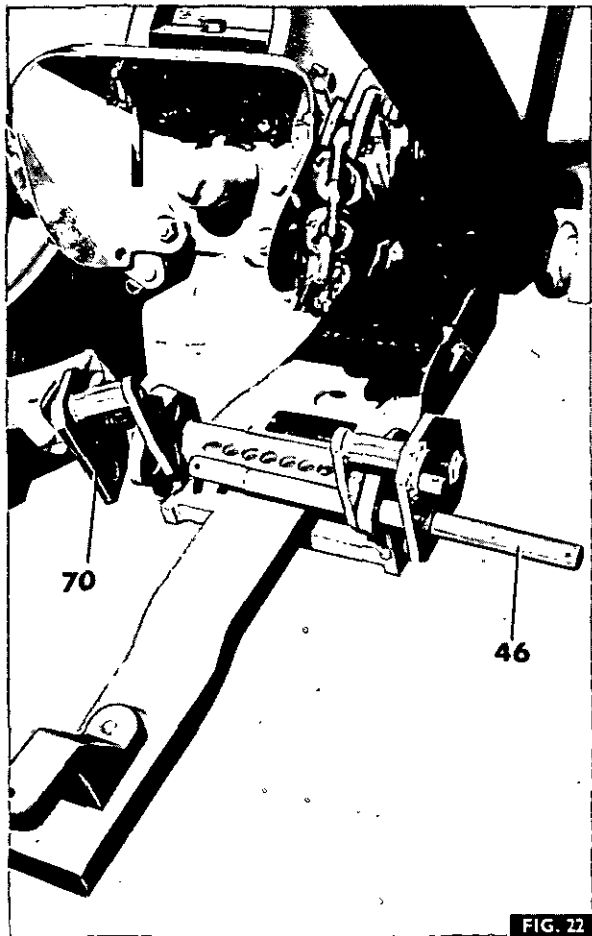


FIG. 22

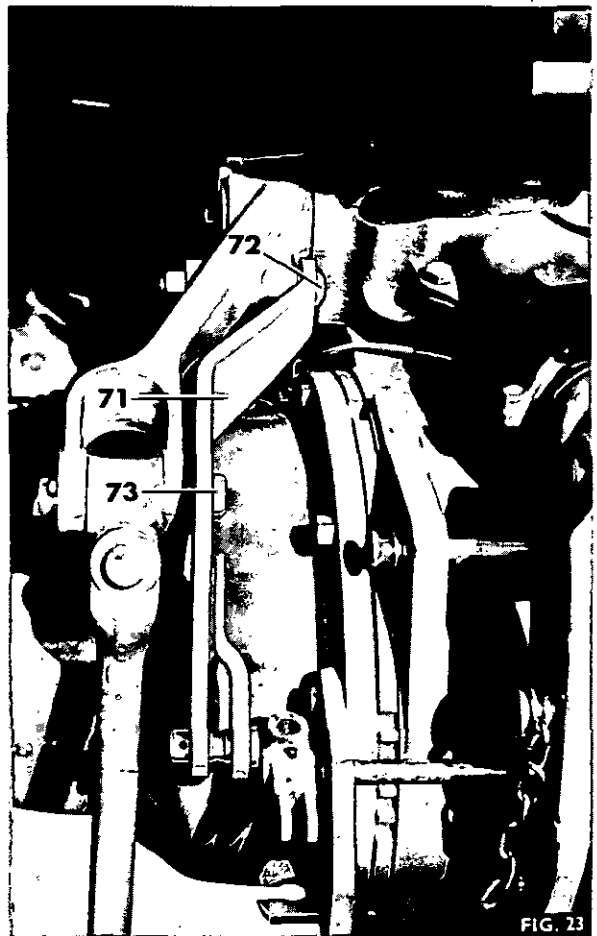


FIG. 23

LINKAGE AND DRAWBARS

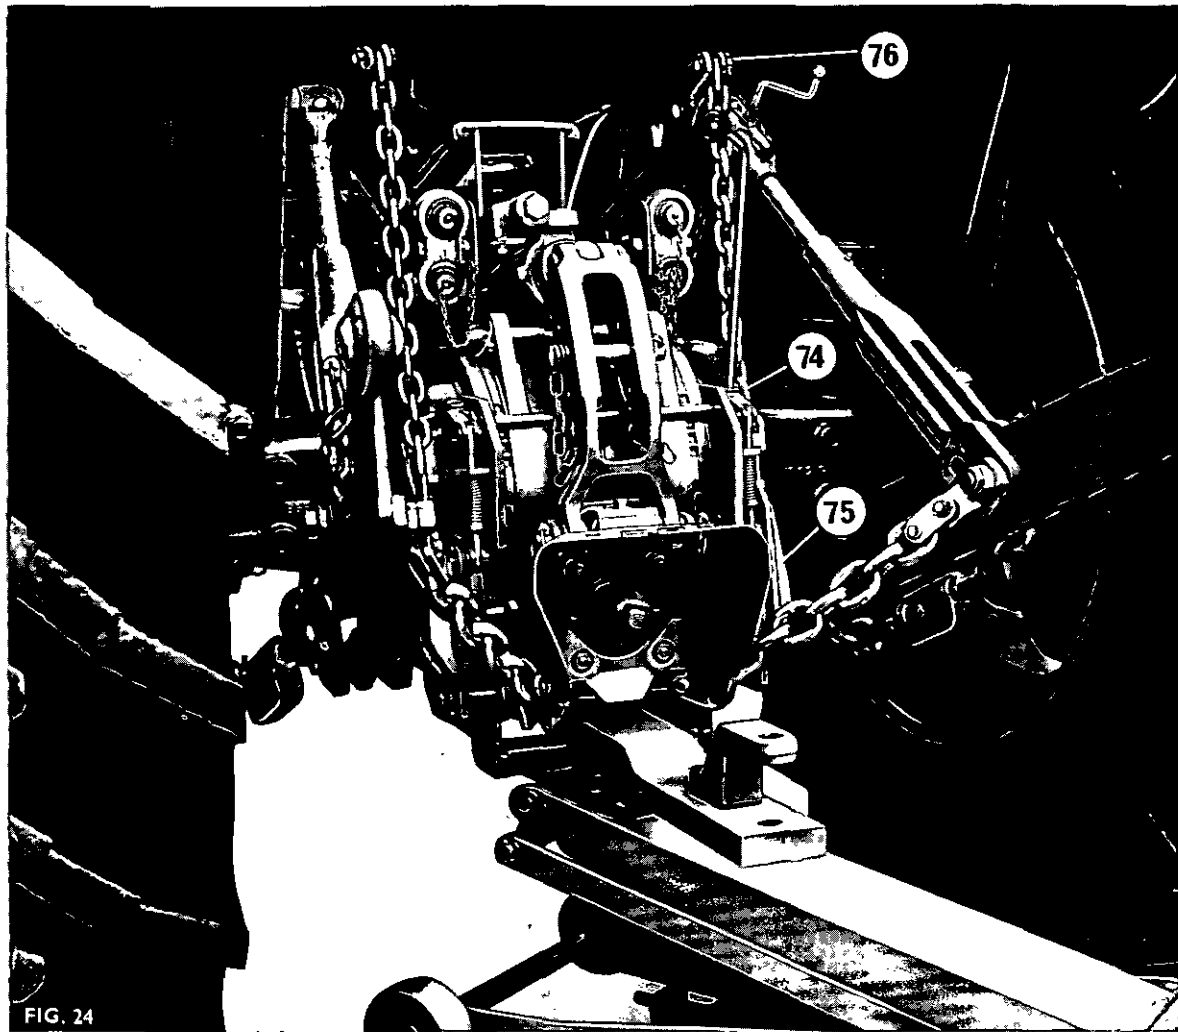


FIG. 24

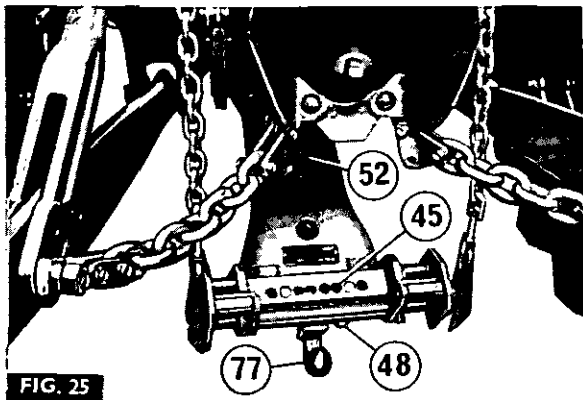


FIG. 25

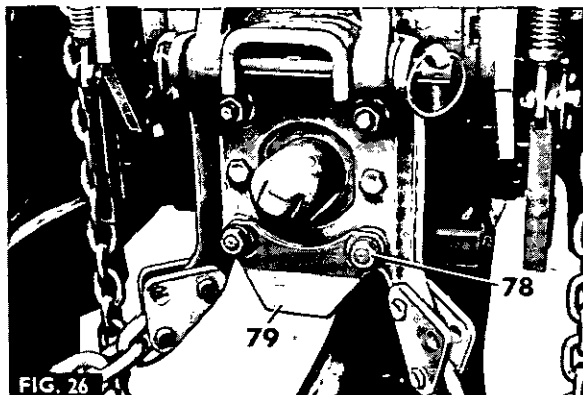


FIG. 26

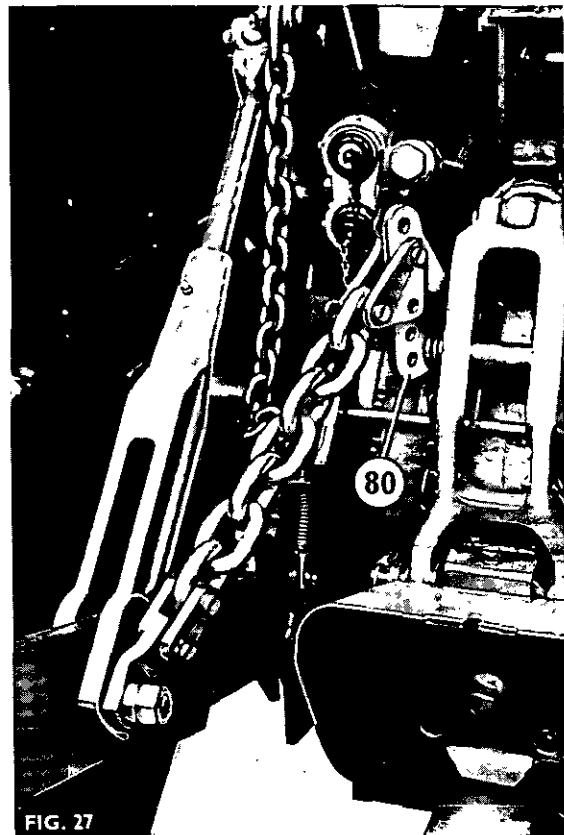


FIG. 27



## LINKAGE AND DRAWBARS

23. Adjust the length of the lift chains (73) by screwing the eyes up, or down, until the eyes will just slide on to the spigots on the latches (70).

**NOTE.** — ENSURE THAT THE CHAINS ENGAGE THE LATCHES WITH EXACTLY EQUAL TENSION.

24. Remove the eyes from the spigots on the latches and SHORTEN the chains by screwing the eyes up a further FOUR turns.
25. Lower the links slightly, refit the eyes and secure them with the medium size split pins.
26. Remove the jack, then lower the hitch by moving the lever (65) forwards, then moving the 'Position Control' lever to the 'Down' position.
27. Remove the metal strip, then push out the drawbar pin (52) and withdraw the draw bar (50).
28. Fig 25. Fit the hitch hook (77), refitting the drawbar pin (52), then remove the hairpins (48) and locating pins (45) and refit them to centralise the hook.
29. Fig 26. Remove the p.t.o. shield (if fitted) then remove the two nuts (78) spring washers and spacers securing the bottom of the check chain anchor bracket.
30. Fit the hook stop plate (79) and the nuts and spring washers, discarding the two spacers.
31. Fig 27. Remove the long pin and fit the linkage check bracket (80) as shown.

**Adjustment** 7C-09-13  
Every 500 hours, the adjustment should be checked. If the adjustment is incorrect, adjust as detailed in operations —21 to 27.

#### Auto-Hitch used as a Swinging Drawbar

The Auto-Hitch can be converted to a swinging drawbar by substituting the drawbar for the hitch hook.

To remove the hook :—

1. Lower the automatic hitch.
2. Remove the hitch hook securing pin and pull the hook rearwards and out of the mounting frame.
3. Slide the drawbar between the headed pins at the rear of the mounting frame and re-fit the securing pin. The drawbar can be adjusted radially as stated for the Mk.2 swinging drawbar (see figure 17).

**WARNING** — DO NOT ATTEMPT TO LIFT THE AUTO-HITCH MECHANISM WITH THE DRAWBAR OFFSET AND A LOAD APPLIED.

#### Linkage Check Bracket

Fig 27.

When a two-wheel trailer is used with the Auto-Hitch, the tractor lower links may foul the trailer drawbar when turning. To prevent such an occurrence, the linkage check bracket has been provided as part of the Auto-Hitch Kit.

After the trailer has been hitched, connect the check bracket by removing the hairpin and headed pin securing the L.H. check chain to the anchor bracket. Align the flatlinks on the end of the check chain with a convenient hole in the check bracket. Re-fit the headed pin and hairpin.

#### LINKAGE DRAWBAR.

Fig 28.

The linkage drawbar can be used when towing trailed implements with low weight transfer. To prevent excessive transverse movement, a pair of drawbar stays are fitted. These stays are adjustable for length to permit the height of the drawbar to be set as required and then locked in position.

**WARNING** — NEVER SET THE DRAWBAR ABOVE THE REAR AXLE CENTRE-LINE, OTHERWISE THE TRACTOR WILL BECOME EXTREMELY UNSTABLE WHEN TOWING.

#### Drawbar Fitment. Fig 28. 7C-10-13

1. Remove the long pin from the tractor centre housing.
2. Loosely assemble the pairs of stays, fitting the bolts only to the slotted holes.
3. Attach the stays to the centre housing as shown, securing them with the long pin and linch pin.
4. Fit the drawbar mounting pins to the holes in the stays, then into the lower link balls and secure them with linch pins.
5. Adjust the height of the drawbar using the tractor hydraulic lift system. When the notches in the stays are aligned, the drawbar will be at the normal working height of 500 mm (19½ in).
6. Finally tighten the outer bolts and fit the centre bolts to a pair of aligning holes.
7. Place both of the hydraulic control levers in the fully lowered position, (i.e. 'Drop').

**WARNING** — IF THE LEVERS ARE PLACED IN THE RAISED POSITION, THE STAYS MAY BE BENT, OR BROKEN, WHEN THE TRACTOR ENGINE IS STARTED.

#### PRESSURE CONTROL COUPLER

Fig 29.

The Pressure Control Coupler enables weight to be transferred to the tractor rear wheels when working with trailed implements, thus improving traction. This additional weight transfer also gives improved braking performance by minimising wheel-locking and slewing when descending steep gradients.

#### Description

The coupler consists of a curved, tubular cross-member with fabricated location lugs and dual Category mounting pins, by means of which the beam is attached to the tractor lower links. Attached to the tubular member is a hinged hook, carrying the coupling chain, which is attached by the safety release ball and the adjusting claw.

#### Modification of Implement Drawbars

7C-11-13

Before operating, certain modifications must be made to the implement drawbar to ensure adequate strength to attach the chain and where necessary to ensure that the coupler chain will clear the p.t.o. shaft if used. As the Pressure Control coupler is used in conjunction with a variety of drawbar designs and applications, the following modifications are suggested :—

Drawbars fitted to implements are of three basic types :—

## LINKAGE AND DRAWBARS

1. 'A' frame (rigid) of tubular, or angle-iron construction
2. 'Pole' type (rigid) of round, or square tube construction
3. Hinged type which may be of either of the above types

Any of the above types of drawbars may need strengthening to withstand the lifting force applied by the coupler chain.

If the implement is powered by a p.t.o. driveshaft alterations must also be made to enable the coupler chain to clear the p.t.o. shaft.

Figures 30 to 33 show the recommended methods of modifying the implement drawbar for added strength and to give p.t.o. shaft clearance.

Strengthening can be achieved :-

- a) By welding an angle-iron section on to the underside of a round tube drawbar
- b) By welding an identical angle-iron section to the existing angle-iron drawbar to form a square section tube.

All drawbars must have a chain anchor bracket welded on to retain the chain at its correct angle in relation to the boom and drawbar. When turning, the chain must slide freely through the anchor brackets, otherwise, rapid chain wear will occur. Square, or angle section drawbars may need chain guides to assist the chain in sliding. Various methods of keeping the chain clear of the p.t.o. shaft can be employed, according to the type of drawbar fitted.

MF machinery which is operated in conjunction with the Pressure Control coupler should be modified to allow chain attachment. Modification procedure for such machinery is detailed in the General Machines Workshop Service Manual, Publication No. 819 218 M1.

For implements other than those manufactured by MF the following principle modifications for the various drawbar types are as follows :-

Figure 30 'A' Frame type of round tube construction

Figure 31 'A' Frame type of square tube, or angle iron construction

Figure 32 'Pole' type, showing alternatives for round or square constructions

Figure 33 'Pole' type, non-p.t.o., showing alternatives for round, or square sections

**NOTE – THE P.T.O. DRIVE SHAFT MUST HAVE A MINIMUM CLEARANCE FROM THE COUPLER CHAIN OF 25 MM (1 in).**

### Pressure Control Coupler Fitment

7C-12-14

The Pressure Control coupler is attached to each tractor lower link at two points. Attachment procedure is as follows:-

1. Place the coupler on the ground at the rear of the tractor, beneath the lower links.
2. Release the side clamp latches (81, Fig. 29) by removing the spring clips (82) and headed pins (83).
3. Swing the latches clear of the clamp frames.
4. Raise the coupler, locate the clamp frames on the lower links, just rearward of the lift rods and fit the hitch pins (84) into the ball-ends.
5. Secure each hitch pin with a spring clip (85).
6. Swing up the side clamp latches, and manoeuvre the links until the latch holes align with those of the clamp frames and insert the headed pins. Secure the headed pins with a spring clip.

There are two grease nipples on the Pressure Control boom which should be charged regularly with a recommended grease.

### Coupler To Implement Attachment.

1. Raise the coupler on the lower links, using 'Position Control'.
2. Attach the implement drawbar on to the tractor swinging drawbar.
3. Lower the coupler on the tractor using 'Position Control' until the tubular cross member is parallel to the ground.
4. Fig 34. Loop the chain through the chain anchor bracket(s) and engage the nearest available chain link in the adjusting claw.
5. Tension the chain by moving the control quadrant lever to increase 'Pressure'.

**NOTE – THE MAXIMUM CHAIN ANGLE SHOULD NOT EXCEED 45° (Fig 35).**

### Operation

1. Attach the coupler to the tractor and implement.
2. Move the 'Draft Control' lever fully back.
3. Move the 'Position Control' lever into the black 'Pressure' sector of the inner quadrant to the 'LOW' position. Move the lever back just sufficiently to give adequate traction, then set the adjustable stop to align with the lever. If difficult conditions are encountered, increase the pressure by moving the lever towards 'High' until traction is obtained. Always return the lever to the set position when conditions improve.

LINKAGE AND DRAWBARS

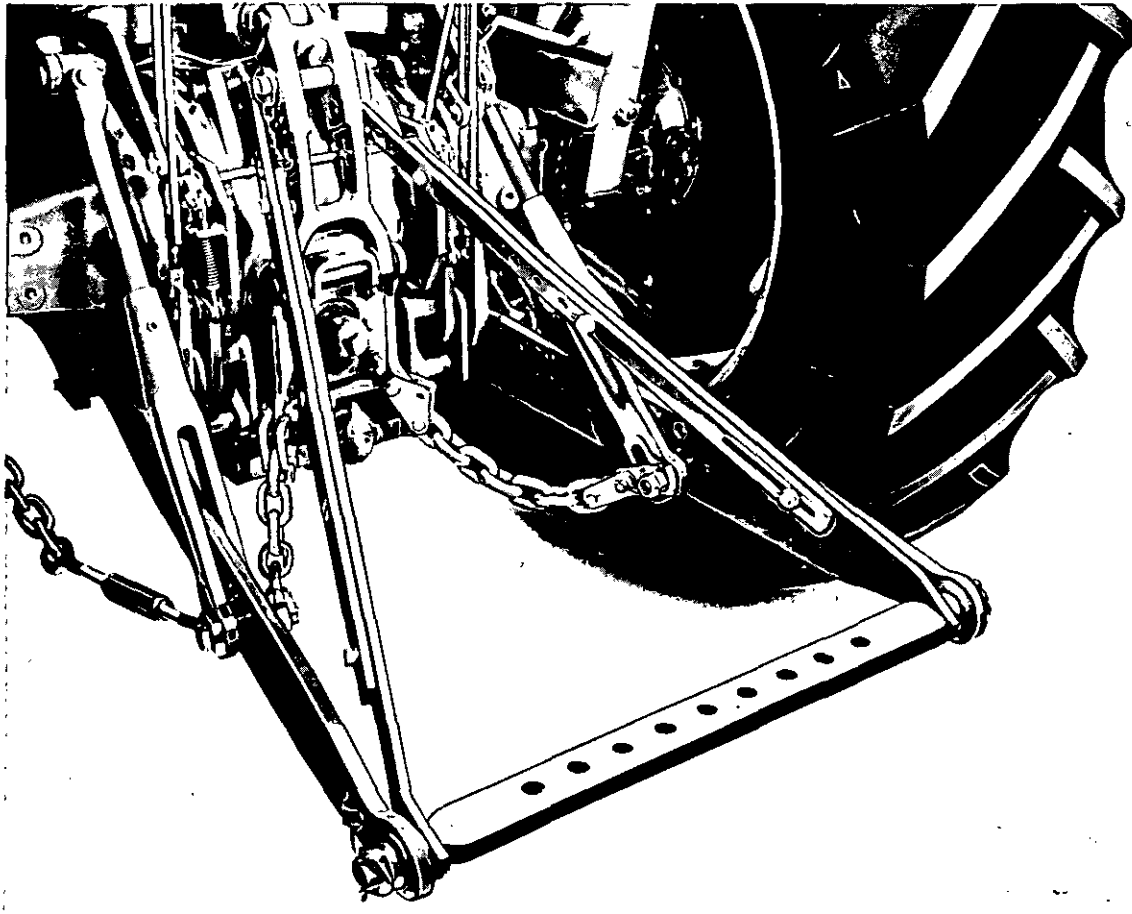


FIG. 28

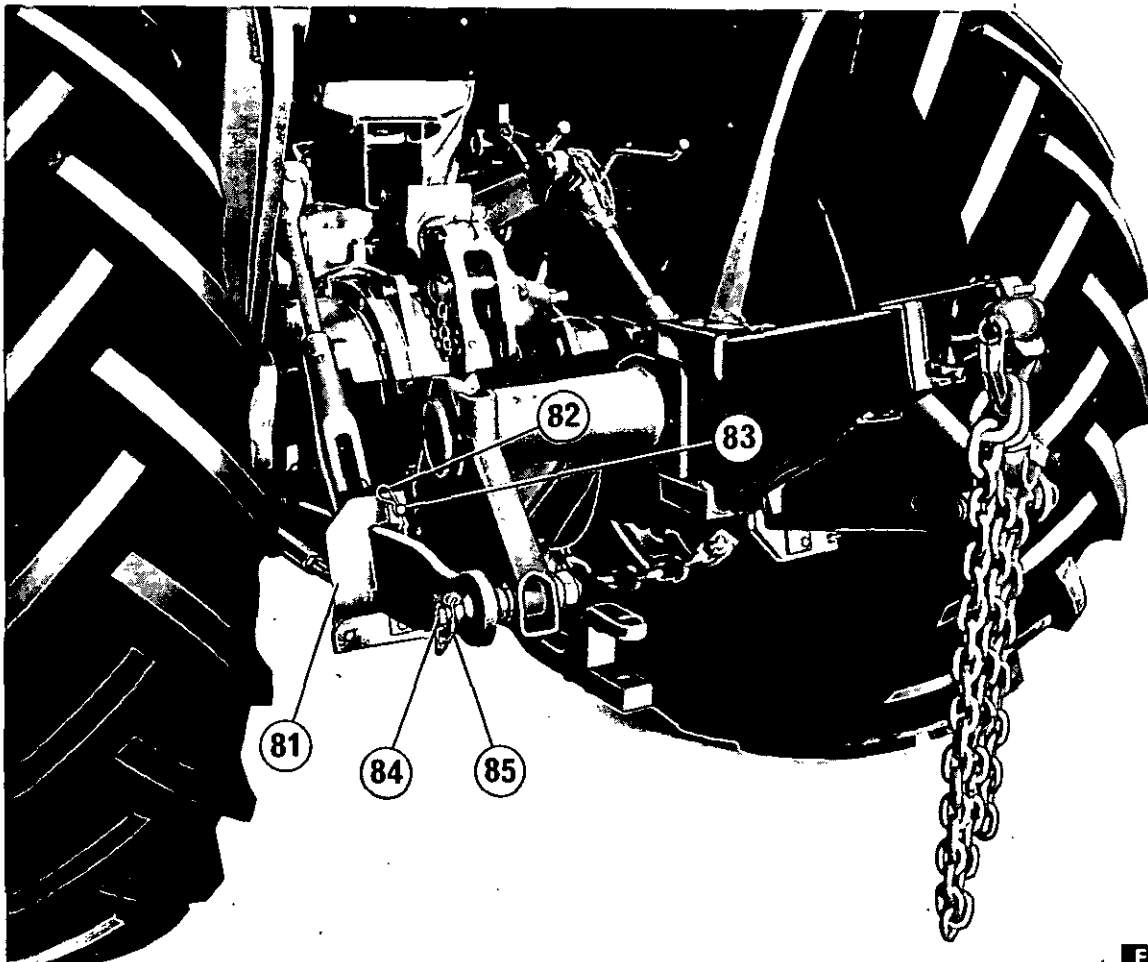


FIG. 29

LINKAGE AND DRAWBARS

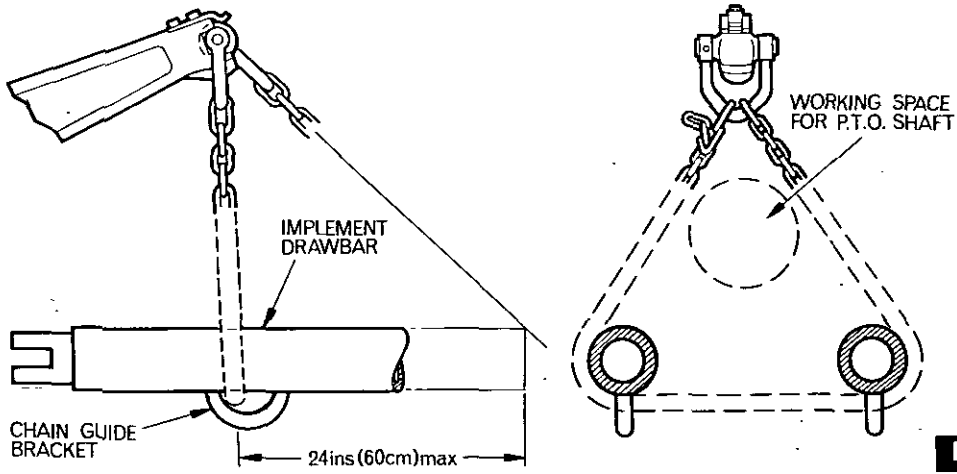


FIG. 30

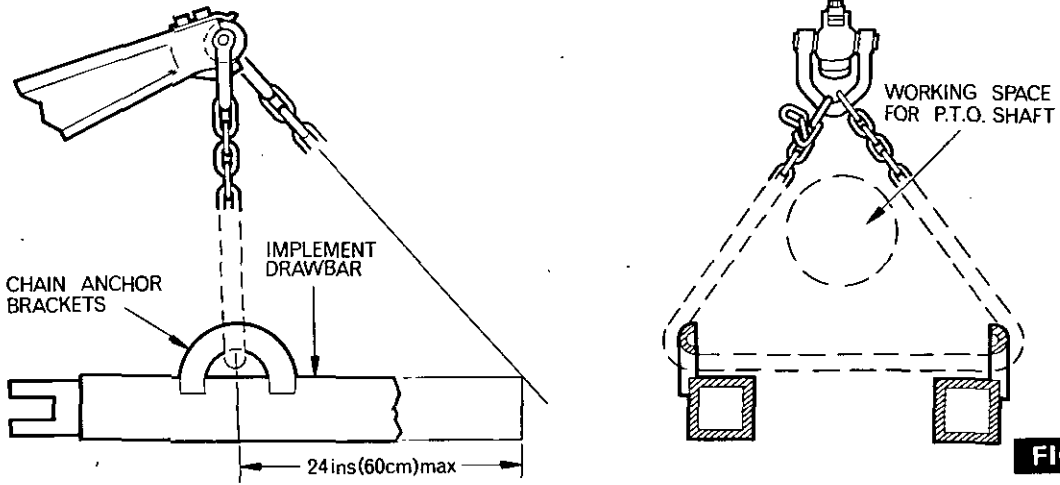


FIG. 31

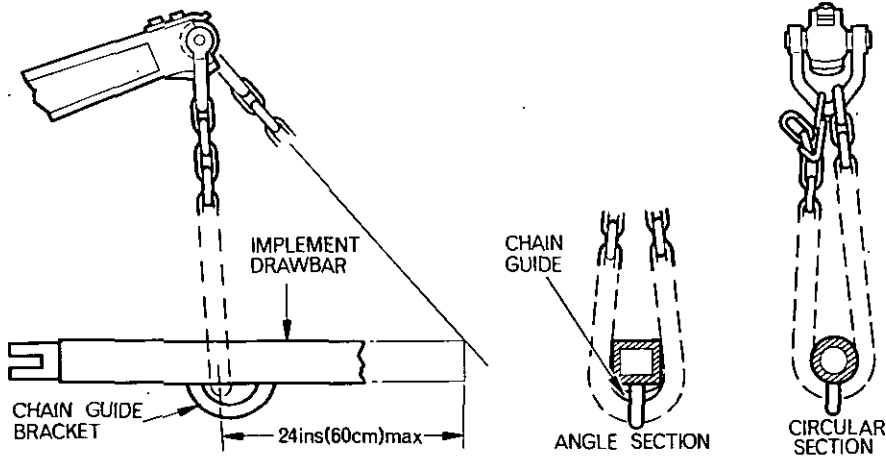


FIG. 32

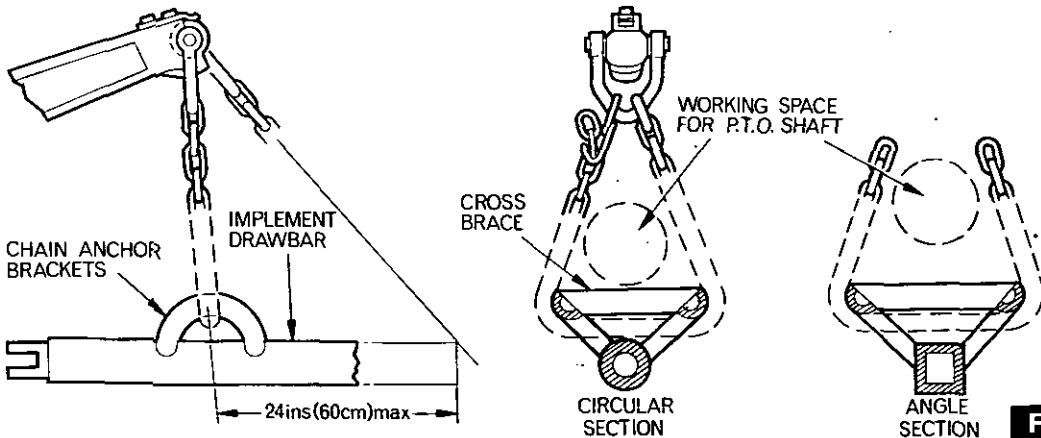


FIG. 33

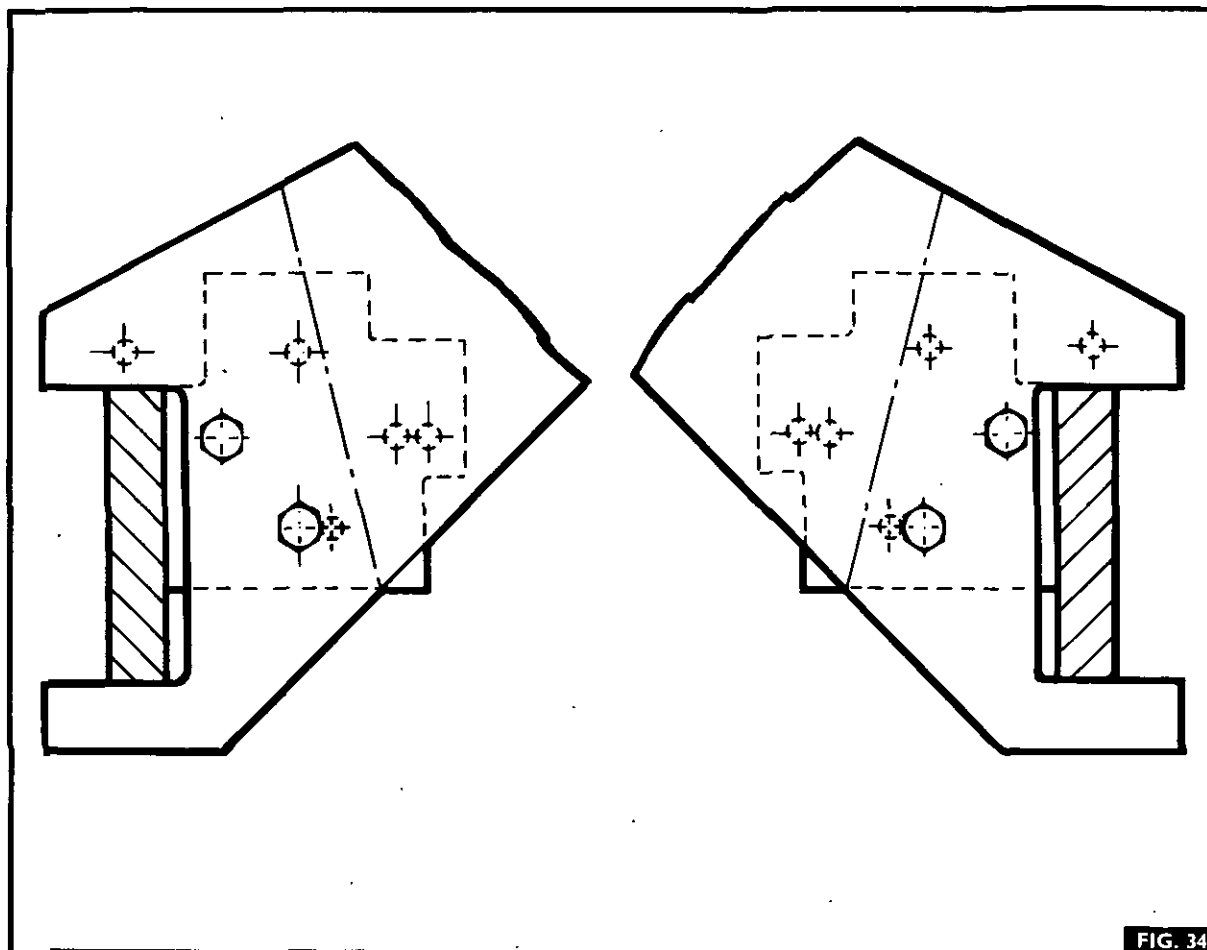


FIG. 34

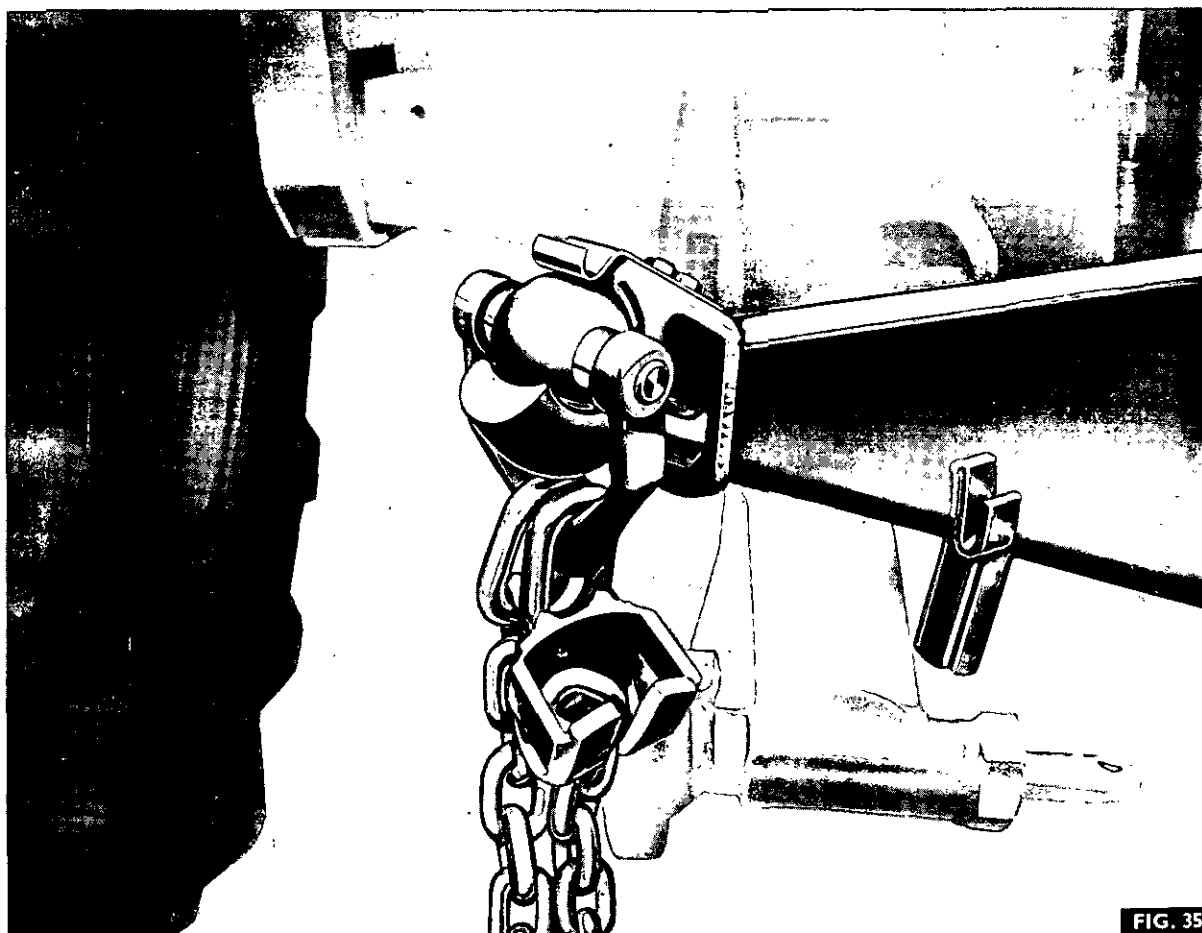


FIG. 35

LINKAGE AND DRAWBARS

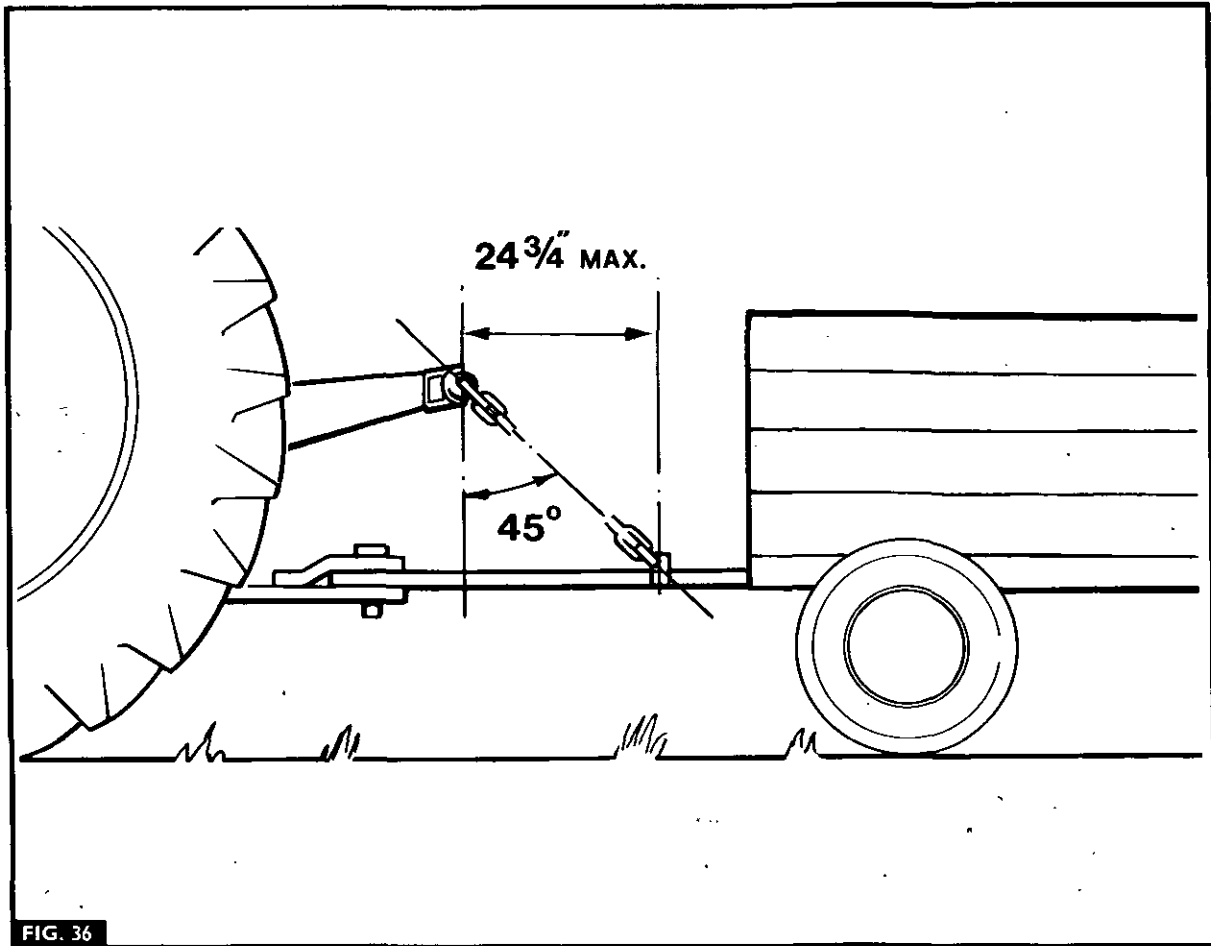


FIG. 36

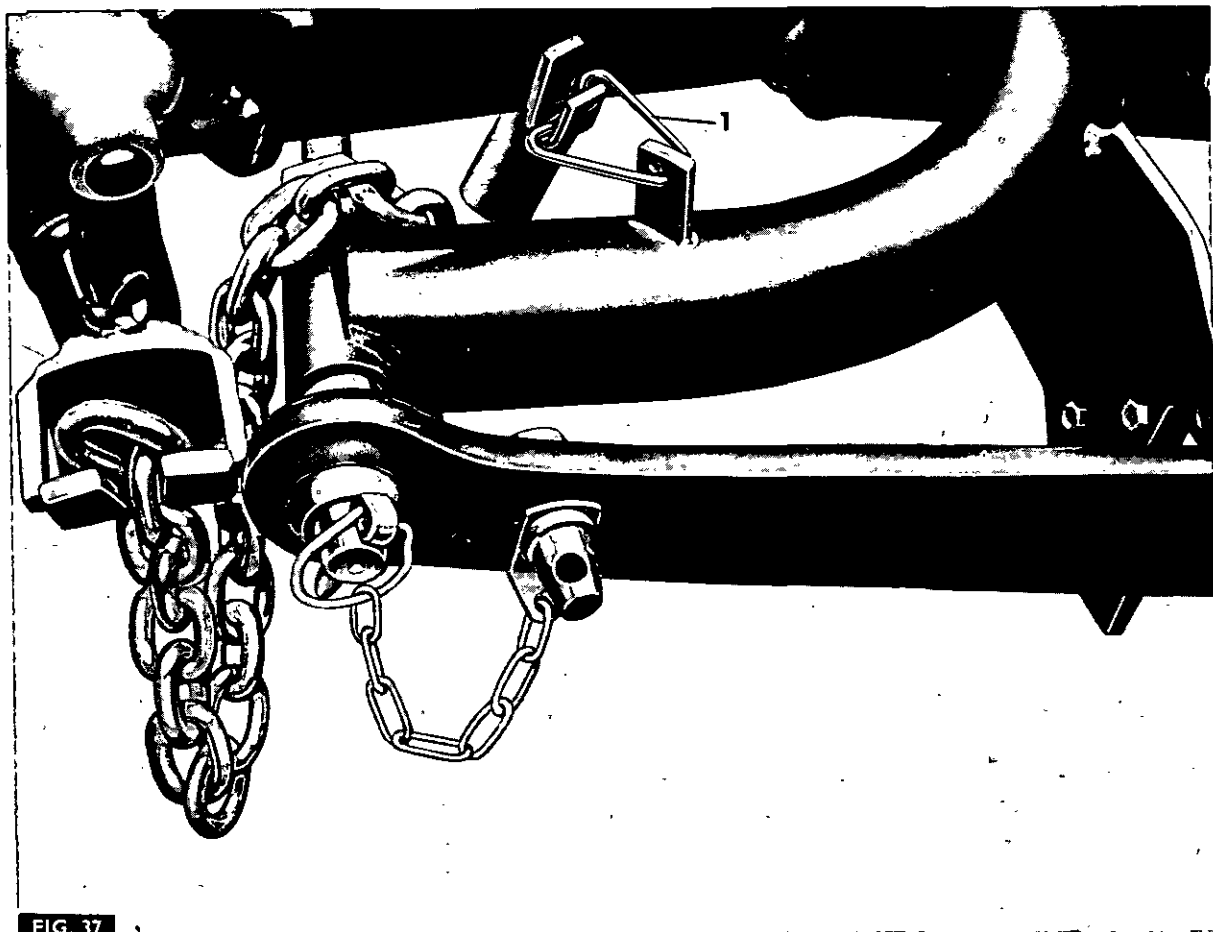


FIG. 37

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 8**

**Publication No. 1856 001 M1**

comprising

- A ELECTRICAL SYSTEM AND EQUIPMENT
- B INSTRUMENT PANEL

## ELECTRICAL SYSTEM

## Part 8 Section A

| Operation<br>No. | Table of Contents           | Page<br>No. |
|------------------|-----------------------------|-------------|
|                  | GENERAL                     | 01          |
|                  | BATTERIES                   | 02          |
|                  | Maintenance                 | 02          |
|                  | Servicing                   | 02          |
| 8A-01-06         | Removal and Refitment       | 06          |
|                  | DYNAMO                      | 06          |
|                  | Maintenance                 | 06          |
| 8A-02-06         | Removal and Refitment       | 06          |
|                  | STARTER MOTOR               |             |
| 8A-03-07         | Removal and Refitment       | 07          |
|                  | CONTROL BOX                 | 07          |
|                  | Control Box Servicing       |             |
| 8A-04-08         | Removal and replacement     | 08          |
|                  | STARTER SWITCH              | 08          |
| 8A-05-08         | Removal and Replacement     | 08          |
|                  | NEUTRAL SAFETY START SWITCH |             |
| 8A-06-11         | Removal and Replacement     | 11          |
|                  | CIGARETTE LIGHTER           |             |
| 8A-07-11         | Fitting Instructions        | 11          |
|                  | FUSE                        |             |
| 8A-08-11         | Removal and Replacement     | 11          |
|                  | HORN                        |             |
|                  | WIRING HARNESS              |             |
| 8A-09-           | Removal and Refitment       | 11          |
|                  | HORN                        |             |
|                  | Horn Adjustment             |             |

**GENERAL**

The electrical system of this tractor is a 12 volt Negative earth system, with compensated voltage control regulator. Fig. 1 shows the layout of all the electrical components and associated wiring.

The battery is mounted on a platform formed on the gearbox top cover, and access is gained through the detachable panel beneath the steering wheel. The dynamo is mounted on the right hand side of the engine and is driven by an endless belt from the crankshaft pulley. The dynamo has adjustable mountings to enable the correct belt tension to be maintained. A voltage control regulator is mounted behind the engine bulkhead, beneath the instrument

panel. The starter motor is bolted to the left hand side of the engine. A neutral safety switch is fitted on top of the transmission case, which renders the starter motor inoperative until the Dual Range Selector Lever is in the Neutral position.

The electrical equipment should be serviced at the times stated in the Operator Instruction Book, particular attention should be paid to the cleanliness and tightness of the battery terminals.

25 amp line fuses are fitted to protect the thermostart, cigarette lighter and lighting circuits. A blown fuse must always be replaced with one of the same capacity.

**Before any operation is carried out on the electrical system, disconnect the battery terminals.**



**ELECTRICAL SYSTEM****Key to Fig. 1**

- |                   |                          |
|-------------------|--------------------------|
| 1. Thermostart    | 6. Battery Earth         |
| 2. Dynamo         | 7. Neutral Safety Switch |
| 3. Wiring Harness | 8. Battery               |
| 4. Starter Motor  | 9. Control Box           |
| 5. Battery Lead   | 10. Starter Switch       |
|                   | 11. Cigarette Lighter    |

**BATTERIES**

Batteries are supplied either dry and uncharged or filled and charged or dry with their plates in a charged condition. Routine Maintenance is the same for all.

**Battery Maintenance**

Wipe away any foreign matter or moisture from the top of the battery, and ensure that the connections and the fixings are clean and tight. About once a month, or more frequently in hot weather, examine the level of the electrolyte in the cells. If necessary, add distilled water to bring the level up to the top of the perforated separator guard.

The use of a Lucas Battery Filler will be found helpful in this topping up process as it ensures that the correct electrolyte level is obtained automatically and also prevents distilled water from being spilled over the battery top. Use only distilled water when topping up.

**NOTE - NEVER USE A NAKED LIGHT WHEN EXAMINING A BATTERY, AS THE MIXTURE OF OXYGEN AND HYDROGEN GIVEN OFF BY THE BATTERY WHEN ON CHARGE, AND TO LESSER EXTENT WHEN STANDING IDLE, CAN BE DANGEROUSLY EXPLOSIVE.**

**Battery Servicing****Vent Plugs**

Ensure that the ventilating holes in each vent plug are clear.

**Level of Electrolyte**

The surface of the electrolyte should be level with the top of the perforated separator guard. If necessary, top-up with distilled water. Any loss of acid from spilling or spraying (as opposed to the normal loss of water by evaporation and electrolysis) should be made good by dilute acid of the same specific gravity as that already in the cell.

**Cleanliness**

Ensure that the top of the battery is free from dirt or moisture which might provide a discharge path. Ensure that the battery connections are clean and tight.

**Hydrometer Tests**

Measure the specific gravity of the acid in each cell, using a hydrometer. To avoid misleading readings, do not take hydrometer readings immediately after topping-up.

The readings given by each cell should be approximately the same. If one cell differs appreciably from the others, an internal fault in the cell is indicated.

The appearance of the electrolyte drawn into the hydrometer when taking a reading gives an indication of the state of the plates. If the electrolyte is very dirty, or contains small particles in suspension, it is possible that the plates are in bad condition.

The specific gravity of the electrolyte varies with the temperature, therefore for convenience in comparing specific gravities, this is always corrected to 15.5°C (60°F), which is adopted as a reference temperature. This method of correction is as follows:

For every 2.8°C (5°F) *below* 15.5°C *deduct* .002 from the observed reading to obtain the true specific gravity at 15.5°C (60°F).

For every 2.8°C (5°F) *above* 15.5°C *add* .002 to the observed reading to obtain the true specific gravity at 15.5°C. The temperature must be that indicated by a thermometer actually immersed in the electrolyte and not the air temperature.

Compare the specific gravity of the electrolyte with the values given in the specification and so ascertain the state of charge of the battery. If the battery is in a discharged state, it should be re-charged, either on the vehicle by a period of daytime running or on the bench from an external supply.

**Key to Fig. 2**

- |                     |                           |
|---------------------|---------------------------|
| 1. Battery          | 6. Thermostart            |
| 2. Control Box      | 7. Starter Switch         |
| 3. Dynamo           | 8. Cigarette Lighter      |
| 4. Fuel Gauge       | 9. Ammeter                |
| 5. Fuel Sender Unit | 10. Neutral Safety Switch |
|                     | 11. Starter Motor         |

**Colour Code Fig. 2**

|   |        |   |        |
|---|--------|---|--------|
| B | Black  | R | Red    |
| G | Green  | U | Blue   |
| N | Brown  | W | White  |
| P | Purple | Y | Yellow |
| O | Orange | K | Pink   |
| S | Slate  | M | Maroon |

**Key to Fig. 3**

1. Top Cover
2. Access Points to Cell Terminals
3. Terminal Post (Negative)
4. Filler Plugs
5. Terminal Post (Positive)
6. Splash Plate
7. Level of Electrolyte
8. Separators
9. Cell Terminals
10. Cell Walls

ELECTRICAL SYSTEM

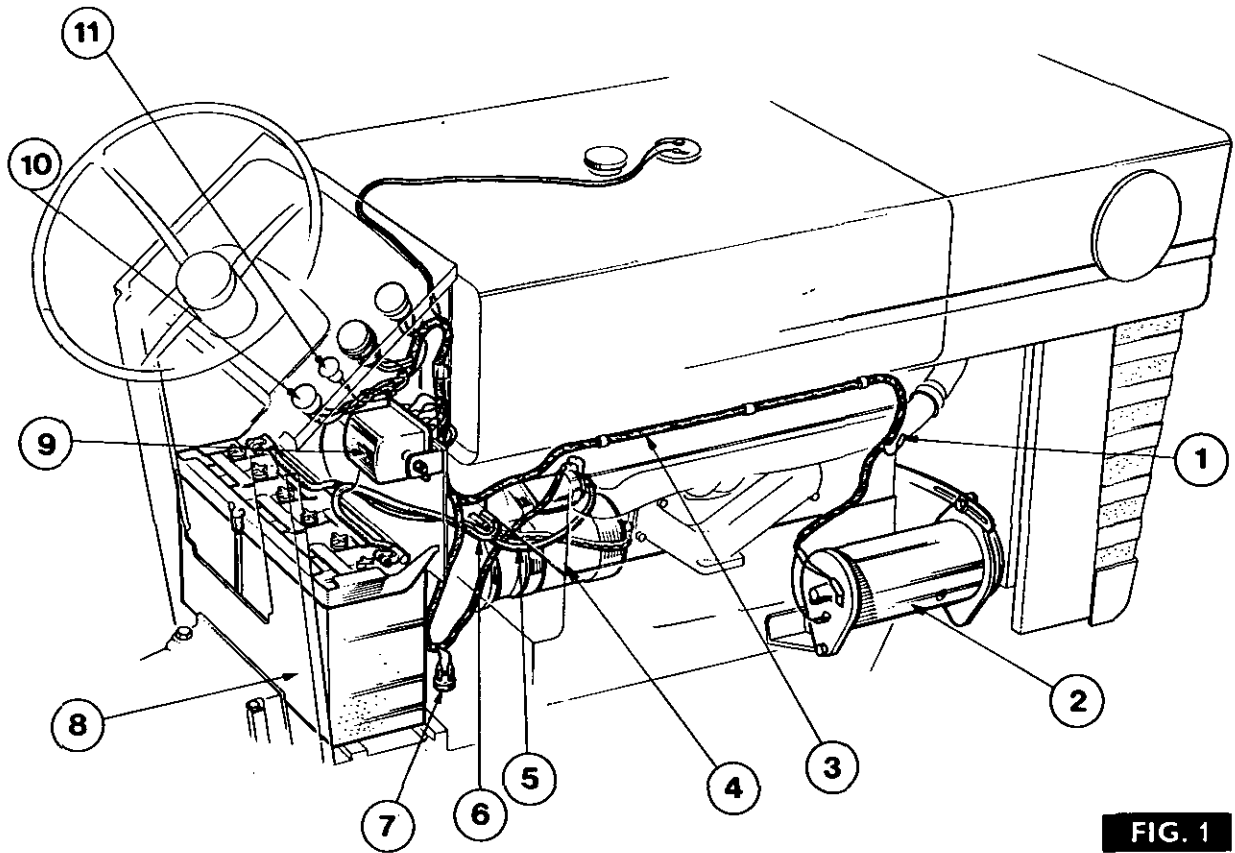


FIG. 1

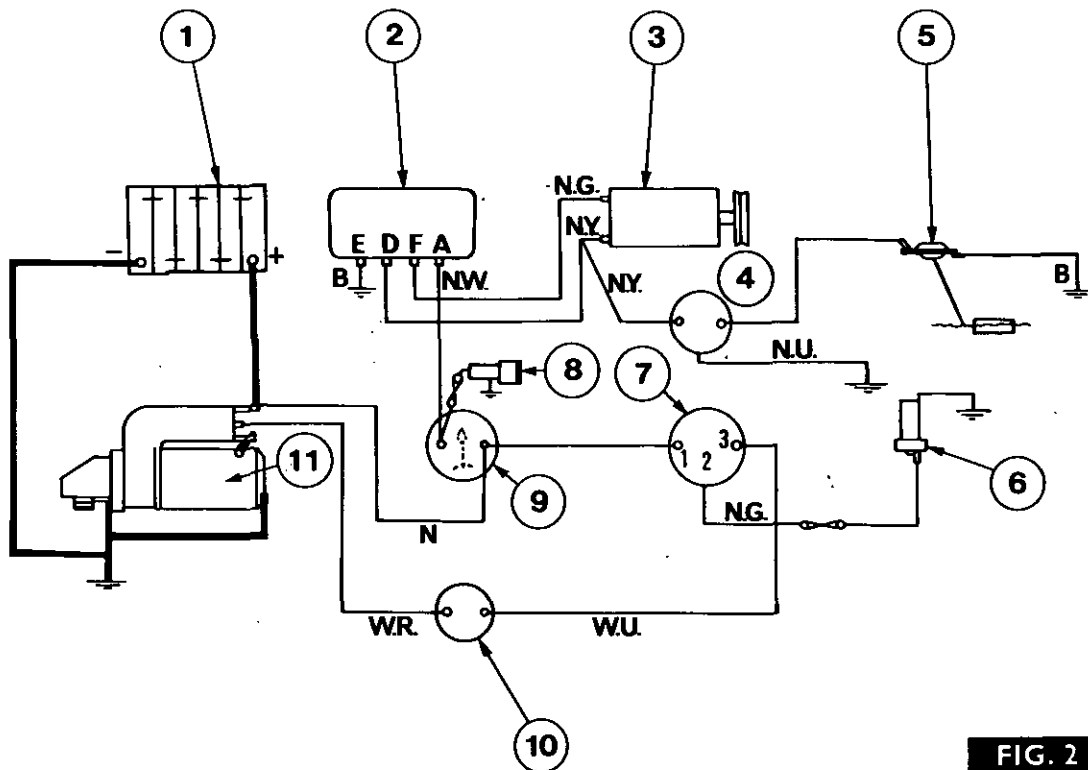


FIG. 2

ELECTRICAL SYSTEM

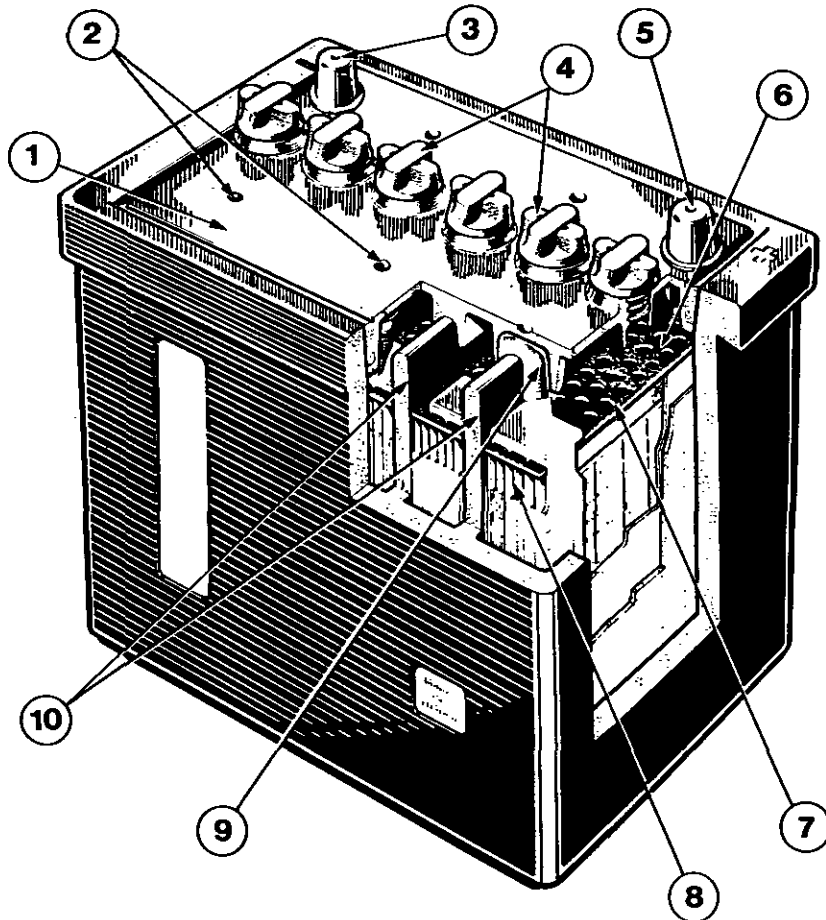


FIG. 3

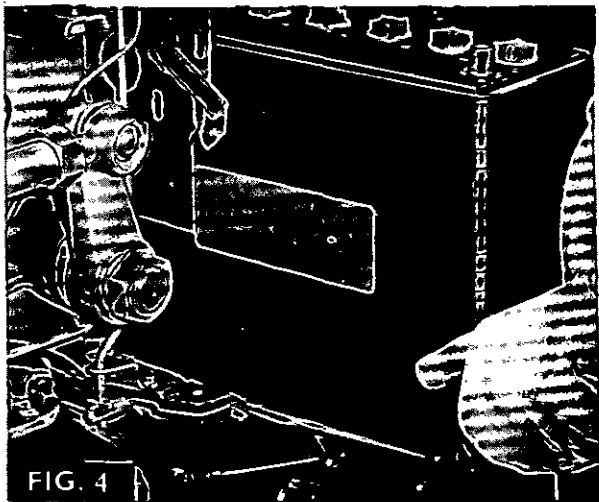


FIG. 4

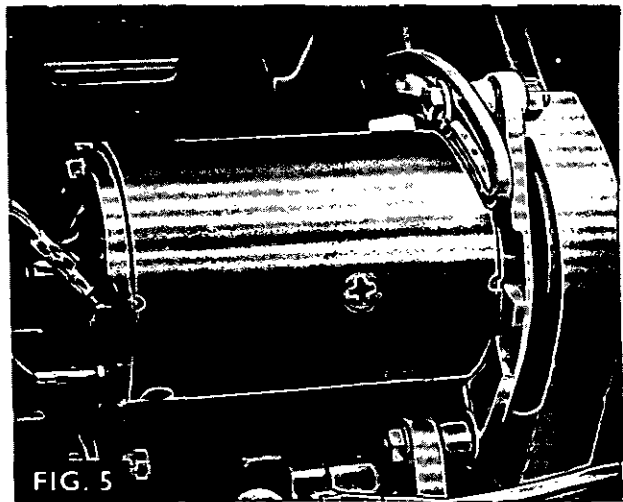


FIG. 5

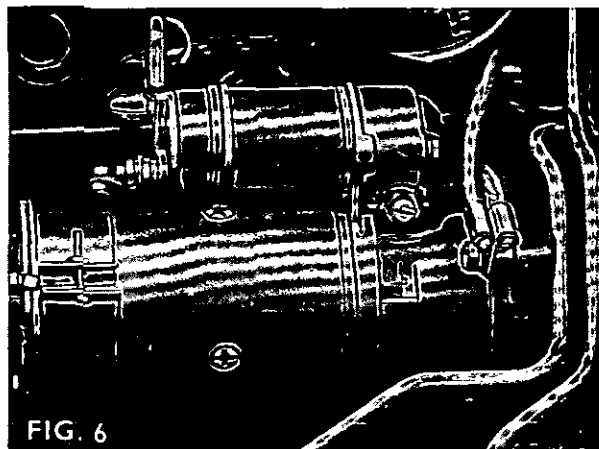


FIG. 6

### HIGH-RATE DISCHARGE TEST

The high-rate or heavy discharge test is a timed on-load voltage check applied separately to each cell of the battery. Before testing, a battery should have been off charge for at least some hours and each cell must be at least 70% charged, having a minimum electrolyte density of 1.230 S.G. in climates normally below 26.6°C (80°F) or 1.170 S.G. in hotter climates.

Use only a suitably rated tester, (300 ampere element). A cell in good condition will maintain a constant 1.2 - 1.5 volt reading on the test meter for 10 seconds when the prongs of the tester are passed on to adjacent interconnectors or terminals. A weak cell will show a rapidly falling voltage. If all the cells appear weak, this may indicate that the battery is merely discharged but otherwise healthy.

### RECHARGING FROM AN EXTERNAL SUPPLY

If the above tests indicate that the battery is merely discharged and is otherwise in a good condition, it should be recharged, either on the tractor by a period of daytime running or on the bench from an external supply.

If the latter, the battery should be recharged at the rate given in the specification until the specific gravity and voltage show no increase over three successive hourly readings. During the charge the electrolyte must be kept level with the top of the separator guard by the addition of distilled water.

A battery that shows a general falling off in efficiency, common to all cells, will often respond to the process known as 'cycling'. This process consists of fully charging the battery, as described above, and then discharging it by connecting it to a lamp board, or other load, taking a current equal to the charging current. The battery should be capable of providing this current for at least 7 hours before it is fully discharged, as indicated by the voltage of each cell falling to 1.8. If the battery discharges in a shorter time, repeat the cycle of charge and discharge.

### PREPARING NEW UNFILLED UNCHARGED BATTERIES

#### Preparation of Electrolyte

Batteries should not be filled with acid until required for initial charging.

Approximately:

790 cc (1 3/8 pint) 96 amp/hr.  
1220 cc (2 1/8 pint) 125 amp/hr.  
is needed for each 2-volt cell.

### SPECIFIC GRAVITY OF ACID REQUIRED WHEN FILLING

Home and Climates ordinarily below 26.6°C (80°F):  
Specific Gravity of Acid (Corrected to 15.5°C (60°F)) - 1.260.

Climates frequently over 26.6°C (80°F): Specific Gravity of Acid (Corrected to 15.5°C (60°F)) - 1.210.

Electrolyte of the specific gravity required is prepared by mixing distilled water and concentrated sulphuric acid, usually of 1.840 S.G. The mixing must be

carried out either in a lead-lined tank or in a suitable glass or earthenware vessel. Slowly add the acid to the water, stirring with a glass rod. *Never add the water to the acid*, as the resulting chemical reaction causes violent and dangerous spurting of the concentrated acid. The approximate proportion of acid and water are indicated in the following table:

To obtain Specific Gravity  
(corrected to 15.5°C (60°F)) of:  
1.260  
1.210  
Add 1 vol. of acid of 1.840 S.G.  
(corrected to 15.5°C (60°F)) to:  
3.2 volumes of water (1.260 S.G.)  
4.3 volumes of water (1.210 S.G.)

Heat is produced by the mixture of acid and water, and the electrolyte should be allowed to cool before taking hydrometer readings and pouring the electrolyte into the battery.

### Filling the Battery

The temperature of the acid, battery and filling-in room must not be below 0°C (32°F). Remove the vent plugs and half-fill each cell with electrolyte of the appropriate specific gravity. Allow the battery to stand for six to twelve hours (in order to dissipate the heat generated by the chemical action of the acid on the plates) before resuming the filling to the top surface of the separator guard. Allow to stand for a further two hours and then proceed with the initial charge.

### Initial Charge

The initial charging rate is given in the specification. Charge at this rate until the voltage and specific gravity readings show no increase over five successive hourly readings. This will take from 48 to 80 hours, depending on the length of time the battery has been stored before charging. Some harmless frothing may occur during the first few hours. This can be minimised by reducing the charging current. Conversely, frothing will be increased if the specified charging rate is exceeded.

**NOTE - BOTH 96 AMP AND 125 AMP BATTERIES MAY BE FILLED IN ONE STAGE TO THE SEPARATOR GUARD. THEY MUST THEN BE ALLOWED TO STAND FOR 12 HOURS BEFORE THE INITIAL CHARGE IS BEGUN. IF NECESSARY, ADD MORE ACID TO RESTORE ELECTROLYTE LEVELS TO THE SEPARATOR GUARDS.**

### MAXIMUM PERMISSIBLE ELECTROLYTE TEMPERATURE DURING CHARGE.

Home and Climates normally below 26.6°C (80°F):  
37.7°C (100°F)

Climates frequently over 26.6°C (80°F):  
48.8°C (120°F)

Keep the current constant by varying the series resistance of the circuit or the generator output. **This charge should not be broken by long rest periods.** If, however, the temperature of any cell rises above the permissible maximum, the charge must be interrupted until the temperature has fallen at least 5.5°C (10°F) below that figure. Throughout the charge, the electrolyte must be kept level with the top of the separator guard by the addition of acid solution of the same specific gravity as the original filling-in acid, until specific gravity and voltage readings have remained constant for five successive hourly readings.

**ELECTRICAL SYSTEM**

If the charge is continued beyond that point, top up with distilled water.

At the end of the charge carefully check the specific gravity in each cell to ensure that, when corrected to 15.5°C (60°F), it lies within the specified limits. If any cell requires adjustment, some of the electrolyte must be siphoned off and replaced, either by distilled water or by acid of the strength originally used for filling-in, depending on whether the specific gravity is too high or too low. Continue the charge for an hour or so to ensure adequate mixing of the electrolyte and again check the specific gravity readings. If necessary, repeat the adjustment process until the desired reading is obtained in each cell. Finally, allow the battery to cool, and siphon off any electrolyte above the top of the separator guard.

**PREPARING NEW DRY-CHARGED BATTERIES FOR SERVICE****SPECIFIC GRAVITY OF ACID REQUIRED WHEN FILLING**

Home and Climates ordinarily below 26.6°C (80°F):  
Specific Gravity of Acid (corrected to 15.5°C (60°F))  
- 1.260

Climates frequently over 26.6°C (80°F):  
Specific Gravity of Acid (corrected to 15.5°C (60°F))  
- 1.210

**Filling the Cells**

Remove the sealing tape from the vent plugs (when applicable) and fill each cell with correct specific gravity acid to the top of the perforated separator guard in one operation. The temperature of the filling room, battery and acid should be maintained at between 15.5°C and 37.7°C (60°F and 100°F). If the battery has been stored in a cool place, it should be allowed to warm up to room temperature before filling.

**Freshening Charge (When Necessary)**

After filling, allow to stand for 20 minutes and then re-check the specific gravity and temperature of the electrolyte in each cell. The battery is then ready for service, unless the above checks show the electrolyte temperature to have risen by more than 5.5°C (10°F), or the specific gravity to have fallen by more than 10 points - 0.010 S.G. In this event, it will be necessary to recharge the battery at the appropriate recharge rate, see the specification, until the specific gravity values remain constant for three successive hourly readings and all cells are gassing freely. During charging, keep the electrolyte in each cell level with the separator guard by adding distilled water - NOT ACID.

**Removal and Refitment**

8A-01-06

**Figure 4**

1. Remove the left-hand rear side panel, which is secured with 5 bolts.
2. Disconnect both battery terminals.
3. Remove the wing nut retaining the battery clamp and remove clamp.
4. Carefully slide battery onto footrest and remove from tractor (Fig.4).

Issue 1

5. Replace the battery in reverse procedure to the above, ensuring that the terminal posts are free from corrosion, and before replacing the terminals, smear the posts with petroleum jelly.

**DYNAMO**

The generator is a shunt-wound two-pole two-brush non-ventilated machine, arranged to work in conjunction with a Lucas regulator unit. The output of the generator is controlled by the regulator unit and is dependent on the state of charge of the battery and the loading of the electrical equipment in use. When the battery is in a low state of charge, the generator gives a high output, whereas if the battery is fully charged, the generator gives only sufficient output to keep the battery in good condition without any possibility of overcharging.

**Dynamo Maintenance****Lubrication**

Every 600 running hours or 6 months remove the neoprene plug and inject a few drops of high quality engine oil into the hole marked 'Oil' in the commutator-end bearing housing. (1, Figure 5).

**Inspection of Brushgear**

At 1200 running hours or 1 year, the generator should be removed from the engine and the brushgear be inspected by a competent automobile electrician.

**Belt Adjustment**

Occasionally inspect the generator driving belt and, if necessary adjust to take up any undue slackness by turning the generator on its mounting. Care should be taken to avoid overtightening the belt, the tension needed being just enough to drive without slipping. See that the pulleys are properly aligned, otherwise undue strain will be thrown on the generator bearings.

To adjust the belt tension, slacken the bolts (2, Figure 5) and swing the dynamo outward until there is 20 to 25 mm ( $\frac{3}{4}$  to 1 in) movement of the belt. Retighten the dynamo bolts (2).

**Removal and Refitment**

8A-02-06

**Figure 5**

1. Remove the two wires from dynamo terminals.
2. Slacken bolts (1) on dynamo and swing dynamo towards engine.
3. Remove fan belt.
4. Remove bolts (1) and lift off dynamo and fan belt guard.
5. Replace in reverse sequence to above and adjust fan belt to give a deflection of 20 to 25 mm ( $\frac{3}{4}$  to 1 in), midway between the fan pulley and the crankshaft pulley.

**NOTE - SEE PERKINS WORKSHOP MANUAL FOR SERVICING DETAILS**

**STARTER MOTOR**

The starter motor is of similar construction to the generator except that heavier gauge conductors are used in the construction of the armature and field coils.

## ELECTRICAL SYSTEM

## STARTER MOTOR

## Removal and Refitment

8A-03-07

## Figure 6

1. Disconnect wires at starter motor relay, and main lead to battery.
2. Remove bolts securing starter motor to engine.
3. Pull starter clear.
4. Replace in reverse sequence to above.

**NOTE** — SEE PERKINS WORKSHOP MANUAL FOR SERVICING DETAILS.

## CONTROL BOX

All settings are accurately adjusted before control boxes leave the factory and must not be disturbed unnecessarily. Any subsequent attention that may be required after the period of warranty has expired should only be carried out by a qualified automobile electrician. The control box is a sealed unit but the cover is pierced with two 12.7 mm ( $\frac{1}{2}$  in) dia. holes for permitting screwdriver access to the voltage regulator and cut-out relay adjusting screws. The holes are plugged with a pair of linked rubber blanks which can be withdrawn when making voltage measurements and adjustments.

The control box frame is at generator potential and so, also, are the adjusting screws, since these pass through tapped holes in the frame. It is therefore advisable before making an adjustment to select a small screwdriver having an adequately insulated blade, and thus obviate short-circuiting of the generator in the event of the control box cover becoming earthed. If necessary, a piece of insulating tubing of suitable length and bore can be sleeved on to an otherwise uninsulated screwdriver blade.

## CONTROL BOX SERVICING

## CHARGING CIRCUIT

## Preliminary Checking

Before disturbing any electrical adjustments, examine as follows to ensure that the fault does not lie outside the control box:

1. Check the battery by substitution or with an hydrometer and a heavy discharge tester.
2. Inspect the generator driving belt. This should be just taut enough to drive without slipping.
3. Check the generator by substitution, or by disconnecting the generator cables and linking large terminal 'D' to small terminal 'F' and connecting a 0-20 first-grade moving-coil voltmeter between this link and earth, and then running the generator up to about 1,000 r.p.m., when a rising voltage should be shown. If satisfactory, restore the generator connections.
4. Inspect the wiring of the charging circuit and carry out continuity tests.
5. Check earth connections, particularly of the control box.
6. In the event of reported undercharging, ascertain that this is not due to little running of the tractor or continuous use at idling speed.

## VOLTAGE REGULATOR ELECTRICAL SETTING

## Checking and Adjustment

## Figure 7

Checking and adjusting of the open-circuit voltage setting should be completed as rapidly as possible so as to avoid errors resulting from heating of the voltage regulator shunt coil.

1. Disconnect the cable from control box terminal 'A'.

**WARNING** — DO NOT ALLOW THE END OF THE CABLE REMOVED TO CONTACT ANY EARTHED PARTS OF THE TRACTOR.

2. Remove the linked rubber blanks (1) from the control box cover.
3. Start the engine and drive the generator at about 3000 r.p.m.
4. Using test prods, (2 & 3), measure the voltage between the exposed head of one of the adjusting screws and a good earth. This should be between the following limits, according to the ambient temperature:

| Ambient Temperature | Open-circuit Generator Voltage |
|---------------------|--------------------------------|
| 10°C. (50°F.)       | 16.1 — 16.7                    |
| 20°C. (68°F.)       | 16.0 — 16.6                    |
| 30°C. (86°F.)       | 15.9 — 16.5                    |
| 40°C. (104°F.)      | 15.8 — 16.4                    |

An unsteady reading may be due to the voltage regulator contacts requiring cleaning, in which event, remove the cover and clean the contacts, preferably using silicon carbide paper, followed by methylated spirits (denatured alcohol). If the reading is steady but occurs outside the appropriate limits, the voltage regulator must be re-adjusted. In this event, proceed as follows otherwise stop the engine, restore the original connections and refit the rubber blanks.

**NOTE** — WHEN VIEWED FROM THE DOMED EMBOSSSED END OF THE COVER WITH RUBBER BLANKS UPPERMOST, THE LEFT HAND HOLE GIVES ACCESS TO THE VOLTAGE REGULATOR ADJUSTING SCREW AND THE RIGHT HAND HOLE TO THE CUT-OUT RELAY ADJUSTING SCREW.

5. Clip one of the voltmeter leads (of appropriate polarity) to a good earthing point (2).
6. Using a test prod, contact the other voltmeter lead against the exposed head of the cut-out relay adjusting screw (3).
7. Turn the voltage regulator adjusting screw (clockwise to raise the setting or anti-clockwise to lower it) until the correct open circuit is obtained.
8. Check the setting by stopping the engine and then again raising the generator speed to 3000 r.p.m.
9. Stop the engine, restore the original connections and refit the rubber blanks.

## ELECTRICAL SYSTEM

### CUT-OUT RELAY ELECTRICAL SETTING

#### Checking and Adjustment

Checking and adjustment of the cut-in and drop-off voltage settings should be completed as rapidly as possible so as to avoid errors resulting from heating of the cut-out relay shunt coil. For this test remake the connection between control box terminal 'A' and its associated cable.

### CUT-IN VOLTAGE

#### Testing

##### Figure 7

1. Disengage the linked rubber blanks from the control box cover.
2. Using test prods, measure the voltage between the exposed head of one of the adjusting screws and a good earth whilst the generator speed is slowly increased from zero.
3. Observe the voltmeter pointer, which should slowly rise and then drop back slightly at a reading between the limits 12.7 - 13.3 volts. The cut-in voltage is that reached immediately before the pointer drops back.
4. If the cut-in voltage occurs outside the limits 12.7 - 13.3 volts, adjust the cut-out relay in a manner similar to that described for adjusting the voltage regulator, turning the cut-out relay adjusting screw clockwise to raise the cut-in voltage, or anti-clockwise to lower it.
5. Re-check the setting by increasing the generator speed from zero.
6. Stop the engine, disconnect the voltmeter and refit the rubber blanks.

#### Key to Fig. 7

1. Linked Rubber Blanks
2. Screwdriver with Insulated Blade
3. Voltmeter Prod

#### Key to Fig. 8

1. Voltage Regulator Adjusting Screw
2. Cut-out Relay Adjusting Screw
3. Fixed Contact Blade
4. Cut-out Relay Armature

### TESTING DROP-OFF VOLTAGE

1. Disconnect the cable from control box terminal 'A'.

**WARNING - DO NOT ALLOW THE END OF THE DISCONNECTED CABLE TO CONTACT ANY EARTHED PARTS OF THE TRACTOR.**

2. Connect the voltmeter between control box terminal 'A' and a good earthing point.
3. Start the engine and drive the generator at about 3000 r.p.m.
4. Observe the voltmeter pointer, while slowly decelerating the engine. Opening of the cut-out relay contacts, indicated by the voltmeter pointer dropping to zero, should occur between the limits 8.5 - 11.0 volts. If the drop-off

voltage occurs outside these limits, remove the control box cover and adjust the contact pressure; otherwise, stop the engine and restore the original connections.

5. Stop the engine, remove and disconnect the control box.
6. Remove the control box cover, secured to the base by a rolled-over edge.
7. Bend carefully the fixed contact blade towards the cut-off relay armature to reduce the drop-off voltage or away from the armature to raise the voltage.
8. Re-check the setting and, if necessary, re-adjust until the correct drop-off voltage is obtained.
9. Refit the control box cover, bending back the rolled-over edge into its former position round the base.
10. Restore original connections.

### CLEANING CUT-OUT RELAY CONTACTS

Only strips of fine glass paper must be used to clean the cut-out relay contacts. Carborundum stone, emery cloth or silicon carbide paper must never be used. The use of fine glass paper should be followed by methylated spirits (de-natured alcohol).

### CONTROL BOX

#### Removal and Replacement

8A-04-08

##### Figure 9

1. Remove right hand rear side panel.
2. Disconnect wires from terminals.
3. Remove two nuts securing control box to mounting bracket.
4. Remove control box.
5. Assemble in reverse sequence, connecting wires as shown in Fig. 2.

### STARTER SWITCH

The starter switch is actuated by a key and is only effective when the dual range gear lever is placed in the neutral "S" position. The switch has a spring-loaded action which holds the key in the "O" position normally. To start the tractor in normal conditions turn the key clockwise to the "S" position. In cold weather the key should be turned to the "H" and then the "HS" position to ensure easy starting. For detailed starting instructions, see the Operator Instruction Book.

### STARTER SWITCH

#### Removal and Replacement

8A-05-08

1. Remove nut and instruction plate on front of starter switch.
2. Pull switch through to back of instrument panel.  
Disconnect wires.
4. Replace in reverse order, attaching wires as shown in Fig. 2.

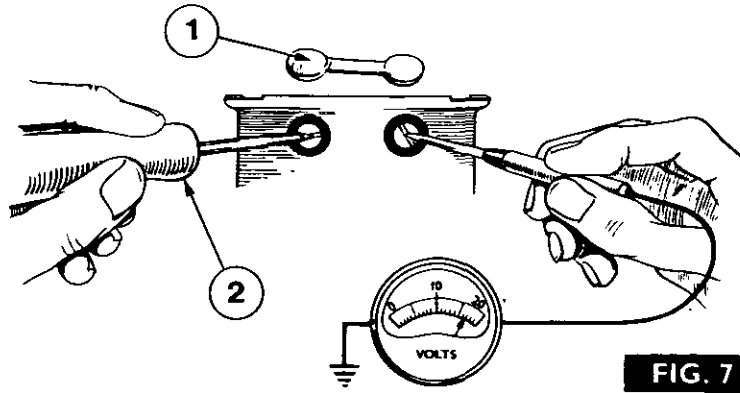


FIG. 7



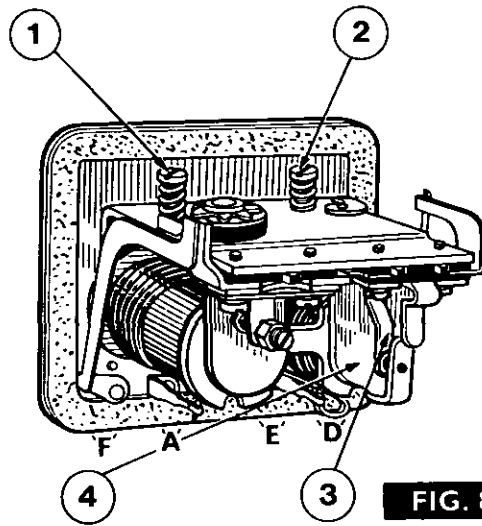
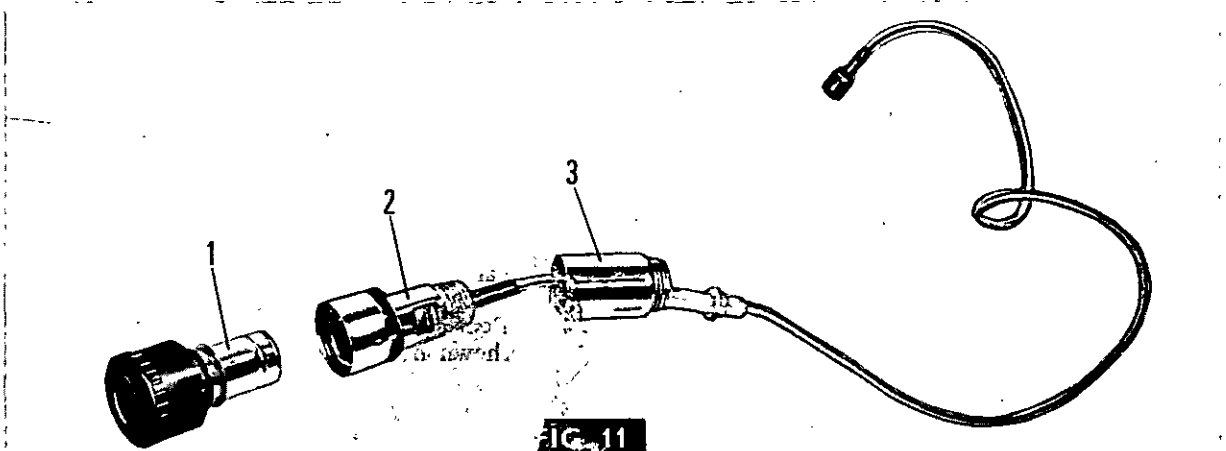


FIG. 8

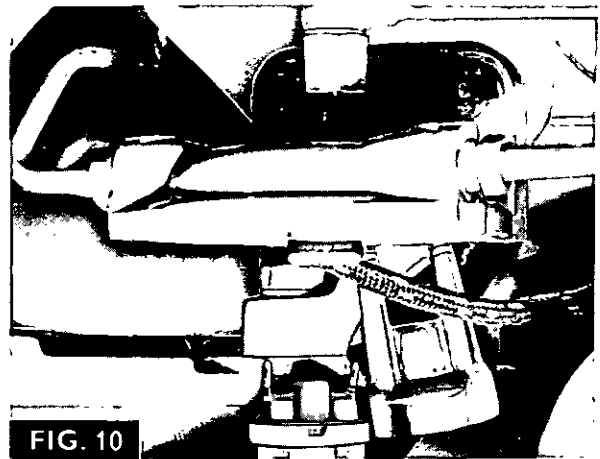

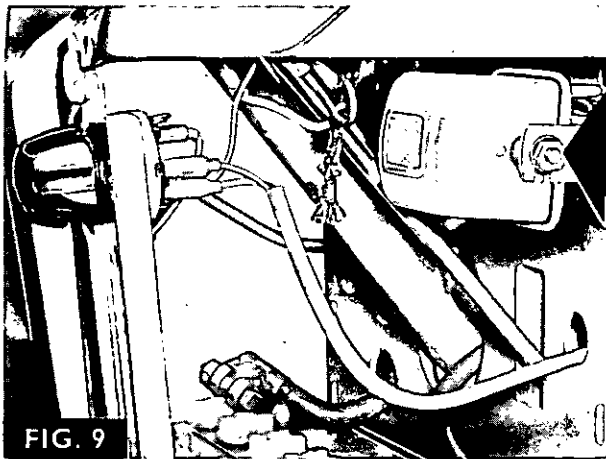

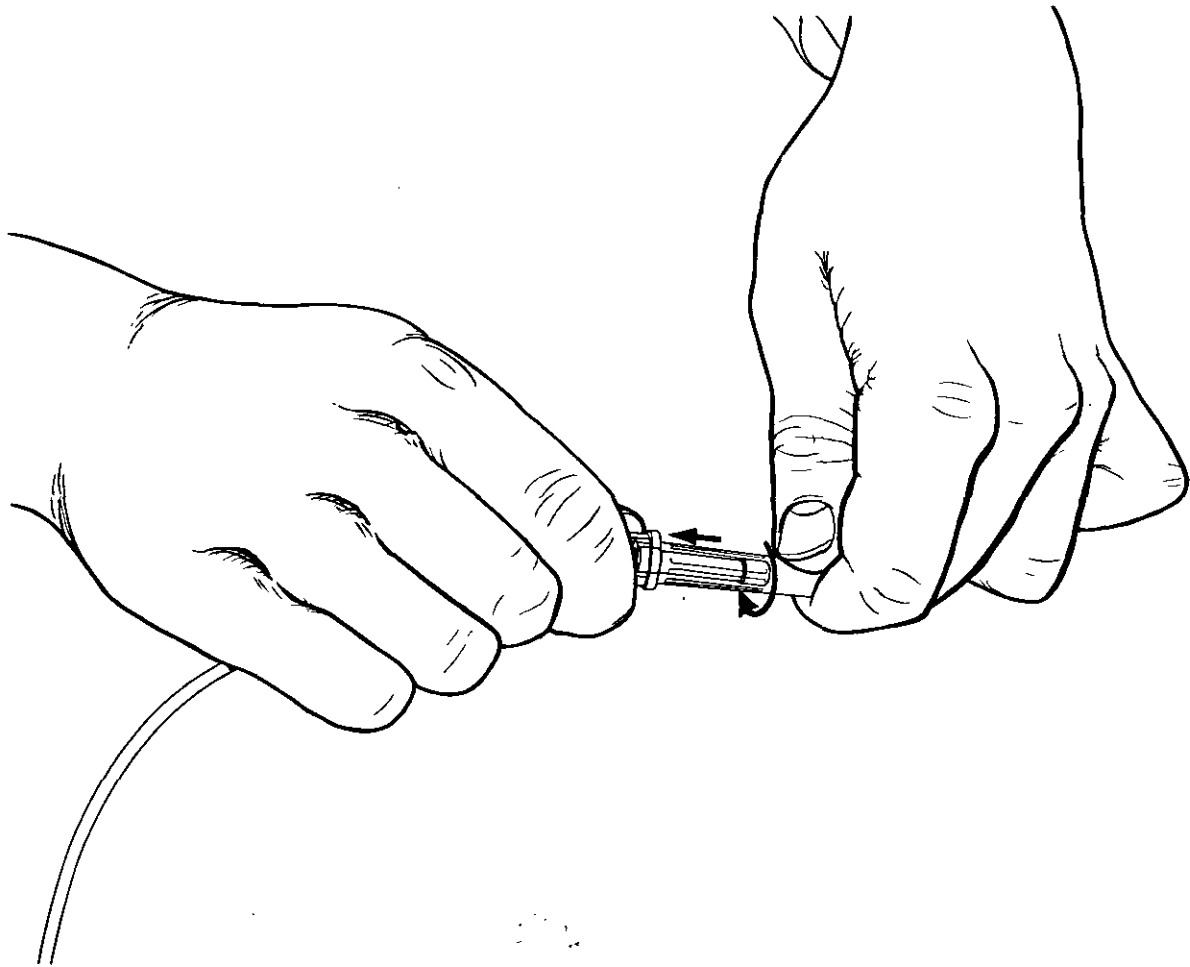


FIG. 12

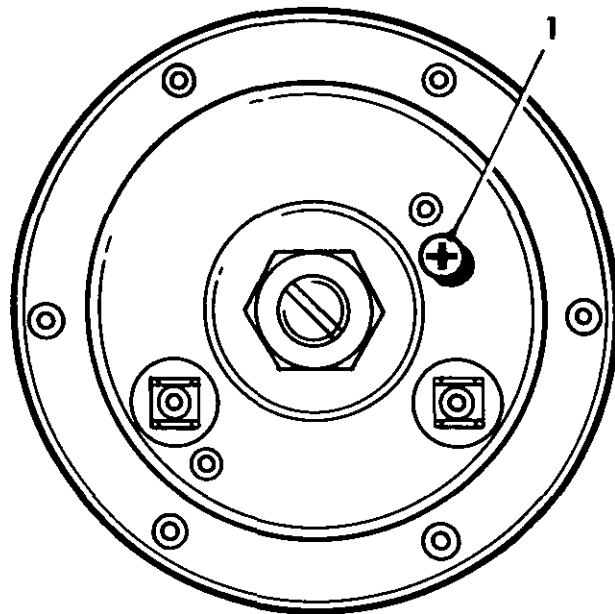


FIG. 13

**NEUTRAL SAFETY START SWITCH**

This switch prevents the tractor engine from being started when in gear. Engagement of either HIGH or LOW range breaks the starter switch circuit, thus preventing the starter solenoid becoming engaged.

**NEUTRAL SAFETY SWITCH****Removal and Replacement** 8A-06-11

Figure 10

1. Remove the secondary filter element assembly.
2. Lift up the rubber cover and disconnect the two wires at the switch.
3. Unscrew the neutral safety switch.
4. Replace in the reverse sequence to the above.

**NOTE** - THE FUEL SYSTEM WILL REQUIRE BLEEDING AFTER REFITTING THE SECONDARY FUEL FILTER ELEMENT.

**CIGARETTE LIGHTER (Optional Extra)****Fitting Instructions** 8A-07-11

Figure 11

The cigarette lighter is available as an optional extra and is fitted as follows:

1. Remove battery access door.
2. Remove Rubber Plug from lighter hole.
3. Pull lighter unit (1) from centre piece (2).
4. Unscrew outer cover (3) from lighter (2).
5. Place centre of lighter (2) through the hole in the instrument panel from the top.
6. Screw outer cover (3) onto centre piece (2) under the instrument panel.
7. Connect up wire to live side of ammeter on tractors without lights, and the feed terminal on lighting switch for tractors with lights.

**FUSES****Removal and Replacement** 8A-08-11

Figure 12

Access to the fuses is gained by removing the battery access door. If difficulty is encountered, then remove either side panel.

1. Remove battery access panel.
2. Holding both ends of fuse casing, push top of fuse in and turn in an anti-clockwise direction (Fig. 12).
3. Pull top of casing clear and tip out fuse.
4. Replace the new fuse, of the same capacity, in the reverse sequence to above.

**WIRING HARNESS****Removal and Refitment** 8A-09-11

Figure 2

1. Remove right-hand rear side panel and disconnect the battery.

2. Disconnect the following wires:
  - a) Three at Fuel Gauge
  - b) Four at Ammeter
  - c) Three at Starter Switch
  - d) Four at Control Box
  - e) Two Earth Wires Bolted to Control Box Mounting
  - f) Two at Neutral Safety Switch
  - g) Two at Starter Motor
  - h) Two at Dynamo
  - j) One at Thermostart
  - k) Two at Fuel Gauge Sender Unit
3. Remove cable clip securing harness to bulkhead.
4. Remove cable edge clips retaining the harness to the bonnet.
5. Carefully pull the harness clear of the tractor.
6. Refit to tractor, threading the harness in between the fuel tank mounting and up into front of the engine bulkhead. Refer to Fig. 2 for wiring connection.

**HORN**

Before being passed out of Works, every horn is adjusted to give its best performance. It should require no further attention until it has given a long period of service.

If the horn fails to sound or its performance becomes uncertain, the fault will not necessarily be in the horn. First see that the trouble is not due to such defects as a loose or broken connection in the wiring of the horn circuit or to a discharged battery. A short circuit in the horn wiring will cause the fuse (when fitted) to blow. In this event, examine the wiring for the fault and rectify accordingly, before renewing the fuse.

Poor performance can also be caused by loosening of the fixing bolts. Check and tighten as necessary.

If examination shows the above points to be in order, the horn may need adjustment but this should not become necessary until the horn has been in service for a long period.

**HORN ADJUSTMENT**

Adjustment does not alter the pitch of the note but merely takes up wear of moving parts. While adjusting, short out the fuse (if fitted), otherwise it may blow. If the horn does not sound after making an adjustment, release the horn push instantly.

A small serrated adjustment screw is provided on that side of the horn at which the cables terminate. Turn this screw anti-clockwise until the horn just fails to sound, then turn it back for about one quarter of a turn.

**WARNING** - THE CENTRAL SLOTTED STEM AND LOCKING NUT MUST NOT BE DISTURBED.

A model 6H horn in correct adjustment will pass 2.75 - 3.25 amperes (12 volt) - measured on a first grade moving coil 0-10A ammeter. If a suitable instrument is available, connect it in series with the horn and turn the adjustment screw clockwise to increase the current, or anti-clockwise to decrease it. (When adjusting the horn by the aid of an ammeter, the aim is to obtain the best performance with the least current).

## INSTRUMENTS AND INSTRUMENT PANEL

## Part 8 Section B

| Operation<br>No. | Table of Contents   | Page<br>No. |
|------------------|---|-------------|
|                  | GENERAL   | 01          |
| 8B-01-02         | INSTRUMENT PANEL ASSEMBLY<br>Removal and Refitment                          | 02<br>02    |
| 8B-02-02         | TRACTORMETER  | 02          |
| 8B-03-02         | Drive Cable Removal and Replacement<br>Tractormeter Removal and Replacement | 02<br>02    |
| 8B-04-02         | AMMETER<br>Removal and Replacement  | 02<br>02    |
| 8B-05-02         | FUEL GAUGE<br>Removal and Replacement                                       | 05<br>05    |
| 8B-06-02         | TEMPERATURE GAUGE   | 05          |
| 8B-07-02         | Cable and Bulb Removal and Replacement<br>Gauge Removal and Replacement     | 05<br>05    |
| 8B-08-05         | OIL PRESSURE GAUGE  | 05          |
| 8B-09-05         | Pipe Removal and Replacement<br>Gauge Removal and Replacement               | 05<br>05    |
| 8B-10-05         | AIR CLEANER RESTRICTION INDICATOR<br>Removal and Refitment                  | 05          |

**GENERAL****INSTRUMENT PANEL****Tractormeter (1, Fig. 1 and Fig. 2a and 2b)**

The tractormeter is a multi-purpose instrument which indicates engine r.p.m., kilometres per hour and equivalent engine running hours on one dial. The layout of this dial is as follows:

1. The top outer set of figures and graduations indicate the engine speed in rev/min.
2. The top inner set of figures and graduations are sub-divided into bands and indicate the tractor ground speed in high range, 5th, 6th 7th and 8th gear respectively (8 speed transmission Fig. 2a) or high range, high ratio 4th, 5th and 6th gear (Multi-Power transmission Fig. 2b), working from the inner band outwards.
3. The lower set of figures gives ground speeds for low range 1st 2nd 3rd and 4th gears respectively (8 speed transmission), or low range, high ratio, 1st, 2nd and 3rd gears respectively (Multi-Power transmission), working from the inner band outwards.
4. The rectangular aperture in the lower centre of the dial shows the readings on an odometer which is geared to register one unit for every hour of work that the tractor engine performs at 1500 rev/min. If the engine speed is higher or lower, units will be registered more quickly or slowly respectively. This hour recorder gives a more accurate guide to tractor usage than would a mileage recorder, because some tractors supply power whilst stationary. The tractormeter also has markings to show normal speeds of belt pulley and p.t.o.

**INSTRUMENTS AND INSTRUMENT PANEL****Ammeter (2, Fig. 1)**

The ammeter indicates whether the battery is being charged, or is discharging. If a heavy discharge is indicated the battery will lose power and starting will become difficult, or impossible.

**Fuel Gauge (3, Fig. 1)**

The fuel gauge indicates the quantity of fuel in the tank as a fraction of the tank capacity, not in gallons, or litres.

**Temperature Gauge (4, Fig. 1)**

The temperature gauge indicates the temperature of the coolant in the radiator and engine. NOT the quantity of coolant in the system. GREEN indicates normal operating temperature.

**Oil Pressure Gauge (5, Fig. 1)**

This gauge indicates the state of the engine oil pressure, and does NOT give an indication of the quantity of oil in the engine. The normal operating pressure is in the GREEN sector of the dial.

**INSTRUMENT PANEL ASSEMBLY****Removal and Refitment**

8B-01-02

**Removal**

1. Remove the battery as stated in operation 8A-01-06.
2. Remove the hood as stated in Part 2.
3. Disconnect the following wires:—  
Two wires from fuel gauge  
Four wires from starter switch  
Four wires from light switch (if fitted)  
Two wires from horn switch (if fitted)
4. Disconnect the oil pressure gauge pipe.
5. Press the ammeter through the instrument panel.
6. Disconnect the tractorometer drive cable.
7. Disconnect the water temperature gauge wire.
8. Disconnect the Multi-Power lever linkage at the lever (if fitted).
9. Remove steering wheel as stated in Section 6A.
10. Remove four bolts and spring washers at base of instrument panel.
11. Figs. 3 and 4. Manoeuvre the instrument panel over the throttle lever and clear of the tractor.

**Refitment**

1. Slide the instrument panel over the hand throttle lever and position it on the tractor, then refit the four bolts and spring washers.
2. Reconnect the Multi-Power lever to its linkage, using a new split pin.
3. Reconnect the water temperature gauge wire.
4. Reconnect the tractorometer drive cable to the tractorometer.
5. Reposition the ammeter in its rubber housing in the instrument panel.
6. Reconnect the oil pressure gauge pipe.
7. Reconnect the following wires:—  
Two wires to the fuel gauge  
Four wires to the starter switch  
Four wires to the light switch (if fitted)  
Two wires to the horn (if fitted)
8. Refit the hood as stated in Section 2B.
9. Refit the battery as stated in operation 8A-01-06.
10. Refit the steering wheel, as stated in Section 6A.

**TRACTORMETER DRIVE CABLE****Removal and Replacement**

8B-02-02

**Removal**

1. Remove the R.H. battery access panel.
2. Disconnect the tractorometer drive cable from the rear end of the engine. Remove the bolt securing the cable clip to the bulkhead.
3. Disconnect the drive cable from the back of the tractorometer.
4. Withdraw the cable from the bulkhead.

**Replacement**

1. Feed the new cable through the bulkhead and connect it to the tractorometer.
2. Connect the drive cable to the engine.
3. Refit the battery R.H. access panel.

**TRACTORMETER****Removal and Replacement**

8B-03-02

**Removal**

1. Remove the R.H. battery access panel.
2. Fig. 5. Disconnect the tractorometer drive cable from the back of the tractorometer.
3. Remove the two nuts and washers securing the tractorometer to the bracket beneath the instrument panel, then push the tractorometer upwards out of the panel.

**Replacement**

1. Fit the new tractor to the instrument panel and secure it with the two nuts and spring washers.
2. Reconnect the tractorometer drive cable to the tractorometer.
3. Refit the R.H. battery access panel.

**AMMETER****Removal and Replacement**

8B-04-02

**Removal**

1. Remove the R.H. battery access panel.
2. Fig. 6. Push the ammeter up through the instrument panel.
3. Roll back the rubber sleeve on the ammeter.
4. Disconnect the wires from the back of the ammeter.

**Replacement**

1. Connect the wiring to the new ammeter (see the wiring diagram in the specification section).
2. Fit the ammeter into the rubber sleeve, then feed the sleeve into the instrument panel. Fully locate the sleeve in the instrument panel.
3. Refit the R.H. battery access panel.

INSTRUMENTS AND INSTRUMENT PANEL

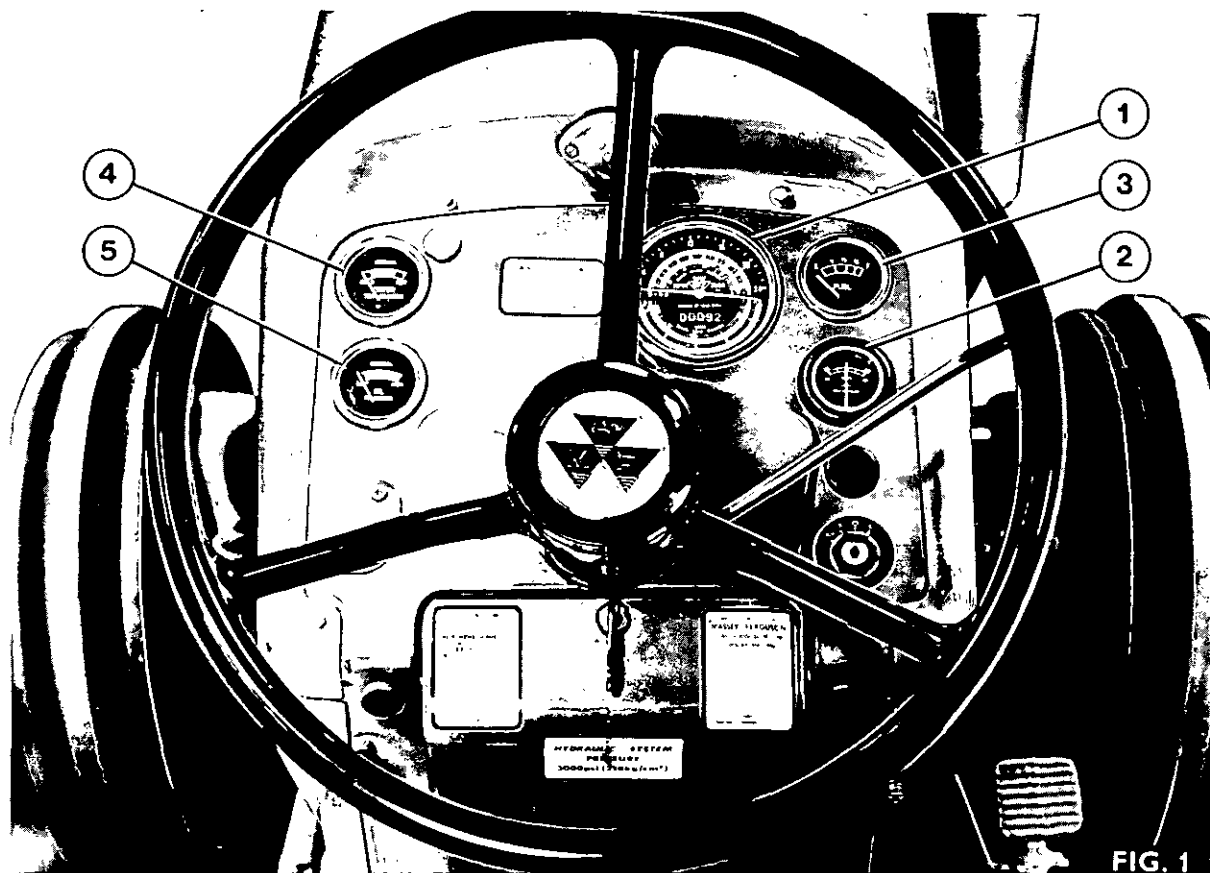


FIG. 1



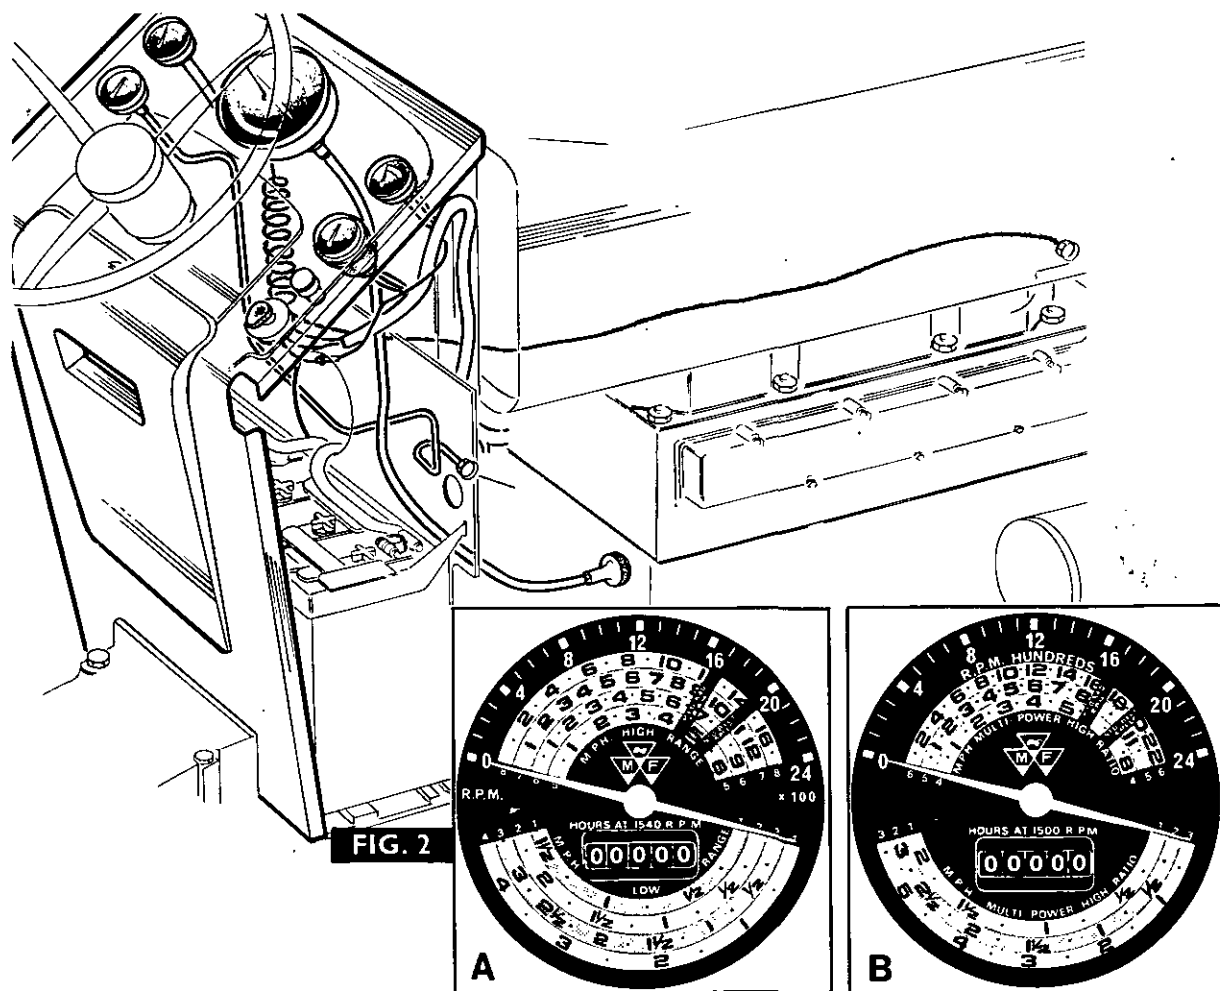


FIG. 2


**INSTRUMENTS AND INSTRUMENT PANEL**

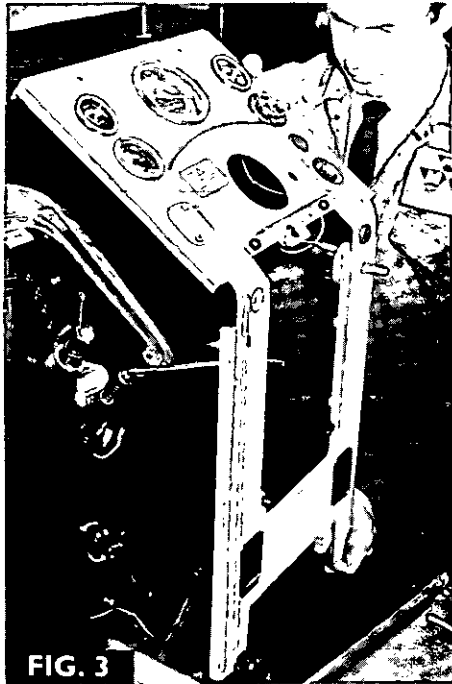


**FIG. 3**

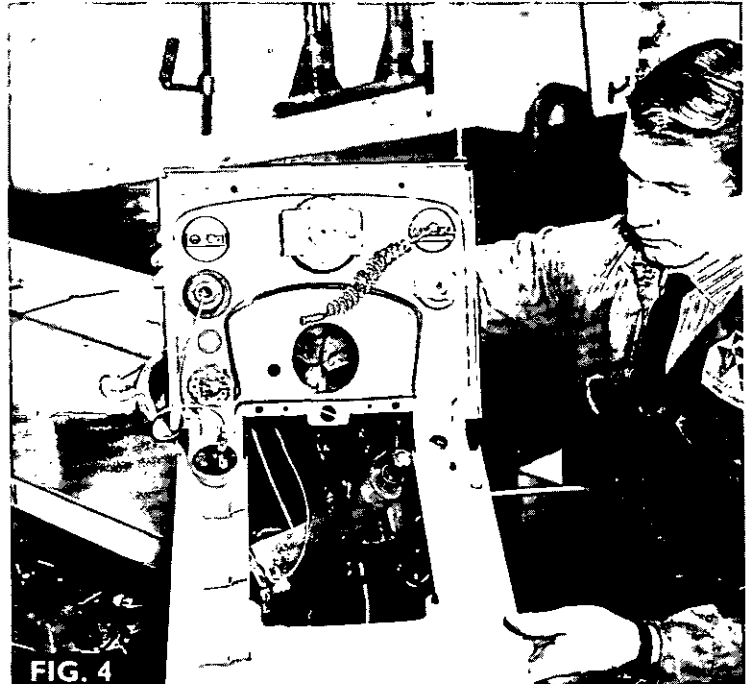


**FIG. 4**

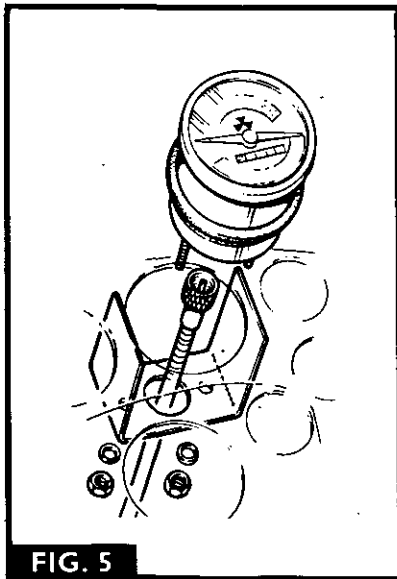


**FIG. 5**

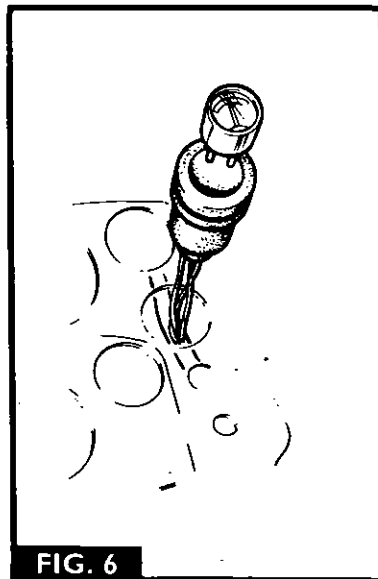


**FIG. 6**

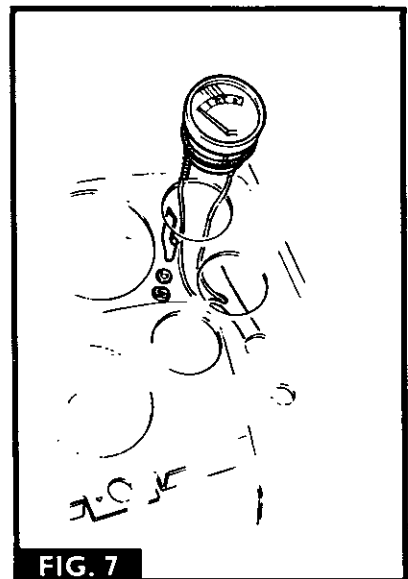


**FIG. 7**

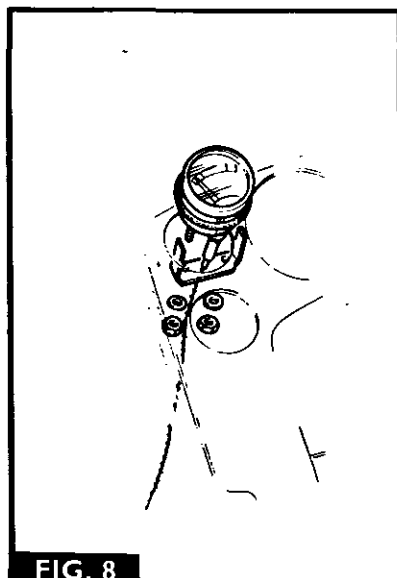

**FIG. 8**

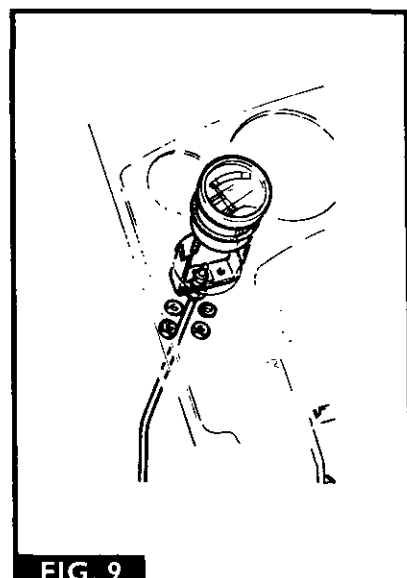

**FIG. 9**

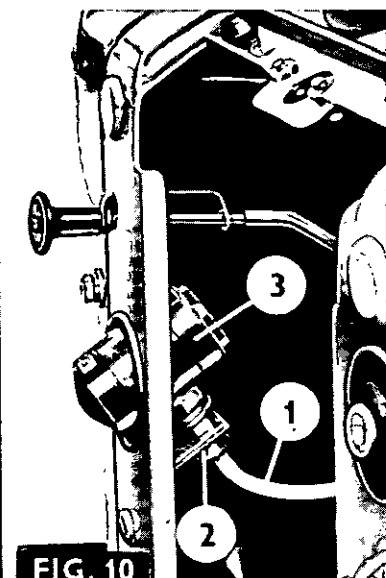

**FIG. 10**

**INSTRUMENTS AND INSTRUMENT PANEL****FUEL GAUGE****Removal and Replacement**

8B-05-05

**Removal**

1. Remove the R.H. battery access panel.
2. Fig. 7. Remove the two wires from the back of the fuel gauge.
3. Remove the two knurled nuts securing the fuel gauge to the bracket and remove the bracket.
4. Push the fuel gauge upwards through the instrument panel.

**Replacement**

1. Push the fuel gauge downwards into the instrument panel.
2. Refit the bracket and refit the two knurled nuts securing the fuel gauge to the bracket.
3. Refit the two wires to the back of the fuel gauge.
4. Refit the R.H. battery access panel.

**TEMPERATURE GAUGE CABLE AND BULB****Removal and Replacement**

8B-06-05

**Removal**

1. Remove the L.H. battery access panel.
2. Release the clips securing the temperature gauge wire to the injector leak-off pipe.
3. Release the temperature gauge bulb at the thermostat housing.
4. Release the wire from the back of the gauge and remove the wire and bulb.

**Replacement**

1. Fit the new wire to the thermostat housing.
2. Feed the wire through the bulkhead and connect it to the gauge.
3. Re-secure the wire to the injector leak-off pipe.
4. Refit the L.H. battery access panel.

**TEMPERATURE GAUGE****Removal and Replacement**

8B-07-05

**Removal**

1. Remove the L.H. battery access panel.
2. Fig. 8. Release the wire from the back of the gauge.
3. Remove the two nuts and spring washers securing the temperature gauge to the bracket.
4. Push the gauge upwards through the panel and remove it.

**Replacement**

1. Push the new gauge into the instrument panel and secure it with the two nuts and spring washers.
2. Reconnect the wires to the back of the gauge.
3. Refit the L.H. battery access panel.

**OIL PRESSURE GAUGE PIPE****Removal and Replacement**

8B-08-05

**Removal**

1. Remove the L.H. battery access panel.
2. Disconnect the oil pressure pipe from the rear of the gauge.
3. Disconnect the oil pressure pipe from the engine.
4. Pull the oil pressure pipe out through the bulkhead.

**Replacement**

1. Feed the new oil pressure pipe into position through the bulkhead.
2. Connect the oil pressure pipe to the engine.
3. Reconnect the oil pressure pipe to the rear of the gauge.
4. Refit the L.H. battery access panel.

**OIL PRESSURE GAUGE****Removal and Replacement**

8B-09-05

**Removal**

1. Remove the L.H. battery access panel.
2. Fig. 9. Disconnect the oil pressure pipe from the rear of the gauge.
3. Remove the two nuts and spring washers securing the gauge to the bracket.
4. Push the gauge upwards through the instrument panel.

**Replacement**

1. Push the gauge downwards into the instrument panel.
2. Refit the two spring washers and nuts to secure the gauge to the bracket.
3. Reconnect the oil pressure pipe to the rear of the gauge.
4. Refit the L.H. battery access panel.

**AIR CLEANER RESTRICTION INDICATOR (Fig. 10)****Removal and Refitment**

8B-10-05

**Removal**

1. Remove the battery access panel.
2. Pull the pipe (1) off the end of the indicator.
3. Remove the nut (2) and remove the indicator (3).

**Refitment**

1. Slide the indicator through the aperture in the instrument panel and secure it with the nut (2).
2. Refit the pipe (2).
3. Refit the battery access panel.

**MF 188 TRACTOR**  
**WORKSHOP SERVICE MANUAL**  
**PART 9**

**Publication No. 1856 001 M1**

*comprising*

A TRACTOR ASSEMBLY P.K.D.